

Internal Wireless Adapter

The Internal Wireless Adapter is a standard PC Card-to-PCI bus adapter that you can use to install PC cards into computers that do not have a factory-installed PC Card slot. Once you install the Internal Wireless Adapter in your computer, you can then insert a standard PC Card into the adapter and configure the PC Card for use.

Installation

Follow these steps to install the Internal Wireless Adapter:

Step 1 - Install the Internal Wireless Adapter.

Step 2 - Add the adapter to your computer and install the drivers.

Step 3 - Reboot your computer so Windows recognizes the adapter.


The following sections give you detailed instructions for completing each step.

Installing the Internal Wireless Adapter

***Note:** To avoid static electric charges, touch an unpainted screw on the outside of the power supply before installing or working with the adapter.*

1. Turn your computer off and unplug the power cord.
2. Remove the outer cover of your computer and locate an available PCI slot.
3. Remove the backplate (the small piece of metal that covers the opening for the PCI card on the back cover that you just removed).
4. Insert the adapter into the PCI slot.
5. Secure the adapter with the screw from the backplate and replace the cover of your computer.

Your Internal Wireless Adapter hardware is now ready to accept a PC Card. Before installing a PC Card, you must first install the drivers for the Internal Wireless Adapter.

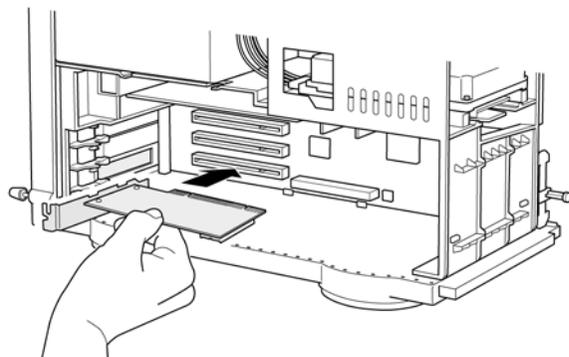

Installing Drivers For Windows 98SE

1. Power on your computer. The Add New Hardware Wizard opens. Click **Next** to continue.



2. When the next window opens, select Search for a better driver for your device (Recommended), and click **Next**.



3. Uncheck all checkboxes, and click **Next**.



- Windows locates the best driver for your device. Click **Next** to continue.



- After the drivers are copied, click **Finish**.



- When the System Setting Change window opens, click **Yes** to reboot your computer and complete the installation.
- If you are prompted to reboot a second time, click **Yes**.



Installing Drivers For Windows ME

- Power on your computer.
- When the Add New Hardware Wizard window opens, select Automatic search for a better driver (Recommended), and click **Next**.



3. After the driver files are copied, click **Finish**.



4. When the System Settings Change window opens, click **Yes** to reboot your computer and complete the installation.
5. If you are prompted to reboot a second time, click **Yes**.



Installing Drivers For Windows 2000

1. Power on your computer. Windows 2000 automatically installs the drivers for the Internal Wireless Adapter.
2. Reboot your computer.
3. If you are prompted to reboot a second time, click **Yes**.

Activating Drivers for Windows XP

Windows XP ships with a driver for the Internal Wireless Adapter. To activate the driver for the Internal Wireless Adapter:

1. Install the Internal Wireless Adapter.
2. Power on your computer.
3. The built-in driver is automatically located and the adapter is installed.