



KB2LJJ

[Home](#)

Radio Mods Database and Manuals

Modifications for the Yaesu VR-5000

www.r6-ru4montesecchieta.it

IZ5CCV

[VR 5000 Mod](#)[Yaesu VR-5000 frequency coverage](#)[Layout of the LCD-screen](#)[Show the Firmware for Yaesu VR-5000](#)[Alignment Menu VR-5000](#)

VR 5000 Mod

Author: Hanno, DG8JZ -

This is the modification to bring the new YAESU VR 5000 receiver from the ham version into the general version. Just to remove one ship jumper at the following place. Rear side of front panel, remove chip jumper xx56 and reset the receiver with <CLR> + Power on followed by <ENT>.




Yaesu VR-5000 frequency coverage

Author: charly.st -

Type	RX (MHz)	R5114
B1	0.1-30/50-54 88-136/144-148 430-450/850-888 1240-1300/2400-2450	X
B3	0.1-2599.999	

Press and hold **[CLEAR]** while powing up.

Press **[ENT]** to reset the CPU.

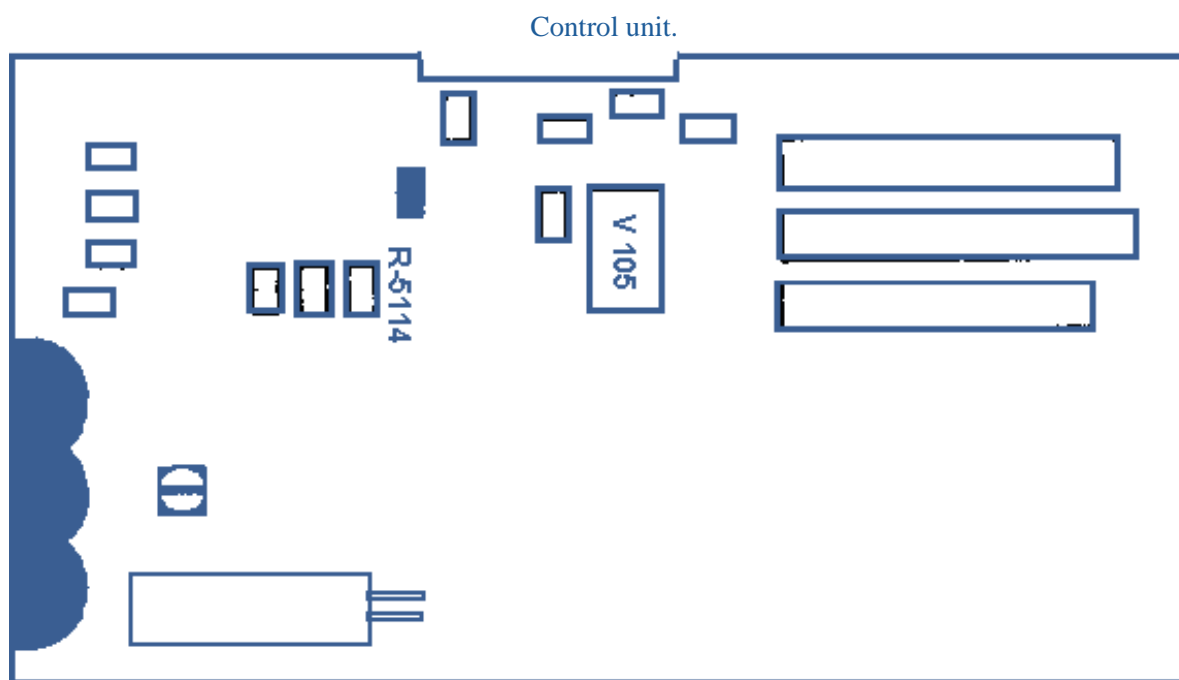

Layout of the LCD-screen

Author: Hans Reinhardt -

Push DIM and POWER, and you see the complete lay-out of the LCD-screen.

Show the Firmware for Yaesu VR-5000

Author: Bjorn Pasteuning

If you press then button "V/M" and keep pressed. when powering up the radio.

It will show you the current Firmware version of the radio. and some other information

Greetings

Bjorn Pasteuning
Netherlands

Alignment Menu VR-5000

Press F and scan while powering on radio. Press scan to cycle through the settings.

Warning: Don't try to change anything, because a signal generator is needed to make adjustments...