

---

## Note on Using Audio With the Presenter and OCTANE

When using the Presenter flat panel monitor on an OCTANE workstation, follow these instructions.

For best audio quality and volume, mute the speakers on the Presenter monitor and use Octane's external speakers.

1. From the Toolchest menu, choose Desktop > Audio Control.
2. Click the *Mute* button in the Presenter section of the audio control panel.

If you do not mute the Presenter speakers, you should set the Bass control knob on the Presenter audio panel to between 0 and 50%. If you set the audio bass control higher than 50%, with certain applications the Presenter flat panel audio could be overloaded and this could shut down the Presenter flat panel monitor.

© 1997, Silicon Graphics, Inc. All rights reserved.  
Silicon Graphics is a registered trademark and OCTANE is a trademark of Silicon Graphics, Inc.

Document Number 007-3508-001

