

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system Saxo 1.6 16V 1996 to 1997

Type		TU5JP4/L3 (NFX) 87kW
Capacity (cm ³) / number of cylinders		1587 / 4
Compression ratio / pressure	bar	10.8 / _
Oil pressure	bar	[4.0]
Oil temperature	°C	90
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	_
Radiator cap pressure	bar	_

Fuel system Saxo 1.6 16V 1996 to 1997

Idle speed - manual [auto]	rpm	850±50
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	≥11.0
O ₂ @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		_Magneti-Marelli
Type / ref		1AP41 MPI
Main jet / needle		_
Injection pressure	bar	2.50
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition system Saxo 1.6 16V 1996 to 1997

Type		_
Ignition coil		_
Primary resistance	ohms	_
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static V = Vacuum NV = No Vacuum]	° Crankshaft @ rpm	Computer control
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch/_
Type		FR6KDC
Electrode gap	mm	0.90

Electrical system Saxo 1.6 16V 1996 to 1997

Battery	V / CC / RC	_
Alternator voltage / full load current / engine rpm		_
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear Saxo 1.6 16V 1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	_
Rear (min. friction material thickness)	mm	_
Tyres		
Saloon	Size	185/55x14
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.5 / 2.2
- Estate / Van	bar	_
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.0 to 3.0
Camber		-40'±30'
Castor		+3°14'±30'
King pin inclination		+12°42'±40'
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.49 to 6.39
Camber		-59'±20'

Torque wrench settings Saxo 1.6 16V 1996 to 1997

Cylinder head - stage 1	Nm	Bolts ≤122.6mm
- stage 2	Nm	20
Cylinder head - stage 3	Nm	+ 260°
- stage 4	Nm	_
Big-end bearings	Nm	38
Main bearings	Nm	20 + 50°
Clutch cover	Nm	_
Flywheel [driveplate]	Nm	65 LkC
Front hubs	Nm	250
Rear hubs	Nm	_
Wheel nuts / bolts	Nm	85
Spark plugs	Nm	25

Capacities Saxo 1.6 16V 1996 to 1997

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	6.1
Fuel tank	litres	45

Notes and Illustrations

-