

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system ZX 1.8i 16V 1996 to 1997

Type	XU7JP4/L3 (LFY) 81kW	
Capacity (cm ³) / number of cylinders	1761 / 4	
Compression ratio / pressure	bar	10.4 / _
Oil pressure	bar	[5.3]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order	1-3-4-2	
No 1 cylinder position	FE	
Thermostat opening temperature	°C	83
Radiator cap pressure	bar	1.4

Fuel system ZX 1.8i 16V 1996 to 1997

Idle speed - manual [auto]	rpm	850±50 N/A [750±50]
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	_
HC @ idle speed [3000 rpm] - see page VI	ppm	_
CO ₂ @ idle speed [3000 rpm] - see page VI	%	≥11.0
O ₂ @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection	Bosch	
Type / ref	MP5.2-Motronic	
Main jet / needle	_	
Injection pressure	bar	2.0 to 2.5
Pump pressure	bar	2.8 to 3.2
Octane rating	RON	95[U]

Ignition system ZX 1.8i 16V 1996 to 1997

Type	Static	
Ignition coil	2x Bosch. Ducellier BAE 04	
Primary resistance	ohms	0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor	_	
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation	_	
Ignition timing - basic [static	° Crankshaft @ rpm	N/A
V = Vacuum NV = No Vacuum	_	
Total ignition advance	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs	Bosch/Eyquem	
Type	FR8LDC / RFC42LZ2E	
Electrode gap	mm	0.90

Electrical system ZX 1.8i 16V 1996 to 1997

Battery	V / CC / RC	(12L1 200, 12L1 250, 12L2 300)
Alternator voltage / full load current / engine rpm	13.8 to 14.5 / 80 / 3600	
Starter motor current / voltage - cranking	A / V	300 /
- locked	A / V	350 /

Running gear ZX 1.8i 16V 1996 to 1997

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0
Tyres		
Saloon	Size	185/60x14
Estate / Van	Size	185/60x14
Pressure - front / rear - Saloon	bar	2.3 / 2.3
- Estate / Van	bar	2.3 / 2.3
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.0 to -3.0. PAS: +1.0 to 3.0
Camber	0±40' N/A	
Castor	+1°30'±40'. PAS: +3°±40' N/A	
King pin inclination	+10°45'±40'	
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+2.5 to 6.0
Camber	-1°±40'	

Torque wrench settings ZX 1.8i 16V 1996 to 1997

Cylinder head - stage 1	Nm	60
- stage 2	Nm	Slacken
Cylinder head - stage 3	Nm	20
- stage 4	Nm	+ 300°
Big-end bearings	Nm	40, slacken, then 20 + 70°
Main bearings	Nm	55
Clutch cover	Nm	20
Flywheel [driveplate]	Nm	50 LkC
Front hubs	Nm	320
Rear hubs	Nm	200
Wheel nuts / bolts	Nm	70. Alloy: 90
Spark plugs	Nm	25

Capacities ZX 1.8i 16V 1996 to 1997

Engine oil & filter	litres	4.75
Gearbox - 4-speed [5-speed]	litres	1.9
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	7.5
Fuel tank	litres	54

Notes and Illustrations

