

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



# Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

## Engine and cooling system Evasion/Synergie 2.0i 1994 to 1997

Type		XU10J2C/Z/L/L3 (RFU) 89kW EC96
Capacity (cm <sup>3</sup> ) / number of cylinders		1998 / 4
Compression ratio / pressure	bar	9.5 / _
Oil pressure	bar	[6.4]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	89
Radiator cap pressure	bar	1.4

## Fuel system Evasion/Synergie 2.0i 1994 to 1997

Idle speed - manual [auto]	rpm	850±50
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤300
CO <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	≥11.0
O <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		_Magneti-Marelli
Type / ref		MM 8P-22 MPI
Main jet / needle		_
Injection pressure	bar	2.0 to 2.5
Pump pressure	bar	_
Octane rating	RON	95[U]

## Ignition system Evasion/Synergie 2.0i 1994 to 1997

Type		Static
Ignition coil		BAE 04-V5. 4 output
Primary resistance	ohms	0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch/Eyquem
Type		FR8LDC / RFC42LS2E
Electrode gap	mm	0.90

## Electrical system Evasion/Synergie 2.0i 1994 to 1997

Battery	V / CC / RC	12 L1 250, 300, L2 400
Alternator voltage / full load current / engine rpm		80, 90, 120
Starter motor current / voltage - cranking	A / V	300
- locked	A / V	_

## Running gear Evasion/Synergie 2.0i 1994 to 1997

<b>Brakes -</b>		
Front (min. friction material thickness)	mm	8.5 with backing
Rear (min. friction material thickness)	mm	_
<b>Tyres</b>		
Saloon	Size	195/65x15: 205/65x15
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.3 / 2.3
- Estate / Van	bar	_
<b>Front suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	+0.5 to 1.5
Camber		0±30'
Castor		+3°30'±30'
King pin inclination		+11°30'±40'
<b>Rear suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	+0.5 to 1.5
Camber		1°±30'

## Torque wrench settings Evasion/Synergie 2.0i 1994 to 1997


Cylinder head - stage 1	Nm	Bolts ≤122mm
- stage 2	Nm	35
Cylinder head - stage 3	Nm	70
- stage 4	Nm	+160°
Big-end bearings	Nm	40, slacken, 20 + 70°
Main bearings	Nm	70
Clutch cover	Nm	_
Flywheel [driveplate]	Nm	50 LkC
Front hubs	Nm	100 +60°
Rear hubs	Nm	100 +60°
Wheel nuts / bolts	Nm	100
Spark plugs	Nm	25

## Capacities Evasion/Synergie 2.0i 1994 to 1997

Engine oil & filter	litres	4.75. A/C: 4.5
Gearbox - 4-speed [5-speed]	litres	1.8
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	9.0
Fuel tank	litres	80

## Notes and Illustrations

-

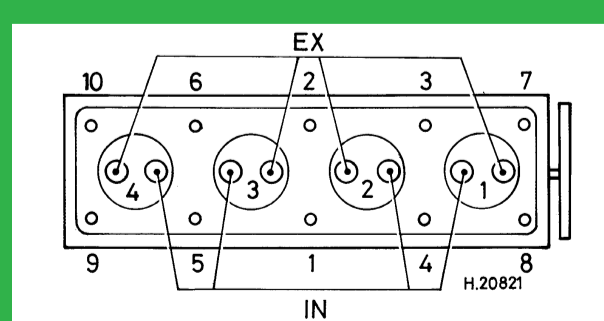

1998 cm<sup>3</sup>, 8V