

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



# Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

**MENU**      **HELP**

## Engine and cooling system Concerto 1.6i SOHC CAT 1992 to 1995

Type		D16Z2 SOHC 16V 82kW
Capacity (cm <sup>3</sup> ) / number of cylinders		1590 / 4
Compression ratio / pressure	bar	9.1 / ≥9.3
Oil pressure	bar	1.4 [5.1]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.17 to 0.22
Valve clearance - exhaust	mm	0.22 to 0.27
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	76 to 80
Radiator cap pressure	bar	0.74 to 1.03

## Fuel system Concerto 1.6i SOHC CAT 1992 to 1995

Idle speed - manual [auto]	rpm	780±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.1 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
O <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Honda
Type / ref		PGM-Fi MPI
Main jet / needle		—
Injection pressure	bar	—
Pump pressure	bar	2.5
Octane rating	RON	91[U]

## Ignition system Concerto 1.6i SOHC CAT 1992 to 1995

Type		Electronic
Ignition coil		—
Primary resistance	ohms	0.3 to 0.5
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Hitachi
Points gap (air gap)	mm	[Equal gaps]
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	18±2 BTDC @ idle
V = Vacuum    NV = No Vacuum		—
Total ignition advance	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK/Champion
Type		BCPR6E-11 / RN9YC
Electrode gap	mm	1.00 to 1.10

## Electrical system Concerto 1.6i SOHC CAT 1992 to 1995

Battery	V / CC / RC	12 / 300 / 47Ah
Alternator voltage / full load current / engine rpm		13.5 to 16.0 / 60 / 2000
Starter motor current / voltage - cranking	A / V	230 to 350 / 8.0 to 8.5
- locked	A / V	—

## Running gear Concerto 1.6i SOHC CAT 1992 to 1995

<b>Brakes -</b>		
Front (min. friction material thickness)	mm	1.6
Rear (min. friction material thickness)	mm	1.6
<b>Tyres</b>		
Saloon	Size	185/65x14
Estate / Van	Size	—
Pressure - front / rear - Saloon	bar	1.9 / 1.8
- Estate / Van	bar	—
<b>Front suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	-0.7±1.4
Camber		-20'±30'
Castor		+1°38'±30'
King pin inclination		+12°7'
<b>Rear suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	+2.3±1.4
Camber		-26'±30'


## Torque wrench settings Concerto 1.6i SOHC CAT 1992 to 1995

Cylinder head - stage 1	Nm	30 oiled
- stage 2	Nm	68
Cylinder head - stage 3	Nm	—
- stage 4	Nm	—
Big-end bearings	Nm	32
Main bearings	Nm	63 oiled
Clutch cover	Nm	26
Flywheel [driveplate]	Nm	120
Front hubs	Nm	185
Rear hubs	Nm	185
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	18


## Capacities Concerto 1.6i SOHC CAT 1992 to 1995

Engine oil & filter	litres	3.8
Gearbox - 4-speed [5-speed]	litres	1.8
Automatic transmission - refill	litres	2.4
Final drive	litres	WT
Cooling system	litres	5.4 [AT: 5.3]
Fuel tank	litres	55

## Notes and Illustrations

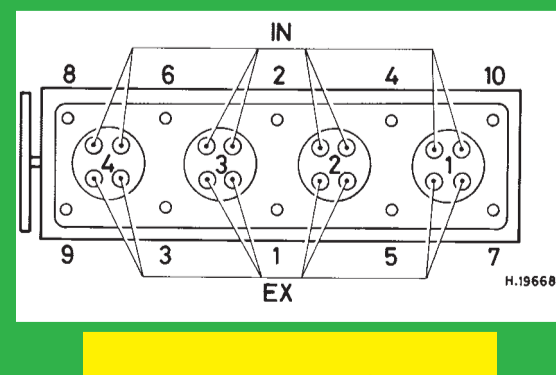

1590 cm<sup>3</sup>, SOHC 16V

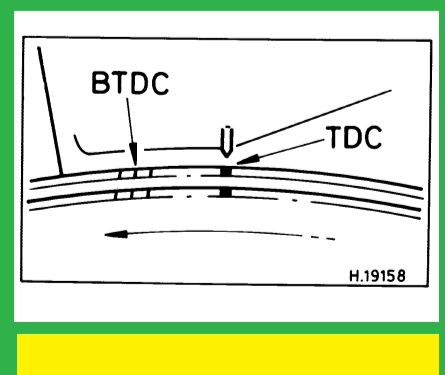

1590 cm<sup>3</sup>, SOHC 16V