

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system Felicia / Foreman/Freeway 1.3i 1995 to 1997

Type		135B / 136B OHV 8V 40 / 50kW
Capacity (cm ³) / number of cylinders		1289 / 4
Compression ratio / pressure	bar	135B: 8.8. 136B: 9.7 / _
Oil pressure	bar	[3.5]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.20 to 0.25
- exhaust	mm	0.20 to 0.25
Firing order		1-3-4-2
No 1 cylinder position		TCE
Thermostat opening temperature	°C	88
Radiator cap pressure	bar	0.90 to 1.10

Fuel system Felicia / Foreman/Freeway 1.3i 1995 to 1997

Idle speed - manual [auto]	rpm	750 to 850 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3 N/A
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	_
O ₂ @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		_ Bosch
Type / ref		Mono-Motronic
Main jet / needle		_
Injection pressure	bar	0.80 to 1.20
Pump pressure	bar	_
Octane rating	RON	95[U]

Ignition system Felicia / Foreman/Freeway 1.3i 1995 to 1997

Type		Motronic
Ignition coil		_
Primary resistance	ohms	0.5 to 0.7
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		_
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		_
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum		_
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	_
Spark plugs		Bosch/NGK
Type		FR8DC / BCPR5ES ¹
Electrode gap	mm	0.70 to 0.80

Electrical system Felicia / Foreman/Freeway 1.3i 1995 to 1997

Battery	V / CC / RC	12 / 44Ah
Alternator voltage / full load current / engine rpm		13.5 to 14.2 / 55 / _
Starter motor current / voltage - cranking	A / V	_
- locked	A / V	_

Running gear Felicia / Foreman/Freeway 1.3i 1995 to 1997

Brakes -

Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0

Tyres

Saloon	Size	165/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	2.2 / 2.0
- Estate / Van	bar	_

Front suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	1.0±1.0
Camber		30'±30'
Castor		1°20'±45'
King pin inclination		11°45'±45'

Rear suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	-1.2±1.4
Camber		-1°24'±30'

Torque wrench settings Felicia / Foreman/Freeway 1.3i 1995 to 1997


Cylinder head - stage 1	Nm	17 to 20
- stage 2	Nm	+90°
- stage 3	Nm	+90°
- stage 4	Nm	_
Big-end bearings	Nm	40
Main bearings	Nm	75
Clutch cover	Nm	23 to 28
Flywheel [driveplate]	Nm	_
Front hubs	Nm	300
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	30

Capacities Felicia / Foreman/Freeway 1.3i 1995 to 1997

Engine oil & filter	litres	4.5
Gearbox - 4-speed [5-speed]	litres	2.4
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	6.0
Fuel tank	litres	42

Notes and Illustrations

¹136B: FR7DC / BKR6ES

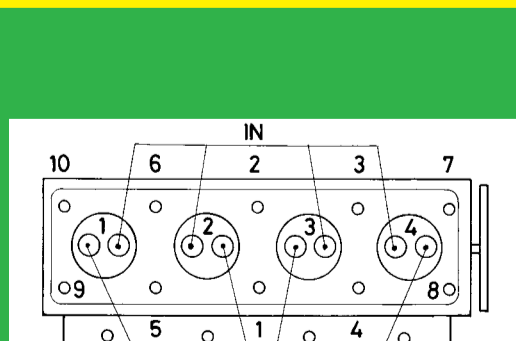

1289 cm³