 


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system Astra-F 1.8i 16V 1995 to 1996

Type	C18XEL 16V 85kW 91/441/EC	
Capacity (cm ³) / number of cylinders	1798 / 4	
Compression ratio / pressure	bar	10.8 /
Oil pressure	bar	2.0
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order	1-3-4-2	
No 1 cylinder position	TBE	
Thermostat opening temperature	°C	92
Radiator cap pressure	bar	1.2 to 1.5

Fuel system Astra-F 1.8i 16V 1995 to 1996

Idle speed - manual [auto]	rpm	700 to 1000
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	1.5±0.5 WSM
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	—
O ₂ @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection	_GM	
Type / ref	Simtec 56.1	
Main jet / needle	—	
Injection pressure	bar	—
Pump pressure	bar	—
Octane rating	RON	95[U]

Ignition system Astra-F 1.8i 16V 1995 to 1996

Type	DIS	
Ignition coil	—	
Primary resistance	ohms	—
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor	—	
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation	—	
Ignition timing - basic [static	° Crankshaft @ rpm	Computer control N/A
V = Vacuum NV = No Vacuum	—	
Total ignition advance	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs	Bosch	
Type	FR8LDC	
Electrode gap	mm	0.7 to 0.8

Electrical system Astra-F 1.8i 16V 1995 to 1996

Battery	V / CC / RC	—
Alternator voltage / full load current / engine rpm	—	
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

Running gear Astra-F 1.8i 16V 1995 to 1996

Brakes -		
Front (min. friction material thickness)	mm	—
Rear (min. friction material thickness)	mm	—
Tyres		
Saloon	Size	195/55x15: 175/65x14
Estate / Van	Size	175/65x14: 195/55x15
Pressure - front / rear - Saloon	bar	2.3 / 2.0
- Estate / Van	bar	2.2 / 2.0
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-1.5±1.0
Camber		-1°5'±45'
Castor		2°15'±1°
King pin inclination	—	
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	1.0±2.0
Camber		-1°40'±30'


Torque wrench settings Astra-F 1.8i 16V 1995 to 1996

Cylinder head - stage 1	Nm	25 N
- stage 2	Nm	+90°
Cylinder head - stage 3	Nm	+90°
- stage 4	Nm	+90°
Big-end bearings	Nm	35 +45° +15° N
Main bearings	Nm	50 +45° +15° N
Clutch cover	Nm	15
Flywheel [driveplate]	Nm	65 +30° +15° [50] N
Front hubs	Nm	WSM
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	25

Capacities Astra-F 1.8i 16V 1995 to 1996

Engine oil & filter	litres	4.0
Gearbox - 4-speed [5-speed]	litres	1.9
Automatic transmission - refill	litres	—
Final drive	litres	WT
Cooling system	litres	6.9
Fuel tank	litres	52

Notes and Illustrations

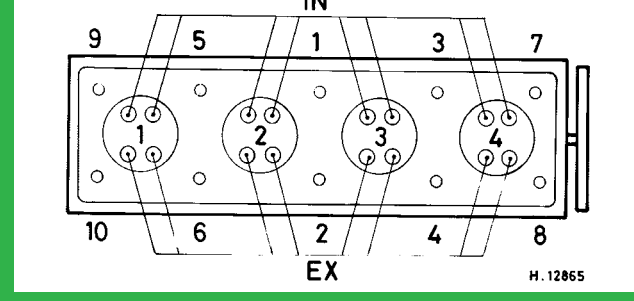

1798 cm³, DOHC 16V