



Parts Number: 27L3404

ThinkPad 770X
Quick Reference and Service Information

Your Name: _____

Company Name: _____

Model Number: _____

Serial Number: _____



Company or Reseller Service: _____

IBM Service Web Site: _____

IBM Service Number: _____

Notes:

Locations

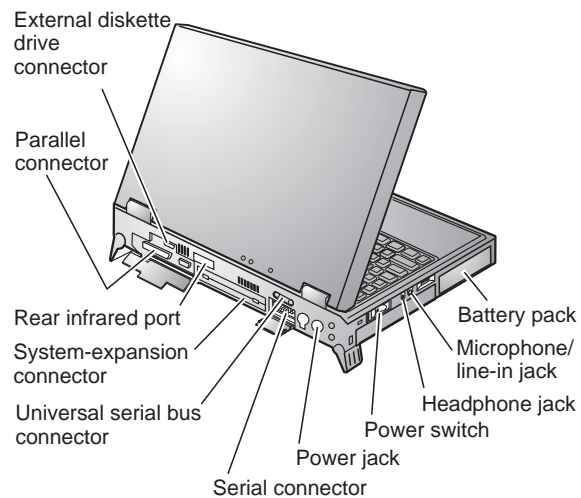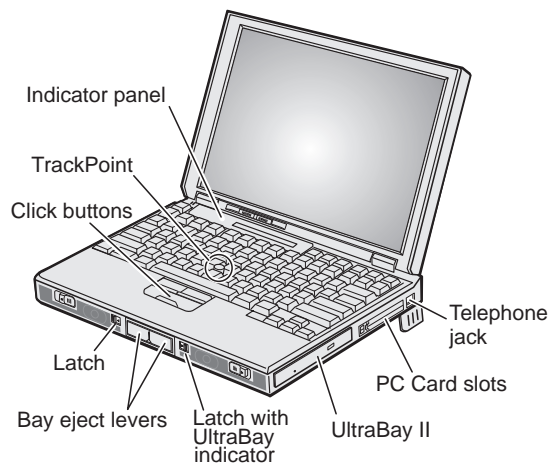

Attaching Options

You want to...	You need to...
Swap the device in the UltraBay II	Release the bay eject levers; then a message appears. Make sure the LED stays green and there is no beep; then swap the device.
Attach the diskette drive externally	Power off your computer; then attach the external diskette drive.
Note: Some devices or configurations might not support hot plugging or unplugging. If the LED is blinking orange, do not attempt to swap the device.	

Function Keys

Fn+	Result
F2	Displays the battery power status indicator or erases it if it is displayed. (The Fuel-Gauge program must first be activated.)
F3	Places the computer in standby mode.
F4	Places the computer in suspend mode.
F7	Changes computer display output locations.
F8	Displays computer output in XGA (full-screen) mode. If the computer is equipped with a 13.7-inch SXGA display and used in standard VGA mode, you cannot use this function.
F11	Changes the power mode.
F12	Places the computer in hibernation mode.

Getting Service

Always read the “Solving Computer Problems” chapter of your *User's Reference* before calling IBM.

During the warranty period, you can get help and information from International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- The exact wording of any error messages
- Hardware and software configuration information
- A description of the problem
- Information and serial numbers of any options installed on your system

International Warranty Service Information

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New Zealand, and Hong Kong:	61-2-9354-4171
Canada, Latin America, and the U.S.:	1-800-497-7426
Europe, Middle East, and Africa:	44-1475-893638
Japan, Korea, China (except Hong Kong), and Taiwan:	81-462-73-7598

Help through a ThinkPad Web Site

The latest information about ThinkPad computers:

➔ <http://www.ibm.com/thinkpad>

Technical support information:

➔ <http://www.ibm.com/support>

ThinkPad Configuration Program

You can customize your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click on **Start**, move the cursor to **Settings**, and click on **Control Panel**; then double-click on the **ThinkPad Configuration** icon.



For more information, click on the **Help** button



Battery Status

You can monitor the battery status with the Fuel-Gauge program. To start the Fuel-Gauge program, click on **Start** and move the cursor to **Programs** and **ThinkPad**; then click on **Fuel-Gauge**.

If you are using the secondary battery, you can also see its status with the Fuel-Gauge program.

For Further Information

You can find the following information in your ThinkPad user's manuals.

User's Reference

- Getting familiar with your computer
- Extending the features of your computer
- Protecting your computer
- Solving computer problems
- Features and specifications

Online User's Guide

- Using your computer outside your home country
- Using audio, modem, and DVD features
- Protecting your computer
- Using your computer with a battery pack
- Using your computer with a PC Card
- Getting service
- Resolving system resource conflicts
- Frequently asked questions
- Installing software
- Using system management
- Using PS2 commands
- Handling tips

Note: To start the *Online User's Guide*, click on **Start** and move the cursor to **Programs** and **ThinkPad 770**; then click on *ThinkPad 770 User's Guide*.