




Microprocessor Technical Update

This *Technical Update* contains important information and instructions about installing the microprocessor. Read this update thoroughly before you insert the microprocessor into its socket. Store this update with the system documentation for future reference.

Complete the following steps before you insert the microprocessor into the microprocessor socket:

1. Remove the protective cover or tape from the surface of the microprocessor socket, if present.
2. Rotate the locking lever on the microprocessor socket from its closed and locked position until it stops or clicks in the fully open position (approximately 135° angle), as shown. Then, see the documentation provided with the microprocessor option for complete installation instructions.

Attention: You must ensure that the locking lever on the microprocessor socket is in the fully open position before you insert the microprocessor in the socket. Failure to do so might result in permanent damage to the microprocessor, microprocessor socket, and system board.

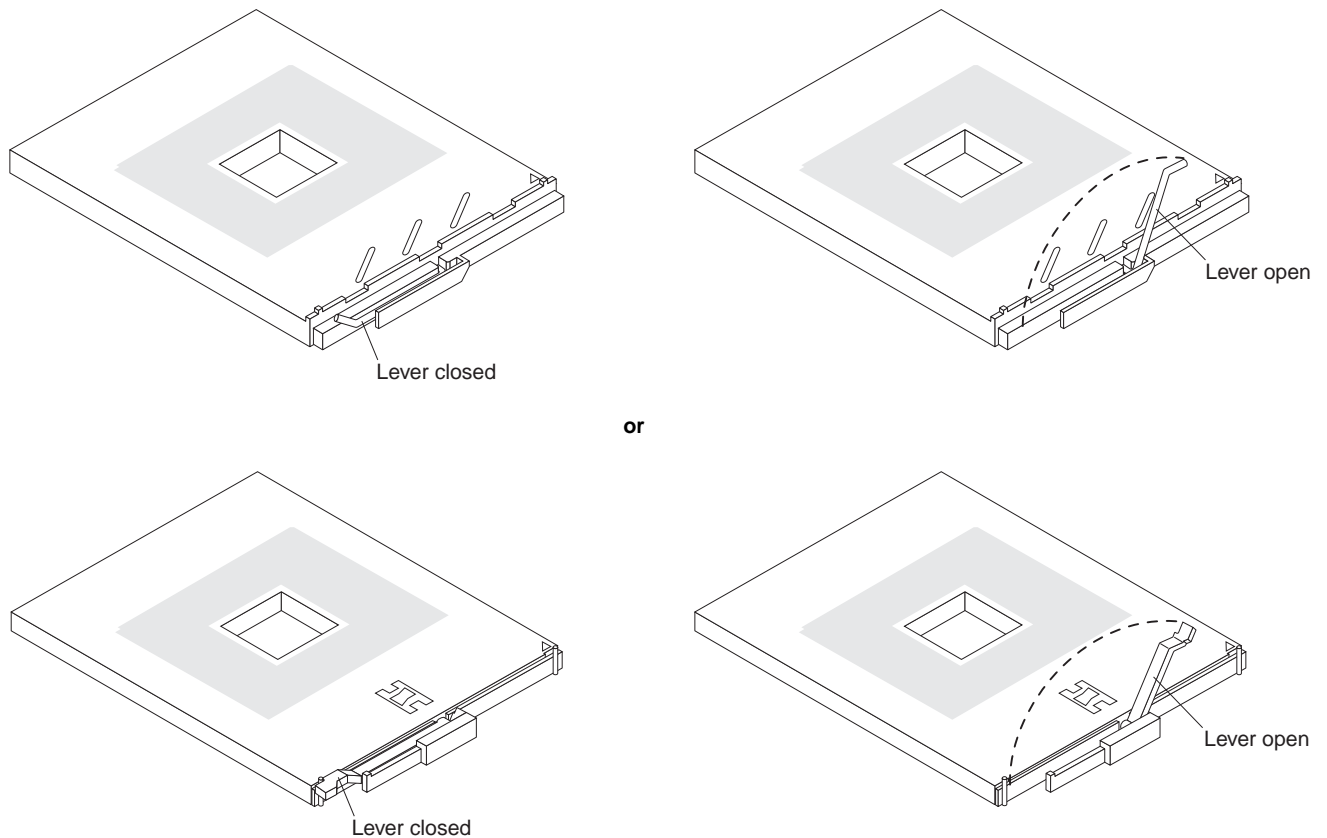

or

IBM is a trademark of the International Business Machines Corporation in the United States, other countries, or both.
© Copyright 2003 International Business Machines Corporation. All rights reserved. Note to US Government Users
Restricted Rights — Use, duplication, or disclosure restricted by GSA ADP Schedule Contract with IBM Corporation.

Part Number: 73P8495

Printed in U.S.A.



1P73P8495