

Fitting instructions for Alps standard rotary encoder

- 1. Remove top cover using a 2.5mm hex key**
- 2. Carefully pull up the speaker terminal connectors to release the speaker wires.**
- 3. Remove the bottom cover using a no. 2 posi-drive screwdriver.**
- 4. Remove two front panel hex screws.**
- 5. Unscrew the two screws from the rear of the front panel that secure the PCB.**
- 6. Remove tuning knob. (1.5mm hex key)**
- 7. De-solder and remove existing Alps encoder.**
- 8. Fit the replacement and solder the three connections.**
- 9. Re fit the tuning knob and front panel.**
- 10. Check the set at this point before going any further with reassembly.**
- 11. If the set is operating correctly re fit the top and bottom cases. When fitting cases fit top first (do not over tighten) followed by bottom which may be a tight fit.**