

# DX-70T EXTENDED RECEIVE MODIFICATION

1. Disconnect from the power supply.
2. Disconnect from the antenna.
3. Remove the control head, then disconnect from the control cable.
4. Remove two screws on the back of the control head.
5. Remove the rear panel of the control head.
6. Locate and remove the "M" jumper behind the control unit as shown below.
7. Reassemble the unit.
8. Reset the Microprocessor. (With the radio off, press and hold the "F" button and simultaneously turning the power on.)

**Note: Damage done to the unit while performing the modification will void the warranty.**

9. The lower edge of the HF band is now changed from 150KHz to 30KHz.

