



ERRATA SHEET

MODEL SR-2000

Prior to production, but after the Instruction Manual was printed, certain wiring and component changes were made in the Model SR-2000 Transceiver.

These changes are contained in the schematic diagram and parts list herein enclosed. Please discard the schematic diagram and parts list contained in the Instruction Manual and refer to those contained within this sheet whenever necessary.


Part Number 094-904488  
Pack with Instruction Manual  
Part Number 094-904120

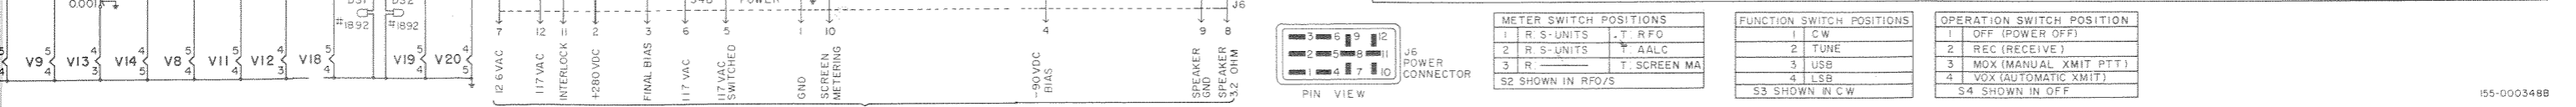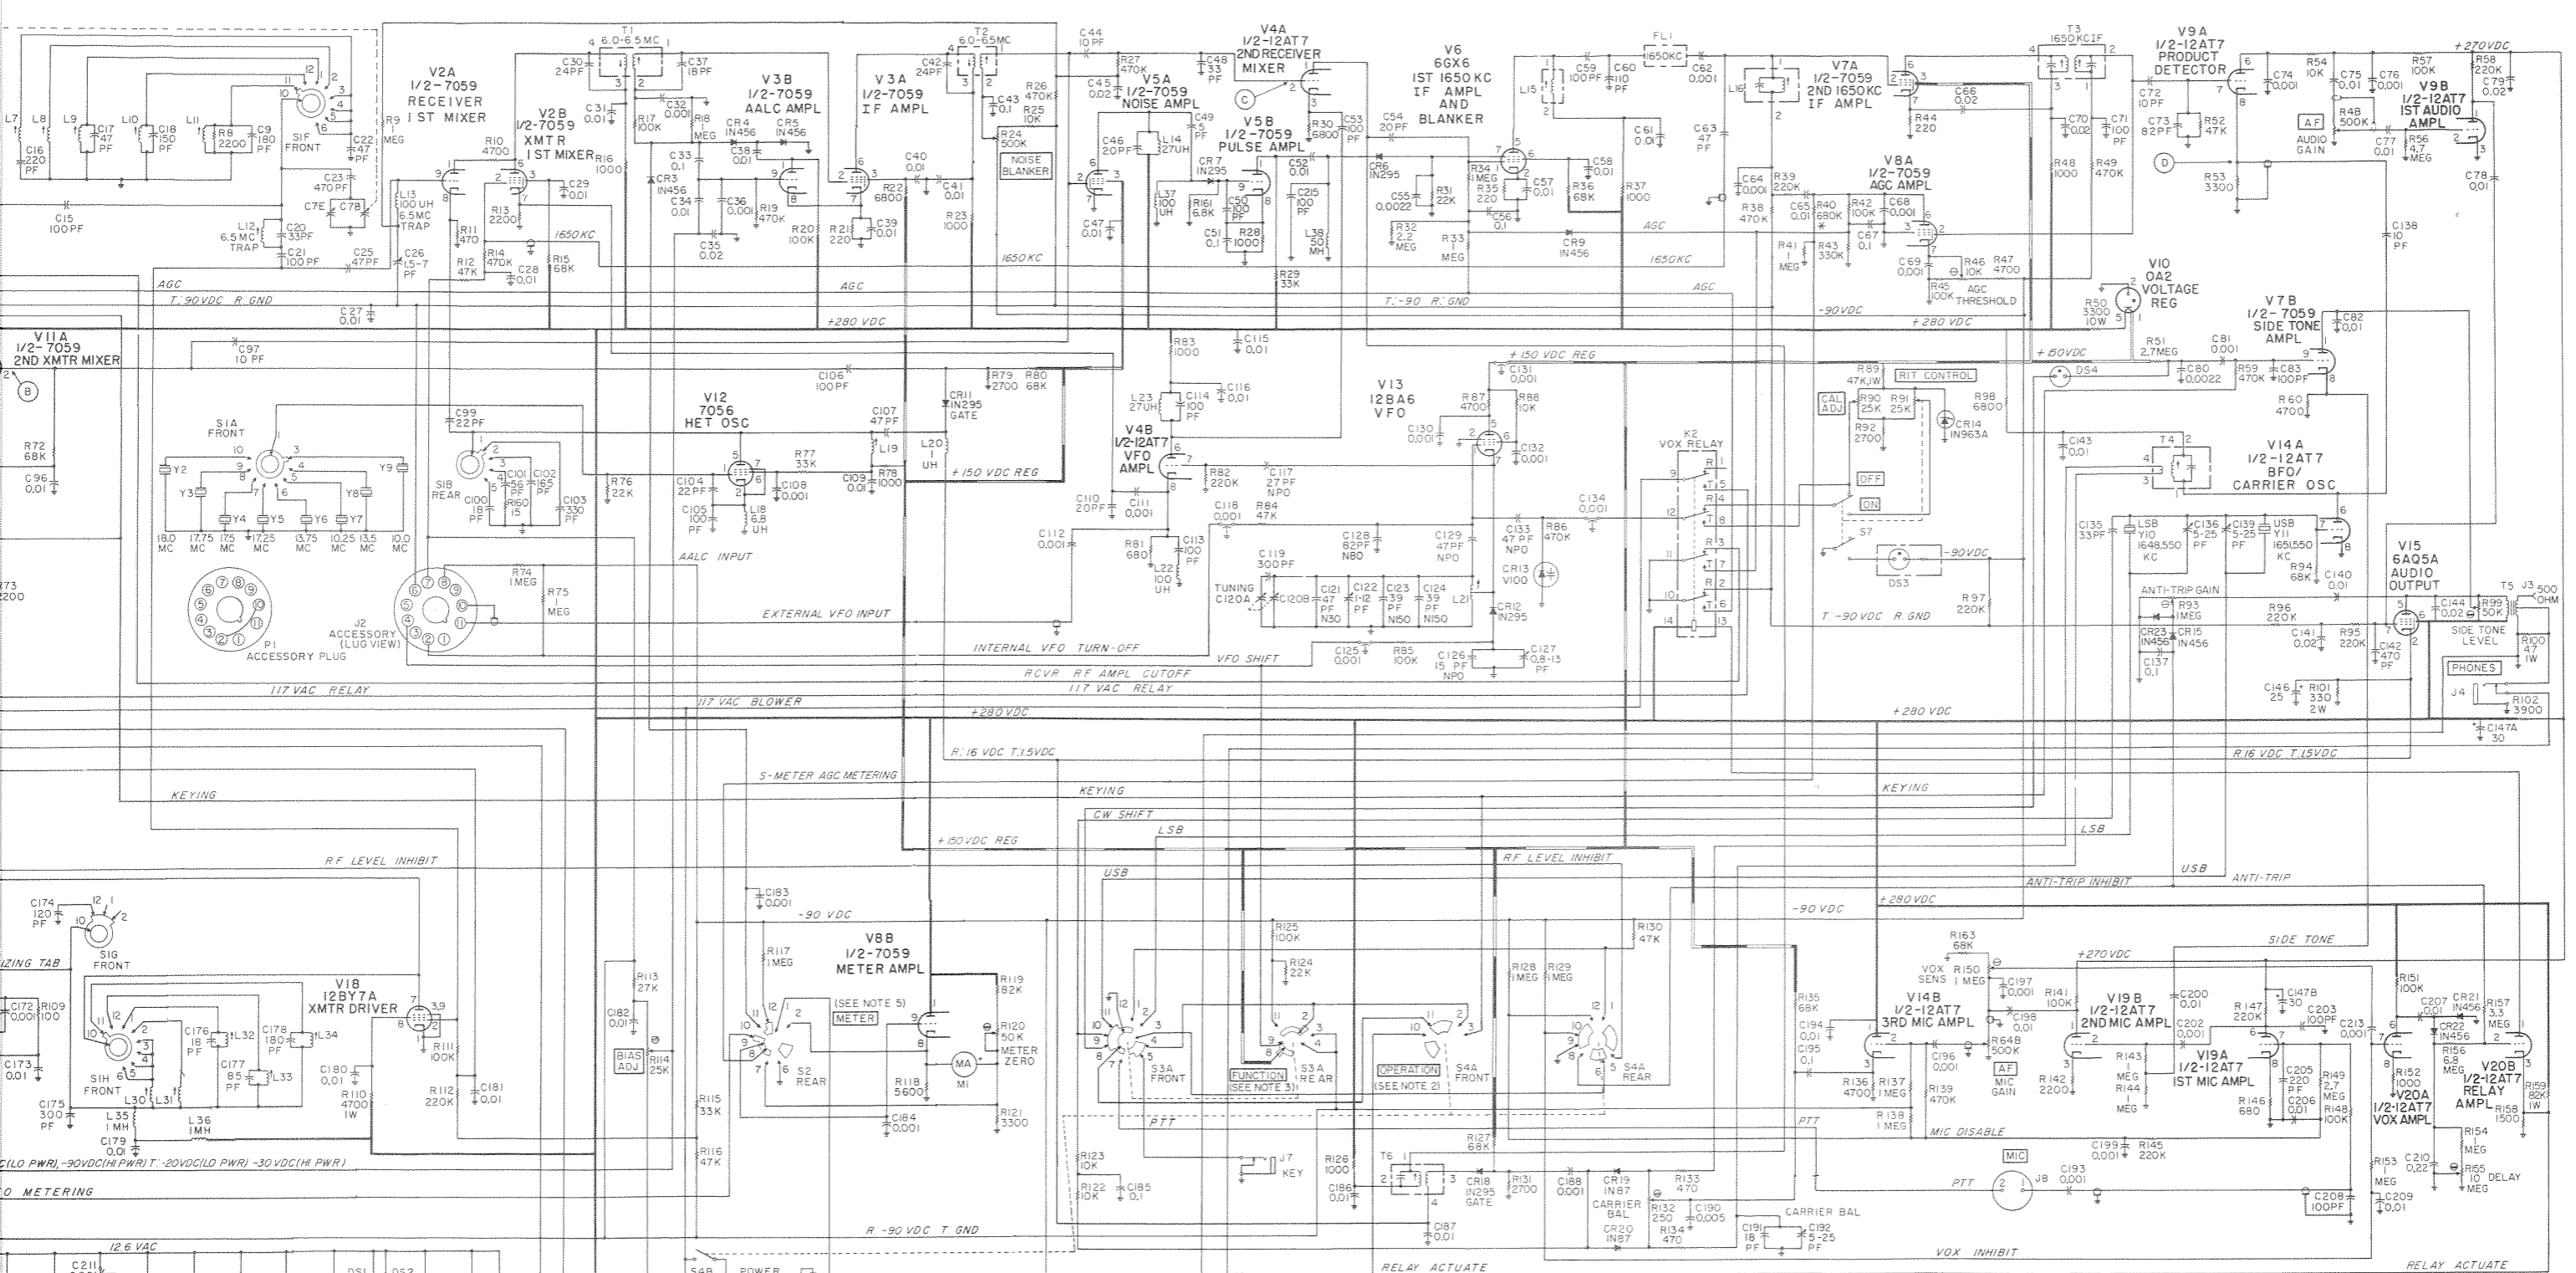



METER SWITCH POSITIONS	
1	R. S-UNITS
2	R. S-UNITS
3	R.
4	T. SCREEN MA
S2 SHOWN IN RFO/S	

FUNCTION SWITCH POSITIONS	
1	CW
2	TUNE
3	USB
4	LSB
S3 SHOWN IN CW	

OPERATION SWITCH POSITION	
1	OFF (POWER OFF)
2	REC (RECEIVE)
3	MOX (MANUAL XMIT PTT)
4	VOX (AUTOMATIC XMIT)
S4 SHOWN IN OFF	

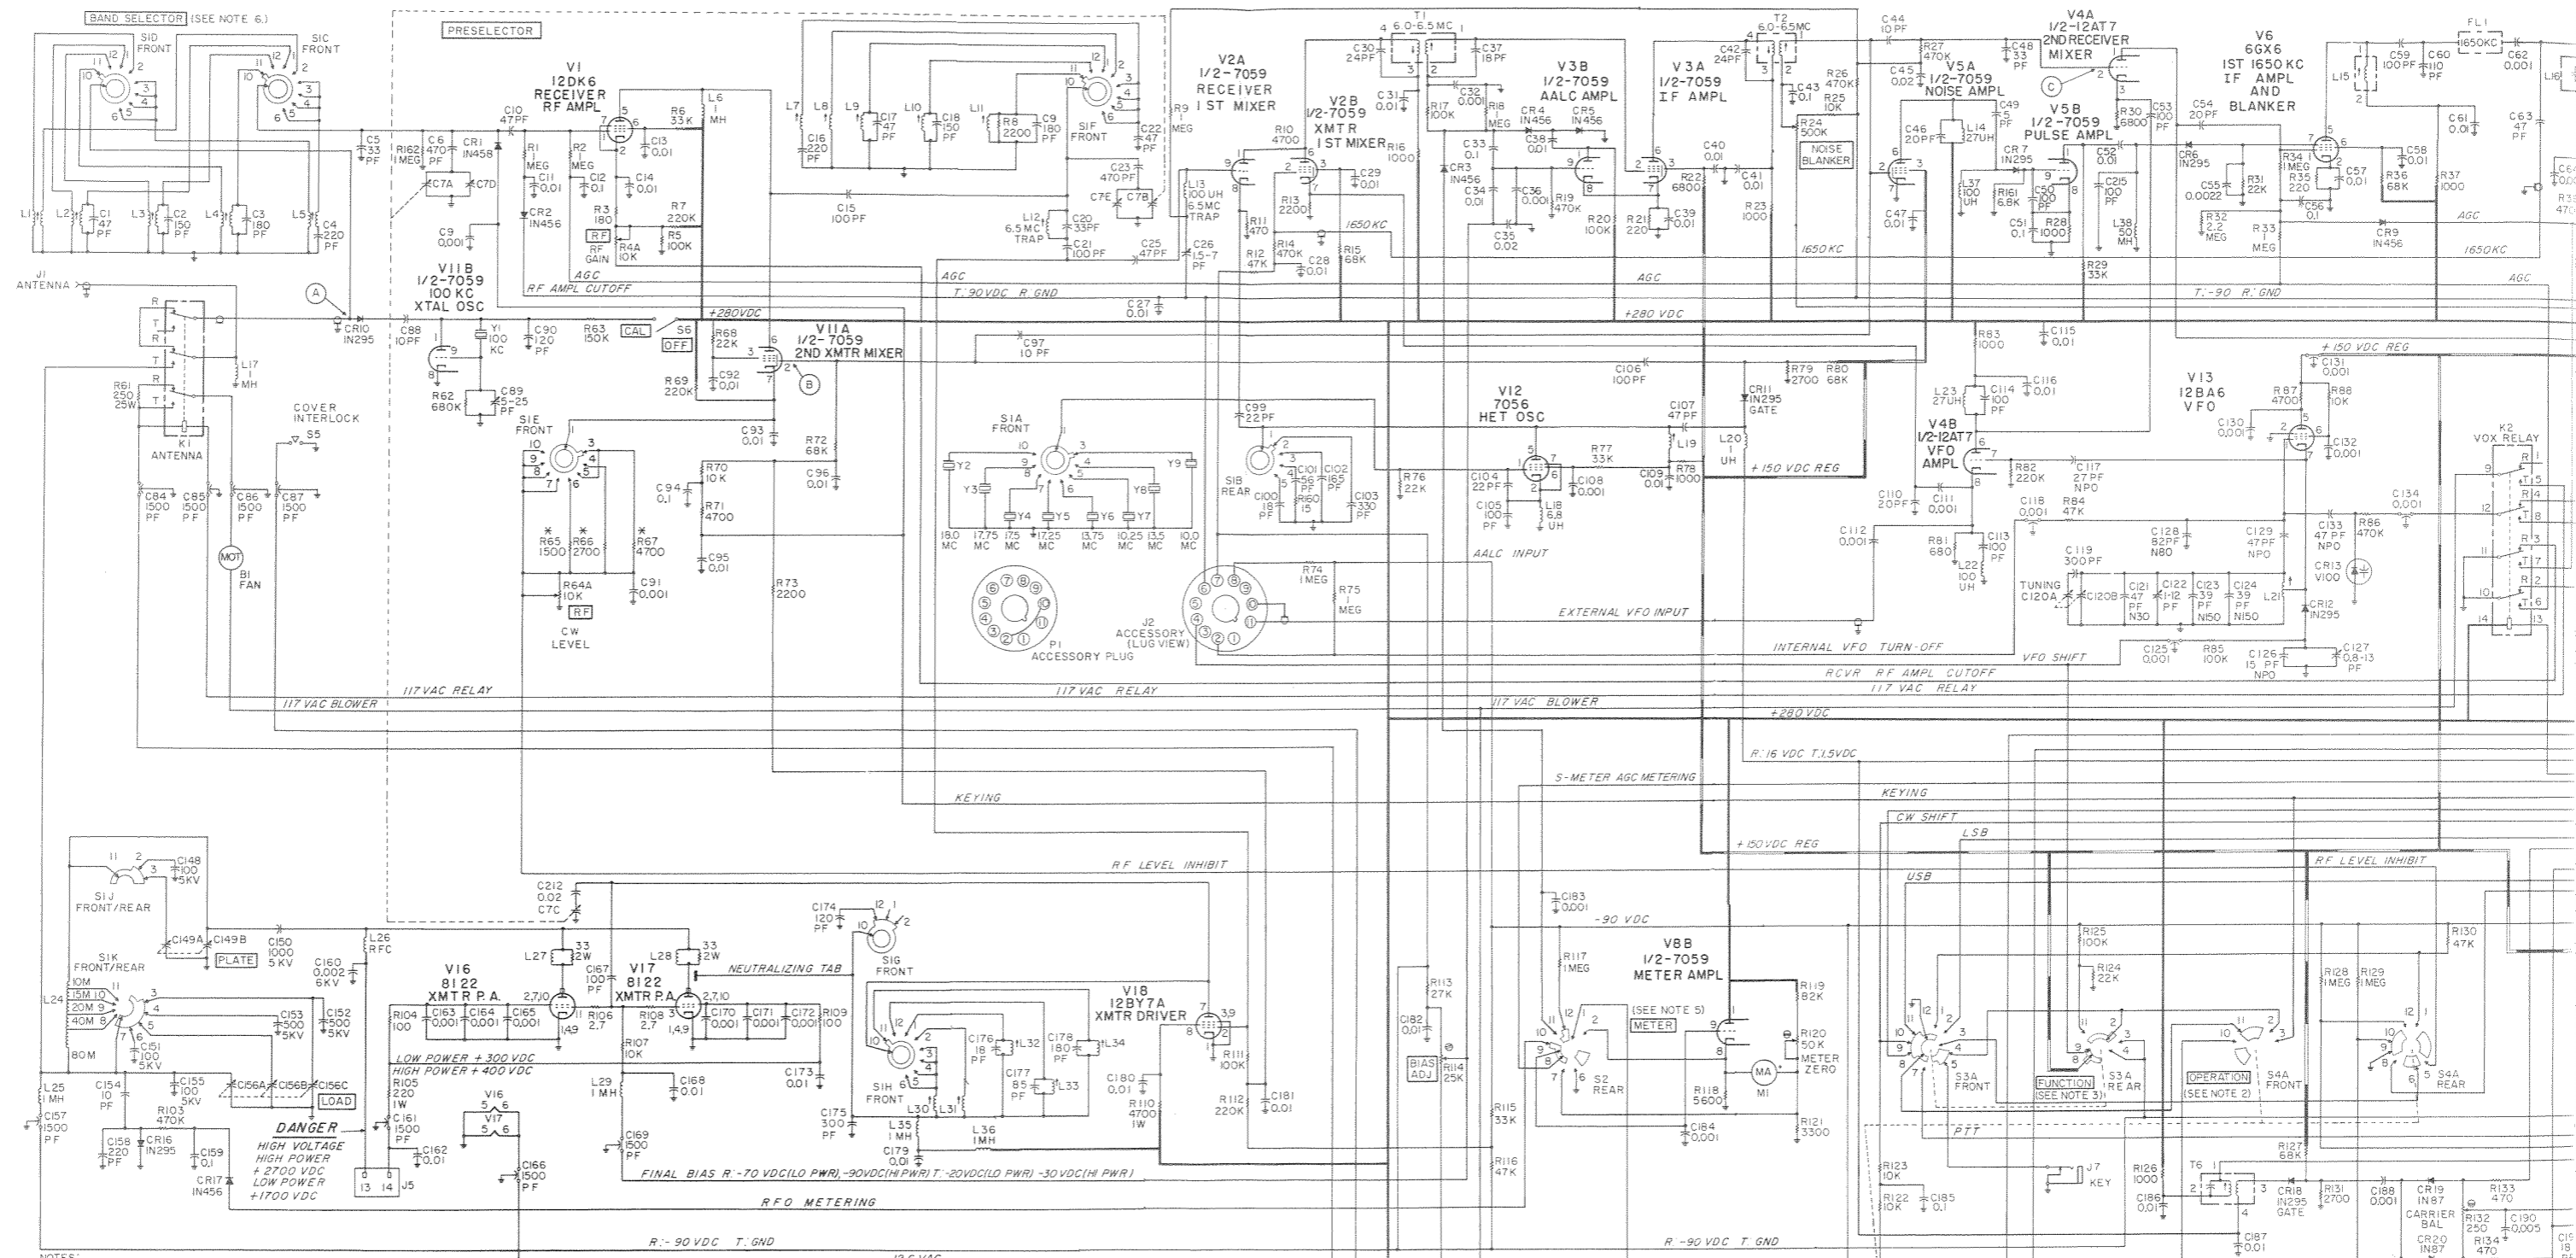

- NOTES:  
 1. UNLESS OTHERWISE SPECIFIED, ALL RESISTORS ARE IN OHMS, 10% 1/2 WATT. ALL CAPACITORS ARE IN UF (SEE PARTS LIST FOR VOLTAGE RATING).  
 2. OPERATION SWITCH (S4) IS SHOWN IN OFF (FULL CCW) POSITION.  
 3. FUNCTION SWITCH (S3) IS SHOWN IN CW (FULL CCW) POSITION.  
 4. BAND SELECTOR (S1) IS SHOWN IN 3.5 MC (FULL CCW) POSITION.  
 5. METER SWITCH (S2) IS SHOWN IN S/RFO (FULL CCW) POSITION.  
 6. ALL WAFERS OF BAND SELECTOR (S1) ARE MECHANICALLY GANGED.  
 7. RELAYS ARE SHOWN IN RECEIVE CONDITION.  
 \* RESISTANCE MAY VARY FROM VALUE SHOWN. IF REPLACEMENT IS NECESSARY, USE SAME VALUE AS PART REMOVED.

 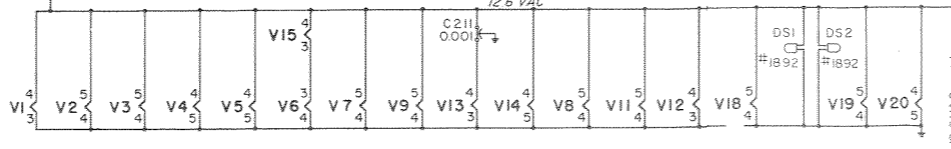

METER SWITCH POSITIONS	
1	R S-UNITS
2	R S-UNITS
3	R
4	12.6 VAC
5	117 VAC
6	280 VDC
7	117 VDC
8	12.6 VAC
9	T RFO
10	T AALC
11	T SCREEN MA
12	S2 SHOWN IN RFO/S

TO POWER SUPPLY

