

HR-2800


28 MHZ AM-FM
AMATEUR RADIO HF TRANSCEIVER

Service Manual





INTEK®



DC-DC Converter Diagram

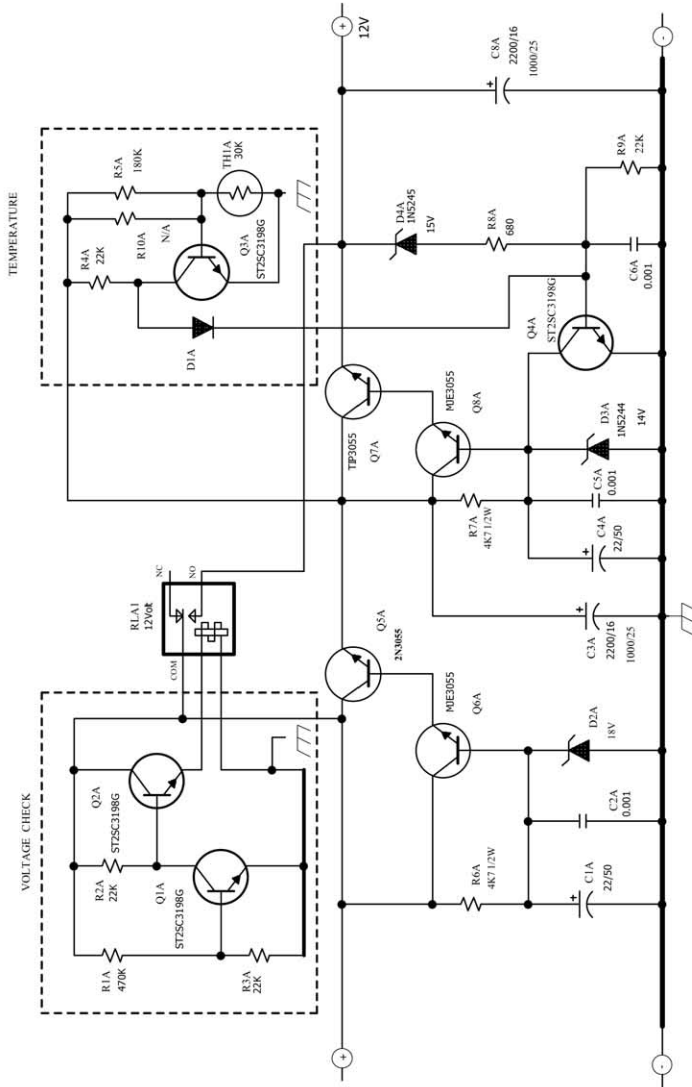


ESP Comander Diagram - CTCSS Diagram

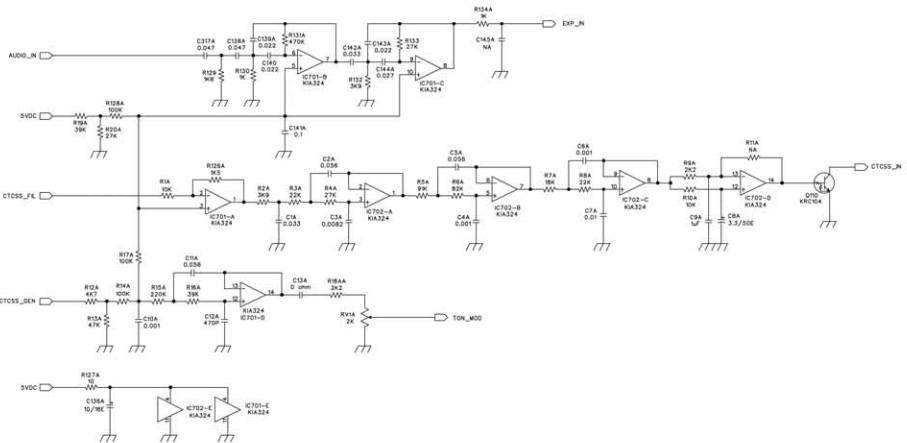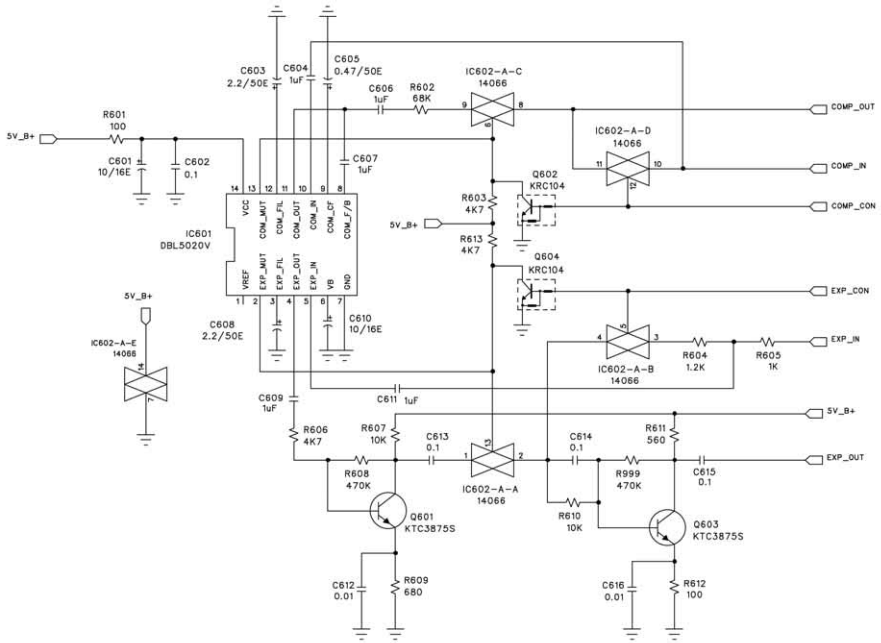


PCB - Main Board & CPU Board

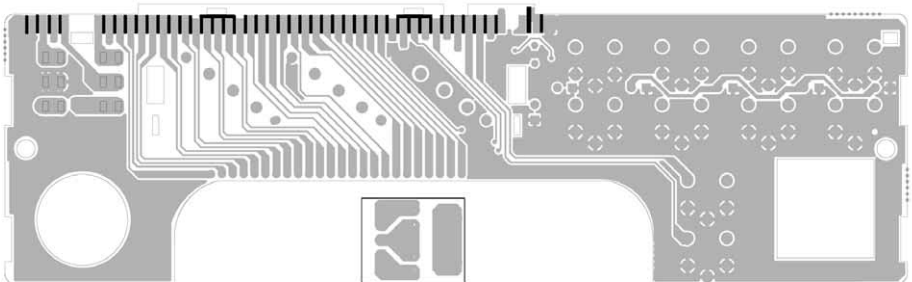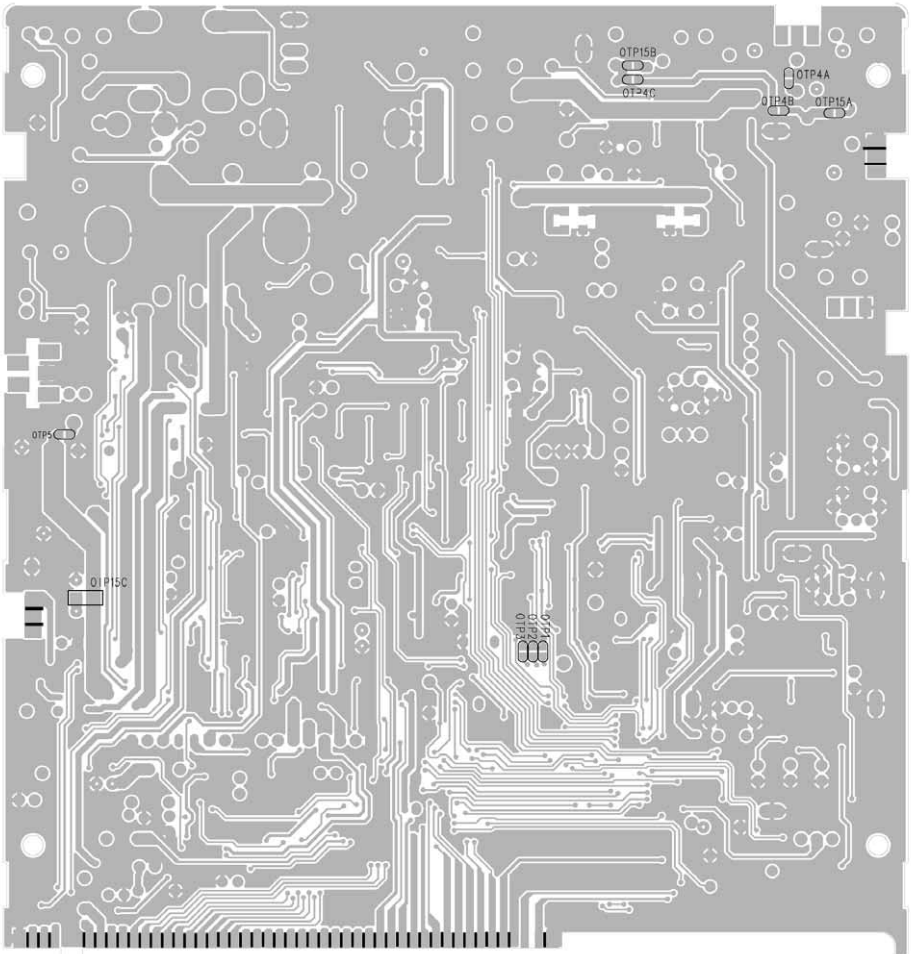


Diagram

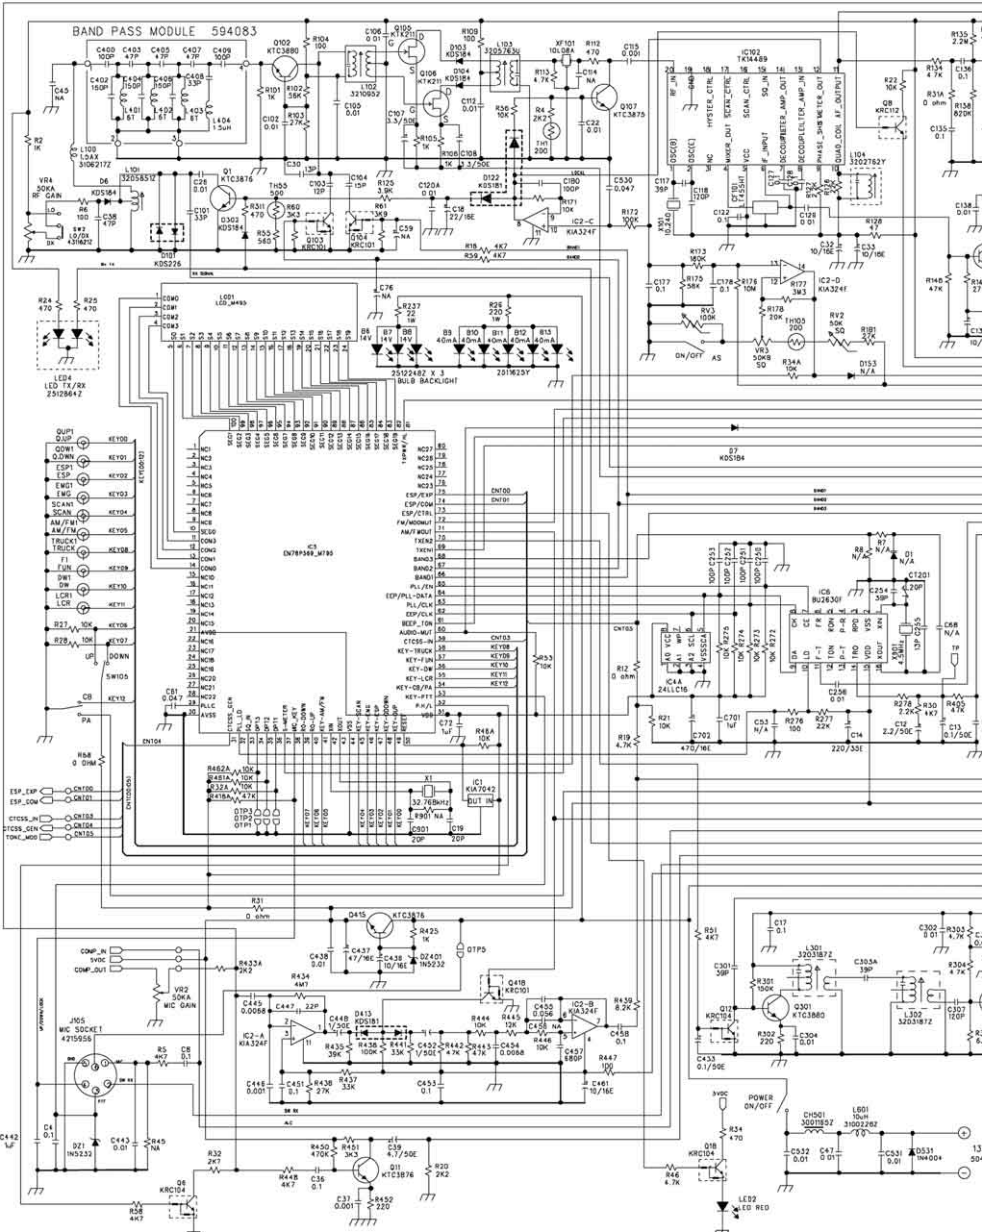

Block Diagram

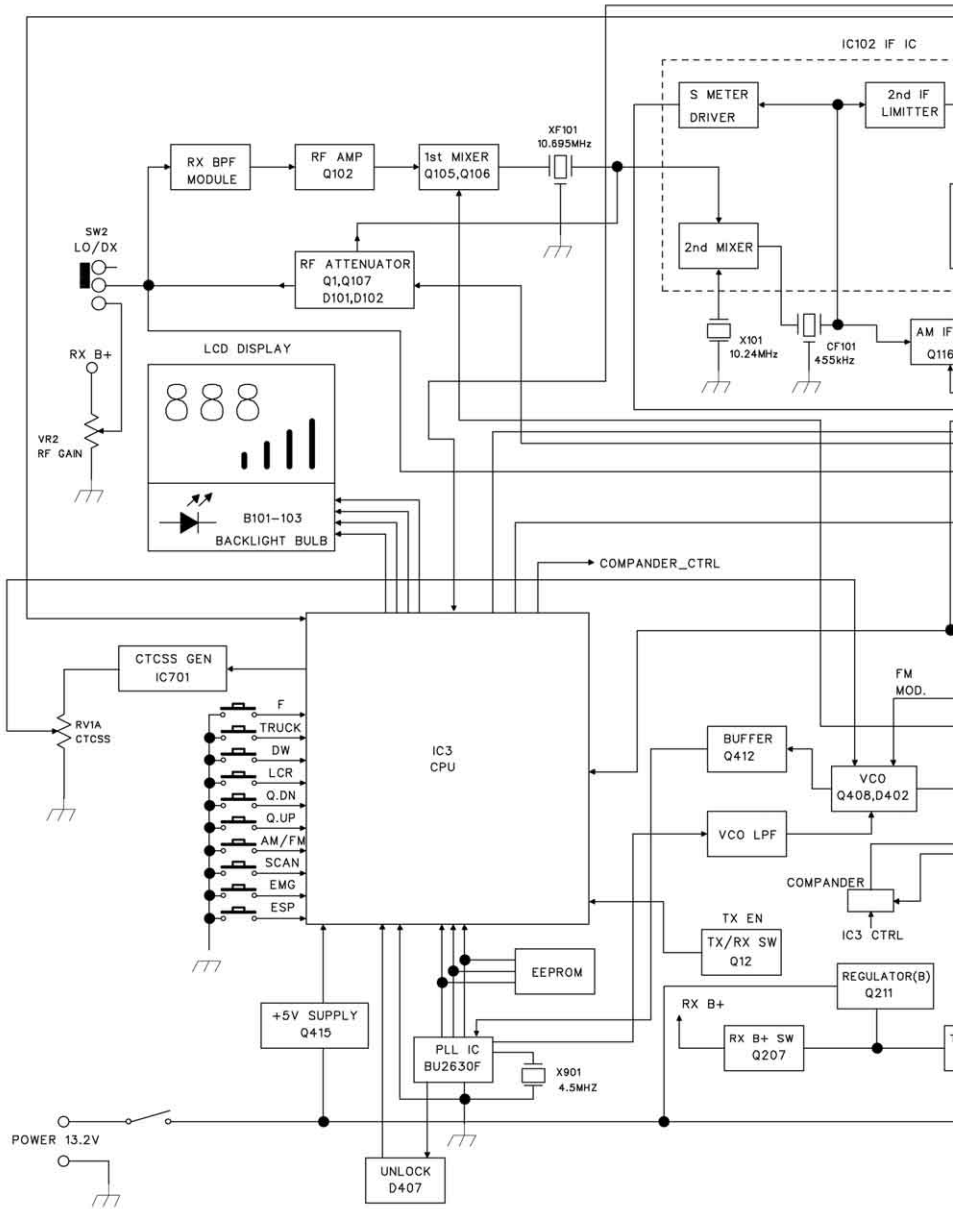

Block Diagram

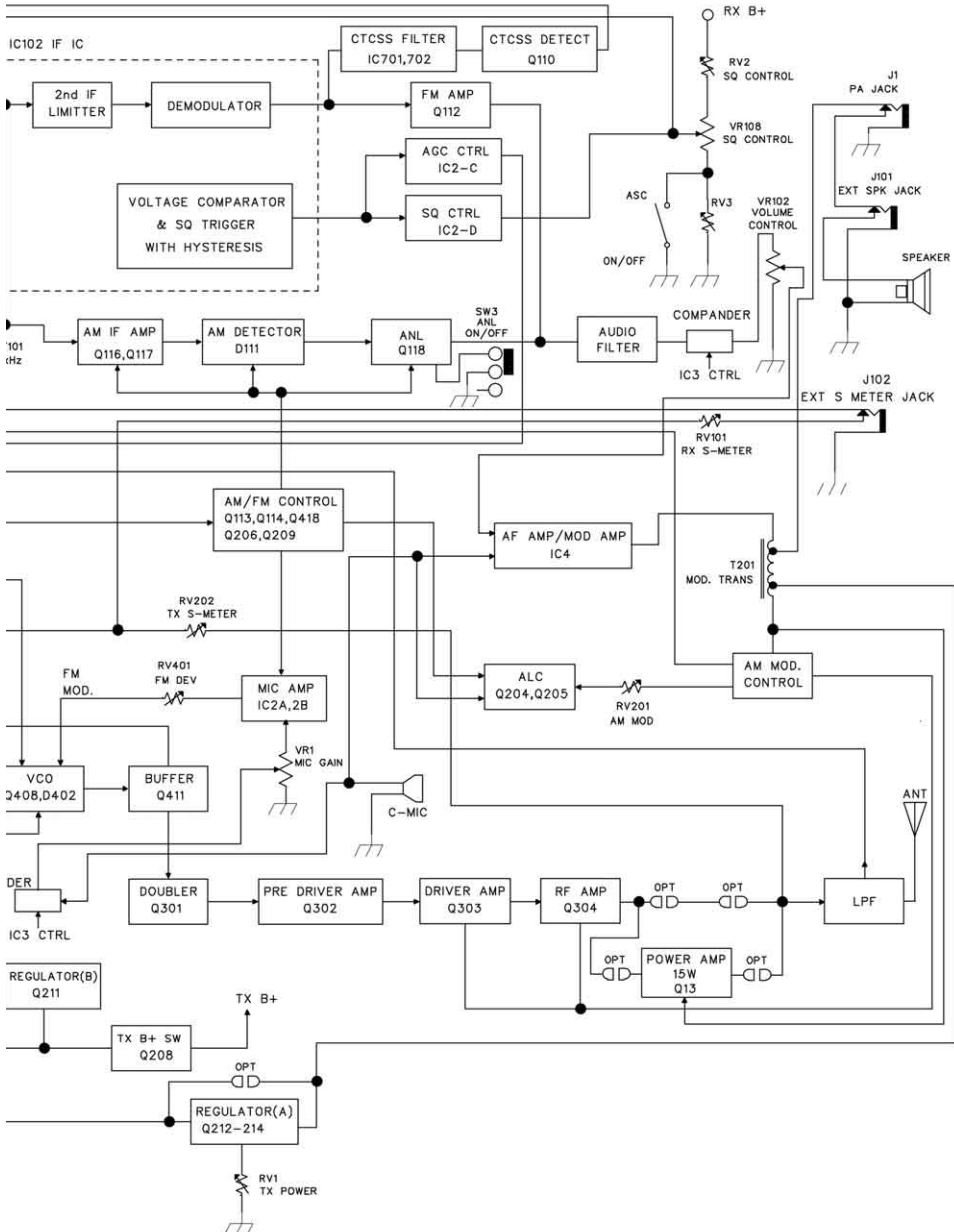

INTEK[®]