

# 马兰士C460(468)手持台功能表

key	function	功能
0~9	numeric input	数字输入
lamp	display illumination on/off	背景照明灯
sql off	squelch control on/off	静噪开关
b v/m ent	vfo/memory mode toggle	VFO/记忆 (MR)模式切换
c?pag	frequency or address number down	频率数或者信道向下变化
d?code	frequency or address number up	频率数或者信道向上变化
#cl ps	cancel mode	取消模式
*ms ms.m	memory scan on/off	信道扫描开关
call	call up call frequency	呼叫频率
call+f+#		扫描时越过MHZ
f+1	switch transmit power level	发射功率调整
f+2	dual watch on/off	双频率守候开关
f+3	memory shift mode on/off	记忆变化开关
f+4	tuning step setting	频率步进设置
f+5	save on/off	省电开关
f+6	frequency lock on/off	锁键盘
f+7	tone squelch/tone encoder toggle	亚音静噪开关
f+8	repeater mode on/off	异频收发模式开关
f+9	invert transmit and receive frequencies in repeater mode	设置中继台亚音转发接收频率
f+0	switch to set mode	SET模式转换
f+a	turn lamp on	长明灯开关
f+b	switch memory record mode	切换记忆记录模式
f+c	paging / code squelch on/off	记录/代码静噪开关
f+d	code setting mode	代码设置模式
f+*	ms.m setting/ms.m operation	ms.m设置/ms.m操作
f+#	scan on/off	扫描开关
f+call/p.l	ptt switch lock on /off	发射锁定开关
f+sql off	dtmf memory mode	DTMF记忆模式
se->0	beep on/off	BP声开关
se->1	length of paging beep 1/5 toggle	呼叫BP声1/5切换
se->2	1khz column input from numeric keys enable/disable toggle	使能够从1KHz开始设置频率
se->3	repeater+pag transmission delay time	半双工发送延迟时间
se->4	squelch pop noise reduction	减小弹出燥声
se->5	apo(auto power off) on/off	自动关闭电源开关
se->6	enable encoder even in frequency lock status	在频率锁定状态下也能使编码可能
se->7	ctcss frequency setting mode (ctn160 tone frequency selection)	ctcss 频率设置模式(ctn 160 双音频频率选择)
se->8	repeater offset frequency setting	半双工差频设置

se->9	(display indications appear normally, but no tones are produced internally.)	(发射亚音设置)显示指示正常出现, 但中间没有音频被建立
se->f+1	all reset(restores factory settings)	全部重新设置(恢复出厂时的设置)
se->f+2	long medium pitched beep (boo) (no function)	调频、调幅模式转换 (C160/168有此功能)
se->f+3	all reset enable/prohibit toggle	全部清除使能够切换
se->f+4	switch to protect mode	保护模式转换
se->f+5	squelch audio during paging even if code matches	
se->f+6	toggle tuning steps when rotary channel selector is turned with the func key held down between 100khz and 1 mhz	按F键时旋转旋钮, 步进1MHZ或100KHZ
se->f+7	clone mode	无线复制模式
se->f+8		无功能
se->f+9	switch bank of optional cmu161 memory unit	99/199信道转换开关 (配置CMU161选件)
se->f+b	delete memory frequency	删除记忆频率
se->f+0	switch to extra mode	EA模式转换
ea->1	high speed scan on/off	扫描速度开关
ea->2	high speed dual watch on/off	快速双频率监视开关
ea->3	change lamp key to rev key	改灯键为倒频键
ea->4	select interval for save function	选择省电功能间隔时间
ea->5	reduce dtmf transmission speed	改变双音频发送速度
ea->6		设置频率范围
ea->7		按上下键时的频率步进
ea->8	enable frequency input from 100 mhz column	使键益直频能够从100MHZ位开始以
ea->9		无功能
ea->0		无功能

注:详细使用请参考使用说明书

Downloaded by □

Amateur Radio Directory