

TECSUN

TECSUN ELECTRONIC IND. LTD.

TECSUN PL-660

PLL SYNTHESIZED RECEIVER

FM STEREO / MW / LW / SW-SSB / AIR BAND



OPERATION MANUAL

RN3AMM - 2010

TABLE OF CONTENTS

TABLE OF CONTENTS	2
FEATURES	4
CONTROL LOCATIONS	5
LCD DISPLAY	7
HOW TO TURN ON/OFF THE RADIO	9
TUNE IN STATIONS	11
METHOD 1: MANUAL STATION TUNING	11
METHOD 2: AUTO BROWSE STATION	11
METHOD 3: DIRECT KEYPAD ENTRY	12
WORKING WITH STATION MEMORIES	13
METHOD 1: STORING STATION MANUALLY	13
METHOD 2: SEMI-AUTOMATIC STORING STATION	13
METHOD 3: ATS (AUTO TUNING STORAGE)	14
FM ATS	14
MW/LW ATS	14
SW ATS	14
HOW TO SELECT DIFFERENT MEMORY PAGE	15
DELETE MEMORY	15
METHOD 1: DELETE SINGLE MEMORY MANUALLY	15
METHOD 2: SEMI-AUTO DELETE MEMORY	16
METHOD 3: DELETE ALL MEMORY WITHIN THE PAGE	16
LISTENING TO STORED STATIONS	17
METHOD 1: MEMORY TUNING MANUALLY	17
METHOD 2: AUTO BROWSE MEMORY	17
METHOD 3: DIRECT KEY IN MEMORY ADDRESS	17
SLEEP FUNCTION	18
CLOCK SETTING	18
ALARM SETTING (By Radio only)	19
SETTING THE ALARM STATION	19
SETTING THE ALARM TIME	19
SNOOZE FUNCTION	20
INTELLIGENT LIGHT FUNCTION	20
TURN ON/OFF THE BACKLIGHT	20
SETTING TUNING STEP	21
FM ST. (FM STEREO)	21
AM BW (BANDWIDTH)	22
ANT. GAIN	22


TABLE OF CONTENTS

TONE CONTROL	22
KEY-LOCK FUNCTION	23
INTELLIGENT CHARGING FUNCTION	23
SINGLE SIDE BAND (SSB)	23
SYNCHRONOUS DETECTOR	24
HOW TO IMPROVE FM / SW RECEPTION	24
SYSTEM SETTING (In Power Off Mode)	25
SETTING FM FREQUENCY RANGE	25
TURN ON/OFF THE LW	25
SETTING MW (AM) TUNING STEP	25
TURN ON/OFF THE INTELLIGENT AUTO LIGHTING	25
TURN ON/OFF THE CHARGING FUNCTION	25
Using Regular Batteries for power supply	25
Using Rechargeable Batteries for power supply	25
RESET PROCEDURE	26
IMPORTANT MATTERS FOR USING BATTERIES	26
TROUBLE SHOOTING	27
SPECIFICATIONS	29
NOTES	31

FEATURES

- FM-Stereo/MW/LW/SW/SSB/AIR band (118-137 MHz) World Receiver with high sensitivity and selectivity
- Easy operation and with high quality acoustic sound
- Worldwide FM band coverage from 76 MHz to 108 MHz
- Shortwave single-sideband (SSB) with upper sideband (USB) and lower sideband (LSB)
- Synchronous detection and dual conversion technology are applied on AM band. (Major improvement on receiver's sensitivity, selectivity, anti-inter-modulation, and channel interference)
- External antenna jack for FM/SW
- 3 levels sensitivity selector (High/Medium/Low)
- Multi Tuning Methods:
 - Auto Tuning Storage (ATS)
 - Auto Scan Tuning with 5 seconds Pre-listening function
 - Manual Tuning
 - Direct keypad Entry
- Store up to 2000 stations (manually, semi-automatic and fully automatic)
 - 100 memories for FM/AM/Longwave/Air Band
 - 200 memories for Shortwave
 - 200 memories for SSB
 - 1200 memories for various bands (12 pages x 100 memories)
- Acoustic speaker with treble/bass tone control switch (FM Stereo via earphone)
- Easy to use with multi-functional control knob, which is for setting timer, frequency tuning, select the page and memory
- Dual timer to turn on the preset radio station.
- Adjustable timer (1~120 minutes) for radio power off automatically (adjustable timer can be switch off for long period of listening)
- 9K/10K Tuning step for MW
- DX/Normal/Local Antenna Gain
- Back Light and Snooze Function
- Signal Strength & Battery Consumption Display
- Direct Reset Function
- 4 x AA (UM3) size batteries, DC-6V
- Dimension: 187 x 114 x 33 mm

CONTROL LOCATIONS

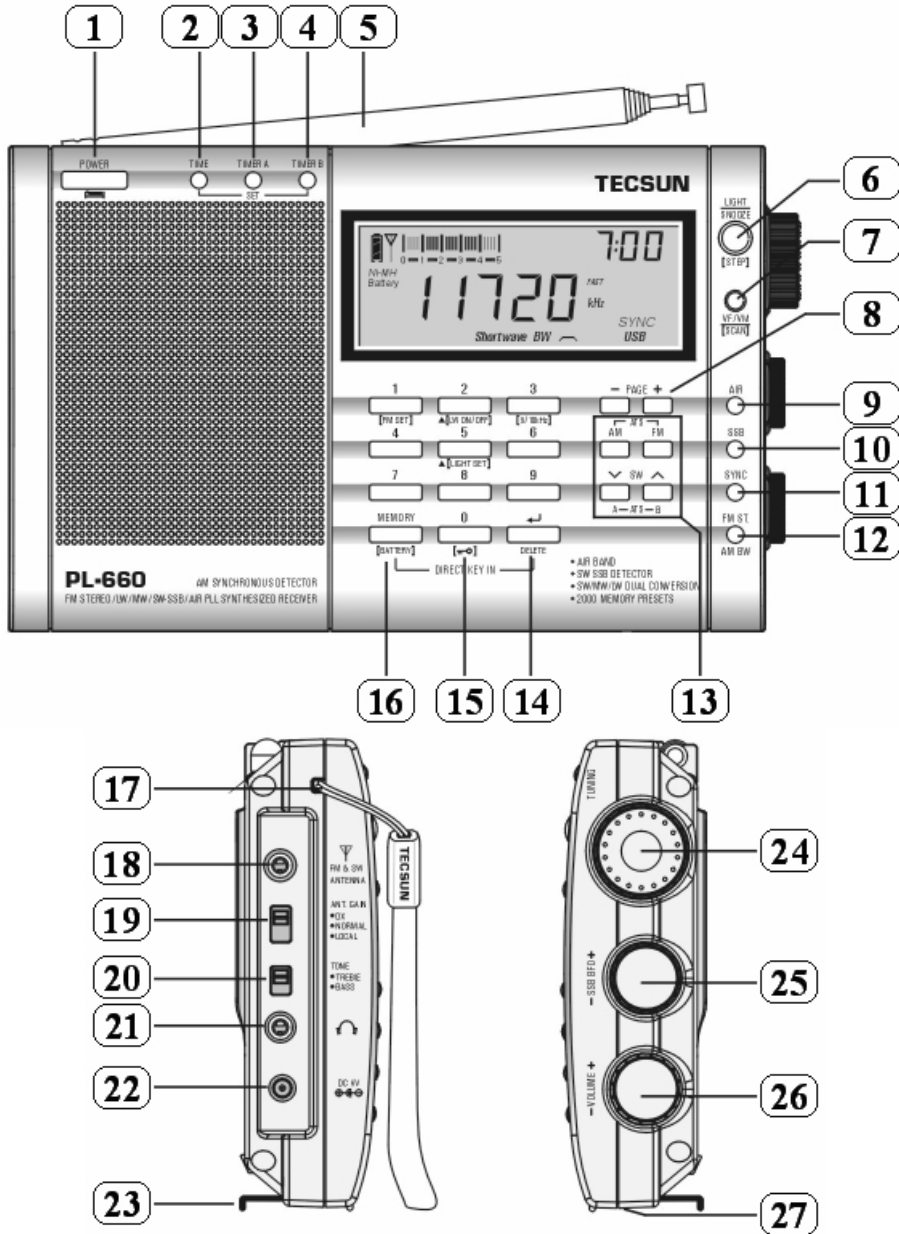





 
CONTROL LOCATIONS

1. Power / Sleep button
2. Time set button
3. Timer A Alarm set button
4. Timer B Alarm set button
5. FM & SW Telescopic Antenna
6. Light / Snooze / Step button
7. VF / VM / SCAN
8. +/- PAGE buttons
9. Air Band button
10. Single Side Band (SSB) button
11. Synchronous (SYNC) button
12. FM, ST & AM BW select button
13. FM / AM (MW, LW) / SW Band & ATS buttons
14. Delete / Enter button
15. Key lock button
16. Memory / Battery button
17. Hand Carry Belt
18. FM / SW Antenna Jack
19. ANT Gain (DX / Normal / Local) switch
20. Treble / Bass Tone Control
21. Earphone Jack
22. DC 6V Jack
23. Metal Stand
24. Tuning Knob
25. SSB BFO knob
26. Volume knob
27. Reset button

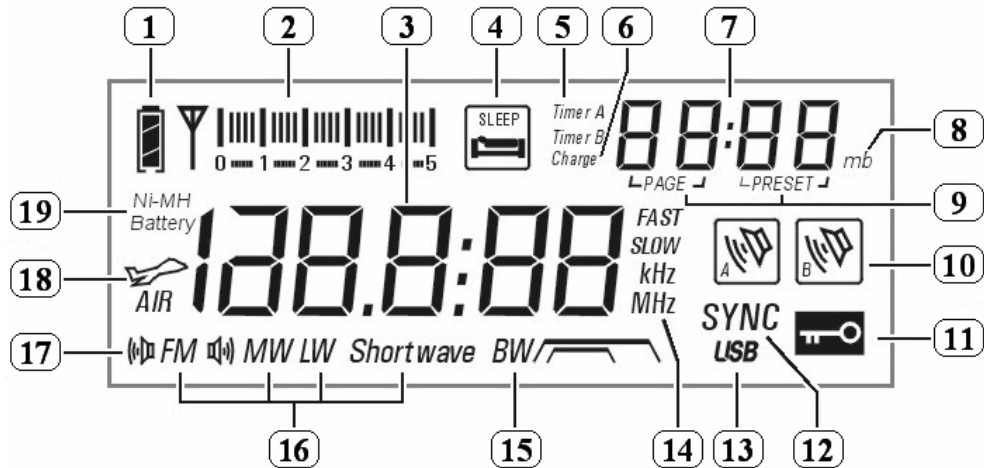

Note: For the silk-printing in red or orange on radio with brackets, it means that you can only operate it when radio is off.

LCD DISPLAY




1. Battery Consumption indicator
 : Full
 : Empty
2. Signal Strength indicator
 : Strong Signal
 : Weak Signal
3. Digital Number Display:
 With radio off: Time & System settings
 With radio on: Frequency or Error display
4. Sleep timer indicator
5. Alarm Timer A or B - Timer indicator
6. Charging Indicator
7. Digital Number Display:
 With radio off: preset alarm time and charging time
 With radio on: time, page & memory address, SW meter band displays.
8. SW meter band indicator
9. **PAGE**: Memory Page number
PRESET: Memory Address number
10. Alarm Timer A or B - On/Off indicator
11. Key-Lock indicator
12. Synchronous band detection

LCD DISPLAY


13. Single Side Band (SSB) indicator
 - USB:** Upper Side Band
 - LSB:** Lower Side Band
14. Tuning Speed:
 - Slow:** Slow Tuning
 - Fast:** Fast Tuning
 - KHz:** frequency unit for MW, LW & SW
 - MHz:** frequency unit for FM
15. AM Band width indicator
 -  : AM Wide band
 -  : AM Narrow band
16. FM, MW, LW and SW Band indicator
17. FM Stereo indicator
18. Air Band indicator
19. NiMH Rechargeable Battery indicator

HOW TO TURN ON/OFF THE RADIO

1. Open the battery compartment located on the back of the unit; install 4 x UM3AA alkaline batteries observing the battery polarity diagram on the back of the radio. Close the battery door.

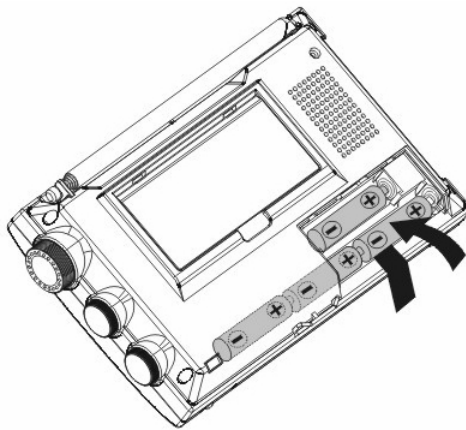


Connect the unit to the regulated power supply.

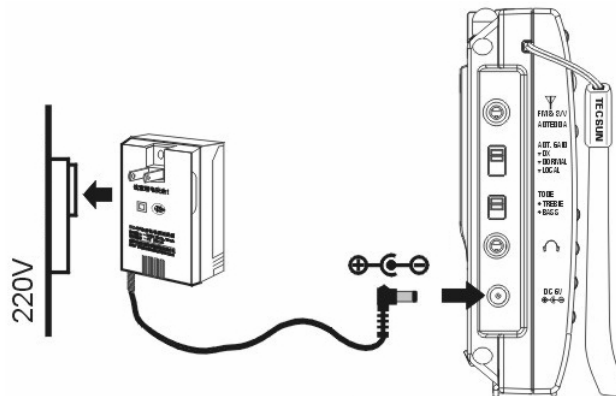

HOW TO TURN ON/OFF THE RADIO

2. Press on the [POWER] button to turn on the radio.

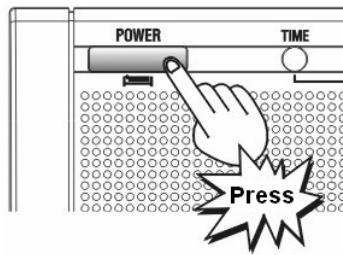

Note:

If the radio is unable to be turned on, please check if the batteries were installed correctly, battery capacity is sufficient or the lock function had been applied with "π-O" displays on the screen (press & hold the [π-O] button to unlock).

Long press on the power button to adjust the sleep timer setting.

TUNE IN STATIONS

Press the **[POWER]** button to turn on your radio, then select your desired band by pressing **[FM]**, **[AM]**, SW **[∨]** / **[∧]**, or **[AIR]** button. In case of receiving FM/AIR/SW broadcasting, fully extend the telescopic antenna for a better reception. When receiving MW and LW broadcasting, please rotate the radio or change its location to achieve optimum reception. You can rotate the **[VOLUME]** knob to adjust to appropriate volume.

Now, you can turn into your favorite stations with any of the below tuning methods:

METHOD 1; MANUAL STATION TUNING


Press the **[VF/VM]** button to switch into frequency mode with frequency short-flash on the display, and then rotate the **[TUNING]** knob to select your desired station.



Frequency mode

METHOD 2: AUTO BROWSE STATION

1. Press the **[VF/VM]** button with frequency short-flash on the display to switch into frequency mode.
2. Press & hold the **[VF/VM]** button to scan from one station to another, staying on each station for about 5 seconds.
3. To stop the auto browse function, simply rotate the **[TUNING]** knob or press on the **[VF/VM]** button again to confirm on your desired station.

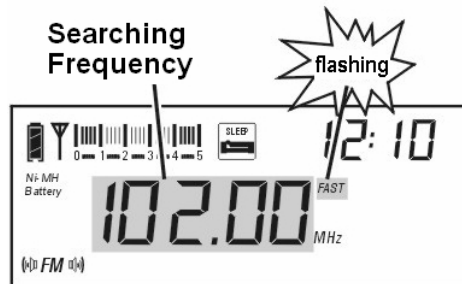

Auto browse station

TUNE IN STATIONS

Notes:

1. While operating the "Auto Browse Station" function, you can press the [MEMORY] button anytime to store the station into memory, and the radio will keep on auto browsing the next available station.
2. The "Auto Browse Station" function can't be employed under Air band and SW SSB states.

METHOD 3: DIRECT KEYPAD ENTRY

1. Press the [VFA/M] button with frequency flashing on the display to switch into frequency mode.
2. Press the numeric keys [0] - [9] to enter the station frequency directly.

Notes:

1. Ignore the decimal point for FM band when inputting the frequency numbers. For example, FM 89.3 MHz, just enter [8] [9] [3].
2. If the entered frequency rate is not within the covering area, the display would display "Err" (error) symbol.

WORKING WITH STATION MEMORIES

There are 2000 memories for PL-660, which has great flexibility of memory storage. Please note the chart below:

1. Memory PAGE 0, rioted as **[P0]**, consists of 800 memories, 100 assigned for FM/MW/LW, 200 for SW & SSB and 100 for AIR BAND.
2. Memory PAGE 1~12, noted as **P1, P2**, etc., each page consists of 100 memories, in total 2000 memories.


BAND	MEMORY			
	Memory for each Band (800)		Memory among all Band (1200)	
	PAGE P0	ATS	PAGE 01~12	ATS
FM	100	V	Each Memory Page can store 100 Memories.	ATS is available for all Memory Page (except SSB & Air Band)
MW	100	V		
LW	100	V		
SW	200	V		
SSB	200	X		
AIR	100	X		

METHOD 1: STORING STATION MANUALLY

1. Press the **[FM]**, **[MW/LW]** or **[SW]** button for band selection, then tune into your desired station.
2. Press the **[MEMORY]** button with the next available "Memory Address" flashing.
3. Rotate the **[TUNING]** knob to specify the storing memory address.
4. Press the **[MEMORY]** button again to confirm. You can also wait for 3 seconds to auto store the station into memory.

METHOD 2: SEMI-AUTOMATIC STORING STATION

While operating the "Auto Browse Station" (refer to page 11) function, you can simply press the **[MEMORY]** button to store the station into memory to avoid unwanted stations.

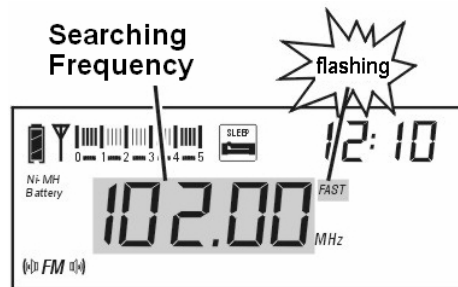


Auto browse station

WORKING WITH STATION MEMORIES

METHOD 3: ATS (AUTO TUNING STORAGE)

FM ATS:

1. Fully extend the telescopic antenna and press the [FM] button to select FM band.
2. Press & hold the [FM] button with "PRESET" flashing and the frequency start running, then you can scan and store the available stations within the memories. When the frequency stop running, it means the ATS operation has been completed; you can rotate the [TUNING] knob searching for those scanned and stored stations.

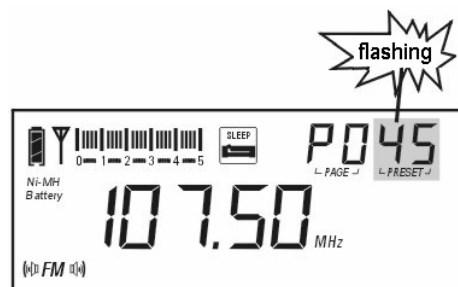

MW/LW ATS:

1. Press the [AM] button to select MW/LW band.
2. Press & hold the [AM] button for ATS MW or LW.

SW ATS:

Fully extend the telescopic antenna and press the SW [∨] or [∧] button to select SW band. There are two modes for SW ATS tuning:

- Mode A: Press & hold the [∨] button to ATS the stations within all meter bands
Mode B: Press & hold the [∧] button to ATS the stations within present meter band only.


Notes:

1. During ATS process in FM, MW / LW or SW (mode A), pre-stored radio stations will be replaced automatically by the new searched stations.
2. With ATS in SW (mode B), those existing memories will not be replaced; all the newly found radio stations would be stored in the blank memories addresses.
3. If there is too many interference in you surrounding or many mirror/blank station being stored during ATS, you should contract the telescopic antenna (FM & SW) or rotate the radio (MW & LW) for better location. You can also push the [ANT. GAIN] button to the position "NORMAL" or "LOCAL" to restart ATS.

WORKING WITH STATION MEMORIES

HOW TO SELECT DIFFERENT MEMORY PAGE

1. Press the [FM], [MW/LW] or [SW] button for band selection, then tune into your desired station.
2. Press the [MEMORY] button with memory address flashing on the upper right corner
3. Press the [- PAGE +] button to choose your desired memory PAGE, then rotate the [TUNING] knob to select your preference memory address.
4. Press the [MEMORY] button again to confirm or wait for 3 seconds to auto store the station into memory.

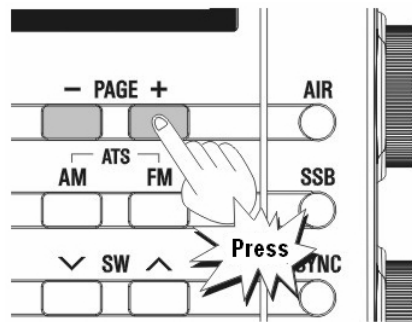


DELETE MEMORY

Press the [VF/VM] button with "Memory address" showing on upper right corner of the display to enter the [Memory] mode, and then follow below methods to delete those unwanted stations

METHOD 1: DELETE SINGLE MEMORY MANUALLY

Rotate the [TUNING] knob to select the memory that you want to delete, press & hold the [DELETE] button with "dEL" flashing; then press the [DELETE] button to remove the unwanted memory address.

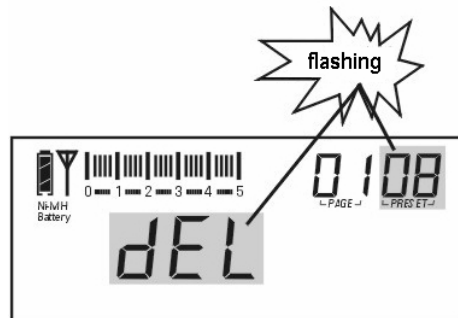

Delete Single Memory

Note:

If "dEL" is flashing more than 3 seconds without confirmation, it will exit the delete function automatically.


WORKING WITH STATION MEMORIES

METHOD 2: SEMI-AUTO DELETE MEMORY

Press and hold the [VF/VM] to auto browse stations, then you can press the [DELETE] button anytime to direct delete the unwanted station; the radio will keep on auto browsing the next available station until you press any other button to stop this function.

METHOD 3: DELETE ALL MEMORY WITHIN THE PAGE

Press & hold the [DELETE] button for 3 seconds and notice both "Memory address" & "dEL" flashing, then follow with "Memory Page" and "dEL" flashing on the upper right corner of display. Press the [DELETE] button again to delete all memory within the selected page.

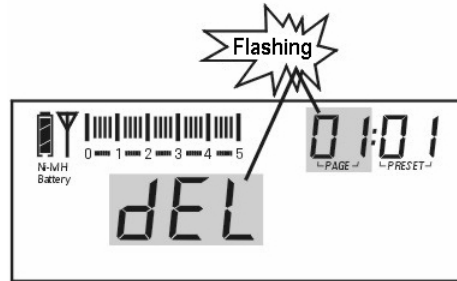


Delete ALL Memory

Note:

If the [DELETE] button has not been pressed within 3 seconds to confirm, it will exit the delete function automatically.

LISTENING TO STORED STATIONS

Select band and then press the [VF/VM] button with "Memory address" shows on the upper right corner of display to enter the [Memory] mode, press the [- PAGE +] button to select your desired page, then apply any of below three tuning methods to tune around those stored stations:

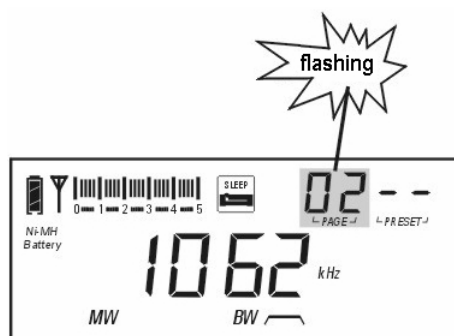

Changing memory pages

METHOD 1: MEMORY TUNING MANUALLY

Rotate the [TUNING] knob to tune around the stored station.

METHOD 2: AUTO BROWSE MEMORY

Press & hold the [VF/VM] button until "PRESET" flashing to auto scan from one memory to another, staying on each station for about 5 seconds. To stop auto search memory, simply rotate the [TUNING] knob or to press on [VF/VM] button again.




Auto browse memory


METHOD 3: DIRECT KEY IN MEMORY ADDRESS


Press the numeric keys [0] - [9] to enter the memory address directly, and then press again the [←] button to confirm.


Note: If the display shows " - - - " symbol after entering the number, it means the entered memory page/address does not exist.

SLEEP FUNCTION

 1. Press & hold the **[POWER]** button with the symbol of "  " flashing on the display to enter sleep timer mode.

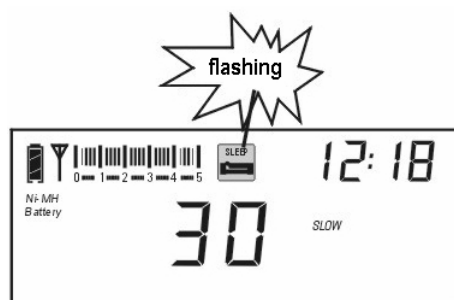


2. Rotate the **[TUNING]** knob immediately to select sleep timer from 1 ~ 120 minutes or select permanently "  " (radio will be turned on after 1 second).

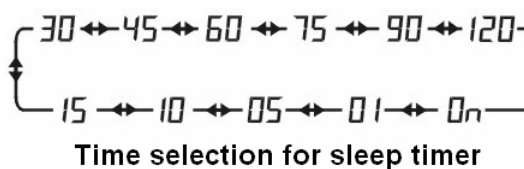

Note: Default setting for the sleep timer is 30 minutes.

CLOCK SETTING

1. Press & hold the **[TIME]** button with hour flashing, then rotate the **[TUNING]** knob to adjust the hour.
2. Press the **[TIME]** button with minutes flashing, and then rotate the **[TUNING]** knob to adjust the minute.
3. Press again the **[TIME]** button to confirm the setting.

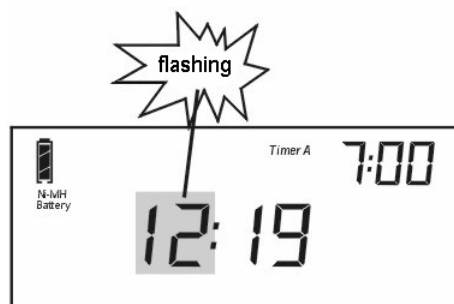

Time setting

- ✘ If the **[TIME]** button has not been pressed again within 3 seconds, the unit will automatically confirm the setting.
- ✘ You can direct key in the number to set the hour/minutes instead of rotating the **[TUNING]** knob.


ALARM SETTING (By Radio only)

SETTING THE ALARM STATION:

1. Turn on the radio, then tune into your favorite station for alarm by radio and adjust your desired alarm volume level.
2. Press the [MEMORY] button and then immediately press the [TIMER A] or [TIMER B] button and notice "A" or "B" flashing on the display to confirm the preset alarm station.

SETTING THE ALARM TIME

1. Press & hold the [TIMER A] button with hour flashing in the upper right corner of display, then rotate the [TUNING] knob to adjust the hour.
2. Press the [TIMER A] button with minutes flashing, and then rotate the [TUNING] knob to adjust the minute.
3. Press the [TIMER A] button again, then rotate the [TUNING] knob to select from 1 ~ 90 minutes to set the Alarm Off Timer.
4. Press the [TIMER A] button to confirm the setting.

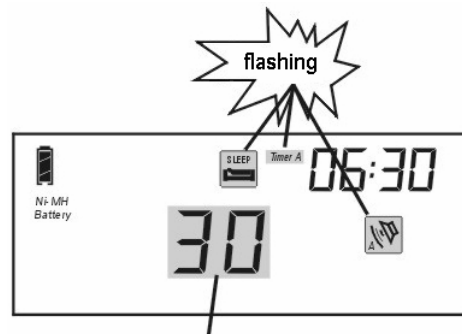

Setting timer for alarm off

- ✘ If the [TIMER A] button has not been pressed again within 3 seconds, the unit will automatically confirm the alarm setting.

Note: The unit will turn on automatically and switch to the preset alarm station and time. It will also be turned off automatically when it reaches the preset time.

SNOOZE FUNCTION

When the preset alarm is activated, you can press the [LIGHT/SNOOZE] button with "A" or "B" flashing in order to turn off the alarm temporarily, but the unit will turn on again after 5 minutes later.

Notes:

1. You can press the [TIMER A] or [TIMER B] button repeatedly to turn on/off the alarm by radio.
If the symbol "A" or "B" shows on the display, it means the alarm by radio was activated, otherwise, it isn't activated.
2. If the preset alarm is activated, press the [POWER] button once to continuously listen to the radio; press it twice to turn off the radio.
3. If the preset alarm is activated when you are listening to the radio, it will auto switch to the preset alarm station.

INTELLIGENT LIGHT FUNCTION

This radio has an intelligent lighting function with which the backlight would be on for 3 seconds when operating any keys or knobs.

TURN ON/OFF THE BACKLIGHT:


Press the [LIGHT/SNOOZE] button to illuminate the LCD for 3 seconds; press & hold the [LIGHT/SNOOZE] button for permanently illumination.
Press it again to turn off the backlight.

Notes:

1. When the unit is powered by the battery, please try to avoid setting the backlight to permanent illumination so as to reduce power consumption.
2. When the unit is turned off, the permanent illumination function will be turned off automatically as well.

SETTING TUNING STEP

The intelligent tuning step function is activated by default. You can also press & hold the [STEP] button to select fast / slow tuning with radio on. **FAST/SLOW** tuning is shown in the chart below for each band.

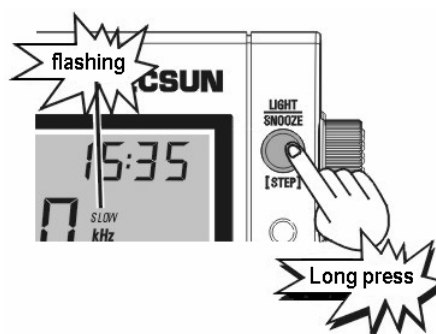

BAND	TUNING STEP			
	FAST/SLOW TUNING STEP ("Fast/Slow" flashing on display)		SLOW TUNING STEP ("Slow" flashing on display)	
	Slowly rotate the [TUNING] knob with "Slow" indicates on display	Quickly rotate the [TUNING] knob with "Fast" indicates on display	Quickly / Slowly rotate the [TUNING] knob	
FM	0.01 MHz	0.1 MHz	0.01 MHz	0.01 MHz
MW	1 kHz	9 kHz / 10 kHz	1 kHz	1 kHz
LW	1 kHz	9 kHz	1 kHz	1 kHz
SW	1 kHz	5 kHz	1 kHz	1 kHz
AIR	1 kHz	25 kHz	1 kHz	1 kHz

FM ST. (FM STEREO)

1. While listening to FM stereo stations, press the [FM ST.] button with "⎓ ⎓" appears in the display to activate the "STEREO" listening. If the received FM broadcast signal is too weak, it is recommendable to turn off the stereo function by pressing the [FM ST.] button again with "⎓ ⎓" disappears.
2. While listening to FM stereo stations by speaker, it is recommendable to turn off the stereo function by pressing the [FM ST.] button with "⎓ ⎓" disappears to improve sound quality.
3. The stereo function will not be activated and "⎓ ⎓" will not appear if the FM station is not stereo broadcasting.

AM BW (BANDWIDTH)

Press the [AM BW] button to select your desired bandwidth for MW, LW, SW, and SSB.

Wide Band

It has better audio fidelity when receiving strong signals or local stations.

Narrow Band

It is suitable to receive weak & long distant station as narrow band is able to limit the interference from adjacent strong signal and reduce the background noise.



AM Bandwidth Indiction


ANT. GAIN

Push the [ANT. GAIN] switch to "DX" position for normal listening. But when listening to the stations with strong signal or strong electrical interference, push the [ANT.GAIN] switch to either "NORMAL" or "LOCAL" position to reduce background noise or interference.

ANT. GAIN

DX :
NORMAL:
LOCAL:

TONE
TREBLE:
BASS:

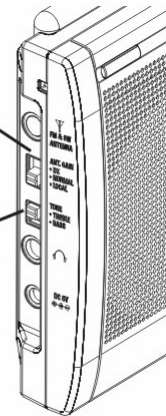

TONE CONTROL

Push the [TONE] switch upward for "TREBLE" listening, downward or "BASS" tone.

KEY-LOCK FUNCTION

To activate the key lock function, press & hold the [⏏] button with "🔑" appears on display. Press & hold it again with "🔑" disappears to deactivate the key lock function.

INTELLIGENT CHARGING FUNCTION

With radio off, install 4 x UM3 (AA) rechargeable batteries to activate the built-in charging function.

Use the external adaptor to connect the radio for charging. The symbol "🔋" will advance from the bottom to top during power charging. It stops when batteries are fully charged.

For Alkaline batteries, please switch off the rechargeable function. (Press the [BATTERY] button until the "🔋" is disappear at the top left corner of LCD when the radio is at off mode)

Notes:

1. Insist to use up all power of rechargeable batteries before charging again. This could extend the usage time of battery and keep them in good conditions.
2. 4 pcs of batteries to be used as a group and don't separate them for other usage and mix using those batteries with different power capacity.
3. Please don't charge on any non-rechargeable battery in the radio, this will cause a hazard or damage to your radio.
4. Please do not use any other external adapter with different voltage.

SINGLE SIDE BAND (SSB)

1. In Shortwave mode, press the [SSB] button repeatedly to select Upper Side Band (USB) or Lower Side Band (LSB).
 - "USB" showing on the display indicates USB selection.
 - "LSB" showing on the display indicates LSB selection.
 - "USB" and "LSB" disappearing means switching to SW.
2. Suggest to key in the SSB frequency directly
3. Then fine tune the [SSB BFO] knob to achieve better sound fidelity.

SYNCHRONOUS DETECTOR

When receiving AM broadcasting, if there is interference from adjacent strong signals, you can activate the SYNC function to improve the reception.


1. Press the [SYNC] button to select between "^{SYNC}_{USB}" or "^{SYNC}_{LSB}" for optimum reception.
2. To deactivate the SYNC function, just press the [SYNC] button repeatedly with the symbols "^{SYNC}_{USB}" and "^{SYNC}_{LSB}" disappearing.

Notes:

1. The standard model of receiving AM station is the best normally. If there is distortion, or interfering within the AM station, please try to adjacent station signals by activating the Synchronous detection function, it can improve the reception.
2. If the "SYNC" symbol keeps flashing, it indicates that the radio signal is too weak or the frequency is deviant. It is recommended to exit the synchronization detection function as it is not able to function properly.

HOW TO IMPROVE FM / SW RECEPTION

Use the external wire antenna plug into the [FM & SW ANTENNA] jack, and then hang the other end outside the window for better FM and SW reception.

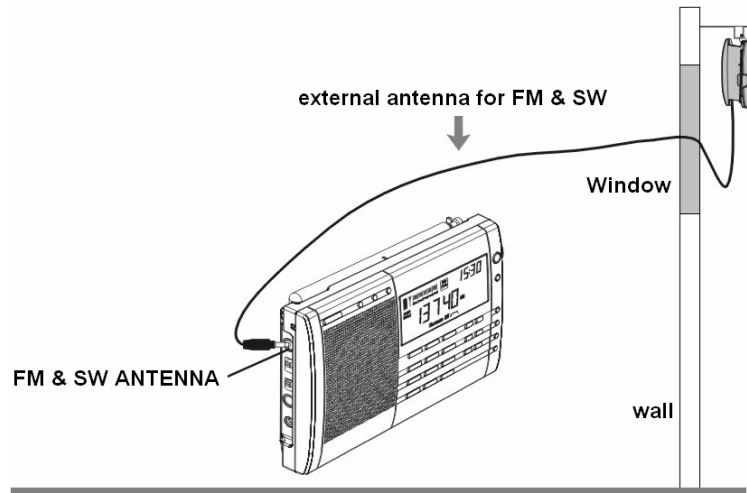

Caution: Do not install any external antenna at the area with thunder & lightning!

SYSTEM SETTING (In Power Off Mode)

SETTING FM FREQUENCY RANGE:

Press & hold the [FM SET] button until 88-108 MHz, 76-108 MHz or 87-108 MHz appears in the display. Quickly keep on pressing the [FM SET] button to select suitable frequency range for your local FM.

TURN ON/OFF THE LW:

Press & hold the [AM] button until "LW ON" or "LW OFF" appears in the display to turn ON or OFF the LW respectively.

SETTING MW (AM) TUNING STEP:

Press & hold [9/10 kHz] button until "9 kHz" or "10 kHz" appears in the display to select your desired AM tuning step.

TURN ON/OFF THE INTELLIGENT AUTO LIGHTING

Factory default of intelligent auto lighting function is ON, with which the backlight would be on for 3 seconds when operating any keys or knobs.

To deactivate the Auto lighting function, press & hold the [LIGHT SET] button with the "OFF" shows in the display; press & hold the [LIGHT SET] button again with "ON" shows up to activate it.

Note: After shutting down the intelligent auto lighting function, the [LIGHT/SNOOZE] key can still be operated to turn on/off the backlight

TURN ON/OFF THE CHARGING FUNCTION

Using Regular Batteries for power supply:

In radio off mode, press & hold the [BATTERY] key with "CHA OFF" showing up & "Ni-MH Battery" disappearing to activate the consumption display of regular batteries and turn off the built-in charging system.

Using Rechargeable Batteries for power supply:

Turn off the radio, press & hold the [BATTERY] key with "CHA ON" and "Ni-MH Battery" showing up to activate the consumption display of rechargeable batteries and turn on the built-in charging function.


SYSTEM SETTING (In Power Off Mode)

Note: This radio is default to use rechargeable batteries for power supply. In case of using regular batteries, you should switch the radio system to regular batteries mode in order to show the correct power capacity.

RESET PROCEDURE

If the radio does not function properly, you can perform a reset by using a pointed object such as straightened paper clip, into the [RESET] hole in the bottom of the unit, and gently press and release.

Note: Station memory will not be removed after you push the reset button.

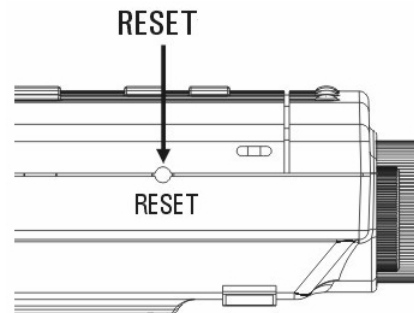

Located at the bottom of radio

IMPORTANT MATTERS FOR USING BATTERIES

1. The Clock memory will be gone if the unit has no power supplied by either batteries or adaptor for a long time, but the pre-stored frequencies will still be kept.
2. When the battery power is low, the "☐" symbol in the display will flash to alert you for changing new batteries. And it will turn off automatically when the power is gone.
3. Mix using the used & new batteries would cause damage of radio and incorrect display of power capacity.
4. In order to avoid leakage, always remove the batteries when the unit will not be used for a long period of time.

TROUBLE SHOOTING

QUESTIONS	ANSWERS	SOLUTIONS
Can not turn on the radio.	- Batteries have no power	- Replace all batteries with new one.
	- Installing batteries incorrectly	- Observing the polarities of battery, then re-install all batteries again.
	- Key knob function is being activated.	- Press the [⏏] button to deactivated it.
Radio turn off while listening.	- Batteries have no power	- Replace all batteries.
	- Sleep timer is being activated.	- Turn on the radio again.
During ATS, some station cannot be stored.	- Frequency of stations are too weak.	- Search the station manually
Some stored station with noise.	- There is interference near by your area.	- Low down the antenna or move to other location and try again.
Only limited FM stations can be received.	- FM frequency might be set as 76~90 MHz accidentally.	- Turn off the radio, press & hold the [FM SET] button to select the accurate FM frequency range.
Poor AM reception in USA.	- USA is using 10 kHz AM tuning step not 9 kHz.	- Turn off the radio press the [9/10kHz] button to select accurate tuning step.
The sound of SW SSB broadcasting is too low.	The default bandwidth is Narrow band.	Press the [AM BW] button to select the Wide band.
When the alarm is on, there is only noise with the broadcast.	- Did not set the proper radio station for the alarm.	- Preset your alarm station properly
	- Or there is no broadcasting at that radio station. - Or you are in another city where does not have a radio station for your preset frequency.	- Make sure it has radio broadcast in your location.

TROUBLE SHOOTING

QUESTIONS	ANSWERS	SOLUTIONS
The charging time becomes shorter and shorter.	The chargeable batteries getting old.	Replace the old rechargeable batteries with new ones.
Radio malfunction.	This may caused by interference, and the computer microchip does not function properly.	Remove all batteries, then reload again. If it is still not working, please press on the reset button with a pointed object.

SPECIFICATIONS

1. Frequency Range:

FM: 76 ~ 108 / 87 ~ 108 MHz Step: 0.01 MHz / 0.1 MHz

MW: 522 ~ 1620 / 520 ~ 1710 kHz

Tuning Step: 9K for North America or other countries / 10K for South America

LW: 100 ~ 519 kHz Step: 1 kHz / 9 kHz

SW: 1711 ~ 29999 kHz Step: 1 kHz / 5 kHz

AIR: 118 ~ 137 MHz Step: 1 kHz / 25 kHz

2. Sensitivity

FM (S/N=30 dB) Less than 3 μ V

MW (S/N=26 dB) Less than 1 mV/m

LW (S/N=26 dB) Less than 5 mV/m

SW (S/N=26 dB) Less than 20 μ V

SSB (S/N=10 dB) Less than 1 μ V

AIR (S/N=10 dB) Less than 5 μ v

3. Selectivity

FM > 30 dB (\pm 200 kHz)

MW/LW > 40 dB (\pm 9 kHz)

SW > 40 dB (\pm 5 kHz)

4. S/N Ratio

FM Less than 60 dB

MW/LW Less than 45 dB

SW Less than 50 dB

5. AM Frequency

SSB, AM 1st IF: 55.845 MHz

2nd IF: 455 kHz

FM: 10.7 MHz

6. FM Stereo crosstalk Less than 20 dB

7. Output Power

Speaker > 450 mW

Earphone > 10 mW

SPECIFICATIONS

- 8. Station Memory** 2000M in total
800 memories for each band:
FM: 100M
MW: 100M
LW: 100M
SW: 200M
SSB: 200M
AIR: 100M
1200 memories for 12 memory pages (each page 100 memories)
- 9. Alarm Mode:** alarm by radio only (2 pre-settings)
- 10. Quiescent Current**
FM < 50 mA
MW/LW < 70 mA
SW < 70 mA
SSB < 70 mA
AIR < 70 mA
Standby < 80 μ A
- 11. Speaker:** D 77 mm / 16 Ω / 1W Cone speaker
- 12. Earphone Jack:** 3.5 mm, 32 Ω , Stereo type
- 13. Power supply:**
Battery: UM3 or AA x 4
External adaptor: DC 6 V, \geq 300 mA
- 14. Unit Dimensions:** approx. 187 (W) x 114 (H) x 33 (D) mm
- 15. Weight:** 470 g (Batteries not included)

NOTES

NOTES

NOTES

NOTES