



INSTRUCTIONS

When only one instrument is used, plug into No. 1 input jack.

This amplifier is designed for 105-125 volt, 50-60 cycle current.
Damage will result if connected to improper power source.

Do not use higher rating fuse than 1½ ampere, type 3 A.G.

This amplifier was carefully checked and in good playing condition when shipped. If damaged when received call transportation company immediately and place claim.