



**Fender® / ROGERS® / Rhodes®**  
 CBS MUSICAL INSTRUMENTS — A DIVISION OF CBS, INC.  
 FULLERTON, CALIFORNIA 92631

PART NAME  
 — SCHEMATIC —  
**FUZZ-WAH PEDAL,  
 ADJUSTABLE**

PART NO. 011747	REV A
--------------------	----------

# FENDER FUZZ WAH PEDAL

## PARTS PRICE LIST

004026	Capacitor, Disc., 22PF 1000 V	1.00	012032	Label, Caution	.50
007029	Capacitor, Disc., 220 PF 1000 V	.50	012231	Lug, Terminal	.50
007094	Battery Plug	.50	013472	Capacitor, Film, .022 mfd, 200V	1.00
007102	Switch, DPDT Push Button	4.50	015529	Control, Mini, 1 Meg	1.50
009512	Capacitor, Elec., 25 mfd, 25 V	.50	016469	Washer	.10
011741	Circuit Board	7.00	018216	Bushing	.50
011743	Circuit Board Assembly	24.00	018960	Cable & Plug Assembly	3.50
011768	Control, Dual - 10K 1 Meg	9.00	021022	Capacitor, Film, .1 mfd 200V	1.00
011771	Bracket, Control Mtg.	.80	021105	Capacitor, Elec., 10 mfd, 25 V	1.00
011774	Bracket, Pot Mtg.	2.50	021394	Resistor, 10 Meg 1/2 Watt 10%	.50
011925	Operation Amplifier, Dual	5.50	021956	Jack, Single Circuit	1.50
011926	Knob, Thumb	1.90	022012	Nut, Hex	.10
011928	Foot Pedal	15.50	022384	Washer	.10
011929	Housing, Pedal W/Silk Screening	24.00	022394	Washer	.10
011936	Pad, Foot Pedal	3.50	029064	Gear Rack	.50
012008	Bumper-Foot Pedal	.50	029072	Control Gear	1.30
012010	Pivot-Foot Pedal	.70	029551	Rollpin	.50
012012	Glide, Rack Foot Pedal	1.00	037093	Transistor, 2N3391	2.00
012016	Stop Pedal, Foot Pedal	.50	065847	Resistor, 820K, 1/2 Watt 10%	.50
012026	Plate Cover	1.00	068288	Capacitor, Elec., 50 mfd, 35 V	1.00
012027	Screw	.50	068296	Capacitor, Elec., 1 mfd 15 V NP	1.00
012028	Plate, Control	1.20			