

TECHNICAL MANUAL

**AMS-G1
AM STEREO GENERATOR
994 9480 001**



T.M. No. 888-2363-001

Rev. 0: 08-02-94

© Copyright 1994

Harris Corporation

All rights reserved

Returns And Exchanges

Damaged or undamaged equipment should not be returned unless written approval and a Return Authorization is received from HARRIS CORPORATION, Broadcast Division. Special shipping instructions and coding will be provided to assure proper handling. Complete details regarding circumstances and reasons for return are to be included in the request for return. Custom equipment or special order equipment is not returnable. In those instances where return or exchange of equipment is at the request of the customer, or convenience of the customer, a restocking fee will be charged. All returns will be sent freight prepaid and properly insured by the customer. When communicating with HARRIS CORPORATION, Broadcast Division, specify the HARRIS Order Number or Invoice Number.

U..packing

Carefully unpack the equipment and preform a visual inspection to determine that no apparent damage was incurred during shipment. Retain the shipping materials until it has been determined that all received equipment is not damaged. Locate and retain all PACKING CHECK LISTs. Use the PACKING CHECK LIST to help locate and identify any components or assemblies which are removed for shipping and must be reinstalled. Also remove any shipping supports, straps, and packing materials prior to initial turn on.

Technical Assistance

HARRIS Technical and Troubleshooting assistance is available from HARRIS Field Service during normal business hours (8:00 AM - 5:00 PM Central Time). Emergency service is available 24 hours a day. Telephone 217/222-8200 to contact the Field Service Department or address correspondence to Field Service Department, HARRIS CORPORATION, Broadcast Division, P.O. Box 4290, Quincy, Illinois 62305-4290, USA. The HARRIS factory may also be contacted through a FAX facility (217/222-7041) or a TELEX service (650/372-2976).

Replaceable Parts Service

Replacement parts are available 24 hours a day, seven days a week from the HARRIS Service Parts Department. Telephone 217/222-8200 to contact the service parts department or address correspondence to Service Parts Department, HARRIS CORPORATION, Broadcast Division, P.O. Box 4290, Quincy, Illinois 62305-4290, USA. The HARRIS factory may also be contacted through a FAX facility (217/222-7041) or a TELEX service (650/372-2976).


NOTE

The # symbol used in the parts list means used with (e.g. #C001 = used with C001).

Guide to Using Harris Parts List Information

The Harris Replaceable Parts List Index portrays a tree structure with the major items being leftmost in the index. The example below shows the Transmitter as the highest item in the tree structure. If you were to look at the bill of materials table for the Transmitter you would find the Control Cabinet, the PA Cabinet, and the Output Cabinet. In the Replaceable Parts List Index the Control Cabinet, PA Cabinet, and Output Cabinet show up one indentation level below the Transmitter and implies that they are used in the Transmitter. The Controller Board is indented one level below the Control Cabinet so it will show up in the bill of material for the Control Cabinet. The tree structure of this same index is shown to the right of the table and shows indentation level versus tree structure level.

Example of Replaceable Parts List Index and equivalent tree structure:

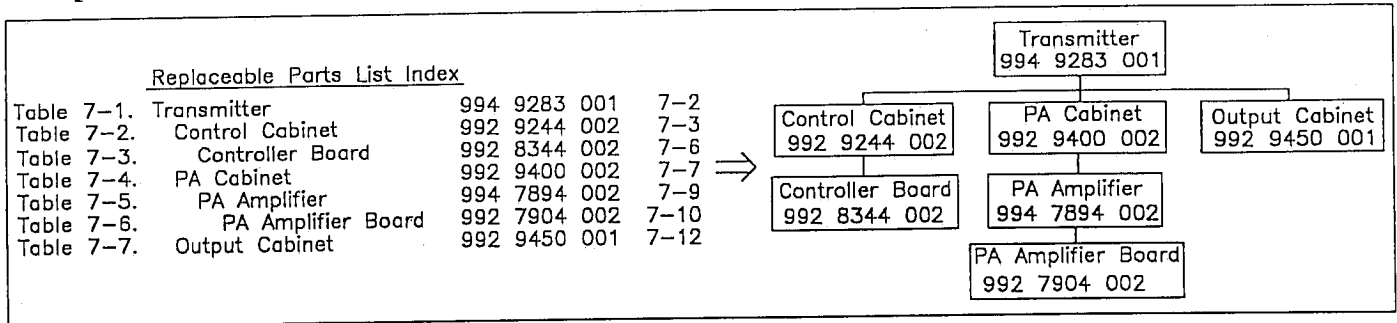

The part number of the item is shown to the right of the description as is the page in the manual where the bill for that part number starts.

Inside the actual tables, four main headings are used:

Table #.#. ITEM NAME - HARRIS PART NUMBER - this line gives the information that corresponds to the Replaceable Parts List Index entry;

HARRIS P/N column gives the ten digit Harris part number (usually in ascending order);

DESCRIPTION column gives a 25 character or less description of the part number;

REF. SYMBOLS/EXPLANATIONS column 1) gives the reference designators for the item (i.e., C001, R102, etc.) that corresponds to the number found in the schematics (C001 in a bill of material is equivalent to C1 on the schematic) or 2) gives added information or further explanation (i.e., "Used for 208V operation only," or "Used for HT 10LS only," etc.).

Inside the individual tables some standard conventions are used:

A # symbol in front of a component such as #C001 under the REF. SYMBOLS/EXPLANATIONS column means that this item is used on or with C001 and is not the actual part number for C001.

In the ten digit part numbers, if the last three numbers are 000, the item is a part that Harris has purchased and has not manufactured or modified. If the last three numbers are other than 000, the item is either manufactured by Harris or is purchased from a vendor and modified for use in the Harris product.

The first three digits of the ten digit part number tell which family the part number belongs to - for example, all electrolytic (can) capacitors will be in the same family (524 xxxx 000). If an electrolytic (can) capacitor is found to have a 9xx xxxx xxx part number (a number outside of the normal family of numbers), it has probably been modified in some manner at the Harris factory and will therefore show up farther down into the individual parts list (because each table is normally sorted in ascending order). Most Harris made or modified assemblies will have 9xx xxxx xxx numbers associated with them.

The term "SEE HIGHER LEVEL BILL" in the description column implies that the reference designated part number will show up in a bill that is higher in the tree structure. This is often the case for components that may be frequency determinant or voltage determinant and are called out in a higher level bill structure that is more customer dependent than the bill at a lower level.



HARRIS

BROADCAST Division
P.O. Box 4290, QUINCY, IL 62305

BILLING INFORMATION

PARTS ORDER FORM

HARRIS PHONE: 217-222-8200
HARRIS FAX: 217-222-9443

SHIPPING INFORMATION

CUSTOMER NAME: _____

ADDRESS: _____

SHIP TO: _____

(IF DIFFERENT FROM BILLING INFORMATION) ADDRESS: _____

TELEPHONE NUMBER: _____

FAX NUMBER: _____

SHIPPING METHOD PREFERRED: _____

GUIDE FOR ORDERING PARTS

Please use the following parts order form, filling in as much information as possible. The complete information will allow double checking the part number for correctness or locating a substitute if the part is not available.

The equipment name, part number, and serial number will be found on the metal ID plate on the back of the unit. The serial number **MUST** be included for any parts ordered under warranty. Describe the part using the description in the parts list if possible. Include the schematic information, schematic number, or number of next higher assembly. The next higher assembly is usually a 992-xxxx-00x type.

FREQUENCY (if required): _____

EQUIPMENT NAME: _____

EQUIPMENT PART NUMBER: _____

EQUIPMENT SERIAL NUMBER: _____

PREFERRED PAYMENT METHOD: _____

TELEPHONE NUMBER: _____

FAX NUMBER: _____

SHIPPING METHOD PREFERRED: _____

ITEM #	QTY ORD	HARRIS PART NUMBER	DESCRIPTION OF PART (PART'S NAME, DESCRIPTION, SPECIFICATION FROM PARTS LIST IF AVAILABLE)	SCHEMATIC REFERENCE REFERENCE NAME (e.g. C001, R100, etc)	ITEM USED ON (NEXT HIGHER ASSEMBLY IF KNOWN) (e.g. C001 used on 992 8025 001, schematic 839 8099 991)	COMMENTS

plorder

WARNING

THE CURRENTS AND VOLTAGES IN THIS EQUIPMENT ARE DANGEROUS. PERSONNEL MUST AT ALL TIMES OBSERVE SAFETY WARNINGS, INSTRUCTIONS AND REGULATIONS.

This manual is intended as a general guide for trained and qualified personnel who are aware of the dangers inherent in handling potentially hazardous electrical/electronic circuits. It is not intended to contain a complete statement of all safety precautions which should be observed by personnel in using this or other electronic equipment.

The installation, operation, maintenance and service of this equipment involves risks both to personnel and equipment, and must be performed only by qualified personnel exercising due care. HARRIS CORPORATION shall not be responsible for injury or damage resulting from improper procedures or from the use of improperly trained or inexperienced personnel performing such tasks.

During installation and operation of this equipment, local building codes and fire protection standards must be observed. The following National Fire Protection Association (NFPA) standards are recommended as reference:

- Automatic Fire Detectors, No. 72E
- Installation, Maintenance, and Use of Portable Fire Extinguishers, No. 10
- Halogenated Fire Extinguishing Agent Systems, No. 12A

WARNING

ALWAYS DISCONNECT POWER BEFORE OPENING COVERS, DOORS, ENCLOSURES, GATES, PANELS OR SHIELDS. ALWAYS USE GROUNDING STICKS AND SHORT OUT HIGH VOLTAGE POINTS BEFORE SERVICING. NEVER MAKE INTERNAL ADJUSTMENTS, PERFORM MAINTENANCE OR SERVICE WHEN ALONE OR WHEN FATIGUED.

Do not remove, short-circuit or tamper with interlock switches on access covers, doors, enclosures, gates, panels or shields. Keep away from live circuits, know your equipment and don't take chances.

WARNING

IN CASE OF EMERGENCY ENSURE THAT POWER HAS BEEN DISCONNECTED.

WARNING


IF OIL FILLED OR ELECTROLYTIC CAPACITORS ARE UTILIZED IN YOUR EQUIPMENT, AND IF A LEAK OR BULGE IS APPARENT ON THE CAPACITOR CASE WHEN THE UNIT IS OPENED FOR SERVICE OR MAINTENANCE, ALLOW THE UNIT TO COOL DOWN BEFORE ATTEMPTING TO REMOVE THE DEFECTIVE CAPACITOR. DO NOT ATTEMPT TO SERVICE A DEFECTIVE CAPACITOR WHILE IT IS HOT DUE TO THE POSSIBILITY OF A CASE RUPTURE AND SUBSEQUENT INJURY.

TREATMENT OF ELECTRICAL SHOCK

1. IF VICTIM IS NOT RESPONSIVE FOLLOW THE A-B-C'S OF BASIC LIFE SUPPORT.
PLACE VICTIM FLAT ON HIS BACK ON A HARD SURFACE


(A) AIRWAY

IF UNCONSCIOUS.
OPEN AIRWAY

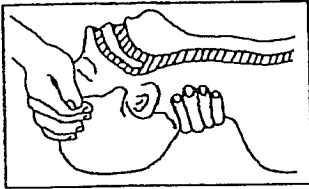

LIFT UP NECK
PUSH FOREHEAD BACK
CLEAR OUT MOUTH IF NECESSARY
OBSERVE FOR BREATHING

CHECK
CAROTID PULSE

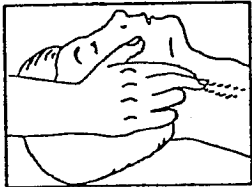

IF PULSE ABSENT.
BEGIN ARTIFICIAL
CIRCULATION

(B) BREATHING


IF NOT BREATHING.
BEGIN ARTIFICIAL BREATHING



TILT HEAD
PINCH NOSTRILS
MAKE AIRTIGHT SEAL
4 QUICK FULL BREATHS
REMEMBER MOUTH TO MOUTH
RESUSCITATION MUST BE
COMMENCED AS SOON AS POSSIBLE


(C) CIRCULATION

DEPRESS STERNUM 1 1/2 TO 2 INCHES

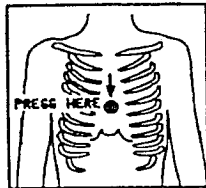

APPROX. RATE
OF COMPRESSIONS { ONE RESCUER
--80 PER MINUTE { 15 COMPRESSIONS
2 QUICK BREATHS

APPROX. RATE
OF COMPRESSIONS { TWO RESCUERS
--60 PER MINUTE { 5 COMPRESSIONS
1 BREATH

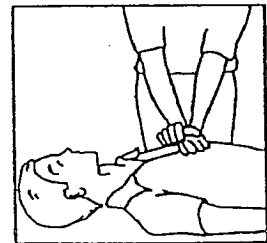

NOTE: DO NOT INTERRUPT RHYTHM OF COMPRESSIONS
WHEN SECOND PERSON IS GIVING BREATH

CALL FOR MEDICAL ASSISTANCE AS SOON AS POSSIBLE.

2. IF VICTIM IS RESPONSIVE.

- A. KEEP THEM WARM
- B. KEEP THEM AS QUIET AS POSSIBLE
- C. LOOSEN THEIR CLOTHING
- D. A RECLINING POSITION IS RECOMMENDED

FIRST-AID

Personnel engaged in the installation, operation, maintenance or servicing of this equipment are urged to become familiar with first-aid theory and practices. The following information is not intended to be complete first-aid procedures, it is a brief and is only to be used as a reference. It is the duty of all personnel using the equipment to be prepared to give adequate Emergency First Aid and thereby prevent avoidable loss of life.

Treatment of Electrical Burns

1. Extensive burned and broken skin
 - a. Cover area with clean sheet or cloth. (Cleanest available cloth article.)
 - b. Do not break blisters, remove tissue, remove adhered particles of clothing, or apply any salve or ointment.
 - c. Treat victim for shock as required.
 - d. Arrange transportation to a hospital as quickly as possible.
 - e. If arms or legs are affected keep them elevated.

NOTE

If medical help will not be available within an hour and the victim is conscious and not vomiting, give him a weak solution of salt and soda: 1 level teaspoonful of salt and 1/2 level teaspoonful of baking soda to each quart of water (neither hot or cold). Allow victim to sip slowly about 4 ounces (a half of glass) over a period of 15 minutes. Discontinue fluid if vomiting occurs. (Do not give alcohol.)

2. Less severe burns - (1st & 2nd degree)
 - a. Apply cool (not ice cold) compresses using the cleanest available cloth article.
 - b. Do not break blisters, remove tissue, remove adhered particles of clothing, or apply salve or ointment.
 - c. Apply clean dry dressing if necessary.
 - d. Treat victim for shock as required.
 - e. Arrange transportation to a hospital as quickly as possible.
 - f. If arms or legs are affected keep them elevated.

REFERENCE:

ILLINOIS HEART ASSOCIATION

AMERICAN RED CROSS STANDARD FIRST AID AND PERSONAL SAFETY MANUAL (SECOND EDITION)

Table of Contents

Section I		Section IV	
Introduction/Specifications		Overall System Theory	
Scope and Purpose	1-1	Introduction	4-1
Specifications	1-1	Functional Block Diagram Descriptions	4-1
Closed Loop Performance	1-1	Audio Flow	4-1
Section II		RF Flow	4-1
Installation/Initial Turn-on		Detailed Circuit Analysis of the AMS-G1	4-2
Unpacking	2-1	Audio Flow	4-2
AC Input Wiring	2-1	RF Flow	4-3
Verifying Proper AC voltage selection	2-1	IQM Correction	4-3
Verifying AC input voltage	2-1	Metering Circuitry	4-3
AMS-G1 Rear Panel Connections	2-2	Power Supply	4-4
AMS-G1 Setup Procedure	2-3	Section V	
Equipment Needed:	2-3	Maintenance/Alignments	
AMS-G1 Interconnections	2-3	Alignment Procedures	5-1
Initial Turn-on	2-3	GATES/SX IQM Correction	5-1
Coarse Delay Equalization Adjustments	2-4	IQM Correction Alignment Procedure	5-1
Low Frequency Delay / Day Mode / Left		Factory Tune-up Procedure For AMS-G1	5-2
Channel	2-4	Audio Matrix and Equalization	5-2
Low Frequency Delay / Day Mode / Right		QUAM Modulator Alignment	5-2
Channel	2-4	Pilot Adjustment	5-3
High Frequency Delay / Day Mode / Left		Preventative Maintenance	5-4
Channel	2-4	Maintenance of Components	5-4
High Frequency Delay / Day Mode / Right		Section VI	
Channel	2-5	Troubleshooting	
Optimizing Stereo Performance	2-6	Introduction	6-1
Optimizing 1kHz Performance	2-6	Power Supply Troubleshooting	6-1
Optimizing 10kHz Performance	2-6	Audio Troubleshooting	6-1
Delay Equalization, Night Mode	2-7	No L+R Audio to the Transmitter	6-1
Verifying Pilot Level	2-7	Loss of L+R or L-R	6-1
Section III		RF Troubleshooting	6-2
Operators Guide		Underdrive	6-2
Protection of Personnel	3-1	Check the RF Output Cable	6-2
AMS-G1 Front Panel	3-1	QUAM REF Output is okay	6-2
Controls and Indicators	3-1	QUAM REF Output is Not Okay	6-2
LED bargraph displays	3-1	IQM Correction Circuitry	6-2
Pilot indicator	3-1	Section VII	
Night indicator	3-2	Replaceable Parts List	
10X (ten times) indicator	3-2	Section VIII	
AMS-G1 Emergency Operating Procedure	3-2	Manufacturer Data/Appendix	

Section I Introduction/Specifications

1.1 Scope and Purpose

This maintenance manual contains the information necessary to install, operate and maintain the AMS-G1, AM Stereo Exciter. The various sections of this manual provide the following types of information.

- a. SECTION I, INTRODUCTION. Provides general manual layout and specifications.
- b. SECTION II, INSTALLATION/INITIAL TURN-ON.
- c. SECTION III, OPERATORS GUIDE. Provides location and function of all controls and indicators and emergency operating procedures.
- d. SECTION IV, THEORY OF OPERATION. Provides block diagram description and detailed circuit analysis.
- e. SECTION V, MAINTENANCE AND ALIGNMENTS. Includes preventive and corrective maintenance and alignment procedures and a component locator.
- f. SECTION VI, TROUBLESHOOTING. Provides information and waveforms for troubleshooting.
- g. SECTION VII, PARTS LIST. Provides a complete parts list.
- h. SECTION VIII, MANUFACTURER DATA/APPENDIX. Vendor data on unique components and assemblies.

1.2 Specifications

STEREO SYSTEM: C-QUAM AM stereo

AUDIO INPUT: Right and Left channels, +10dBm, balanced 600 ohms or Hi-Z.

AUDIO OUTPUT: Adjustable 0 dBm to +16dBm balanced. +10dBm factory setting.

RF OUTPUT: Fixed TTL level 5V into 50 ohm load, BNC.

STEREO/MONO: Local or remote switchable. Front panel stereo indicator included.

METER FUNCTIONS: L+R, L-R RANGE 0 to 150% modulation. Right, Left meter functions switched at front panel. 10X auto-ranging function.

DELAY CIRCUIT EQUALIZATION: Internally adjustable delay equalization is provided to compensate for phase variations in the broadcast chain. Provides up to 56 microseconds of separately adjustable delay for both day and night mides. Delay is also internally strappable to provide up to 112 microseconds of total delay for one mode and 56 microseconds or less for the other.

FREQUENCY RANGE: 530 to 1705kHz, accomodates 10kHz or 9kHz spacing.

STABILITY: +/-10Hz, 0° to 50°C, crystal controlled, typically +/- 2Hz.

VOLTAGE INPUT: 100, 120, 220 or 240VAC at 50/60 Hz. Rear panel selectable.

AMBIENT TEMPERATURE: 0° to 50°C.

SIZE: 3.5" H x 19" W x 13" D (Fits 19" EIA rack).

8.9cm H x 98.3cm W x 33cm D.

WEIGHT: 8 lbs. (3.6kg).

HUMIDITY: 95% non-condensing.

ALTITUDE: up to 13000 ft. (3962 meters)

1.2.1 Closed Loop Performance

DISTORTION: L or R at 70% Mod. 0.7% at 1kHz 1% at full (THD) bandwidth.

L+R at 90% Mod. 0.25% full bandwidth.

L-R at 90% mod. 0.5% at 1kHz 1.5% at full bandwidth.

SEPARATION: L+R, L-R 40dB.

L-R - L+R 45dB.

LR OR RL 40dB AT 1kHz; 30dB at 10kHz.

NOTE: SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

2.1 Unpacking

Carefully unpack the AMS-G1 and perform a visual inspection to determine that no apparent damage was incurred during shipping. Retain all shipping materials until it has been determined that the unit is not damaged.

The contents of the shipment should be as indicated on the packing list. If the contents are incomplete or if the unit is damaged mechanically, or electrically, notify the carrier and Harris Allied Broadcast (217) 222-8200.

All packing materials must be removed from the equipment before installation. For general domestic shipment of the AMS-G1 no parts are removed before shipment. If for some special reason parts are removed, then all removed components are marked to permit easy reinstallation.

Symbol numbers and descriptions are provided on each removed component corresponding to the schematic diagram, parts list, packing list and reference designator or nomenclature stenciled at the cabinet location of each removed item. Cables and small parts may be taped or tied in place for shipment. Remove all tape, string and packing materials used for this purpose.

The AMS-G1 has a front panel equipped for installation into a standard 19" rack. All connections and all adjustments should be made to the AMS-G1 prior to installation into the rack. All non-factory adjustments for the AMS-G1 (with the exception of the IQM adjustments) are made via access holes in the left side cover.

Figures 2-1, 2-2, 2-3, and 2-4 illustrate the input/output connectors available at the rear panel of the AMS-G1. With the function of each connector listed in Tables 2-1, 2-2, 2-3, and 2-4.

2.1.1 AC Input Wiring

The AC connection is made at the right hand rear of the AMS-G1 via a standard three prong connector. There is no on/off switch on the exciter. The unit is activated as soon as it is plugged in. The ac input voltage is selectable at 100, 120, 220, or 240Vac. The tag located on the rear panel indicates the input voltage configuration of the exciter at the time of shipment. **THE AC VOLTAGE THAT THE EXCITER WILL BE OPERATED AT MUST BE VERIFIED PRIOR TO PLUGGING IN THE EXCITER AT THE USER LOCATION TO PREVENT DAMAGE TO, OR IMPROPER OPERATION OF, THE EXCITER.** To wire the input of the exciter, refer to the following application notes:

2.1.1.1 Verifying Proper AC voltage selection

CAUTION

EXCITER DAMAGE OR IMPROPER OPERATION WILL OCCUR IF THE EXCITER AC INPUT IS NOT SET TO MATCH THE INCOMING AC INPUT VOLTAGE. BEFORE INSERTING THE AC PLUG INTO THE EXCITER, VERIFY THAT THE AC INPUT VOLTAGE MATCHES THAT WHICH THE EXCITER IS SELECTED TO ACCEPT.

IF THE AC VOLTAGE RANGE IS CHANGED VERIFY THAT THE PROPER SIZE INPUT FUSE F1, HAS BEEN INSTALLED. EXCITER DAMAGE OR IMPROPER OPERATION COULD OCCUR IF THE WRONG FUSE IS INSTALLED.

2.1.1.2 Verifying AC input voltage

The ac input voltage to the AMS-G1 should be verified before the exciter is plugged into the ac line, and that the ac input connector is set to the proper range. Failing to do this could result in poor performance due to low input voltage or higher than normal unregulated voltages which could stress devices in the exciter (see table below). The ac input connector block contains the input line fuse and the selector card for setting the ac input voltage. To change the ac input voltage range perform the following steps.

- a. Remove the ac input line cord if installed
- b. Slide the plastic cover door to the left, exposing the input fuse and selector card.
- c. Rotate fuse pull lever to the left and remove the fuse.
- d. Remove the voltage selector card by pulling straight out. Putting a loop of wire through the hole in the card and pulling the wire with a pair of needle nose pliers will help in the removal.
- e. Select the proper operating voltage by orientating the card to the position at which the desired voltage range numbers appear on the top left side of the board.
- f. Push board firmly into the module slot and note that the desired voltage range numbers are clearly visible. Rotate the fuse pull lever back to the normal position.
- g. Verify that the fuse is the proper amperage and type (slow blow), then reinsert into the fuse holder. 1/4A slow blow for voltages ranging from 90 to 132Vac or 1/8A slow blow for voltages ranging from 198 to 264Vac.
- h. Slide the cover back over the fuse.

MEASURED AC INPUT VOLTAGE	AMS-G1 AC INPUT VOLTAGE SELECTION
90VAC- 110VAC	100VAC
111VAC- 132VAC	120VAC
198VAC- 230VAC	220VAC
231VAC- 264VAC	240VAC

2357-004

2.1.2 AMS-G1 Rear Panel Connections

Refer to Figures 2-1, 2-2 and 2-3 and the corresponding tables for the following connections.

After the proper dc voltages have been verified connections from the audio source and to the transmitter can be started.

WARNING

REMOVE ALL PRIMARY POWER TO THE AMS-G1, THE TRANSMITTER AND THE AUDIO SOURCE BEFORE CONTINUING.

Referring to Figure 2-1

2. Grounding stud. Provided to utilize a grounding strap and to ground the shield of the PDM Sample.
3. PDM sample. To be connected to an SX or GATES series transmitter's PA Voltage sample.
4. Sync. Q reference. This is an unmodulated carrier sample which can be useful for troubleshooting.
5. QUAM REF (reference). This is the output of the quadrature modulators and very useful for troubleshooting.
6. RF output. Connect this to the transmitter's external oscillator input. **REFER TO TRANSMITTER MANUAL**

FOR THE PROCEDURE OF SWITCHING FROM INTERNAL TO EXTERNAL OSCILLATOR.

Referring to Figure 2-2 Connector J4

- Pin 1. Night equalization enable, contact closure between this pin and pin 2 will enable the night equalization delay circuitry.
- Pin 3. Stereo mode circuitry enable, contact closure between this pin and pin 4 will enable the stereo circuitry in the AMS-G1.

Referring to Figure 2-3 connector J2

- Pin 1. Left audio input (-) connect to the left channel (-) output of audio source.
- Pin 2. Ground, connect the shield for left channel here.
- Pin 3. Left audio input (+) connect to the left channel (+) output of audio source.
- Pin 4. Right audio input (-) connect to the right channel (-) output of audio source.
- Pin 5. Ground, Connect the shield for right channel here.
- Pin 6. Right audio input (+) connect to the right channel(+) output of audio source.
- Pin 7. AF output, Audio frequency output(+), connect to audio input(+) of transmitter.

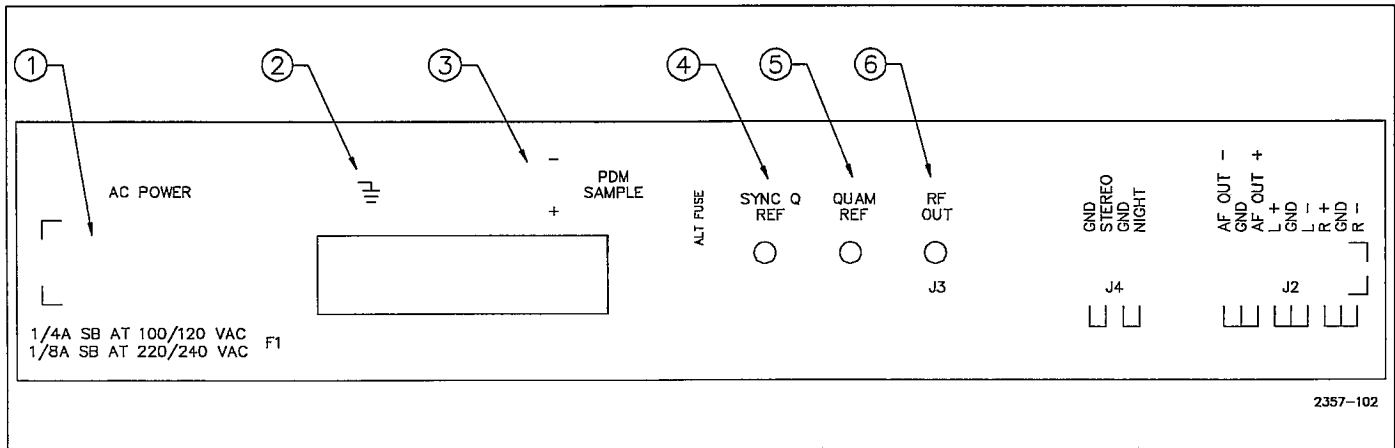


Figure 2-1. AMS-G1 Rear Panel

Table 2-1. AMS-G1 Rear Panel

Ref. #	Input/Outputs	Function
Figure 1-2		
1	AC Input Line Cord Connector	The line cord connector has a selector card to allow ac input voltage to range from 100-240Vac.
2	Grounding Stud	Provides a terminal for ground strap connection.
3	PDM Sample	When utilizing the IQM feature of the AMS-G1 for SX or GATES Transmitters, a PA Voltage Sample from the transmitter is applied to these inputs.
4	Sync Q Reference Output	This BNC Output Connector is used for frequency counter.
5	QUAM Reference Output	This BNC Output Connector can be used for troubleshooting.
6	RF Out	This BNC Output Connector is the phase modulated carrier waveform. Apply this signal to the transmitter's external oscillator input port. Refer to transmitter manual for locations.

- Pin 8. Ground, connect the shield of AF out here.
- Pin 9. AF output, Audio frequency output (-), connect to audio input (-) of transmitter.

Rear panel connections are complete.

2.2 AMS-G1 Setup Procedure

The AMS-G1 has been designed so that the following procedure can be accomplished without the removal of the top protective cover. However, some initial jumper settings will require the removal during the initial installation.

Adjustments can be made via the access holes on the exciter's left side panel. See Figure 2-4 and Table 2-4.

2.2.1 Equipment Needed:

- a. Audio Function Generator
- b. Dual Trace 40 MHz oscilloscope
- c. C-QUAM Stereo Modulation Monitor
- d. Digital Frequency Counter

2.2.2 AMS-G1 Interconnections

- a. Disconnect power from the exciter and remove the top cover (during initial installation only).
- b. Connect the audio output lines J2-7, 8, and 9 to the transmitter audio input connections.
- c. Connect the Transmitter RF connection, J5 to the transmitter TTL RF input connector. Setup the transmitter for external RF input. Refer to the transmitter manual for the procedure to switch from internal to external oscillator.

NOTE

Early SX transmitters may have a 51 Ohm resistor, R13, near the RF input connector that must be removed so as not to load down the RF output of the exciter.

- d. Place the exciter in the 'Day' mode. This is done by removing any contact closure between J4-1 and J4-2 on the back panel.
- e. Select the proper audio input termination with JP1 and JP2, either Hi-Z or 600 ohm.
- f. Place jumper JP4, JP7, JP8, JP9 and JP10 in the appropriate location for the type of Harris transmitter used (either SX or DX).
- g. Place the exciter in the Stereo Mode by providing a contact closure between J4-3 and J4-4. This can be done with a jumper or a remote control system.
- h. Connect a C-QUAM AM Stereo modulation monitor to the RF sample jack of the transmitter. Set the modulation monitor to the frequency of the transmitter.
- i. Connect the C-QUAM modulation monitor's LEFT output to the oscilloscope's 'X' input.
- j. Connect the C-QUAM modulation monitor's RIGHT output to the oscilloscope's 'Y' input.
- k. Set the oscilloscope to display X-Y input.

2.2.3 Initial Turn-on

- a. Apply power to the exciter.
- b. Apply power to the transmitter, and increase its power to its nominal operating level. If an underdrive condition is experienced, refer to Section VI, Troubleshooting, for more information on underdrive.
- c. Input a 1kHz, L+R signal at precisely +10 dBm to the inputs of the AMS-G1.
- d. Set the C-QUAM modulation monitor to display the modulation depth for L+R on its left channel meter, and L-R on its right channel meter.
- e. The L+R (amplitude) modulation level should be 100% as indicated by the C-QUAM modulation monitor's left channel meter. If not, then adjust the 'L+R GAIN' control

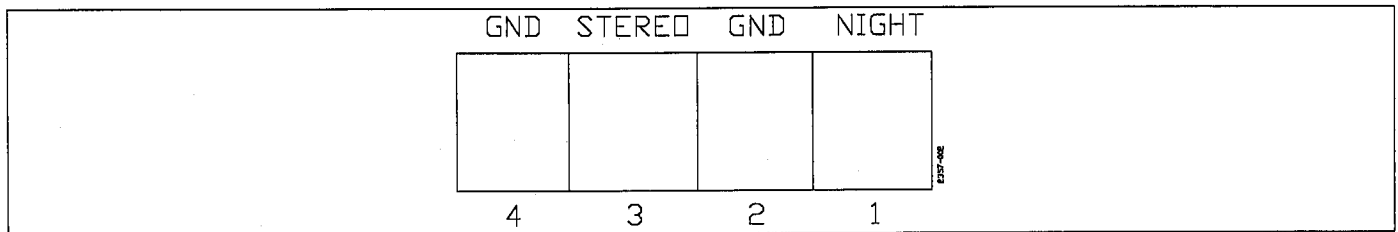


Figure 2-2. AMS-G1 Connector J4

Table 2-2. AMS-G1 Connector J4

Table 1-3	Connector J4	Function
Pin 1	Night equalization circuitry enable pin	Contact closure either by remote control or a jumper wire between pins 1 and 2 activates night equalization circuitry.
Pin 2	Ground	
Pin 3	Stereo mode circuitry enable pin	Contact closure either by remote control or a jumper wire between pins 3 and 4 places the AMS-G1 in stereo mode.
Pin 4	Ground	

R63, which is located on the left side of the unit. If the range of this adjustment is insufficient, re-adjust the audio input attenuator on your transmitter.

2.2.4 Coarse Delay Equalization Adjustments

For a detailed description of the delay equalization circuits and their purpose, refer to Section IV, Overall System Theory. All equalization adjustments are located on the left side of the exciter.

2.2.4.1 Low Frequency Delay / Day Mode / Left Channel

- Set the audio input to 1kHz, at +10 dBm, into the Left audio input of the AMS-G1. The transmitter should be operating into its 'Day' antenna pattern.
- Set the C-QUAM stereo monitor to display 'Left' channel modulation on the left channel meter, and 'Right' channel modulation on the right channel meter.
- The left channel modulation level should be 50% as indicated by the stereo monitor's left channel meter.
- The oscilloscope's lissajous figure should form a flat line parallel to the screen's 'X' or horizontal axis. See Figure 2-5A.
- If the oscilloscope's figure is an elliptical loop, as in Figure 2-5B, adjust the stereo exciter's Left channel, Day mode, 'COARSE EQ' switch, S3, in the direction that decreases the loop opening as much as possible.

2.2.4.2 Low Frequency Delay / Day Mode / Right Channel

- Set the audio input to 1kHz, +10 dBm, Right only input.
- The right modulation level should be 50% as indicated by the stereo modulation monitor's right channel meter.
- The oscilloscope's lissajous figure should be a flat line parallel to the display's 'Y' or vertical axis. See Figure 2-6A.
- If the lissajous figure is an elliptical loop, as in figure 2-6B, then adjust the Right channel, Day mode, 'COARSE EQ' switch, S4, in the direction that decreases the loop opening as much as possible.

2.2.4.3 High Frequency Delay / Day Mode / Left Channel

- Set the audio generator for 10 kHz, +10 dBm, Left only input.
- The left modulation meter should read 50%, as indicated by the stereo modulation monitor's left channel meter.
- The oscilloscope's lissajous figure should be a flat line that is parallel with the display's 'X' axis.
- If the oscilloscope's lissajous figure is an elliptical loop, or is not parallel with the display's 'X' axis, adjust the Left channel, Day mode, 'FINE DELAY' adjustment R69, until the opening of the loop closes. The 'HF BOOST' pot, R75, may also need to be varied to improve loop closure, or move the loop parallel to the scope axis.

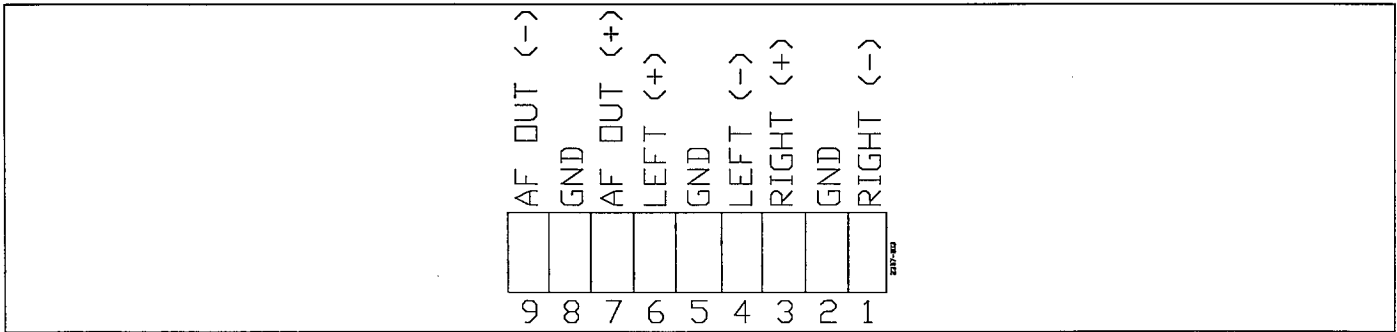


Figure 2-3. AMS-G1 Connector J2

Table 2-3. AMS-G1 Connector J2

Table 1-4 Connector J2	Input/Output	Function
Pin 9	Audio frequency output (-)	Pins 7-9 on connector J4 provide the audio input to the transmitter. Pin 9 is the (-) audio, pin 7 is the (+) audio, and pin 8 is to be connected to the shield.
Pin 8	Ground	
Pin 7	Audio frequency output (+)	
Pin 6	Left audio input (+)	The left channel of the audio is to be connected to pins 4-6 on connector J4. Pin 6 is (+) left, pin 4 is (-) left, and pin 5 is to be connected to the shield.
Pin 5	Ground	
Pin 4	Left audio input (-)	
Pin 3	Right audio input (+)	The right channel of the audio is to be connected to pins 1-3 on connector J4. Pin 1 is (-) right, pin 3 is (+) right, and pin 2 is to be connected to the shield.
Pin 2	Ground	
Pin 1	Right audio input (-)	

2.2.4.4 High Frequency Delay / Day Mode / Right Channel

- Set the audio generator for 10 kHz, +10 dBm, Right only input.
- The Right channel modulation level should read 50% as indicated by the C-QUAM modulation monitor's right channel display.
- The oscilloscope's lissajous figure should be a flat line that is parallel with the display's 'Y' axis.
- If the lissajous figure is an elliptical loop, adjust the Right channel, Day mode 'FINE EQ' pot R82, until the opening of the loop closes, and the loop becomes parallel with the scope's "Y" axis. It may also be necessary to adjust the right channel 'HF BOOST' adjustment pot R87 to improve loop closure or move the loop parallel to the scope axis.

- Once the high frequency equalization has been set, it will be necessary to repeat the low-frequency equalization procedure. This is to compensate for any affect the high-frequency equalization settings have had on the low frequency channel separation. Compromise settings may have to be found for R69, R75 and S3 for the Left channel, and R82, R87 and S4 for the Right channel, to arrive at the best overall stereo separation at both 1 and 10 kHz.

Note

If the lissajous figure is curved, or is not parallel to the display's 'X' or horizontal axis as in Figure 2-5C, then there is appreciable IQM present within the transmitter. If so, it is recommended that the operator should perform the "IQM Correction Alignment Procedure," located in Section V, Maintenance/Alignments, at this time. (This applies to SX and Gates transmitters only). It will

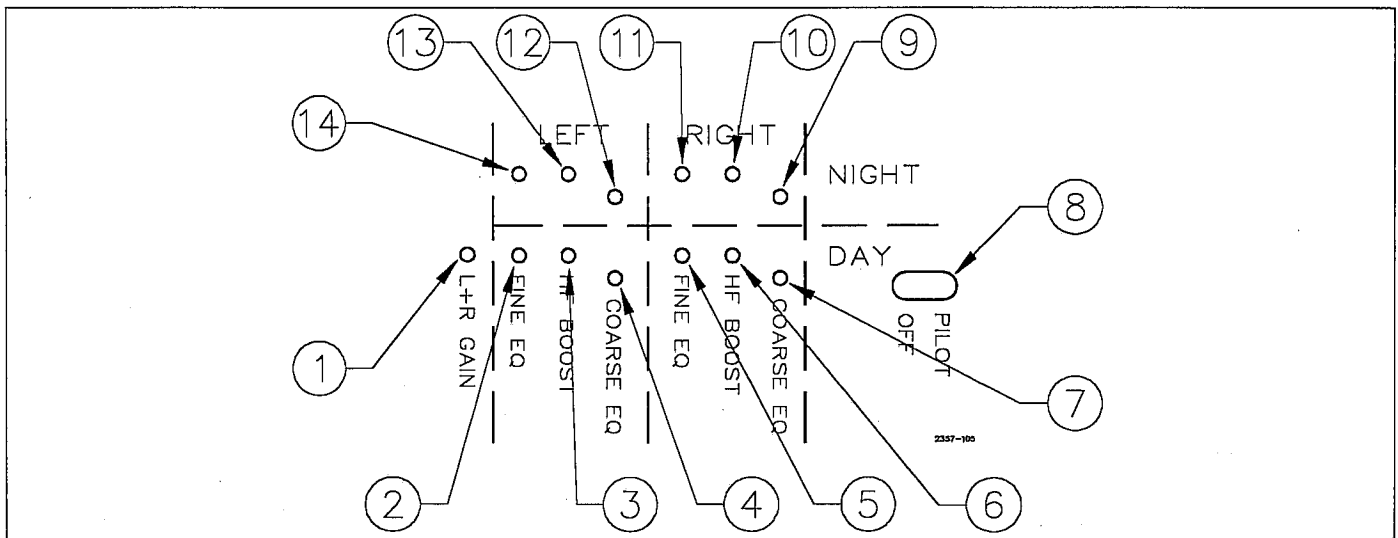


Figure 2-4. AMS-G1 Side Panel Adjustments

Table 2-4. AMS-G1 Side Panel Adjustments

Ref. Fig. 1-5	Description	Designator
1	Left plus Right Gain potentiometer	R63
2	Left "Day" Fine Equalization potentiometer	R69
3	Left "Day" High Frequency Boost potentiometer	R75
4	Left "Day" Coarse Equalization switch	S3
5	Right "Day" Fine Equalization potentiometer	R82
6	Right "Day" High Frequency Boost potentiometer	R87
7	Right "Day" Coarse Equalization switch	S4
8	Pilot on-on switch	S7
9	Right "Night" Coarse Equalization switch	S6
10	Right "Night" High Frequency Boost potentiometer	R274
11	Right "Night" Fine Equalization potentiometer	R271
12	Left "Night" Coarse Equalization potiometer	S5
13	Left "Night" High Frequency Boost potentiometer	R266
14	Left "Night" Fine Equalization potentiometer	R259

then be necessary to come back and do the Delay Equalization procedure again.

2.2.5 Optimizing Stereo Performance

In order to optimize stereo performance, meaning separation and distortion, it will be necessary to repeat the following procedure several times. The goal here is to balance the LR and RL separation and distortion at both 1kHz and 10kHz (make them as good as possible and about the same).

2.2.5.1 Optimizing 1kHz Performance

- Set your C-QUAM modulation monitor to display Left and Right on the meters. You will also need to hook the left and right audio outputs from the modulation monitor into a distortion analyzer.
- Input a 1kHz, Left only signal at +10dBm. The Left meter on the C-QUAM monitor should read 50%, or -6dB, and the difference between the left meter and the right meter is the LR separation in dB. Note this reading.
- Input a 1kHz, Right only signal at +10dBm. The right meter on the C-QUAM monitor should read 50%, or -6dB, and the difference between the right meter and the left meter is the RL separation in dB. Note this reading.
- If the separation readings for left and right are not the same, then adjust the L-R Gain Pot, R165, until they are equal.

This will require going back and forth between Left and Right several times.

2.2.5.2 Optimizing 10kHz Performance

- Input a 10kHz, Left only signal at +10dBm.
- Adjust the left channel "Fine EQ" and "HF Boost" pots on the side panel for the best compromise of separation and distortion. Note your readings.
- Input a 10kHz, Right only signal at +10dBm.
- Adjust the Right channel "Fine EQ" and "HF Boost" pots on the side panel for the best compromise of separation and distortion.
- If the left and right separation and/or distortion are very different, then it may be necessary to adjust L5 and L6 a small amount. L5 and L6 will have a major effect on both separation and distortion at 10kHz, and a lesser effect at 1kHz. If you do adjust L5 and L6, we suggest that you mark the location of the adjustment screw on the metal can so that it can be returned to its original position if necessary and do not move either more than 1/4 turn from its starting point. L5 and L6 will have to be adjusted in conjunction with the "Fine EQ" and "HF Boost" pots for each channel. Keep in mind that adjusting L5 and L6 is not necessarily for better separation and distortion, but to equalize the left and right channels to have about the same separation and distortion at 10kHz.

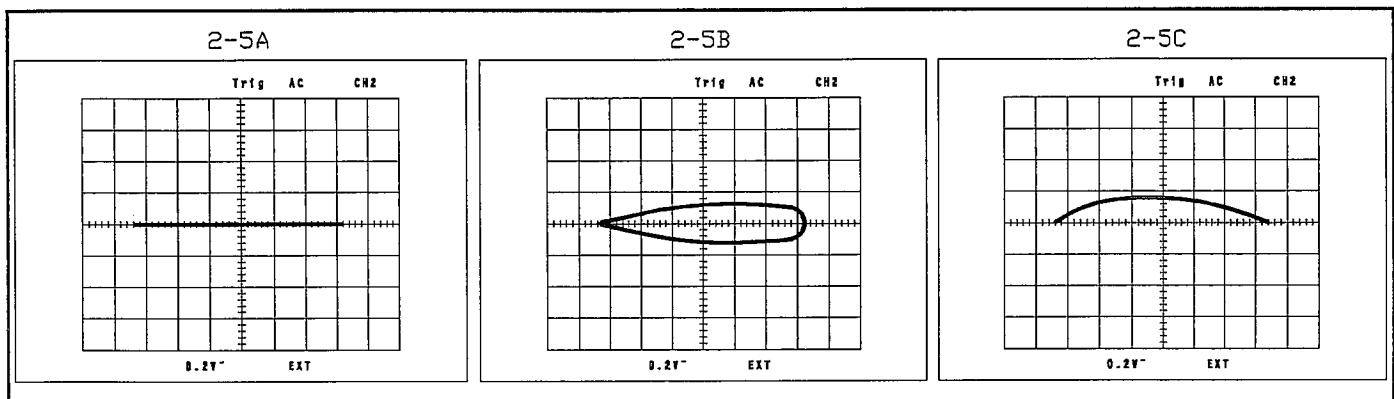


Figure 2-5. Lissajous Waveforms for Left Channel Delay Equalization Adjustments

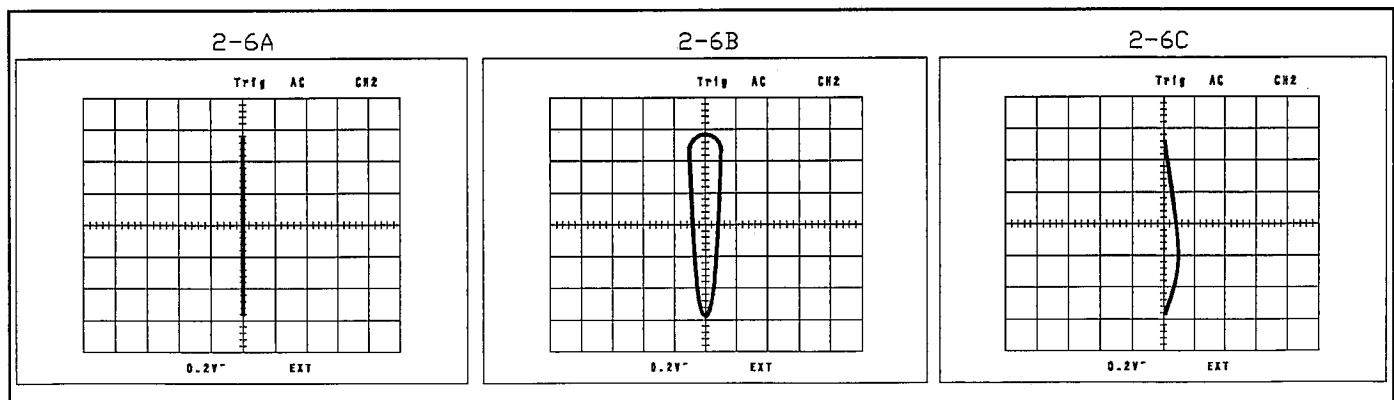


Figure 2-6. Lissajous Waveforms for Right Channel Delay Equalization Adjustments

- f. When you are satisfied with the 10kHz performance, you will need to redo the 1kHz optimization.

2.2.5.3 Delay Equalization, Night Mode

To equalize the delay in the Night mode, the transmitter must be operated into the Night antenna pattern, and the AMS-G1 be placed into its Night mode. The alignment procedure is analogous to that of the Day mode, using the analogous pots and switches marked for the Night mode, R259, R266 and S5 for the Left channel, and R271, R274 and S6 for the Right channel.

Note

When optimizing in the Night Mode, do not change the setting of the L-R Gain pot R165 or the L+R Gain pot R63. Only the switches and pots which are accessible from the side panel should be used to optimize performance in the Night Mode.

For those stations possessing extremely narrow-band antenna systems, more than 55 microseconds of delay equalization may be

required for proper stereo performance. It is possible to cascade the day and night equalization sections so as to effectively double the range of delay available. This is done by placing jumpers JP5 and JP6 in the '1-2' positions. This will not change the delay available in the day equalization section, but the night pattern equalization delay will be summed into the day delay, allowing up to 110 microseconds of range of delay equalization for the night pattern (maximum delay will be equal to the amount of "Day" EQ delay plus up to 55 microseconds more in the "Night" mode).

2.2.5.4 Verifying Pilot Level

Go to Section 5 (Part 2.2.5.4)
for SK/Gates transmitters
 Following the equalization process, switch the pilot switch S7 into its 'PILOT ON' position. Using your stereo monitor, verify that in the absence of audio programming, the pilot level is 5% modulation in the L-R channel.

3.1 Protection of Personnel

The exciter has no on/off switch. When the AC power cord is plugged in the unit becomes active. To ensure operator safety a metal cover has been installed atop the AMS-G1. It is attached with ten phillips head screws. Upon removal of the cover the operator or technician is further protected by two lexan shields. One shield prevents contact to primary AC input while the other covers the high voltage PDM sample that will be present if the Incidental Quadrature Modulation (IQM) correction feature of the AMS-G1 is utilized.

3.2 AMS-G1 Front Panel

The exciter is equipped with two audio level LED bargraphs and a rocker switch which allows the operator to select the input to the LED bargraphs. There are two possibilities; Left plus Right audio or Left minus Right audio or Left/Right audio. This feature of the AMS-G1 is a helpful troubleshooting aid in determining whether the audio source is functioning properly.

Figure 3-1 Illustrates the controls and indicators available from the exterior of the exciter, with the function for each control or indicator given in Table 3-1.

3.3 Controls and Indicators

3.3.1 LED bargraph displays

The AMS-G1 is equipped with two LED bargraph displays. The display to the far left of the unit is the Left audio amplitude or Left plus Right audio amplitude indicator. The display to the far right of the unit is the Right audio amplitude or Left minus Right audio amplitude indicator. The selection between the Left audio/Right audio and the Left+Right audio/Left-Right audio is made by the rocker switch in the middle of the front panel. It is important to point out that this switch does not take the transmitter out of stereo mode nor will it engage stereo operation of the transmitter, but only affects the LED bargraph metering mode.

3.3.2 Pilot indicator

In a C-QUAM signal there is a 25 Hz pilot signal present in the Left minus Right audio. The pilot indicator when illuminated

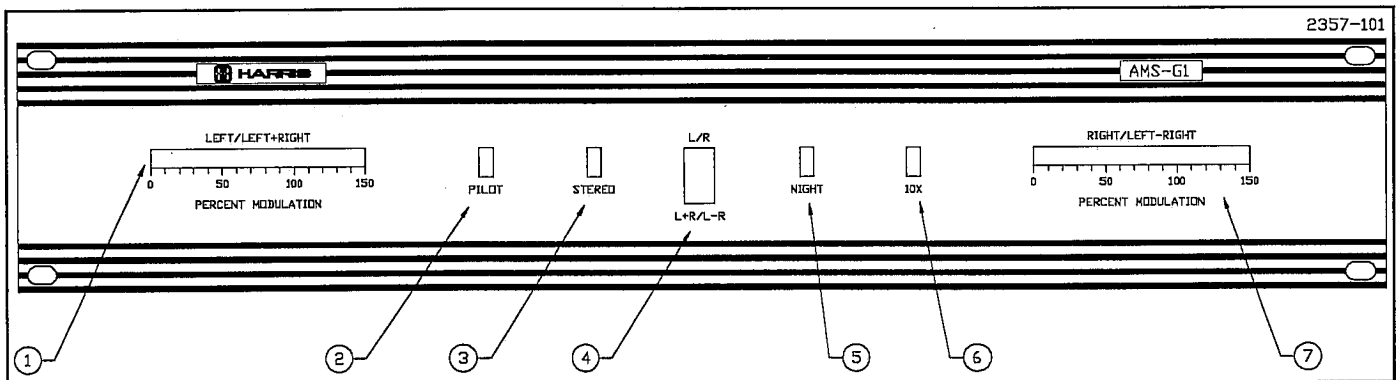


Figure 3-1. AMS-G1 Front Panel

Table 3-1. AMS-G1 Front Panel

Ref. # Fig. 3-1.	Control/Indicator	Function
1	Left/Left + Right Audio Amplitude LED Bargraph	Indicates amplitude of Left or Left Plus Right audio.
2	Pilot Indicator	When illuminated, indicates that 25Hz Pilot frequency is present.
3	Stereo Indicator	When illuminated, indicates the AMS-G1 is in the stereo mode.
4	LED Bargraph Metering Switch	Allows operator to change the bargraph meters from L+R/L-R amplitude readings to L/R amplitude readings and visa versa.
5	Night Indicator	When illuminated, indicates Night equalization circuitry is active.
6	10X Indicator	When illuminated, indicates AMS-G1 automatic 10X metering circuit is active.
7	Right/Left-Right audio amplitude LED Bargraph	Indicates amplitude of Right or Left Minus Right audio.

verifies that the 25 Hz pilot signal is turned on. The Pilot on/off switch is located on the motherboard and is accessed from the left side of the unit.

3.3.3 Night indicator

The AMS-G1 normally operates in the Day equalization mode. In stations with a separate night antenna pattern, separate equalization circuitry has been provided for the differing equalization requirements of the night antenna pattern. The night indicator provides a visual representation that this alternate circuitry has been activated.

3.3.4 10X (ten times) indicator

The exciter is equipped with an automatic ten times metering circuit that is activated if the program material causes the transmitter's modulation level to fall to a level less than 10%. When the ten times circuitry is activated the 10X led is illuminated, and the audio input signals to the LED bargraphs are amplified by a factor of ten, which allows very soft passages in program material to still be plainly measured on the bargraphs.

3.4 AMS-G1 Emergency Operating Procedure

In the unlikely event of a total system failure of the AMS-G1, the unit must be bypassed. To complete the bypassing procedure do the following:

- Remove primary power to the transmitter, and the AMS-G1.
- Remove audio frequency output, AF OUT +, AF OUT -, and the shield from pins 7,8 and 9 on connector J2 at the rear of the unit.
- If a monaural matrixing system is not available (suggested system illustrated in figure 3-2) the choice of either running right channel or left channel audio from the audio source must be made at this time. Connect the audio cable removed from step 1 to either the left or right channel output of the audio source. Disconnect the remaining channel from the AMS-G1 to prevent damage to the audio source due to a possible short circuit.
- Disconnect the Rf output J5 at the rear of the unit.
- The transmitter must be returned to its internal oscillator mode. **REFER TO YOUR TRANSMITTER MANUAL'S PROCEDURE FOR RETURNING TO INTERNAL OSCILLATOR MODE.**
- Return primary power to the transmitter

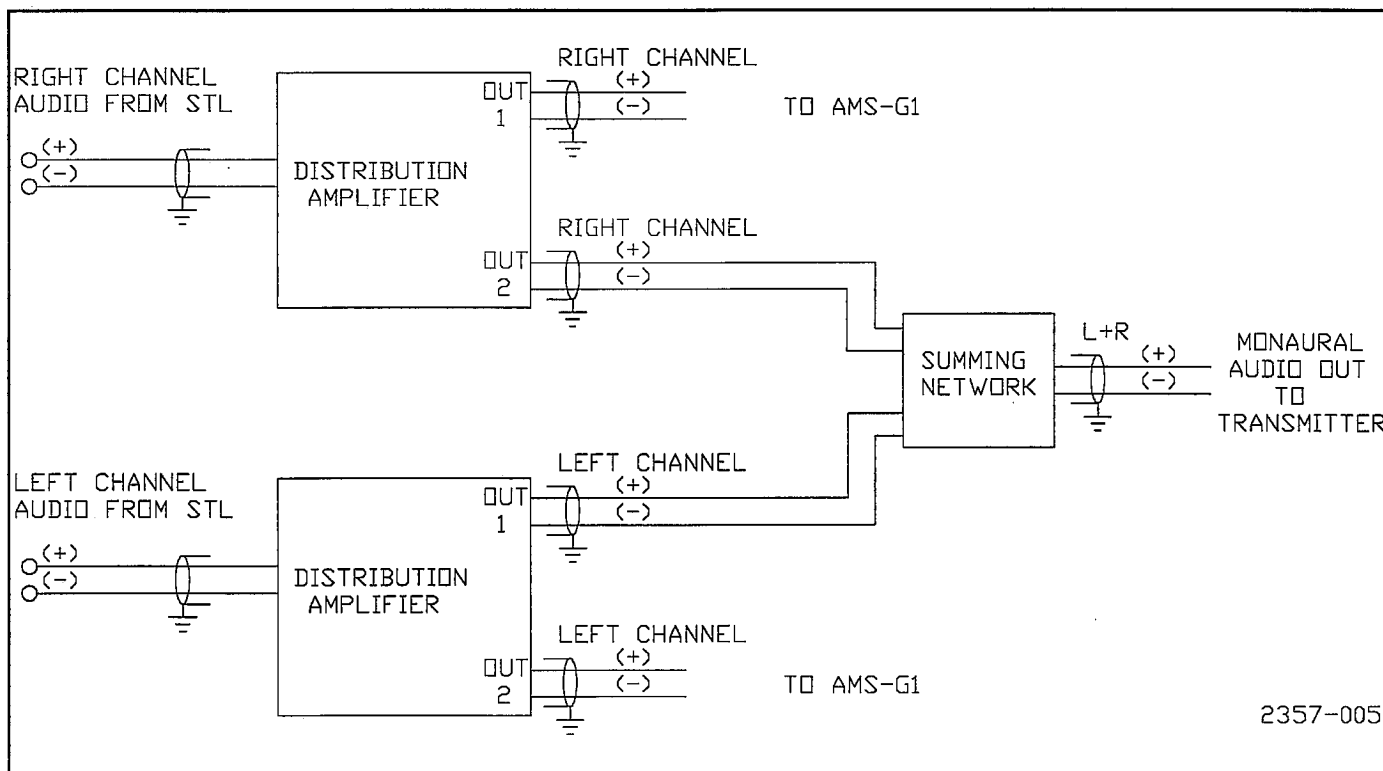


Figure 3-2. AMS-G1 Emergency Audio Bypass

4.1 Introduction

This section contains detailed functional block diagram descriptions and detailed circuit analysis necessary for understanding the theory of operation of the AMS-G1 exciter.

Note

An introduction to the C-QUAM AM Stereo System, provided by Motorola, is included in Section VIII, Appendix. If you are not familiar with the C-QUAM theory of operation, it is recommended that Appendix A be read before proceeding.

4.2 Functional Block Diagram Descriptions

The functional block diagram is drawing number 839-8138-105, and is located in the schematic drawing package.

4.2.1 Audio Flow

Mono Audio Path, L+Re

The left and right balanced audio inputs are filtered and sent to differential amplifiers whose outputs are single ended left and right audio. The left and right signals are sent to S2 (the front panel switch) for metering, K1 for stereo mode, and to the Envelope Balance pot. The Envelope Balance pot adjusts the mixture of left and right audio into the L+R summing amp. The output of the summing amp is called L+Re, where "e" stands for envelope. This is the monaural signal for the transmitter.

JP4 allows for 5 microseconds of delay to be added into the audio path for the DX series transmitter. This delay will be bypassed for the SX or Gates series transmitter. The audio is then returned to balanced form and sent to the transmitter audio input.

Stereo/Mono Mode

Left and right audio, before the mono summing amp, is sent to the Stereo/Mono relay K1. K1's normal position puts the exciter in mono mode. In the stereo mode, the stereo relay driver circuit will activate K1 and the left and right audio will also be sent to the delay equalization circuitry. An LED will be illuminated on the front panel when in stereo mode.

Stereo Signal Path and Delay Equalization

The Delay Equalization circuitry compensates for the effects of unmatched group-delay between the transmitter's RF and Audio circuit paths, and to correct for the effects of a narrow-bandwidth antenna system. The two signal paths, Audio and RF, must have equal time delays since the audio path carries the mono information and the RF path carries the stereo information (in the form of phase modulation of the carrier). Since the frequency responses of a station's day and night pattern antenna arrays are likely to be different, a separate equalization section is provided for both the day and night patterns.

There are four separate, but identical, delay equalization circuits. Two are for the daytime pattern (left and right), and two are for the nighttime pattern (left and right). Relay K2 selects the audio out of either the day or the night equalization circuits. When

activated by the relay driver, Night Mode is selected. An LED will also be illuminated on the front panel when in the night mode. Each separate delay circuit can supply approximately 55 microseconds of delay.

Jumpers, JP5 and JP6, can be used to cascade the delay of the day circuits into the night delay circuits. This allows for extra delay in the night mode, but has no effect on the day mode. The audio outputs of the delay circuits pass through K2 to the audio matrix circuits and are labelled L_EQ_Delay and R_EQ_Delay.

L+Rq/L-Rq Audio Matrix

The left and right signals, from the delay circuits, are now matrixed into L+Rq and L-Rq, where "q" stands for quadrature. L+Rq Null and L-Rq Null are used to adjust for the proper balance of left and right. The L+Rq signal is negative peak limited and sent to S2 for metering. It is also sent as the input to one of the two C-QUAM balanced modulators. The L-Rq signal amplitude is adjusted by the L-R Gain pot and sent to S2 for metering and to the second C-QUAM balanced modulator input.

Metering

The front panel bargraph displays can be used to monitor Left and Right audio, from TP1 and TP3 or can be switched, with S2, to monitor L+Rq and L-Rq from TP10 and TP12. Switch S1, located on the motherboard, is used to allow the L+R bargraph display to monitor the L+Re signal from TP4.

4.2.2 RF Flow

Carrier Generator (Without IQM Correction)

The carrier frequency of the AMS-G1 is generated in a crystal oscillator which is 4 times that of the carrier frequency. The output of the crystal oscillator is coupled into a Johnson counter which divides the oscillator frequency by four, yielding four outputs at the carrier frequency, at 0, 90, 180, and 270 degrees.

The in-phase (0 and 180) and quadrature (90 and 270) RF carrier components are used to drive the balanced modulators. The outputs of the modulators are summed together, creating a phase and amplitude modulated signal, or QUAM signal. The harmonic energy is then attenuated in the band pass filter which is adjustable via L5 and L6.

Buffer/Limiter

The QUAM signal is then buffered and hard limited, before being sent to a 50 ohm line driver. The output of the line driver is a TTL level signal at the carrier frequency. This signal is used to replace the transmitter's internal crystal oscillator. It is a phase modulated signal which contains the stereo information.

Carrier Generator (With IQM Correction)

If the AMS-G1 is to be used with a Gates or SX transmitter, optimum performance will be obtained by moving jumpers JP7 thru JP10 to positions 1 and 3. This will route the in-phase and quadrature signals through the IQM Correction circuitry before going to the balanced modulators.

IQM Correction

The IQM Correction circuitry uses a sample of the transmitter PDM Voltage (it is actually the voltage across the PA, from the HV to the PDM line) which varies with modulation. This sample is used to add phase shift to the carrier which will offset the phase shift introduced by the transmitter power amplifiers, resulting in minimum IQM. This phase corrected sample is then used to drive the two C-QUAM balanced modulators.

Pilot

The Pilot oscillator is running at 25.6kHz. It is divided by 1024 and bandpass filtered to provide a 25Hz sinewave to the L-Rq modulator. The Pilot level is adjusted by the Pilot Level pot. The Pilot can be switched on and off. When it is switched on, an LED will be illuminated on the front panel.

4.3 Detailed Circuit Analysis of the AMS-G1

4.3.1 Audio Flow

Audio Input

The left and right channel audio input signals enter the board through connector J2, at the rear of the unit. Jumpers JP1 and JP2 terminate the audio input lines with a 600 ohm impedance, where appropriate. After passing through RF filtering and transient suppression, the left and right channel audio is differentially amplified and buffered through sections of U1, a TL074. The Left and Right audio signals are sent to front panel switch S2, for metering purposes, and are also summed together by one section of U2 to form the Mono or L+Re signal (e = envelope). The left and right amplitudes are adjusted at the input to the summing amplifier by R32, Envelope Balance. For units intended to be used with DX-series transmitters, JP4 is placed in the '1-2' position, which places 5 microseconds of delay in the transmitter audio path. The L+Re signal amplitude is then adjusted by the L+R Gain pot, R63, buffered by U3 and leaves the board via J2-7 and J2-9 as a balanced audio signal. This L+Re signal is sent to the transmitter audio input. It should be noted that the L+Re signal is constructed by summing the left and right channel signals, prior to delay equalization.

Stereo-Mono Selection

The AMS-G1 can be operated in either the Stereo or Mono mode. The Stereo mode is selected by making a connection between J4-3 and J4-4 at the rear of the unit. This causes closure of relay K1, directing the left and right channel audio information into the Delay Equalization circuitry, and illumination of the Stereo LED on the front panel. If K1 is open, no signal is received by the Delay Equalization circuitry, and no stereo information will be transmitted. The mono (L+Re) signal will be sent to the transmitter audio input in both Mono and Stereo mode.

Day-Night Delay Equalization

The delay equalization networks consist four identical, switch-selectable, low-pass filters allowing up to 45 microseconds of delay in 3 microsecond steps. These networks are followed by continuously-variable low-pass filters which provide 0 to 10 microseconds of adjustable delay. See Table 4-1.

Table 4-1. Delay Adjustments

Course Adjustment (3 microsecond Steps)	Fine Adjustments (0 to 10 microseconds)
S3 - Left Channel - Day Delay Equalizer	R69
S4 - Right Channel - Day Delay Equalizer	R82
S5 - Left Channel - Night Delay Equalizer	R259
S6 - Right Channel - Night Delay Equalizer	R271

The high frequency response of each of the delay circuits is also adjustable, to allow for compensation of the high-frequency amplitude response of the transmitted signal. Op-amps U4 and U5 provide delay equalization for the left channel, day pattern; U6 and U7 are for the right channel, day pattern; U23 and U24 are for the left channel, night pattern, and U25 and U26 are for the right channel, night pattern. The night pattern equalization circuitry is contained in a plug-in board mounted directly above the day pattern equalization circuitry.

For those stations possessing extremely narrow-band antenna systems, more than 55 microseconds of delay equalization may be required for proper stereo performance. It is possible to cascade the day and night equalization sections so as to effectively double the range of delay available in the night mode. This is done by placing jumpers JP5 and JP6 in the '1-2' positions. This will not change the delay available in the day mode, but the night pattern equalization delay will be summed with the day delay, allowing up to a 110 microsecond range of delay equalization for the night pattern.

Day/Night Equalization Selection

The AMS-G1 normally operates in the Day equalization mode. To select the Night equalization mode, a contact closure must be made between J4-1 and J4-2 at the rear of the unit. This causes closure of relay K2, which then selects the output of the Night equalization circuitry, instead of the day. This also illuminates an indicator LED on the front panel.

Night Always Mode, JP3

If there is only one pattern, and more than 55 microseconds of delay is needed, then JP3 can be placed in the 2-3 position. This will place the AMS-G1 in the Night Always mode. Now JP5 and JP6 can be positioned 1-2, resulting in the total amount of delay, up to 110 microseconds, being made available for equalization.

Delay Equalized Audio

The delay equalized left and right channel signals, called L_EQ_Delay and R_EQ_Delay on the schematic, are combined in matrixing amplifiers comprised of sections of U11 and U12. These form the L+Rq (q = quadrature) and L-Rq signals which are used in the CQUAM generator's quadrature modulators. The amount of left and right in each of these signals is adjusted by R65, L+R Null, and R163, L-R Null. The negative peaks of the L+Rq signal are clipped by the negative limiter amp, which is one section of U11, a TL074. The negative limit is adjusted by R143. These signals are then sent to the Quadrature modulators and to front panel switch S2 for metering of L+Rq and L-Rq on the bar graph displays.

4.3.2 RF Flow

Pilot Generator

A QUAM signal contains a 25 Hz pilot tone in the L-R channel. It is produced in the AMS-G1 from Q16, a J309 JFET and Y1, a 25.6 KHz crystal, operating as a Pierce oscillator. This signal is divided by 1024 by U14, a CD4040 ripple counter. This passes through two stages of band-pass filtering in sections of U13, before being summed into the 'Q' modulator U16. Pilot switch S7, is used to turn the pilot on and off by allowing U14 to count or holding it in reset mode. When the pilot is on, the Pilot LED will be illuminated on the front panel.

Carrier Generation

The carrier frequency of the AMS-G1 is generated in a Colpitts crystal oscillator utilizing Q19 and Y2. The frequency of crystal Y2 is 4 times that of the transmitter carrier frequency. The output of the crystal oscillator is coupled into U22, an MC10131 Johnson counter, which divides the oscillator frequency by four, yielding four outputs at the carrier frequency, at 0, 90, 180, and 270 degrees. The in phase (0 and 180 degree) signals are sent through JP7 and JP8 to one balanced modulator as a push-pull input at the carrier frequency. The quadrature (90 and 270 degree) signals are sent through JP9 and JP10 to the input of the second balanced modulator. The above assumes that jumpers, JP7 thru JP10 are in positions 2-7 and 4-5, bypassing the IQM correction circuitry, as would be the case for a DX series transmitter.

Quadrature Modulation

The in-phase and quadrature RF carrier components are used to drive U16 and U18, respectively. These are MC1596 balanced modulators. The in-phase modulator is fed the L+Rq signal, and the quadrature modulator is fed the L-Rq and pilot signals. The outputs of the modulators are summed together, to form a phase and amplitude modulated signal. The harmonic energy is then attenuated in the band pass filter comprised of L5 and L6.

Buffer/Limiter

The low-level quadrature-modulated signal is then amplified in the circuit containing transistors Q14 and Q15. The gain of this amplifier is adjusted by R139, Quam Level. It is then buffered by the Darlington emitter-follower amplifiers comprised of Q5, Q13 and Q11, Q12. This amplified QUAM signal is hard-limited by U10, a MC10116 MECL buffer IC, to remove the amplitude modulation component.

RF Buffer

The ECL-level RF output from U10 receives an additional stage of amplification through Q8 and Q9. The output of this circuit then drives U8, an SN75123 50 ohm line driver. The output of U8 is a TTL-level RF signal which provides the carrier input to the transmitter, replacing the transmitter's internal oscillator.

4.3.3 IQM Correction

Incidental Quadrature Modulation or IQM is a phenomenon produced within the RF power amplifier of a transmitter. Changes in the RF envelope voltage create a change in the non-linear Miller capacitance of the PA MOSFET's, thus creating a phase shift of the carrier waveform, which varies with envelope modulation. It is possible to synthesize this non-linear

phase function from a sample of the PDM modulator output voltage, and use this function to phase-modulate the transmitter's low-level RF carrier signal in such a way as to negate the IQM effects produced in the PA.

When the IQM correction feature of the AMS-G1 is used, it will be necessary to move jumpers JP7, JP8, JP9, and JP10 from the 'DX' to 'SX' positions. This diverts the signal flow of the in-phase and quadrature carrier signals through the IQM-correction, phase modulator circuits, a pair of CA3028A balanced modulators, U17 and U19.

IQM Correction Circuitry Analysis

A sample of the transmitter's PDM modulator output voltage is input to J1, the 'PDM Sample +' and 'PDM Sample -' terminals. These samples are buffered by two sections of op-amp U15. An LM13600 transconductance amp U9 is used to synthesize the transmitter's IQM curve, with pots R185 and R192 used to set the correction function coefficients. The IQM correction function, present at the emitter of buffer amp Q17, is used to amplitude-modulate the output of U19.

This amplitude-modulated, in-phase carrier signal output of U19 is summed with the constant-amplitude, quadrature-phase carrier signal output of U17 to form a waveform with both amplitude and phase modulation. This waveform is amplified by Q18, and band-pass filtered to remove out-of-band energy before it is hard-limited by LM360 comparator U20. An RC phase shift network generates a quadrature signal, limited and buffered by U21, a second LM360. The results are in-phase and quadrature, TTL-level signals possessing the phase modulation function necessary to correct the transmitter IQM. These signals are fed back to the LM1596 balanced modulators in the QUAM generator circuitry of the AMS-G1.

When operating with Harris Gates or SX transmitters, circuitry is provided to compensate for the IQM intrinsic in these transmitters.

4.3.4 Metering Circuitry

Two LED bar-graph meters are featured on the front panel for the display of left/right channel, or L+R/L-R signal amplitudes. Switch S2 controls the metering function of the displays. (The discussion of the operation of the metering circuitry will be made in reference to the left channel circuitry. The right channel circuitry operates analogously.) The audio signal enters the metering board via a buffer, one section of U3. The signal next enters an amplifier, also part of U3, with its gain programmable at either 2 or 20, set by analog switches Q5 and Q6. This allows the gain of the meters to be increased by ten during periods of low audio levels. The audio signal is full-wave rectified by another stage of U3, and peak-detected by Q2, CR-1, and C7. This voltage is buffered by another stage of U3, which drives U7, U8, and U9, three LM3914 bar-graph meter driver IC's. These drive LED displays DS5, DS6, and DS7. Samples of the meter signals are diode OR-ed by CR3 and CR4, with the resulting level compared against reference levels by U4, an LM339 comparator. The outputs of these comparators set the state of the flip-flip comprised of Q7, Q8, Q9 and Q10, which

set the gain of the variable gain amplifiers at either 2 or 20. When the metering amp is in its high-gain mode, the '10X' display is illuminated.

Monitoring L+Re on the Bar Graph Display

The L+Re signal can be metered by toggling S1 on the exciter PC board. This removes the L+Rq signal from meter switch S2 and puts the L+Re signal in its place. Now, when S2 is placed in the L+R/L-R position it will be reading L+Re and L-Rq. With S1 in its normal position the display will read L+Rq and L-Rq.

4.3.5 Power Supply

A shielded toroidal transformer provides voltage for the unit. The transformer has tapped, multiple primaries to allow operation from 100, 120, 200, 220 and 240 volts AC. One secondary is full-wave rectified to provide voltage for the 5 volt supply, and the other secondary is full-wave rectified to provide the plus and minus 15 volt supplies. A capacitive voltage-multiplier using this secondary provides voltage for the 24 volt supply for the LED bar graph displays. Each of the supplies is regulated by either an LM317 or LM337 three-terminal regulator.

Section V Maintenance/Alignments

This section contains the information and procedures necessary to maintain and align the AMS-G1 AM Stereo exciter. It contains an IQM Correction Alignment procedure, Factory Tune up procedure and preventive and corrective maintenance.

5.1 Alignment Procedures

There are three alignment procedures for the exciter:

1. AMS-G1 Setup Procedure - Used to adjust the delay equalization circuits in the exciter for best separation. This procedure is located in the Installation section, since it must be performed when the unit is installed. For this procedure and complete installation instructions, please refer to Section II, Installation/Initial Turn-on.
2. IQM Correction Alignment Procedure - To be performed when the unit is installed with a Gates or SX series transmitter. The procedure is outlined later in this section. This procedure is not required, but will optimize AM stereo separation and reduce the distortion of C-QUAM AM Stereo signals. The AMS-G1 Setup Procedure (delay equalization), in Section II, must be performed after completion of the IQM adjustments.
3. Factory Tune up Procedure - Normally, these adjustments have been performed at the factory, and will not be required to be performed in the field. Do not attempt to adjust any internal controls unless you have a complete understanding of the C-QUAM system and the alignment procedure. The procedure is outlined later in this section, after the IQM procedure.

5.2 GATES/SX IQM Correction

This section of the AMS-G1 was designed to correct the Incidental Quadrature Modulation (IQM) present in the Harris Gates and SX transmitters. With this enabled and aligned, the transmitter will exhibit improved channel separation and reduced distortion of C-QUAM AM Stereo signals. For more information on IQM and the IQM correction circuits, refer to Section IV, Overall System Theory.

5.2.1 IQM Correction Alignment Procedure

Equipment needed: Dual-Trace 40 MHz Oscilloscope
Audio Function Generator
C-QUAM Stereo Monitor

- a. Disconnect the AC power from the transmitter.
- b. Place the AMS-G1 in its 'STEREO' mode. Verify that the jumpers JP-7, JP-8, JP-9, and JP-10 are in the 'SX' positions.

Verify that the pulse is off

- c. Apply a +10 dBm, 1 kHz, L-R signal at the Left and Right channel audio inputs of the exciter. Using the oscilloscope, view the 'QUAM' waveform at TP6 on the AMS-G1. Adjust the 'QUAD ADJUST' pot R278 until the peaks of the waveform are of the same amplitude. See Figures 5-1 and 5-2. R278, if misadjusted, can increase stereo distortion.
- d. Obtain a length of shielded, twisted pair audio cable (Belden 8451 or equivalent UL Listed cable) of sufficient length to reach from the transmitter to the AMS-G1. Connect one end of one of the supplied in-line fuse-holder to the rear terminal (back of cabinet) of L-11 on the first PA module. Splice the other end of the fuse-holder to the lead of the cable running to P1-2 (PDM Sample +). Cover the joint with heat-shrink tubing.

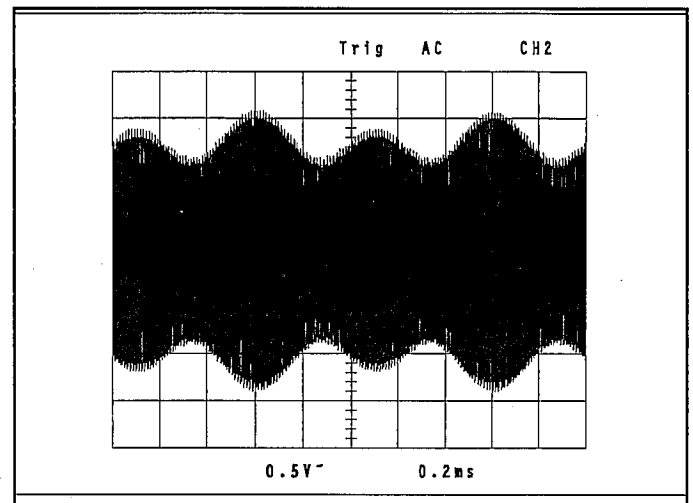


Figure 5-1.
R278 Misadjusted

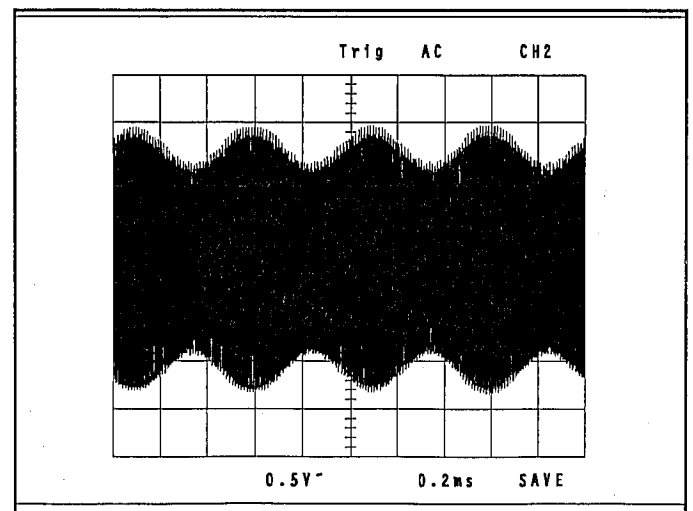


Figure 5-2.
R278 Properly Adjusted

- e. Connect one end of the second supplied in-line fuse-holder to the cathode terminal (body stripe) of CR13 in the first PA module. Splice the other end of the fuse-holder to the cable running to P1-1 (PDM Sample -). Cover joint with heat-shrink tubing. Install the supplied 1/4 A fuses into the fuse-holders. Dress the shield conductor of the cable so that it can be attached to the ground lug of the exciter. Trim back the shield end of this cable in the transmitter flush with the cable insulation, and cover with heat shrink tubing. Plug P1 into J1 at the rear of the exciter.
- f. Apply a -20 dBm, 1 kHz sine wave signal to the Left and Right audio inputs of the AMS-G1.
- g. Apply AC power to the transmitter by reconnecting the AC power and throwing the breaker at the bottom front of the transmitter.
- h. Connect the oscilloscope to the C-QUAM monitor, observing the 'L-R' demodulated output. Place the C-QUAM monitor in the 'L+R/L-R' metering mode. Connect the C-QUAM monitor's RF input to the transmitter's modulation monitor output.
- i. Switch the transmitter to its nominal full power level. Gradually increase the output of the signal generator until the 'L+R' meter of the C-QUAM monitor reads 30% modulation.
- j. Observing the 'L-R' meter on the C-QUAM monitor, gradually adjust the 'GAIN' pot R267 in the exciter for minimum 'L-R' reading.
- k. Increase the signal generator output until the 'L+R' meter on the monitor indicates 85% modulation. Adjust the 'CURVE 1' and 'CURVE 2' pots R192 and R185 to minimize the reading in the monitor 'L-R' meter. Re-adjust the 'GAIN' pot R267 for minimum 'L-R' reading. Repeat this process until no further reduction can be obtained.
- l. If proper IQM performance (better than 30 Db separation) cannot be achieved in this manner, it may be due to the presence of an earlier IQM correction circuit which is present in some transmitters. This can be verified by the presence of a BNC 'Tee' connector at the rear of the oscillator card cage. If so, short the terminals of the sample transformer toroid TS2, located at the top of the first PA module in the transmitter. Disconnect the BNC cable running from this transformer to the BNC 'Tee' connector at the rear of the oscillator card cage. Repeat the above adjustments.

If this procedure is followed, a 10 to 20 dB reduction in transmitter IQM can be realized.

Note

Following this procedure, the AMS-G1 Setup procedure in Section II, Installation/Initial Turn-on, must be ~~performed~~

repeated.

Also do section 2.2.3.4 again

5.3 Factory Tune-up Procedure For AMS-G1

Should you believe that exciter mis-alignment has occurred, the following procedure has been provided. The AMS-G1 Setup (delay equalization) procedure will need to be performed when the following adjustments are completed.

5.3.1 Audio Matrix and Equalization

All adjustments to be made without equalization and at 1kHz unless specified otherwise.

Set the following switches and controls as follows:

- a. Binary and bulk delays to zero, with S3, S4, S5 and S6 at their 'zero' position, and R75, R69, R82, R87, R259, R266, R271 and R274 fully CCW.
- b. Negative limit control R143 fully CW.
- c. Jumpers JP4, JP7, JP8, JP9, and JP10 in the 'DX' position.
- d. Day/Night mode to 'Day', and the Stereo/Mono mode to 'Stereo'.
- e. Set the front panel Metering Switch to the 'L+R/L-R' position. *Apply Ac Power*
- f. Input L+R signal corresponding to 100% modulation, at +10dBm. Adjust R163 for L-R null at TP12. Adjust the meter calibration pot R24 on the display board until the bar graph displays read 100%.
- g. Input L-R signal at 100% modulation. Adjust R65 for L+R null at TP10. Adjust R32 for L+R null at TP4. Adjust the meter calibration pot R67 on the display board until the bar graph displays read 100%.
- h. Input Left only signal at 100% modulation. Adjust R165 until the amplitude of the signal at TP12 equals the amplitude of the signal at TP10.

5.3.2 QUAM Modulator Alignment

- a. Check the carrier-frequency crystal and frequency-dependant parts to be sure they are appropriate for the frequency of the unit under test.
- b. Monitoring the RF frequency at J3, SYNC Q REF on the back panel, with a digital frequency counter, set the carrier frequency with C136.
- c. Adjustments are to be made with the 'Pilot' switch in the off position.
- d. Input 120% L+R audio modulation. With the oscilloscope, observe the waveform at TP6 and adjust R197, the quadrature suppression pot, until the envelope crossover points are sharpest. See Figure 5-3.
- e. Reduce audio input for 100% L+R audio modulation. Observe the waveform at TP6 and adjust R189, the Carrier Level pot, until the envelope shows closure at the negative modulation peaks.
- f. Input 10 kHz, 70% modulation, Left only signal, and observe the waveform at TP6. Adjust L5 and L6 for maximum amplitude, and symmetry of depth of trough in the envelope waveform. See Figure 5-4. Repeat test for a Right only signal, and re-adjust L5 and L6 for the best

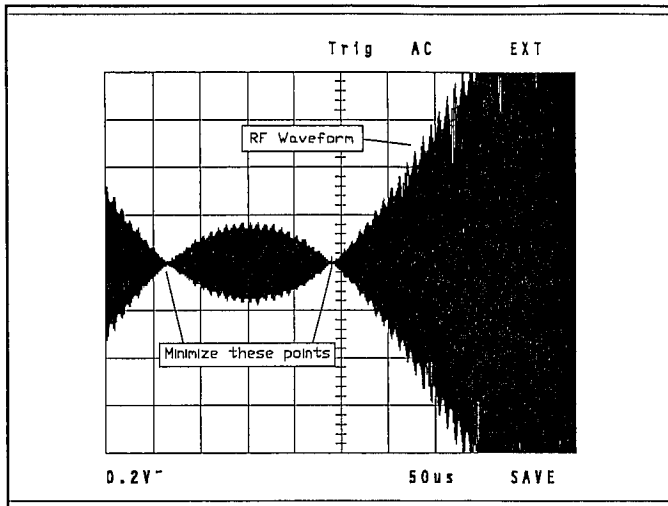


Figure 5-3.

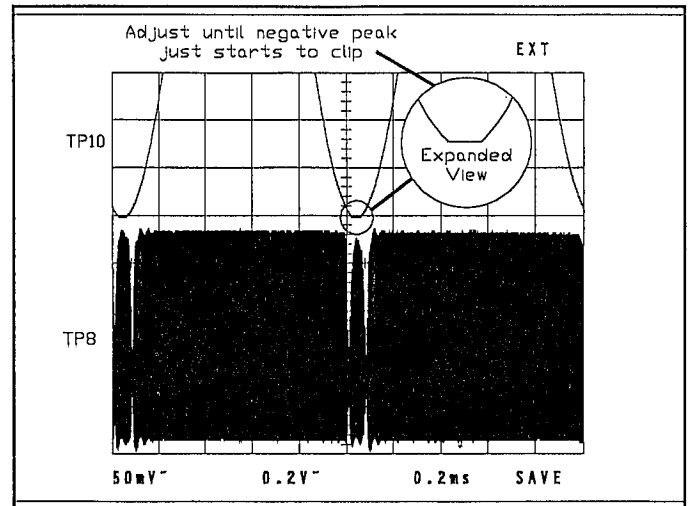


Figure 5-5.

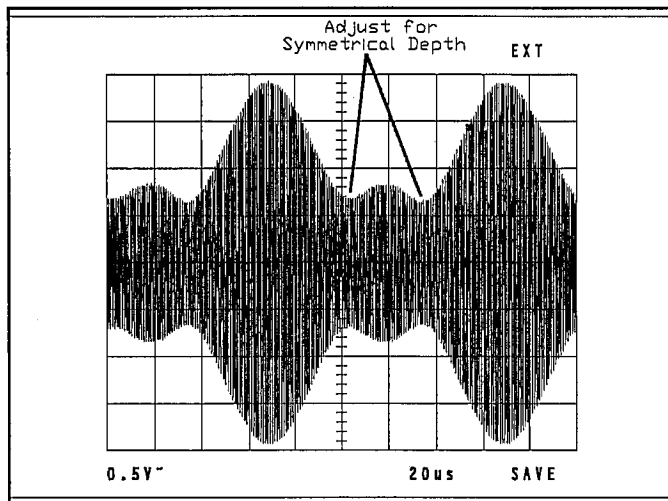


Figure 5-4.

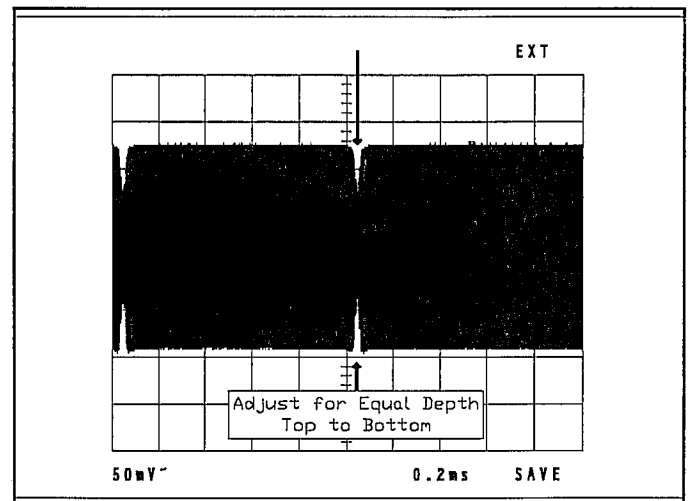


Figure 5-6.

compromise of performance between Left and Right signals.

- g. Input 1 kHz, 100% modulation, L+R audio signal and observe TP6. Adjust R139, QUAM Level, for a 4.00 Vp-p signal.
- h. Increase the audio amplitude to 105% L+R. Observe the waveforms at TP8 and TP10. Adjust R143, Negative Limit control, until the RF waveform at TP8 becomes fuzzy and the negative peak of the audio at TP10 just starts to clip. See Figure 5-5.
- i. While still observing the Limiter Output at TP8, adjust R124, Limiter Balance, until incidental phase is centered. See Figure 5-6.
- j. Using a high impedance probe, measure the signal at TP6 with a spectrum analyzer. Set the analyzer for 1 dB per division, centered on the carrier frequency of the exciter.

Input an audio signal at 1 kHz, 80% modulation L+R. Measure the amplitude of the sidebands with respect to the carrier. Switch

the input signal to L-R. Observe the amplitude of the 1kHz sidebands. They should be of equal amplitude as before. If not, adjust R165 until the sideband amplitudes of the L-R modulated signal equals that of the L+R modulated waveform.

Note

If a spectrum analyzer is not accessible, these adjustments may alternately be made with the AMS-G1 connected to an AM transmitter, and monitoring the modulation level with a C-QUAM modulation monitor.

5.3.3 Pilot Adjustment

- a. Place the Pilot switch S7 into the 'Pilot On' position.
- b. Using a digital frequency counter, measure the frequency of the pilot tone at TP11 to verify that it is 25 Hz +/- 1.0 Hz. Adjust C106 if necessary to accomplish this.
- c. Using a high-impedance probe, measure the waveform at TP6 on a spectrum analyzer.
- d. Adjust R153, the Pilot Level control, until the 25 Hz sidebands are -32 dB (2.5%) with respect to the carrier.

Note

If a spectrum analyzer is not accessible, these adjustments may alternately be made with the AMS-G1 connected to an AM transmitter, and monitoring the Pilot modulation level with a C-QUAM modulation monitor.

- e. Return the Pilot switch S7 to the 'Off' position. *if further equal in freq.*

This completes the factory alignment of the AMS-G1 exciter. You may now proceed to the AMS-G1 Set-up Procedure in Section II.

5.4 Preventative Maintenance

Preventative maintenance is a systematic series of operations performed periodically on equipment. Because these procedures cannot be applied indiscriminately, specific instructions are necessary. Preventative maintenance consists of six operations: inspecting, feeling, tightening, cleaning, adjusting, and painting.

- a. **INSPECT.** Inspection is the most important maintenance operation because it determines the necessity for the others. Become thoroughly acquainted with normal operating conditions in order to recognize and identify abnormal conditions readily. Inspect for the following:
 1. Overheating, which is indicated by discoloration, bulging of parts, and peculiar odors.
 2. Oxidation
 3. Dirt corrosion, rust, mildew, and fungus growth.
- b. **FEEL.** Use this operation to check parts for overheating. By this means the lack of proper ventilation or the existence of some defect that can be detected and corrected before serious trouble occurs. Become familiar with operating temperatures in order to recognize deviations from the normal range.
- c. **TIGHTEN.** Tighten loose screws, bolts, and nuts. Do not tighten indiscriminately as fittings that are tightened beyond the pressure for which they are designed may be damaged or broken.
- d. **CLEAN.** Clean parts only when inspection shows that it is necessary and only use approved cleaning solvent.
- e. **ADJUST.** Make adjustments only when inspection shows that it is necessary to maintain normal operation.
- f. **PAINT.** Paint surfaces with the original type of paint (using a prime coat if necessary) whenever inspection shows rust, or worn or broken paint film.

5.5 Maintenance of Components

The following paragraphs provide information necessary for the maintenance of components.

TRANSISTORS. Preventative maintenance of transistors is accomplished by performing the following steps:

- a. Inspect the transistors and surrounding area for dirt as accumulation of dirt or rust could form leakage paths.

- b. Use compressed air to remove dust from the area.

WARNING

ALWAYS WEAR SAFETY GOGGLES WHEN USING COMPRESSED AIR

- c. Examine all transistors for loose connections or corrosion. Tighten the transistor mounting hardware to no more than 8 inch-pounds. Overtightening the transistor hardware will cause the silicon insulators to curl up on the ends and possibly short through.

INTEGRATED CIRCUITS. Preventative maintenance of integrated circuits is accomplished by performing the following steps:

CAUTION

USE CARE TO AVOID THE BUILDUP OF STATIC ELECTRICITY WHEN WORKING AROUND INTEGRATED CIRCUITS.

- a. Inspect the integrated circuits and surrounding area for dirt as accumulations of dirt or dust could form leakage paths.
- b. Use compressed dry air to remove dust from the area.

WARNING

ALWAYS WEAR SAFETY GOGGLES WHEN USING COMPRESSED AIR.

CAPACITORS. Preventative maintenance of capacitors is accomplished by performing the following steps:

- a. Examine all capacitor terminals for loose connections or corrosion.
- b. Examine the body of each capacitor for swelling, discoloration, or other evidence of breakdown.
- c. Use standard practices to repair poor solder connections with a low wattage soldering iron.
- d. Clean cases and bodies of all capacitors.

FIXED RESISTORS. Preventative maintenance of fixed resistors is accomplished by performing the following steps:

- a. When inspecting a chassis, printed circuit board, or discrete component assembly, examine resistors for dirt or signs of overheating. Discolored, cracked, or chipped components indicate a possible overload.
- b. When replacing a resistor, ensure that the replacement value corresponds to the component value on the schematic diagram and parts list.
- c. Clean dirty resistors with a small brush.

VARIABLE RESISTORS. Preventative maintenance of variable resistors is accomplished by performing the following steps:

- a. Clean component with a dry brush or a lint-free cloth.
- b. When dirt is difficult to remove, clean component with a lint-free cloth moistened with an approved cleaning solvent.

FUSES. Preventative maintenance is accomplished by performing the following steps:

- a. When a fuse blows, determine the cause before installing a replacement.

WARNING

ENSURE THAT AN EXACT REPLACEMENT FUSE IS USED A DIFFERENT MANUFACTURER'S FUSE OF THE SAME SIZE AND/OR RATING DOES NOT FULFILL THE REQUIREMENT FOR EXACT REPLACEMENT.

- b. Inspect fuse caps and mounts for charring and corrosion.
- c. Examine clips for dirt, and, if necessary, clean with a small brush.
- d. If necessary, tighten fuse clips and connections to the clips. The tension of the fuse clips may be increased by pressing the clip sides closer together.

SWITCHES. Preventative maintenance of switches is accomplished by performing the following steps:

- a. Inspect the switch for defective mechanical action or looseness of mounting and connections.
- b. Operate the switch to determine if they move freely and are positive in action.

PRINTED CIRCUIT BOARDS. Preventative maintenance of printed circuit boards is accomplished by performing the following steps:

- a. Inspect the printed circuit board for cracks or breaks.
- b. Inspect the wiring for open circuits or a raised foil.
- c. Check components for breakage or discoloration due to over heating.
- d. Clean off dust and dirt with a clean, dry lint-free cloth.
- e. Use standard practices to repair poor solder connections with a 40 watt soldering iron.

6.1 Introduction

This section contains basic troubleshooting information for the exciter. This section will be broken up into three parts:

- Power Supply
- Audio
- RF

For the Audio and RF sections, use of the Functional Block Diagram, Drawing #839-8138-105, will be very helpful in understanding and troubleshooting the signal flow of the exciter.

6.2 Power Supply Troubleshooting

Any time a problem with the exciter is suspected, it is a good idea to check the power supplies first. There are five separate regulated supplies all located on the motherboard. All five are simple 3 pin integrated regulators which are easily replaced in case of failure. The supplies can be checked at the following points:

+24V at the anode of CR44	Regulator U31
+15V at TP17	Regulator U28
-15V at TP18	Regulator U29
+5V at TP19	Regulator U30
-5V at the cathode of CR38	Regulator U27

If any of the above voltages are not present, then troubleshoot the regulator and its associated components.

6.3 Audio Troubleshooting

The audio portion of the exciter is very simple op-amp circuitry, and therefore should be quick and easy to troubleshoot. To further simplify things, the exciter must have a +10dBm audio input. This means that all of the audio test points will have exactly the same amplitude waveform when the proper audio signal is applied, such as L+R or L-R. A plot of the proper waveform is shown in Figure 6-1. This waveform will be present at the following test points when a L+R signal is applied to the exciter at +10dBm.

TP1 - Right audio input

TP3 - Left audio input

TP4 - L+Re

TP5 - Delayed L+Re (for DX series transmitters)

When in Stereo Mode, it will also be present at the following:

TP13 - Left Delay Equalized audio

TP14 - Right Delay Equalized Audio

TP10 - L+Rq (matrixed L+R for C-QUAM modulator)

By changing the input signal to L-R, the same waveform will also be present at TP12 - L-Rq (matrixed L-R for C-QUAM modulator).

6.3.1 No L+R Audio to the Transmitter

If the transmitter will not modulate, then the L+Re or monaural audio has been interrupted. To find out where the signal has been lost, apply a +10dBm, L+R signal to the exciter and refer to the flow chart in Figure 6-2. These signals should be present in either mono or stereo mode.

Note

Be sure to check for proper phasing of the balanced inputs and outputs. For example, with L+R applied to the exciter, TP1 and TP3 should be in-phase with each other. If not, cabling is usually the problem.

6.3.2 Loss of L+R or L-R

The front panel meters on the exciter, when in the L+R/L-R mode are displaying the L+Rq and L-Rq signals from TP10 and TP12 respectively. If either one of these signals is missing, then troubleshooting is a simple matter of tracing signal back to TP1 and TP3 to find where the signal was lost.

Check TP1 and TP3

To check the audio at TP1 and TP3, simply set the front panel switch to read Left and Right. Input a +10dBm, L+R signal. Both meters should read 50%. If not, see the chart in Figure 6-2.

Check K1

Next, we need to know if K1 is working, and activated for stereo mode. Place a jumper between J4-3 and J4-4, right on the back of the exciter. If K1 is closing, for stereo mode, the front panel indicator will illuminate. You should be able to hear the clicking of K1. To be sure K1 is working, check JP6 pin 3 and JP5 pin 3 (you may have to remove the jumper to do this). The waveforms at these two test points should match the one in Figure 6-1. If no audio is present then replace K1.

Checking the Day Mode, Delay Equalization Circuitry

To check the Left EQ delay circuits, look at TP13. The waveform should match the one in Figure 6-1. If not, the problem is either in U4, U5 or S3. U4 can be bypassed altogether by moving S3 (accessible from the left side of the unit) to position 0, or pointing straight up. Note the position of S3 before moving it so it can be put back in its original position after troubleshooting. To check the Right EQ delay circuits, look at TP14. It should match Figure 6-1. If not, troubleshoot U6, U7 and S4.

Checking the Night Mode, Delay Equalization Circuitry

To check the Left and Right Night EQ delay circuits, you will still look at TP13 and TP14, but the unit must be placed in the Night Mode. This can be done by placing a jumper on the back of the unit from J4-1 to J4-2, or by moving JP3 to position 2-3. In either case you should hear K2 click. If the jumper on the back illuminates the front panel LED, but does not activate K2, then replace K2.

To make sure K2 is working, remove JP6 while looking at TP13, or JP5 while looking at TP14. If K2 is working, the audio should disappear.

If audio is present in Day Mode, at TP13 and TP14, but not present when switched to Night Mode, then troubleshoot the Left delay circuitry, U23, U24 and S5 or the Right delay circuitry, U25, U26 and S6, whichever is appropriate. Be sure to replace all jumpers and switches to their original positions.

Audio Matrix Check

The only thing left at this point between the front panel display and Test points 13 and 14, is U11, U12 and the switches S1 and S2. S1 should be in the L+Rq position and is located on the motherboard. Check TP10, the waveform should match Figure 6-1. If not, replace U11 and U12. If it is okay, then change the input signal to L-R at +10dBm and check TP12. It should also match Figure 6-1. If not, replace U11 and U12.

6.4 RF Troubleshooting

6.4.1 Underdrive

Since the exciter is now the RF source for the transmitter, the most likely RF fault will be UNDERDRIVE. If an underdrive condition is detected by the transmitter we need to know if the problem is in the exciter or the transmitter. The easiest way to find this out is to return the transmitter back to its internal oscillator. For instructions on how to do this refer to the transmitter manual. If the underdrive condition still exists then the problem is in the transmitter, not the exciter.

6.4.1.1 Check the RF Output Cable

If the underdrive goes away then the first thing to do is to remove the External RF input cable from the transmitter end and put it into an oscilloscope. There should be about 4Vp-p at this point. If not then proceed to the next step.

6.4.1.2 QUAM REF Output is okay

Run a cable from the QUAM REF BNC output to the scope. This should be a 2Vp-p CW signal with no audio input, or a 4Vp-p modulated envelope signal with a +10dBm L+R signal input. If the QUAM REF output is not okay then proceed to step 4.

Checking U8

If the QUAM REF output is okay, you will need to take the top cover off the exciter. Check TP7, it should be about 4Vp-p. If not, then check U8 pin 5. This should be about 6Vp-p. If so, then replace U8. If U8 is okay then proceed to the next step.

Checking Q8 and Q9

Next check TP8, it should be about 200mVp-p. If it is, then the problem is most likely Q8 and/or Q9. The signal at the base of Q8 and Q9 (center pin) should read about 300mVp-p.

Checking U10

If TP8 is not okay, check U10 pins 12 and 13. They should both be about 1.5Vp-p. If so, replace U10.

6.4.1.3 QUAM REF Output is Not Okay

If the QUAM REF output is not okay then check TP6. This should be a 2Vp-p CW signal with no audio input or a 4Vp-p modulated envelope signal with a +10dBm L+R audio input. If this signal is not present then it will be best to go all the way back to the oscillator and work our way forward to TP6.

Checking the Oscillator

The oscillator output will vary with frequency. It is usually about 300 to 400mVp-p at the input to U22, pin 9. If not, troubleshoot the oscillator, keeping in mind that it is operating at 4 times the carrier frequency.

Check U22 and Jumpers JP7 - JP10

If the oscillator output is okay then check the four outputs from U22. These should be about 800mVp-p and at the carrier frequency. If not, replace U22. If these outputs are okay, then the next place to look would be the input to the balanced modulators, U16 and U18. Both of these should have about 250mVp-p carrier input to pins 8 and 10. If any of these are missing the problem is most likely one of the jumpers JP7, JP8, JP9, and JP10 or an associated resistor.

Gates or SX Transmitters Only

If the unit is operating with a Gates or SX series transmitter and the IQM Correction circuitry is being used, place the jumpers in the DX position. This will effectively bypass the IQM Correction circuitry and send the output of U22 directly to the input of U16 and U18. If the signal now returns at TP6 then you will need to troubleshoot the IQM Correction circuitry which is detailed later in this section.

Check U16 and U18

If the inputs to U16 and U18 are okay, then check the outputs at pins 6 and 12 of each IC. This should be about a 100 to 200 mVp-p CW signal with no audio input. If not replace U16 and U18. The outputs of these two IC's are tied together so it would be better to replace both if a problem is suspected with either one of them.

Check the Differential Amplifiers

If the output of the modulators is okay but TP6 is still missing then troubleshoot Q5 and Q11 - Q15. The signal at the base of Q14 and Q15 should be about 50mVp-p while the signal at the base of Q5 and Q11 should be about 1.5Vp-p.

6.4.1.4 IQM Correction Circuitry

The first thing to do here is to check TP15 and TP16. Both of these should have about a 3Vp-p CW signal at the carrier frequency. The two test points should also have a 90 degree phase relationship. If these signals are okay then the problem is most likely the jumpers, JP7 - JP10. If TP15 and/or TP16 have no signal then proceed to the next step.

Check U20 and U21

U20 and U21 are balanced line drivers. Pin 5 of both IC's should have about 2 to 2.5Vp-p of carrier frequency CW signal. If so, replace U20 and/or U21. If this signal is missing, check Q18.

Checking Q18, U17 and U19

Q18 should have about 250mVp-p at both the base and emitter and about 4Vp-p at the collector. If either the base or the emitter signal is missing, then either U17 and/or U19 has failed or is not

getting an input signal. It is also possible for Q18 to have failed and be loading down the outputs of U17 and U19. Troubleshoot accordingly.

The rest of the circuitry, Q10, Q17, U15 and U9 should not have any effect on RF drive, but could show up as a problem when performing the IQM Correction Alignment Procedure.

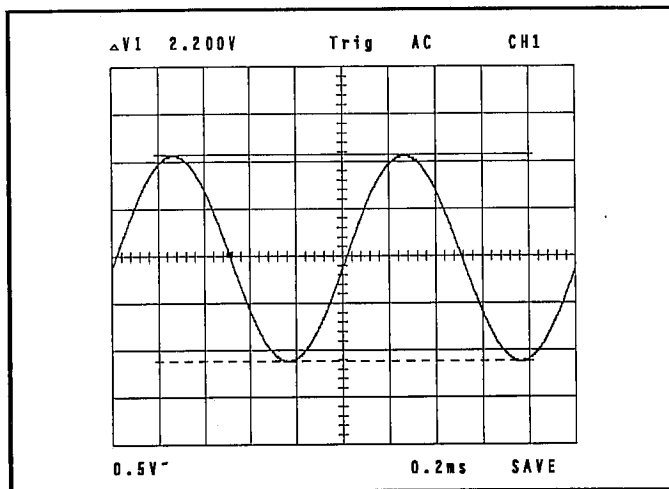


Figure 6-1. L+R @ 10dBm Waveform

NO AUDIO (L+R) TO TRANSMITTER

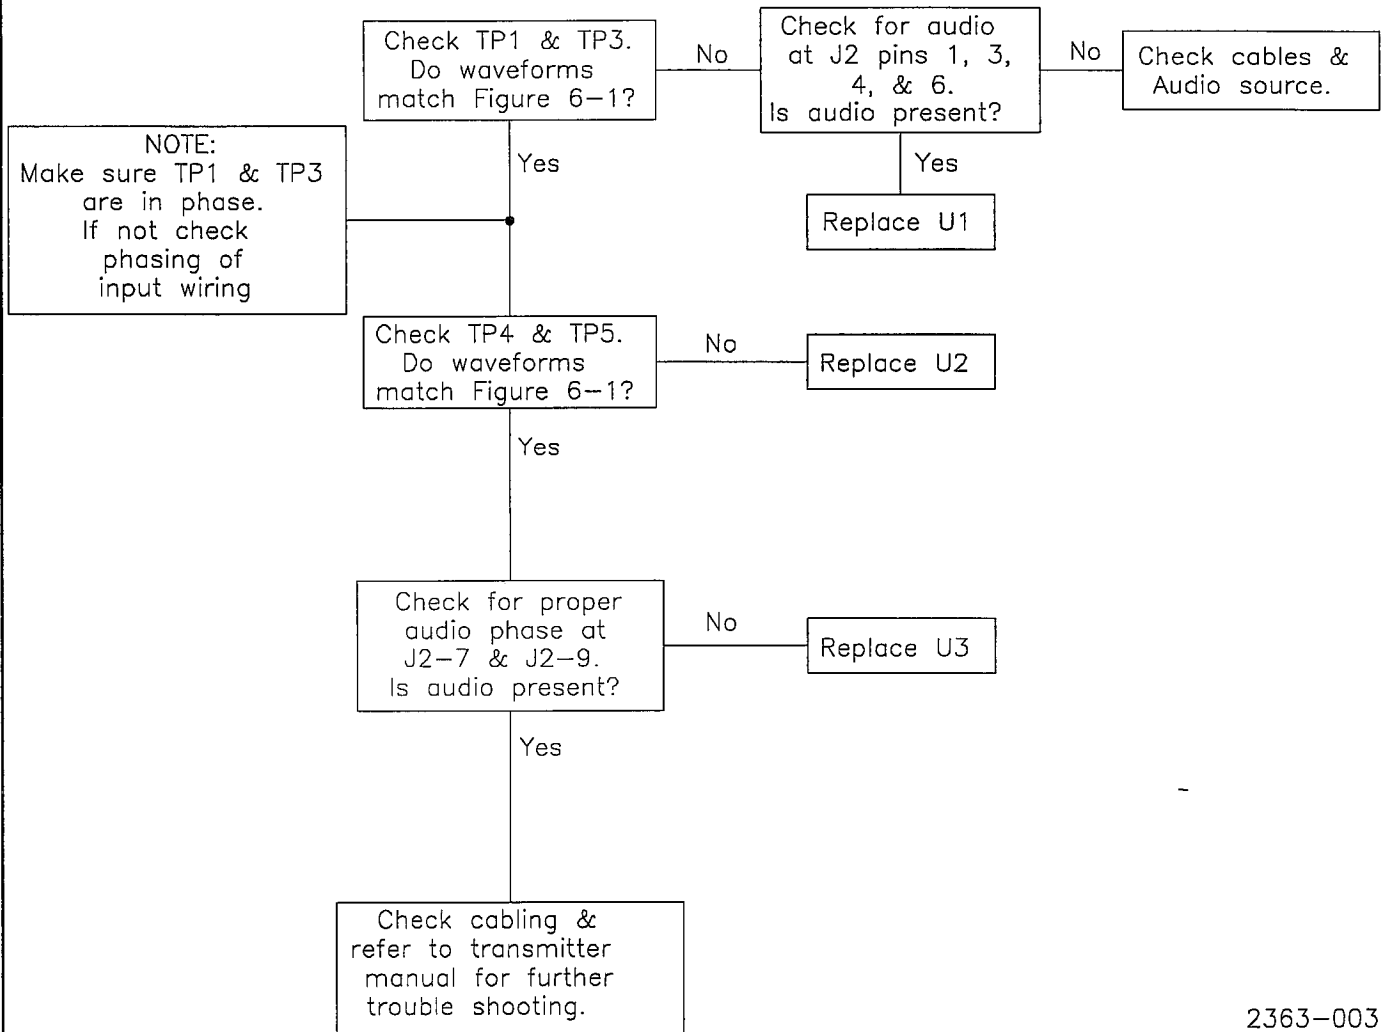


Figure 6-2. Troubleshooting Flow Chart for L+R
Monaural Audio Path. Signal Input is L+R @ 10dBm

Section VII Replaceable Parts List

Table 7-1. STEREO GENERATOR AMS-G1 - 994 9480 001

HARRIS P/N	DESCRIPTION	QTY/UM	REF. SYMBOLS/EXPLANATIONS
000 0000 010	. B/M NOTE:	0 ...	THE TAG ON THE REAR OF THIS UNIT TO BE MARKED WITH THE VOLTAGE THAT THE DIGIT IS CONFIGURED
492 0819 000	. COIL, 75-150UH Q60	0 ...	A1L5 A1L6
492 0820 000	. COIL, 190-340UH QMIN=50	0 ...	A1L5 A1L6
494 0196 000	. CHOKE RF 100UH	0 ...	A1L7B
494 0405 000	. CHOKE RF 56.0UH	0 ...	A1L9C
494 0406 000	. CHOKE RF 68.0UH	0 ...	A1L7C
494 0407 000	. CHOKE RF 82.0UH	0 ...	A1L9B
494 0409 000	. CHOKE RF 150.0UH	0 ...	A1L7A A1L9A
494 0411 000	. CHOKE RF 220.0UH	0 ...	A1L10B
494 0413 000	. CHOKE RF 330.0UH	0 ...	A1L8C A1L10A
494 0415 000	. CHOKE RF 470.0UH	0 ...	A1L8B
494 0416 000	. CHOKE RF 560.0UH	0 ...	A1L8A
500 0753 000	. CAP 56PF 500V 5%	0 ...	A1C171B A1C178B
500 0754 000	. CAP 220PF 500V 5%	0 ...	A1C168C
500 0756 000	. CAP 330PF 500V 5%	0 ...	A1C168B
500 0759 000	. CAP 100PF 500V 5%	0 ...	A1C171A A1C178A
500 0761 000	. CAP 150PF 500V 5%	0 ...	A1C89
500 0784 000	. CAP 300PF 500V 5%	0 ...	A1C116B
500 0787 000	. CAP 200PF 500V 5%	0 ...	A1C116C
500 0814 000	. CAP 36PF 500V 5%	0 ...	A1C89
500 0815 000	. CAP 39PF 500V 5%	0 ...	A1C171C A1C178C
500 0816 000	. CAP 43PF 500V 5%	0 ...	A1C163C
500 0819 000	. CAP 51PF 500V 5%	0 ...	A1C82
500 0820 000	. CAP 62PF 500V 5%	0 ...	A1C163B
500 0821 000	. CAP 68PF 500V 5% CM05	0 ...	A1C89
500 0822 000	. CAP 75PF 500V 5%	0 ...	A1C82
500 0823 000	. CAP 82PF 500V 5%	0 ...	A1C82
500 0825 000	. CAP 110PF 500V 5%	0 ...	A1C163A
500 0826 000	. CAP 120PF 500V 5%	0 ...	A1C89
500 0827 000	. CAP 130PF 500V 5%	0 ...	A1C82 A1C89
500 0828 000	. CAP 160PF 500V 5%	0 ...	A1C82
500 0833 000	. CAP 390PF 500V 5%	0 ...	A1C116A
500 0834 000	. CAP 430PF 500V 5%	0 ...	A1C168A
500 0840 000	. CAP, MICA 680PF 300V 5%	0 ...	A1C88
500 0841 000	. CAP, MICA 750PF 300V 5%	0 ...	A1C88
500 0878 000	. CAP 1500PF 500V 5%	0 ...	A1C88
500 0887 000	. CAP 2200PF 500V 5%	0 ...	A1C88
500 0913 000	. CAP 1200PF 500V 5%	0 ...	A1C88
500 1164 000	. CAP 1800PF 500V 5%	0 ...	A1C88
540 0888 000	. RES 100 OHM 1/4W 5%	0 ...	A1R137 A1R140
540 0894 000	. RES 180.0 OHM 1/4W 5%	0 ...	A1R137 A1R140
540 0896 000	. RES 220.0 OHM 1/4W 5%	0 ...	A1R137 A1R140

540 0898 000	. RES 270.0 OHM 1/4W 5% 0 ..	A1R137 A1R140
548 1124 000	. RES 2.21K OHM 1/4W 1% 0 ..	A1R127 A1R128
548 1289 000	. RES 1.21K OHM 1/4W 1% 0 ..	A1R127 A1R128
817 2374 003	. SPEC, XTAL, FOR AMS-G1 0 ..	
817 2374 008	. SPEC, TEST, AMS-G1 0 ..	
839 8138 103	. WIRING DIAG, OVERALL 0 ..	
839 8138 104	. FD CHART, AMS-G1 0 ..	
988 2357 001	. DP, AM STEREO GEN, OPER 1 ..	
990 1131 001	. R-SC KIT AMS-G1 0 ..	
994 9480 002	. STEREO GENERATOR AMS-G1	. 1 ..	
994 9517 001	. R-SP KIT AMS-G1 0 ..	

Table 7-2. STEREO GENERATOR AMS-G1 - 994 9480 002

<i>HARRIS P/N</i>	<i>DESCRIPTION</i>	<i>QTY/UM</i>	<i>REF. SYMBOLS/EXPLANATIONS</i>
250 0274 000	. CORD, POWER 3C 7-1/2 FT 1 ..	
296 0258 000	. TUBING TEFLON 19AWG75 . FT	#FL001
296 0261 000	. TUBING, SHRINK 1/8 WHITE4 .. FT	#FL001
296 0262 000	. TUBING, SHRINK 1/4 WHITE1 .. FT	#FL001
354 0613 000	. CONTACT SOCKET 26-18 AWG	. 5 ..	#FL001
398 0040 000	. FUSE, SLOW CART .125A 250V	. 1 ..	F001
398 0045 000	. FUSE, SLOW CART .250A 250V	. 1 ..	F001
402 0020 000	. CLIP, FUSE 2 ..	#F001
472 1732 000	. TRANSFORMER, AM SG 1 ..	T001
484 0296 000	. * FILTER RFI POWER LINE 1 ..	FL001
560 0049 000	. MOV 4500A 75J 275VAC 3 ..	RV001 RV002 RV003
610 0001 000	. RECP 2 CONTACT MALE 1 ..	J001
612 0095 000	. RECP 2 CONT FEMALE 1 ..	#J001
612 1362 000	. RECP 6C 1ROW STRAIGHT 1 ..	A1J1
612 1407 000	. RECP, 9C 1 ROW 1 ..	#J002
612 1408 000	. RECP, 4C 1 ROW 1 ..	#J004
646 0569 000	. LABEL 814-2939-001 2 ..	
646 0665 000	. INSPECTION LABEL 1 ..	
646 1255 000	. LABEL H-141 1 ..	
646 1455 000	. LABEL, XMITTING EQUIPMENT	. 1 ..	
646 1510 000	. OVERLAY, AMS-G1 FRT PNL 1 ..	
813 4999 022	. STDOFF 6-32X1/4 1/4 HEX 6 ..	
917 2106 001	. TAG, INPUT AC VOLTAGE 1 ..	THIS TAG TO BE ATTACHED TO THE REAR PANEL
917 2374 005	. RIBBON CABLE 1 ..	
917 2374 006	. JUMPERS, STEREO GENERATOR	1 ..	
922 1228 002	. HIGH VOLTAGE COVER 1 ..	
922 1228 004	. AC COVER 1 ..	
943 5429 104	. CHASSIS 1 ..	
943 5429 105	. FRONT PANEL 1 ..	
943 5429 106	. REAR PANEL 1 ..	
943 5429 107	. TOP, STEREO GENERATOR 1 ..	
992 8845 001	. PWB, STEREO GENERATOR 1 ..	A001
992 8846 001	. DISPLAY PWB 1 ..	A002

Table 7-3. PWB, STEREO GENERATOR - 992 8845 001

HARRIS P/N	DESCRIPTION	QTY/UM	REF. SYMBOLS/EXPLANATIONS
254 0002 000	. WIRE, BUS CU 20AWG	.04	. FT #Y001
335 0262 000	. DF137A INSULATING WASHER	4	#U028 #U029 #U030 #U031
354 0309 000	. TERM SOLDER	23	E001 E002 TP001 TP002 TP003 TP004 TP005 TP006 TP007 TP008 TP009 TP010 TP011 TP012 TP013 TP014 TP015 TP016 TP017 TP018 TP019 TP020 TP021
358 3402 000	. STDOFF PWB .143 ID X .50	4	
380 0189 000	. XSTR, NPN 2N3904	7	Q003 Q004 Q005 Q006 Q011 Q014 Q015
380 0190 000	. XSTR, PNP 2N3906	10	Q001 Q002 Q007 Q008 Q009 Q010 Q012 Q013 Q017 Q018
380 0573 000	. XSTR, J309	2	Q016 Q019
382 0019 000	. IC, 3028B	2	U017 U019
382 0333 000	. IC, MC1596L	2	U016 U018
382 0467 000	. IC, MC10116L	1	U010
382 0555 000	. IC CD4040/MC14040 ESD	1	U014
382 0594 000	. IC TL074ACN ESD	6	U001 U002 U011 U012 U013 U015
382 0690 000	. IC 10131 ESD	1	U022
382 0744 000	. IC, SE5514N ESD	8	U004 U005 U006 U007 U023 U024 U025 U026
382 0746 000	. IC, 79L05AC	1	U027
382 0749 000	. IC NE5532A ESD	1	U003
382 1127 000	. IC ADJ VOLT REG ESD	3	U028 U030 U031
382 1186 000	. IC, NEG., VOLT REG. 1.5A,	1	U029
382 1340 000	. IC, 13600 ESD	1	U009
382 1363 000	. IC, SN75123 ESD	1	U008
382 1427 000	. IC LM360N ESD	2	U020 U021
384 0205 000	. DIODE SILICON 1N914/4148	19	CR001 CR006 CR010 CR011 CR020 CR021 CR022 CR023 CR024 CR025 CR026 CR027 CR028 CR031 CR032 CR033 CR045 CR046 CR047
384 0321 000	. DIODE 5082-2800/1N5711	5	CR012 CR014 CR015 CR018 CR019
384 0357 000	. RECTIFIER 1N4004	15	CR013 CR016 CR029 CR030 CR034 CR035 CR036 CR037 CR038 CR039 CR040 CR041 CR042 CR043 CR044
384 0748 000	. TRANSZORB, BIPOLAR 90V	4	CR003 CR005 CR009 CR017
384 0799 000	. DIODE, BIPOLAR	4	CR002 CR004 CR007 CR008
404 0267 000	. SOCKET, CRYSTAL HC-13/U	1	XY002
404 0673 000	. SOCKET 8 PIN DIP (DL)	1	XU003
404 0674 000	. SOCKET 14 PIN DIP (D-L)	18	XU001 XU002 XU004 XU005 XU006 XU007 XU011 XU012 XU013 XU015 XU016 XU018 XU020 XU021 XU023 XU024 XU025 XU026
404 0675 000	. SOCKET IC 16 CONT	5	XU008 XU009 XU010 XU014 XU022
410 0419 000	. INSULATOR PAD FOR TO-247	4	#U028 #U029 #U030 #U031
444 2993 000	. CRYSTAL, 25.600 KHZ	1	Y001
478 0425 000	. XFMR, RF T2.5-6T	1	T001
494 0419 000	. IND 1000UH 10%	4	L001 L002 L003 L004
500 0755 000	. CAP 270PF 500V 5%	4	C023 C066 C068 C099
500 0759 000	. CAP 100PF 500V 5%	2	C120 C122
500 0807 000	. CAP 18PF 500V 5%	1	C109
500 0810 000	. CAP 24PF 500V 5%	2	C107 C134
500 0813 000	. CAP 33PF 500V 5%	2	C095 C133
500 0829 000	. CAP 180PF 500V 5%	2	C138 C139

500 0832 000 .CAP 360PF 500V 5% 1 ..	C162
500 0833 000 .CAP 390PF 500V 5% 4 ..	C040 C062 C157 C184
500 0835 000 .CAP, MICA 470PF 500V 5% 4 ..	C041 C064 C158 C175
500 0957 000 .CAP 7PF 500V +/-5PF 2 ..	C112 C113
506 0230 000 .CAP .001UF 100VAC 5% 25 .	C001 C002 C003 C004 C010 C018 C020 C028 C029 C034 C046 C047 C054 C055 C060 C142 C148 C165 C174 C194 C196 C198 C199 C201 C202
506 0232 000 .CAP .01UF 100V 5% 4 ..	C035 C059 C154 C182
506 0233 000 .CAP .1UF 63V 5% 5 ..	C096 C100 C104 C105 C108
506 0234 000 .CAP .0022UF 100V 5% 4 ..	C037 C058 C155 C179
506 0237 000 .CAP .0068UF 100V 5% 21 .	C009 C024 C025 C031 C032 C039 C042 C043 C048 C049 C063 C147 C151 C159 C160 C161 C169 C195 C197 C200 C203
516 0085 000 .CAP DISC .03UF 600V 2 ..	C110 C111
516 0453 000 .CAP .1UF 100V 20% X7R 70 .	C005 C006 C007 C008 C011 C014 C015 C016 C022 C026 C036 C038 C050 C051 C056 C057 C065 C067 C069 C070 C071 C072 C073 C074 C075 C076 C084 C090 C092 C094 C097 C098 C101 C102 C103 C114 C115 C117 C118 C119 C121 C123 C124 C125 C126 C127 C128 C129 C130 C131 C132 C135 C145 C146 C152 C153 C167 C170 C176 C177 C180 C183 C204 C205 C206 C207 C208 C209 C210 C212
516 0509 000 .CAP 2.2UF 50V 20% 1 ..	C093
516 0530 000 .CAP .01UF 10% 100V X7R 7 ..	C017 C078 C080 C081 C085 C086 C087
516 0936 000 .CAP 0.018UF 10% 50V 21 .	C013 C019 C021 C027 C030 C033 C044 C045 C052 C053 C061 C143 C144 C149 C150 C156 C164 C166 C172 C173 C181
518 0102 000 .CAP VAR 5-25PF 100V 1 ..	C136
518 0105 000 .CAP VAR 2.5-9PF 100V 1 ..	C106
522 0541 000 .CAP 220UF 50V 20% 2 ..	C077 C079
522 0548 000 .CAP 10UF 50V ELECTROLYTIC .. 5 ..	C137 C185 C188 C190 C211
522 0550 000 .CAP 100U 25V ELECTROLYTIC .. 6 ..	C012 C083 C091 C187 C189 C192
522 0565 000 .CAP 2200UF 63V 20% 2 ..	C140 C141
522 0568 000 .CAPACITOR 6800 MFD 50V 3 ..	C186 C191 C193
540 0984 000 .RES 1.0M OHM 1/4W 5% 1 ..	R244
540 0992 000 .RES 2.2M OHM 1/4W 5% 1 ..	R174
548 0241 000 .RES 6.04K OHM 1/4W 1% 4 ..	R057 R088 R255 R279
548 0467 000 .RES 21.5K OHM 1/4W 1% 2 ..	R021 R022
548 0473 000 .RES 10 OHM 1/4W 1% 2 ..	R042 R126
548 0534 000 .RES 1M OHM 1/4W 1% 1 ..	R047
548 1044 000 .RES 511K OHM 1/4W 1% 4 ..	R176 R177 R178 R179
548 1093 000 .RES 5.11K OHM 1/4W 1% 4 ..	R026 R028 R157 R166
548 1094 000 .RES 1K OHM 1/4W 1% 24 .	R013 R025 R027 R029 R031 R033 R041 R070 R086 R095 R096 R104 R109 R119 R123 R131 R133 R136 R175 R202 R204 R240 R262 R272

548 1098 000	.RES 100 OHM 1/4W 1% 15 ..	R020 R024 R040 R094 R111 R113 R135 R148 R160 R207 R209 R243 R245 R246 R247
548 1100 000	.RES 511 OHM 1/4W 1% 2 ...	R188 R190
548 1101 000	.RES 681 OHM 1/4W 1% 11 ..	R019 R037 R081 R085 R097 R114 R130 R149 R150 R155 R156
548 1102 000	.RES 1.5K OHM 1/4W 1% 2 ...	R129 R132
548 1106 000	.RES 365 OHM 1/4W 1% 1 ...	R285
548 1110 000	.RES 51.1 OHM 1/4W 1% 1 ...	R142
548 1114 000	.RES 499 OHM 1/4W 1% 2 ...	R106 R107
548 1115 000	.RES 332 OHM 1/4W 1% 4 ...	R162 R237 R239 R303
548 1116 000	.RES 2.74K OHM 1/4W 1% 2 ...	R145 R147
548 1119 000	.RES 18.2K OHM 1/4W 1% 2 ...	R036 R039
548 1120 000	.RES 2K OHM 1/4W 1% 7 ...	R034 R035 R184 R218 R273 R275 R281
548 1121 000	.RES 10K OHM 1/4W 1% 25 ..	R003 R004 R005 R006 R007 R008 R009 R010 R011 R012 R014 R015 R016 R023 R146 R154 R169 R171 R172 R186 R193 R194 R198 R238 R248
548 1123 000	.RES 200 OHM 1/4W 1% 1 ...	R276
548 1125 000	.RES 221 OHM 1/4W 1% 4 ...	R196 R199 R241 R242
548 1130 000	.RES 267 OHM 1/4W 1% 4 ...	R093 R098 R099 R115
548 1134 000	.RES 30.1K OHM 1/4W 1% 2 ...	R105 R108
548 1137 000	.RES 51.1K OHM 1/4W 1% 2 ...	R030 R117
548 1139 000	.RES 20K OHM 1/4W 1% 2 ...	R183 R217
548 1140 000	.RES 15K OHM 1/4W 1% 3 ...	R103 R181 R182
548 1146 000	.RES 475 OHM 1/4W 1% 5 ...	R062 R112 R201 R210 R213
548 1147 000	.RES 4.75K OHM 1/4W 1% 2 ...	R151 R173
548 1148 000	.RES 100K OHM 1/4W 1% 2 ...	R102 R144
548 1156 000	.RES 825 OHM 1/4W 1% 2 ...	R203 R208
548 1157 000	.RES 3.01K OHM 1/4W 1% 1 ...	R038
548 1161 000	.RES 750 OHM 1/4W 1% 2 ...	R122 R125
548 1171 000	.RES 3.32K OHM 1/4W 1% 3 ...	R134 R205 R215
548 1225 000	.RES 9.53K OHM 1/4W 1% 4 ...	R061 R066 R074 R164
548 1244 000	.RES 619 OHM 1/4W 1% 3 ...	R100 R101 R110
548 1263 000	.RES 8.25K OHM 1/4W 1% 1 ...	R191
548 1275 000	.RES 56.2 OHM 1/4W 1% 6 ...	R120 R121 R222 R223 R226 R227
548 1279 000	.RES 301 OHM 1/4W 1% 18 ..	R017 R018 R058 R059 R064 R089 R091 R092 R220 R221 R228 R230 R257 R258 R280 R282 R294 R299
548 1289 000	.RES 1.21K OHM 1/4W 1% 40 ..	R043 R044 R045 R046 R048 R049 R051 R053 R056 R067 R072 R076 R077 R078 R079 R080 R083 R084 R138 R141 R216 R219 R249 R250 R251 R261 R263 R268 R269 R270 R288 R289 R290 R291 R292 R293 R295 R296 R297 R298
548 1300 000	.RES 221K OHM 1/4W 1% 1 ...	R170
548 1346 000	.RES 2.26K OHM 1/4W 1% 1 ...	R286
548 1381 000	.RES 1.33K OHM 1/4W 1% 2 ...	R283 R284
548 1512 000	.RES 4.53K OHM 1/4W 1% 1 ...	R161
548 1524 000	.RES 22.1K OHM 1/4W 1% 2 ...	R195 R200
548 1537 000	.RES 4.22K OHM 1/4W 1% 2 ...	R206 R211
548 1541 000	.RES 825K OHM 1/4W 1% 2 ...	R158 R167

548 1608 000	. RES 33.2 OHM 1/4W 1% 1 ..	R214
548 2000 000	. RES 22.1 OHM 1/4W 1% 10 .	R116 R118 R224 R225 R229 R231 R232 R233 R234 R235
548 2065 000	. RES 3.57K OHM 1/4W 1% 1 ..	R212
548 2066 000	. RES 4.99K OHM 1/4W 1% 2 ..	R054 R152
548 2078 000	. RES 2.67K OHM 1/4W 1% 5 ..	R060 R090 R187 R256 R277
548 2110 000	. RES 48.7K OHM 1/4W 1% 1 ..	R236
548 2121 000	. RES 121 OHM 1/4W 1% 4 ..	R287 R300 R301 R302
548 2161 000	. RES 392K OHM 1/4W 1% 2 ..	R159 R168
548 2162 000	. RES 39.2K OHM 1/4W 1% 1 ..	R180
548 2164 000	. RES 604 OHM 1/4W 1% 14 .	R001 R002 R050 R052 R055 R068 R071 R073 R252 R253 R254 R260 R264 R265
550 0858 000	. POT 5K OHM .5W 10% 2 ..	R153 R278
550 0947 000	. POT 1K OHM 1/2W 10% 5 ..	R065 R143 R163 R165 R189
550 0949 000	. POT 100K OHM 1/2W 10% 1 ..	R124
550 0957 000	. POT 500 OHM 1/2 W 10% 4 ..	R032 R139 R197 R267
550 0959 000	. POT 20K OHM 1/2 W 10% 1 ..	R185
550 0961 000	. POT 50K OHM 1/2W 10% 1 ..	R192
550 0967 000	. POT 10K 1/2W/.3W 10% 4 ..	R075 R087 R266 R274
550 1035 000	. POT 5K OHM 1/2W 10% 5 ..	R063 R069 R082 R259 R271
574 0497 000	. RELAY 2PDT 24VDC 2AMP 2 ..	K001 K002
600 0579 000	. SW, ROTARY 4PDT 4 ..	S003 S004 S005 S006
604 0748 000	. SW, TGL 2 POS 2 ..	S001 S007
604 1148 000	. SW, VERTICAL ROCKER DPDT	.. 1 ..	S002
610 0747 000	. HEADER ASSY 26 PIN 1 ..	P006
610 0900 000	. HEADER 3 CKT STRAIGHT 6 ..	JP001 JP002 JP003 JP004 JP005 JP006
610 0981 000	. HDR 20C 2ROW VERTICAL 1 ..	J008
610 1110 000	. HDR 8C 2R STRT UNPOL 4 ..	JP007 JP008 JP009 JP010
610 1145 000	. HDR, 6PIN, 1ROW, STRT,POL 1 ..	J001
610 1179 000	. HDR 9C 1 ROW 90 DEG 1 ..	J002
610 1180 000	. HDR 4C 1 ROW 90 DEG 1 ..	J004
612 1184 000	. JUMPER .1" CENTERS 10 .	XJP001 XJP002 XJP003 XJP004 XJP005 XJP006 XJP007 XJP008 XJP009 XJP010
612 1268 000	. RECEPTACLE RT ANG BNC 3 ..	J003 J005 J007
612 1308 000	. RECEPTACLE 26 PIN VER PC	... 1 ..	J006
839 8138 002	. SCHEM, STEREO GENERATOR	. 0 ..	
843 5429 002	. PWB, STEREO GENERATOR 1 ..	
917 2374 002	. REG HEAT SINK 1 ..	#U028 #U029 #U030 #U031
917 2374 004	. RF CHOKE 4 ..	RFC001 RFC002 RFC003 RFC004
999 2771 001	. HARDWARE LIST, STEREO GEN	. 1 ..	

Table 7-4. DISPLAY PWB - 992 8846 001

HARRIS P/N	DESCRIPTION	QTY/UM	REF. SYMBOLS/EXPLANATIONS
380 0189 000	. XSTR, NPN 2N3904	4 ..	Q001 Q002 Q011 Q012
380 0726 000	. XSTR, 2N7000 ESD	8 ..	Q005 Q006 Q007 Q008 Q009 Q010 Q015 Q016
382 0594 000	. IC TL074ACN ESD	2 ..	U002 U003
382 0648 000	. IC, LM339A	1 ..	U004
382 1008 000	. IC, LM3914N	6 ..	U007 U008 U009 U012 U013 U014
382 1127 000	. IC ADJ VOLT REG ESD	2 ..	U001 U010
384 0321 000	. DIODE 5082-2800/1N5711	10 .	CR001 CR002 CR003 CR004 CR005 CR006 CR007 CR008 CR009 CR010
384 0847 000	. LED 10 SEG BARGRAPH, GRN	.. 4 ..	DS005 DS006 DS008 DS009

384 0849 000	.LED LIGHT BAR, GREEN	4	DS001 DS002 DS003 DS004
384 0893 000	.LED 10 SEG BARGRAPH, RED	2	DS007 DS010
404 0674 000	.SOCKET 14 PIN DIP (D-L)	3	XU002 XU003 XU004
404 0747 000	.SOCKET STRIP 16 POS	1	.
404 0766 000	.SOCKET 18 PIN DIP (DL)	6	XU007 XU008 XU009 XU012 XU013 XU014
404 0827 000	.SOCKET, DIP20, LO PROFILE	6	XDS005 XDS006 XDS007 XDS008 XDS009 XDS010
516 0453 000	.CAP .1UF 100V 20% X7R	14	C001 C002 C003 C005 C006 C008 C012 C013 C014 C016 C027 C028 C029 C030
516 0530 000	.CAP .01UF 10% 100V X7R	2	C004 C015
516 0765 000	.CAP 10PF 5% 100V C0G	8	C010 C011 C018 C019 C021 C025 C032 C033
522 0573 000	.CAP 47UF 50V 20%	2	C026 C031
522 0578 000	.CAP 1UF 20% 50 VDC	2	C007 C017
522 0580 000	.CAP 100UF 20% .35V NP	2	C009 C020
540 0896 000	.RES 220.0 OHM 1/4W 5%	2	R027 R028
540 1001 000	.RES 5.1M OHM 1/4W 5%	2	R011 R054
540 1375 000	.RES NETWORK 1000 OHM 2%	6	R072 R073 R074 R075 R076 R077
548 0473 000	.RES 10 OHM 1/4W 1%	2	R009 R052
548 1093 000	.RES 5.11K OHM 1/4W 1%	2	R010 R053
548 1098 000	.RES 100 OHM 1/4W 1%	1	R034
548 1102 000	.RES 1.5K OHM 1/4W 1%	2	R037 R081
548 1114 000	.RES 499 OHM 1/4W 1%	6	R002 R003 R004 R045 R046 R047
548 1115 000	.RES 332 OHM 1/4W 1%	2	R086 R087
548 1121 000	.RES 10K OHM 1/4W 1%	6	R012 R025 R026 R032 R036 R070
548 1130 000	.RES 267 OHM 1/4W 1%	2	R008 R051
548 1139 000	.RES 20K OHM 1/4W 1%	2	R013 R019
548 1148 000	.RES 100K OHM 1/4W 1%	7	R014 R015 R016 R033 R057 R058 R059
548 1170 000	.RES 200K OHM 1/4W 1%	3	R023 R030 R066
548 1279 000	.RES 301 OHM 1/4W 1%	4	R082 R083 R084 R085
548 1289 000	.RES 1.21K OHM 1/4W 1%	6	R001 R005 R006 R044 R048 R049
548 1476 000	.RES 210K OHM 1/4W 1%	4	R020 R022 R063 R065
548 1537 000	.RES 4.22K OHM 1/4W 1%	1	R035
548 2069 000	.RES 49.9K OHM 1/4W 1%	2	R017 R018
548 2117 000	.RES 11K OHM 1/4W 1%	2	R021 R064
548 2121 000	.RES 121 OHM 1/4W 1%	2	R007 R050
548 2168 000	.RES 9.76K OHM 1/4W 1%	1	R031
550 0970 000	.POT 1K OHM 1/2W 10%	2	R024 R067
610 0933 000	.JUMPER, PWB TEST POINT	1	TP001
610 0981 000	.HDR 20C 2ROW VERTICAL	1	J001
839 8138 003	.SCHEM, DISPLAY	0	
843 5429 003	.PWB, DISPLAY	1	
999 2770 001	.HARDWARE LIST, DISPLAY	1	

*** END OF REPORT ***

