



Guitar Wiring Schematic #3
(Tone Switch & Standby Switch)
June 2005

For Models:
G6119-1962
G6119-1962HT
G6120DC
G6122SP
G6122-1962
G6193T
G6196T
G6072
G7594

