

SERVICE MANUAL

DAIHATSU

TYPE A4Q, A4R Series

Automatic Transmission
(Electrically-Controlled)

FOREWORD

This service manual describes the disassembling, checks and assembling procedures for the unit itself of the FF, four-speed, electronically-controlled automatic transmission. As for the removal/installation procedures from and to the vehicle and the check procedure for the control system, refer to the Chassis Volume.

Furthermore, in respect to the illustrations, they are for Type A4R-D1, unless there are problems in describing their operations.

A4Q-D1: J-Type AT

A4R-D1: S-Type AT

Published in May, 2000

DAIHATSU MOTOR CO., LTD.

NO.9738

©2000 DAIHATSU MOTOR CO., LTD.

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Daihatsu Motor Co., Ltd.

DAIHATSU
TYPE A4Q, A4R Series
Automatic Transmission
(Electrically-Controlled)

**Service
manual**

SECTION INDEX

SECTION NAME	SECTION
GENERAL INFORMATION	GI
AUTOMATIC TRANSMISSION	AT