


| | | |
|---|---------------------|--------------------------------|
| Last Modified: 9-29-2009 | 5.6 A | From: 200501 |
| Model Year: 2006 | Model: Hiace | Doc ID: RM000001234000X |
| Title: 5L-E ENGINE MECHANICAL: ENGINE FRONT OIL SEAL: INSTALLATION (2006-2010 Hiace) | | |

INSTALLATION

1. INSTALL TIMING GEAR CASE OR TIMING CHAIN CASE OIL SEAL

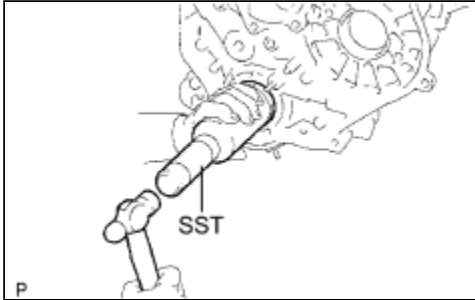


(a) Apply MP grease to a new oil seal lip.

(b) Using SST and a hammer, tap in the oil seal to the depth of 0.5 mm (0.020 in.) from the oil pump case edge.

SST: 09214-60010

2. INSTALL CRANKSHAFT TIMING PULLEY

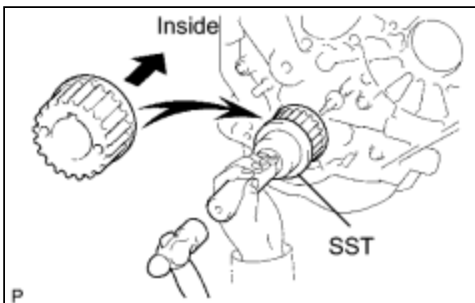

(a) Align the pulley set key with the key groove of the timing pulley.

(b) Using SST and a hammer, tap in the timing pulley with the flange side facing inward.

SST: 09223-46011

3. INSTALL TIMING BELT

