

# B & K MODEL 606

## SUPPLEMENTAL TESTING INFORMATION

TUBE TYPE	Heater	A	B	C	Socket	TUBE TYPE	Heater	A	B	C	Socket	TUBE TYPE	Heater	A	B	C	Socket	TUBE TYPE	Heater	A	B	C	Socket	
3DJ3	3	*95	9	10	3	8MD8	8	35	6	6	10	10Z10	10	30	6	1	9	22KV6	22	28	1	2	10	
*No short test.																		25GE5	25	*27	3	1	9	
*Tube good if it reads 20 or more.																		*Normally shows short position 4-10.						
4MK8	4	34	6	7	2	8MU8	8	31	6	2	2	12CT3	12	32	2	6	2	*Normally shows short position 3-6-7-8.						
5MF8	5	35	7	7	9							12HB25	12	*33	2	1	10							
		34	7	10	9	9AH9	9	37	5	2	9	12HU8	12	29	6	2	2	25R-K19	25	30	2	9	2	
6BW3	6	28	4	10	9			30	5	6	9		29	6	6	2		30JZ6	30	*27	4	5	9	
6DN3	6	31	2	7	10	9HS6	9	26	6	1	1	15MF8	15	35	7	7	9	*Some tubes may show short position 1-9.						
6JB5	6	*35	10	2	9	9MN8	9	33	8	8	9		34	7	10	9	31LQ6	31	*29	7	2	10		
*Normally shows short position 1-3-4-10.								33	8	10	9	*Normally shows short position 1-7.												
6M-L4	6	*33	2	6	1	10AF11	10	31	6	1	9	17JF6	17	*26	2	6	10	*Normally shows short position 1-7.						
*Normally shows short position 1-7.								31	6	6	9	*Normally shows short position 1-7.												
6MU8	6	31	6	2	2			35	6	3	9	17Y9	17	30	6	1	13	32A8	32	33	6	3	2	
		31	6	9	2	10T10	10	33	6	3	9		30	6	8	13		50GY7	50	*57	8	1	9	
6R-A6	6	35	6	7	7			27	6	8	9	19FX5	19	32	2	5	1	*Normally shows short position 9-10.						
												20LF6	20	*31	5	9	9							

497-013-0870 RR PRESS

◆Use TC-80 Adapter.

Normal Shorts refer to position of "C" Switch.