

## Section 8

# Schematic Diagrams

| FIGURE | TABLE OF CONTENTS<br>TITLE                         | PAGE |
|--------|--|------|
| 8-1    | 8860A PCB Locations .....                          | 8-2  |
| 8-2    | 8860A PCB Interconnect Diagram .....               | 8-3  |
| 8-3    | A1 Main PCB Assembly .....                         | 8-4  |
| 8-4    | A2 Display PCB Assembly .....                      | 8-6  |
| 8-5    | A3 Controller PCB Assembly .....                   | 8-8  |
| 8-6    | A4 AC/DC Scaling PCB Assembly .....                | 8-10 |
|        | RMS-to-DC Converter .....                          | 8-10 |
| 8-7    | A5 A/D and Ohms Converters PCB Assembly .....      | 8-14 |
|        | Calculating Controller, Option -004 .....          | 8-18 |
| 8-8    | Calculator/Printer PCB Assembly .....              | 8-20 |
| 8-9    | Rear Interface PCB Assembly .....                  | 8-21 |
| 8-10   | Memory Cartridge PCB Assembly .....                | 8-22 |
| 8-11   | Control Keyboard PCB Assembly .....                | 8-23 |
|        | IEEE-488 Interface, Option -005 .....              | 8-24 |
| 8-12   | IEEE-488 Interface PCB Assembly .....              | 8-25 |
| 8-13   | Rear Interconnect PCB Assembly .....               | 8-25 |
| 8-14   | Rear Input PCB Assembly, Option -006 .....         | 8-26 |
| 8-15   | External Reference PCB Assembly, Option -007 ..... | 8-26 |

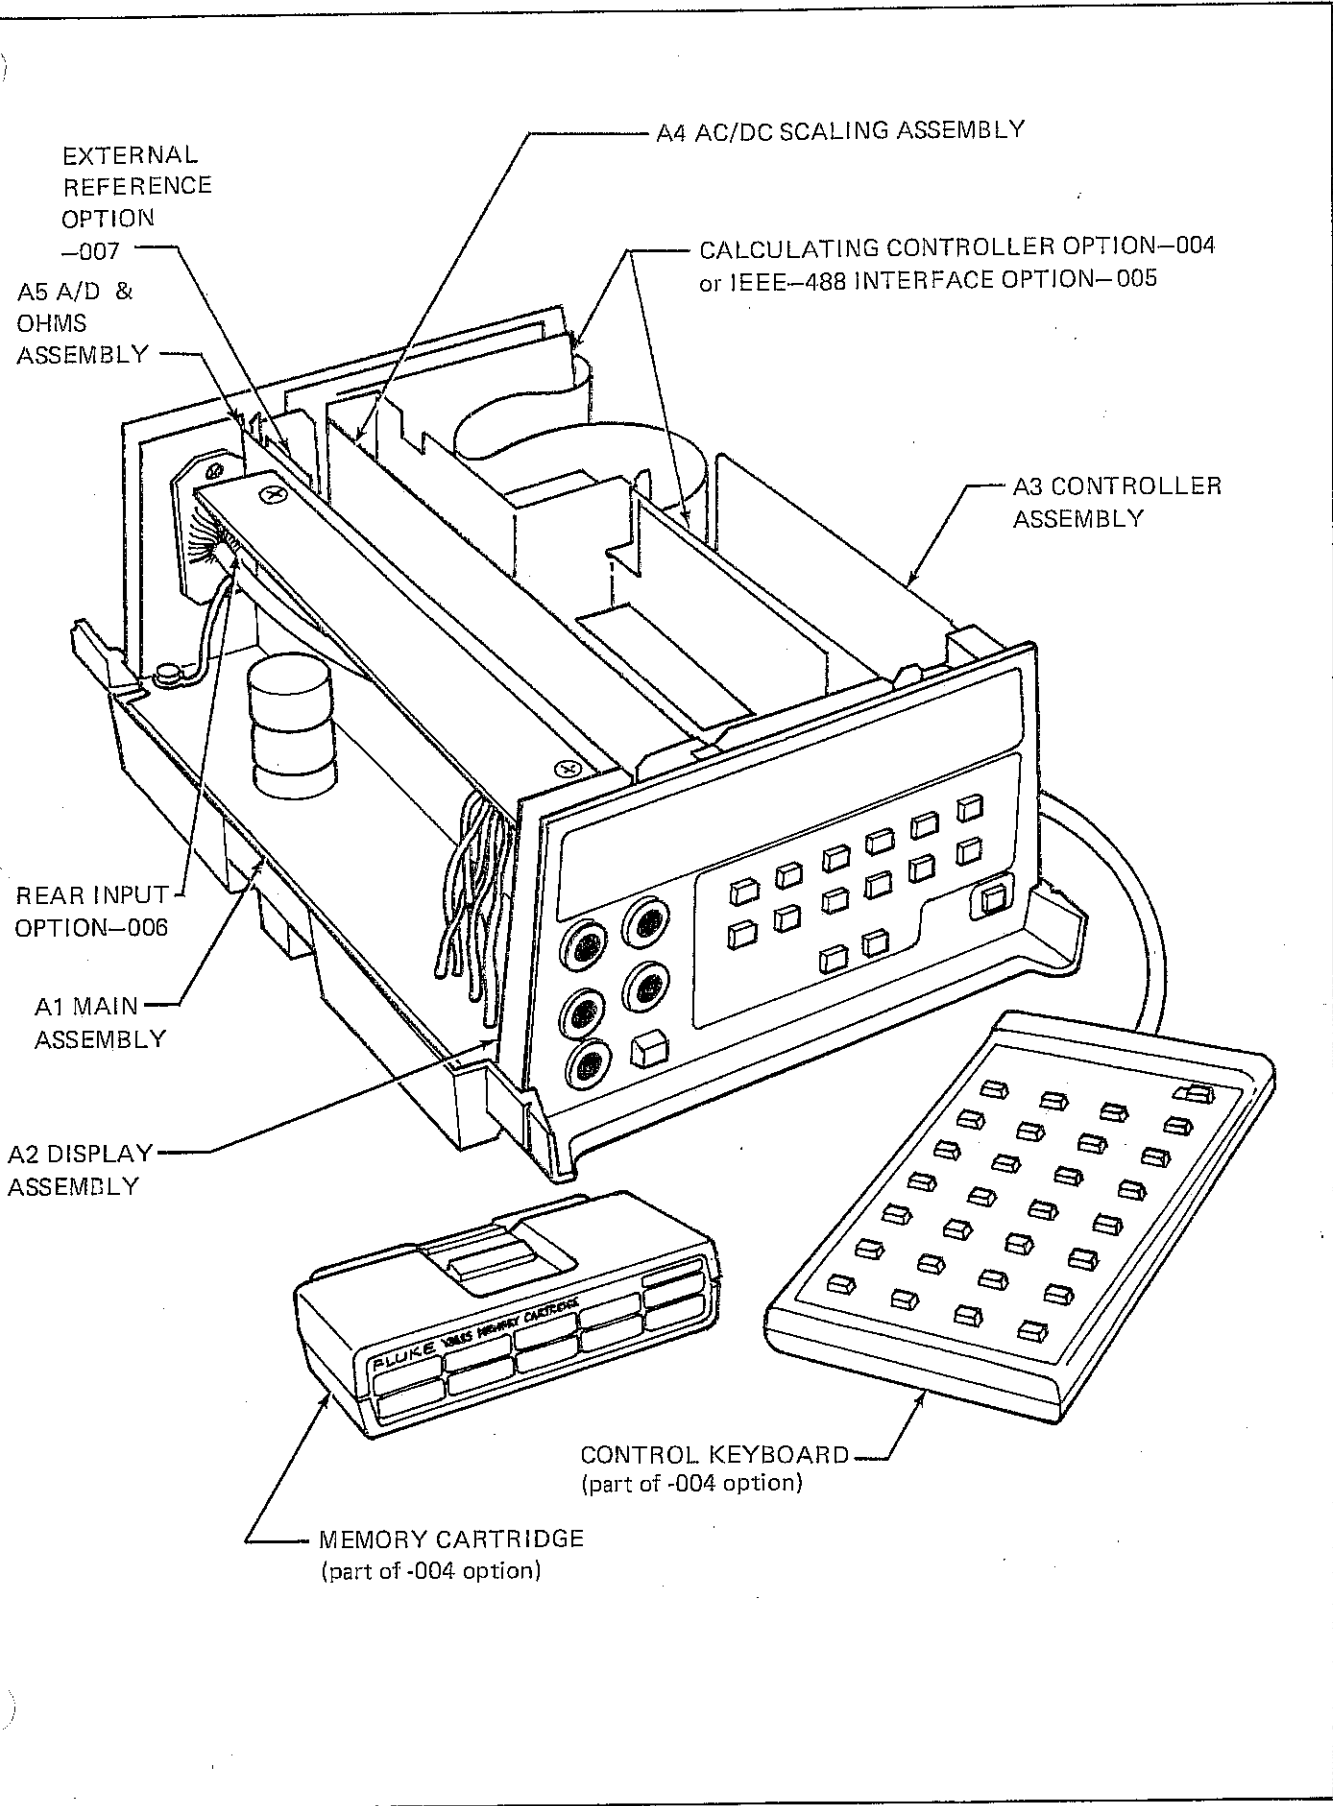


Figure 8-1. 8860A PCB Locations

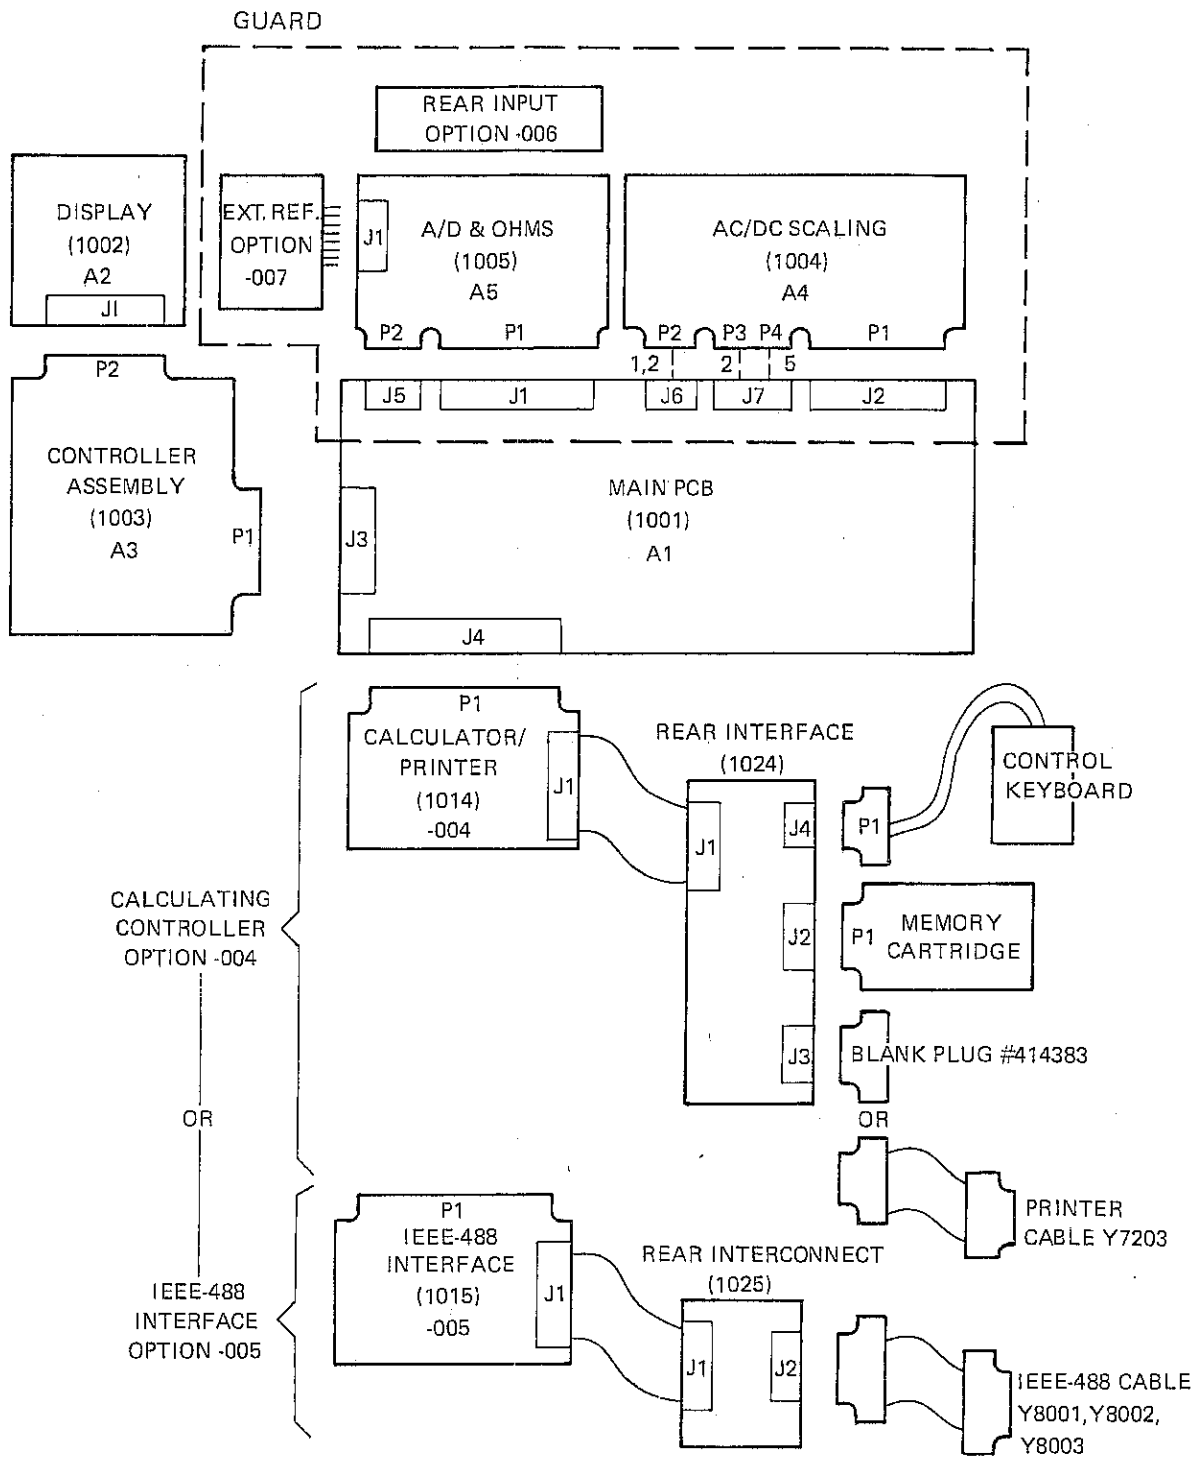


Figure 8-2. 8860A PCB Interconnect Diagram