
OCTANE™ Air Intake Vent Maintenance Instructions

This flier provides information about cleaning the air intake vents on the OCTANE workstation.

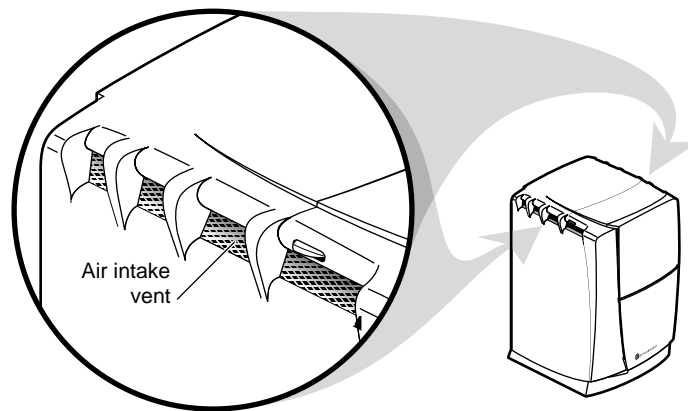


Figure 1 Cleaning the Air Intake Vents on the OCTANE Workstation

Over time, dust can collect on the air intake vents at the top of the OCTANE workstation. To allow for proper cooling, inspect these vents every three to six months.

If the honeycomb openings are obscured by dust, carefully vacuum the dust off the honeycomb of the vent.

- It is preferable to power off the system before vacuuming, but not mandatory.
- You can vacuum the honeycomb of the air vents with the plastic cover in place.
- Be careful not to damage the honeycomb with the nozzle of the vacuum cleaner.

Caution: Do not blow or sweep the dust off the honeycomb. Large amounts of dust could enter the system.

©1998, Silicon Graphics, Inc. All rights reserved.

Silicon Graphics and the Silicon Graphics logo are registered trademarks, and OCTANE is a trademark, of Silicon Graphics, Inc.

