
About the External SCSI Device

Before connecting this device to your workstation, you must set its SCSI address. Follow the instructions on installing peripherals in your workstation's Owner's Guide to determine what SCSI address to assign and how to connect the device. Refer also to the appropriate section for your workstation below.

To locate the SCSI address push-button switch or dial, look on the rear or bottom of the device. Use a pencil tip or small screwdriver to set the dial or to push the buttons on the switch.

Indy™, Indigo²™, and Indigo² IMPACT™ Workstations

For complete information on how to determine and set the SCSI address, how to install the device, and cable length restrictions, see the instructions in the section on installing external SCSI devices in the printed owner's guide for your workstation. Some owner's guides are online. To locate the online books, see "Locating the Online Books" below.

If this is the only SCSI device attached to the workstation, use the high density 50-pin to Centronics® 50-pin Fast SCSI 2 cable and Centronics active terminator that come with the external device. Using other types of cables or terminators can result in data loss.

For the second and all other devices on a daisy chain, use a Centronics 50-pin to Centronics 50-pin half-meter cable. Attach the Centronics active terminator shipped with this device to the *last* SCSI device on the daisy-chain.

O2™ and OCTANE™ Workstations

For complete information on your workstation's SCSI buses, how to determine and set the SCSI address, how to install the device, cable length restrictions, and which cables to use, see the instructions in the section on installing external SCSI devices in the printed

Owner's Guide for your workstation. The owner's guides are also online. To locate the online books, see "Locating the Online Books" below.

IRIS Indigo® Workstations

If this is the only SCSI device attached to the workstation, use a Centronics 50-pin to Centronics 50-pin fast SCSI 2 cable and the Centronics active terminator shipped with the device. Using other types of cables or terminators can result in data loss.

For the second and all other devices on a daisy chain, use a Centronics 50-pin to Centronics 50-pin half-meter cable. Attach the Centronics active terminator shipped with this device to the *last* SCSI device on the daisy chain.

Locating Online Books

Most owner's guides are available in the Technical Publications Library on the Internet at the following location:

<http://www.sgi.com/Technology/TechPubs/>

Once you're in the Technical Publication Library, choose Catalogs > Hardware Catalog > and look under "Owner's Guides."

If you have an O2 workstation, the information is also available in the IRIS InSight Library on your system disk. From the Toolchest choose Help > Online Books > SGI EndUser > *O2 Hardware Reference Guide*.

© 1997, Silicon Graphics, Inc. All rights reserved.

Silicon Graphics and IRIS Indigo are registered trademarks and Indy, Indigo, Indigo², Indigo² IMPACT, O2, and OCTANE are trademarks of Silicon Graphics, Inc. Centronics is a registered trademark of Centronics Data Computer Corporation.