



# HOW TO PUT YOUR YAESU FT707 ON 11 METERS

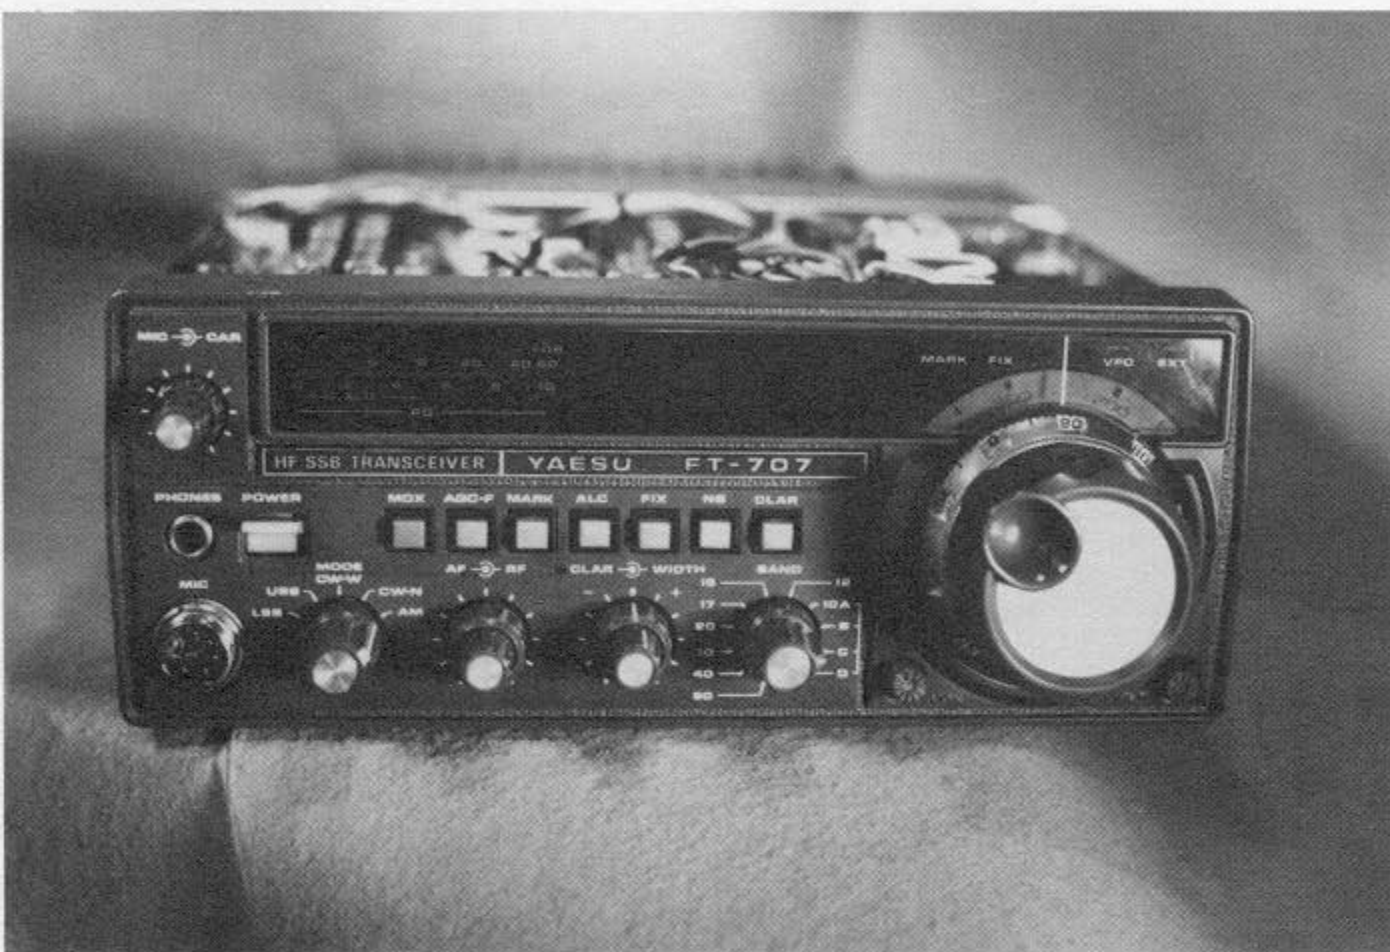


"WHAT A BEAUTY"

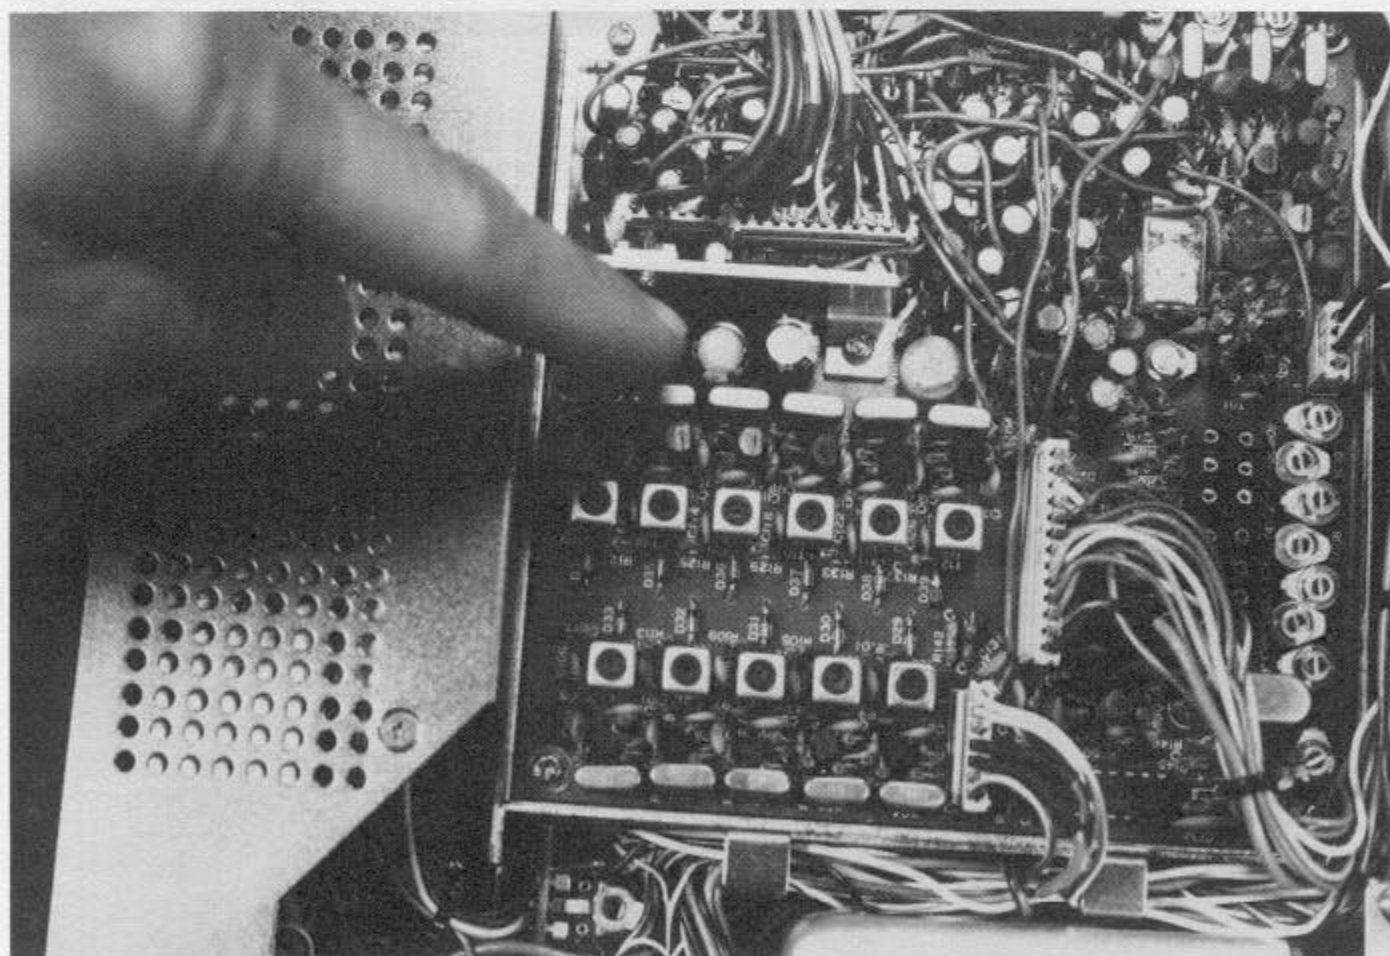

Crystal location AF Board

## FT707 (CONT)

1. Remove X9 and X10 crystals, as shown in picture below.

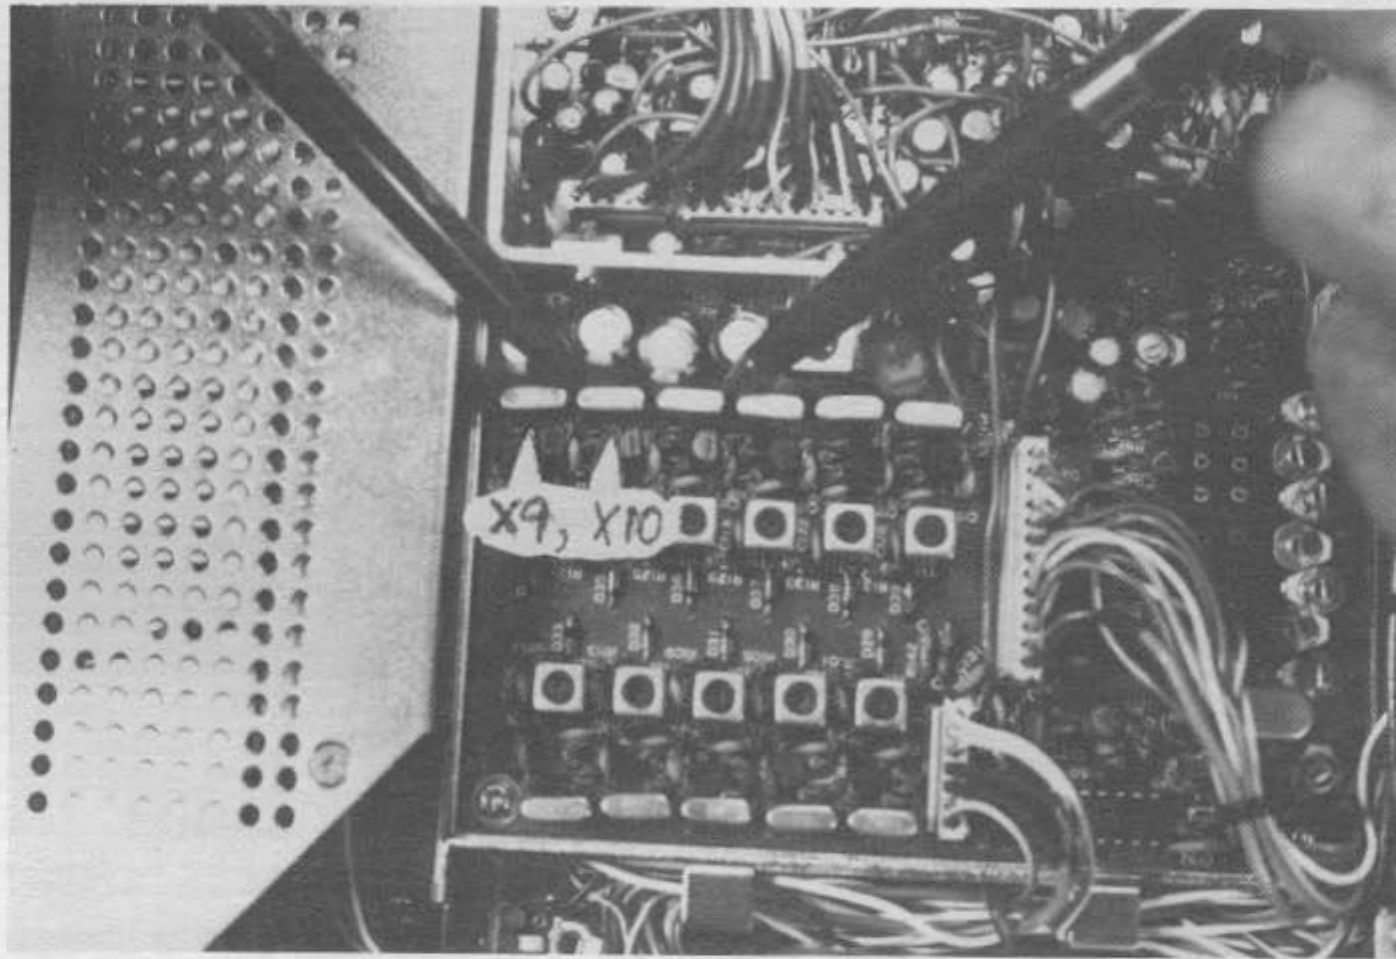

AF board

2. Replace with a 27 and 27.5 crystal, respectively. These are available from YAESU.


### CRYSTAL SPECIFICATIONS

Holder	HC-25/U
Load Capacitance	30pf
Effective Resistance	25 ohm
Drive Level	5mW




## FT707 (CONT)

3. Locate T40, and T41 coil (See picture below). Using an RF Wattmeter, peak T40, and T41, for maximum output.

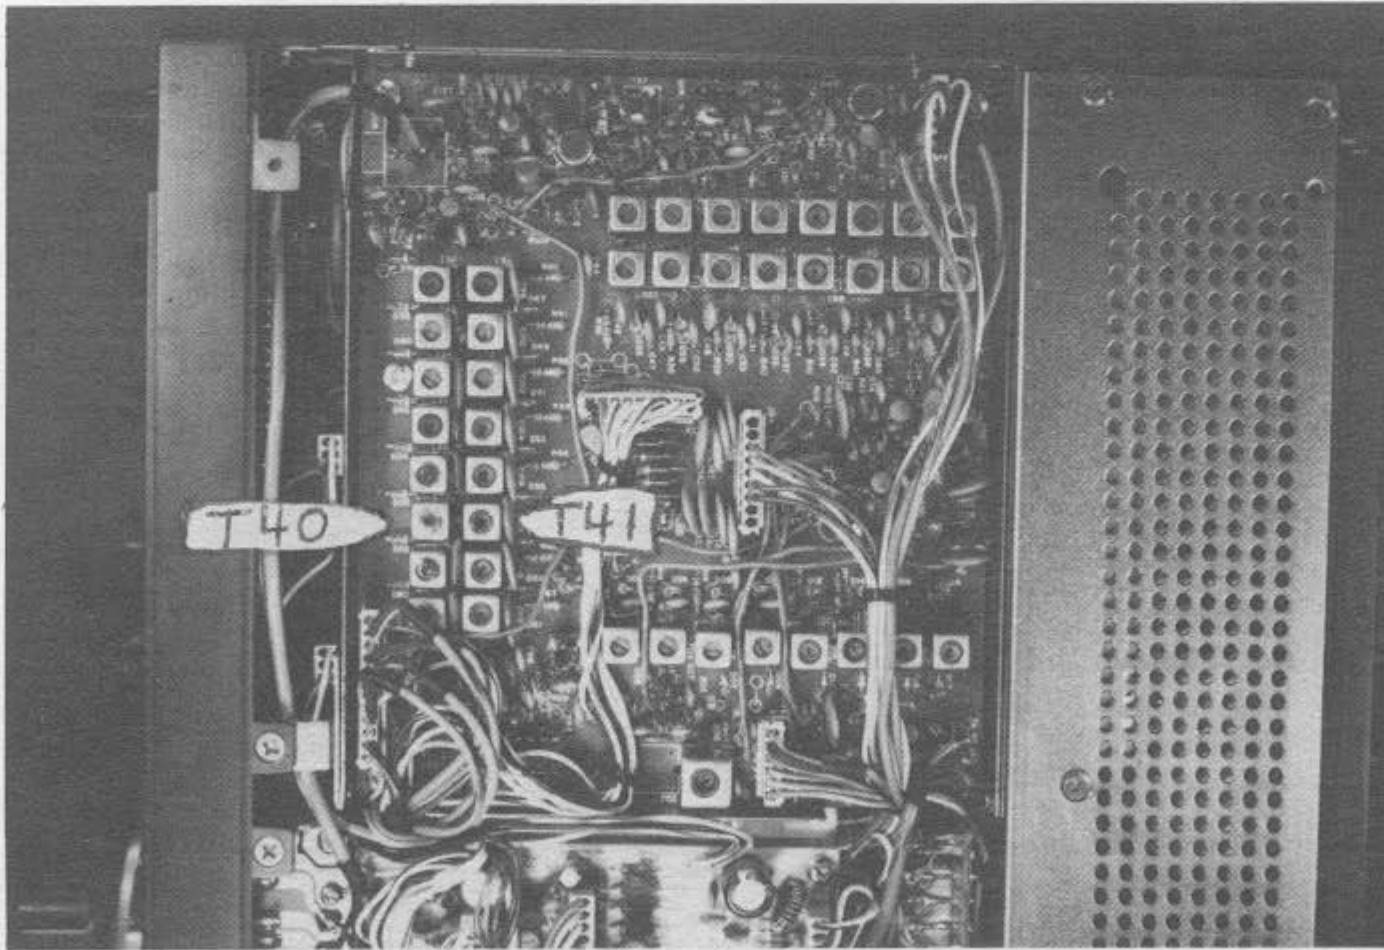

Rf board


4. Adjust T07 on 10A; T08 on 10B. Use RFVM at J06 #2 AF indicator, and peak for maximum reading (See picture below).

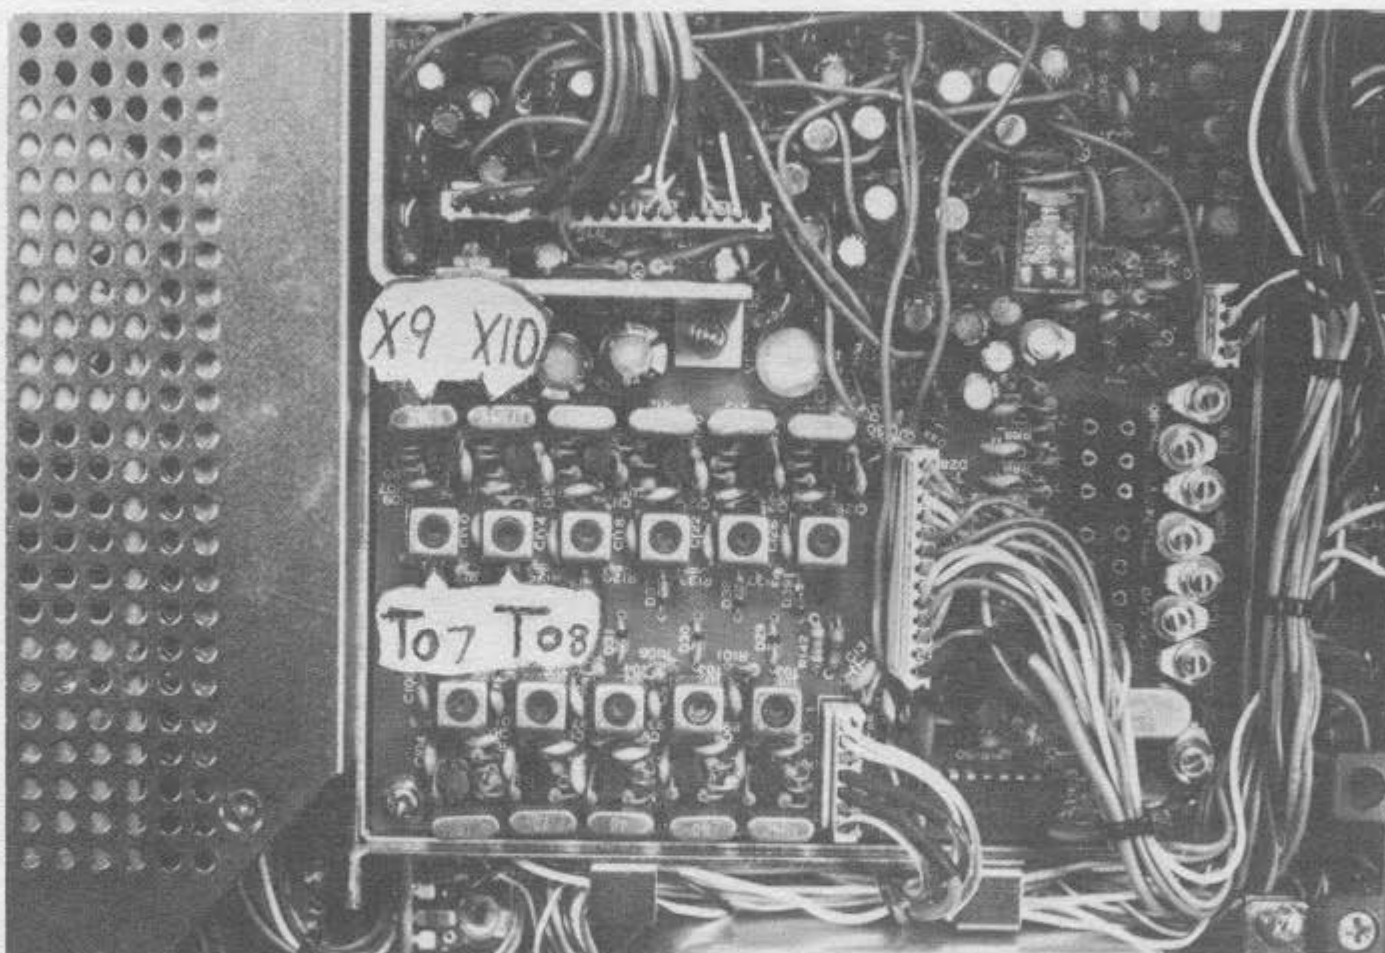





## FT707 (CONT)

5. Adjust T08 for maximum output on RF Wattmeter.

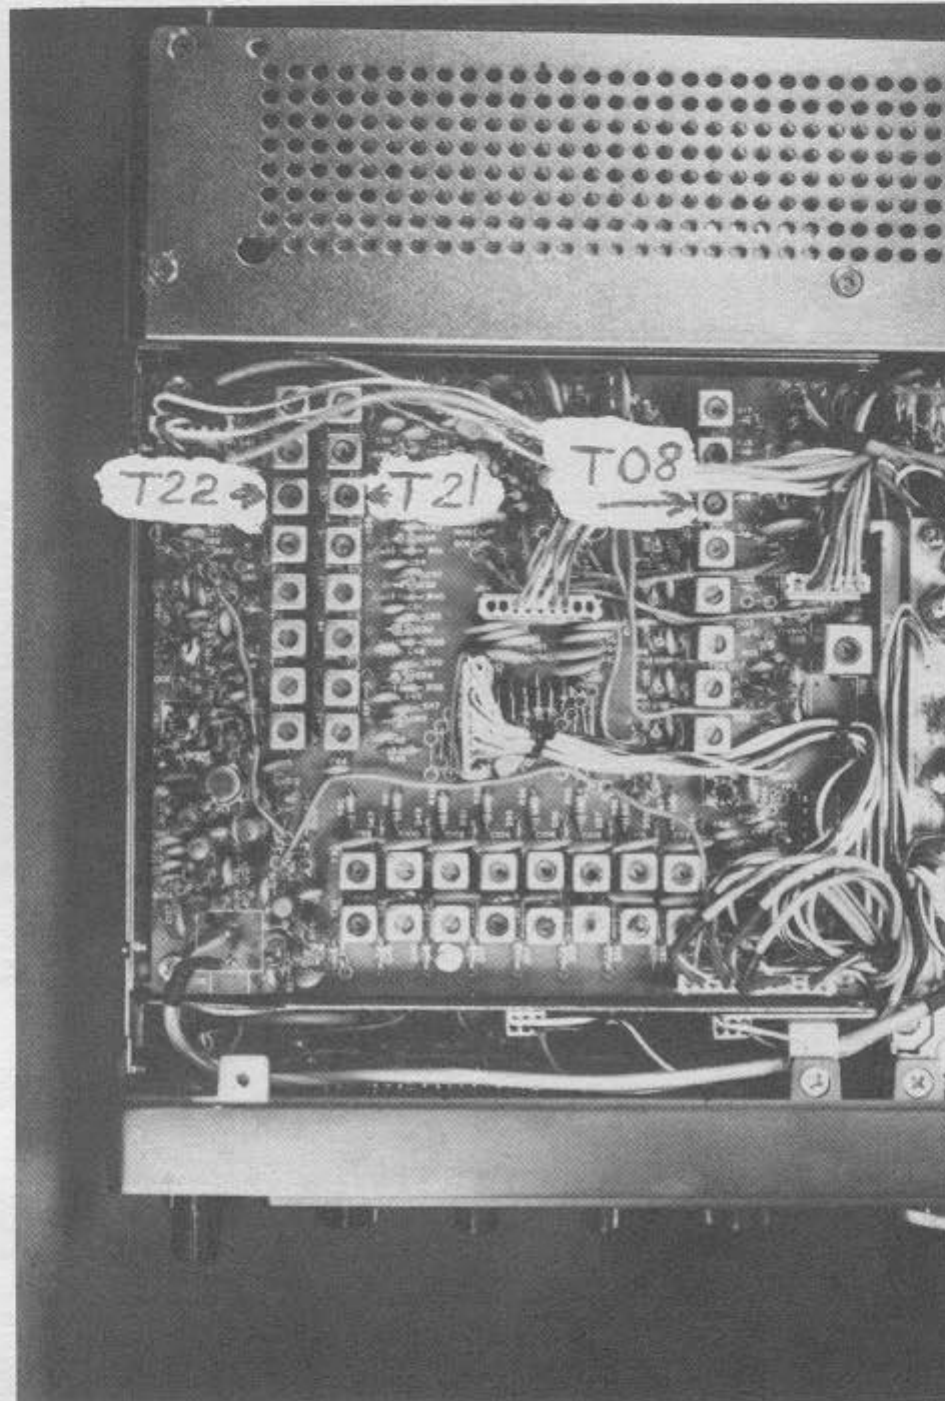


RF board

6. Adjust T21 and T22, for maximum output on RF Wattmeter on 10A and 10B respectively.

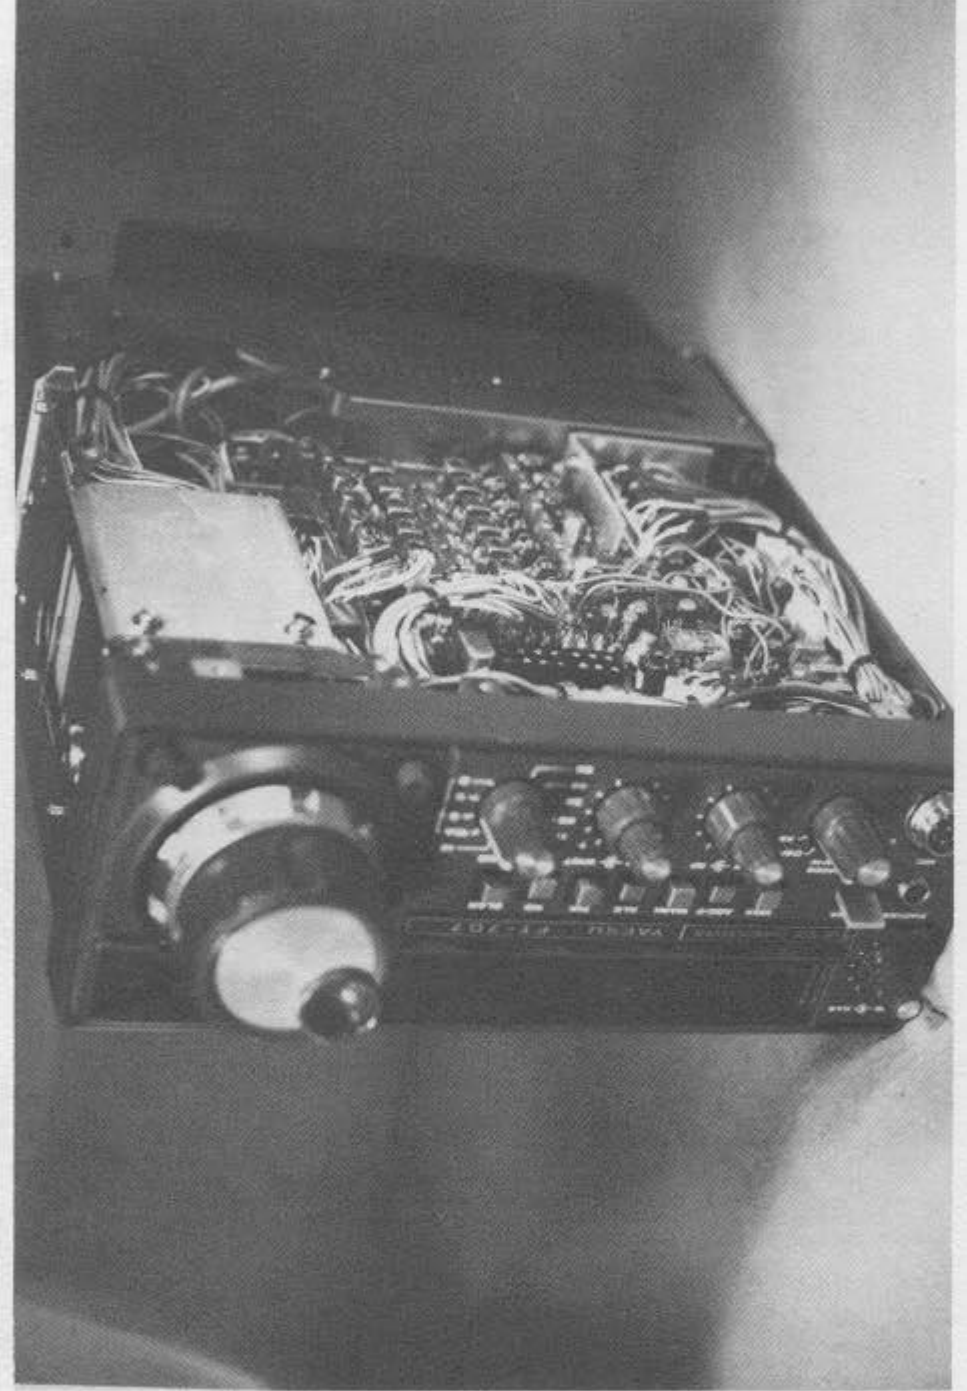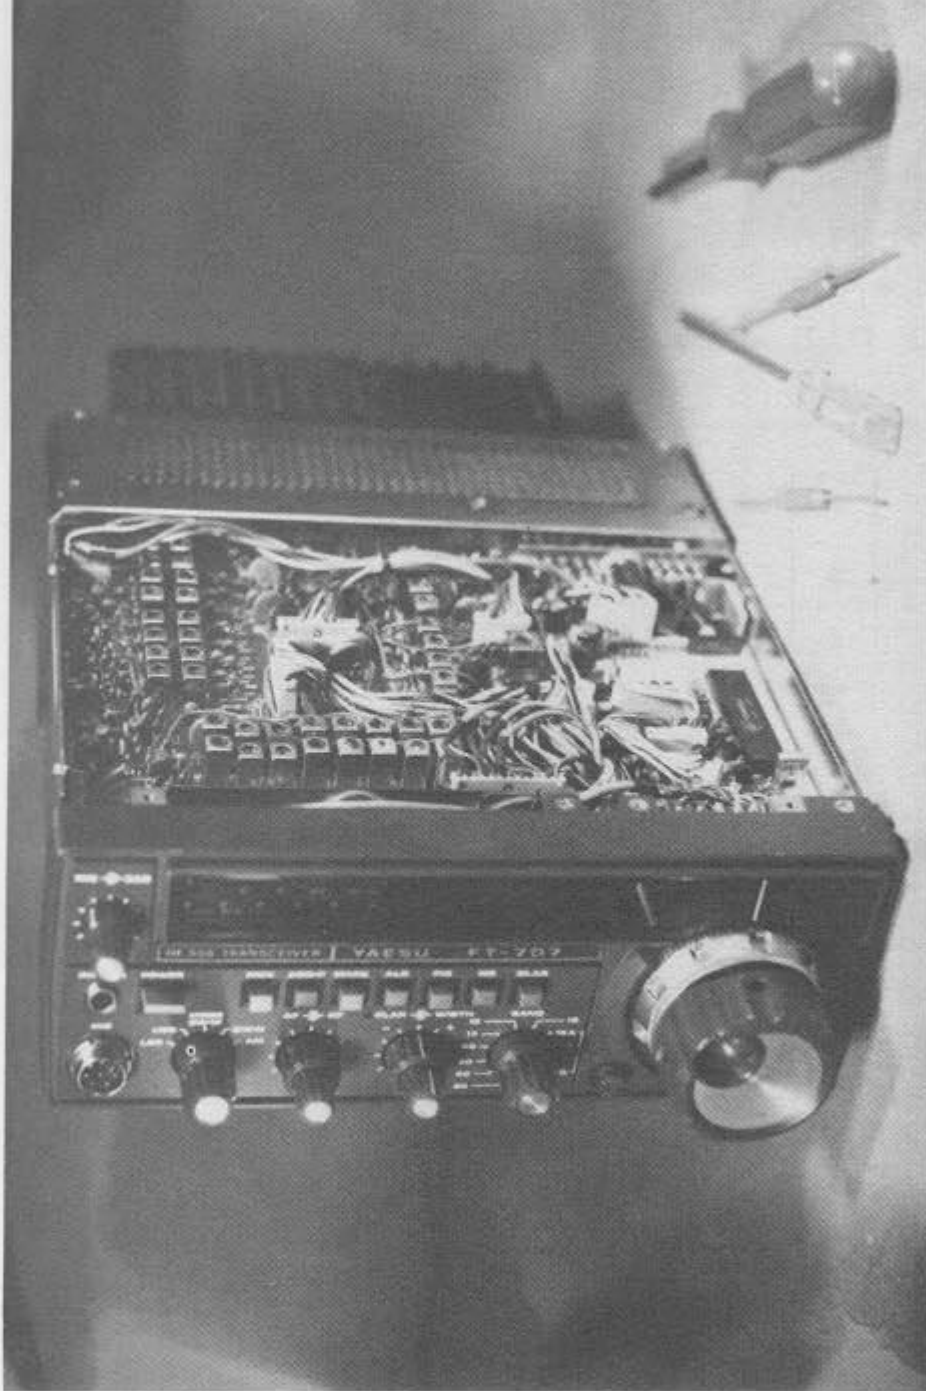

RF board; T08, T21, T22, T40, T41

AF board; X9, X10, T07, T08

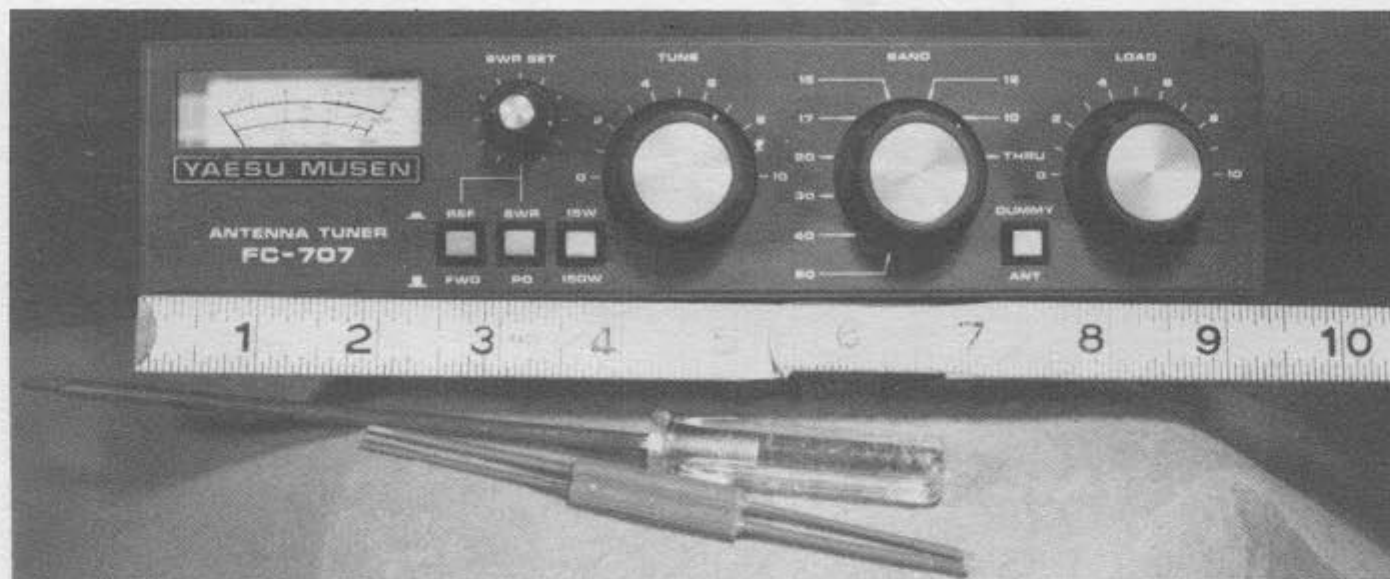

Optional Antenna Tuner- A Real Jewel!