


Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------

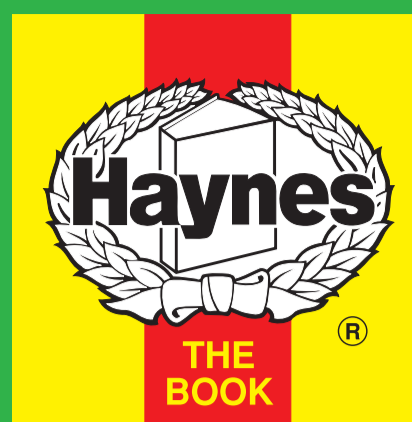

# Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

## Engine and cooling system 80, 2.0 16V CAT 1992 to 1995

Type		6A (101kW) DOHC 16V <sup>1</sup>
Capacity (cm <sup>3</sup> ) / number of cylinders		1984 / 4
Compression ratio / pressure	bar	10.5. ACE: 10.8 / ≥7.5
Oil pressure	bar	[2.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0: Hyd.
Valve clearance - exhaust	mm	0: Hyd.
Firing order		1-3-4-2
No 1 cylinder position		TBE
Thermostat opening temperature	°C	87
Radiator cap pressure	bar	1.2 to 1.5

## Fuel system 80, 2.0 16V CAT 1992 to 1995

Idle speed - manual [auto]	rpm	800 to 1000 N/A
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	≤0.5
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
O <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection		Bosch
Type / ref		KE-Motronic
Main jet / needle		—
Injection pressure	bar	3.7 to 4.8
Pump pressure	bar	6.1 to 6.6
Octane rating	RON	95[U]

## Ignition system 80, 2.0 16V CAT 1992 to 1995

Type		Motronic
Ignition coil		Bosch N
Primary resistance	ohms	0.5 to 1.5
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor		Bosch
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation		Clockwise
Ignition timing - basic [static	° Crankshaft @ rpm	6±1 BTDC @ 800 to 1000 N/A
V = Vacuum NV = No Vacuum		V
Total ignition advance	° Crankshaft @ rpm	4 to 8 BTDC @ 800 to 1000
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs		NGK
Type		BKUR7ET
Electrode gap	mm	0.70 to 0.90

## Electrical system 80, 2.0 16V CAT 1992 to 1995

Battery	V / CC / RC	12 / _
Alternator voltage / full load current / engine rpm		12.5 to 14.5 / _ / 2000
Starter motor current / voltage - cranking	A / V	—
- locked	A / V	—

## Running gear 80, 2.0 16V CAT 1992 to 1995

<b>Brakes -</b>		
Front (min. friction material thickness)	mm	7.0 with backing
Rear (min. friction material thickness)	mm	7.0 with backing

<b>Tyres</b>		
Saloon	Size	195/65x15: 205/60x15
Estate / Van	Size	195/65x15: 205/60x15
Pressure - front / rear - Saloon	bar	2.0 / 2.0
- Estate / Van	bar	2.0 / 2.0

## Front suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	[+10'±10']
Camber		-45'±30'
Castor		+2°10'±30'
King pin inclination		—

## Rear suspension / wheel alignment

Toe-in (+) / Toe-out (-)	mm [°]	[+15'±10']. 4x4: [+10'±10'] PW
Camber		-1°30'±20'. 4x4: -40'±30'

## Torque wrench settings 80, 2.0 16V CAT 1992 to 1995

Cylinder head - stage 1	Nm	40 N
- stage 2	Nm	60
Cylinder head - stage 3	Nm	+ 90°
- stage 4	Nm	+ 90°
Big-end bearings	Nm	30 + 90°
Main bearings	Nm	65
Clutch cover	Nm	25
Flywheel [driveplate]	Nm	60 + 90° N
Front hubs	Nm	M14: 120 + 90° <sup>2</sup>
Rear hubs	Nm	WSM <sup>3</sup>
Wheel nuts / bolts	Nm	110
Spark plugs	Nm	20

## Capacities 80, 2.0 16V CAT 1992 to 1995

Engine oil & filter	litres	3.0
Gearbox - 4-speed [5-speed]	litres	2.4. 4x4: 2.9
Automatic transmission - refill	litres	3.0
Final drive	litres	1.0
Cooling system	litres	6.5
Fuel tank	litres	66


## Notes and Illustrations

<sup>1</sup>8.92 ▶: ACE 103kW


<sup>2</sup>M16: 200 + 90°

<sup>3</sup>4x4: as front

1: Idle speed 2: CO / Mixture

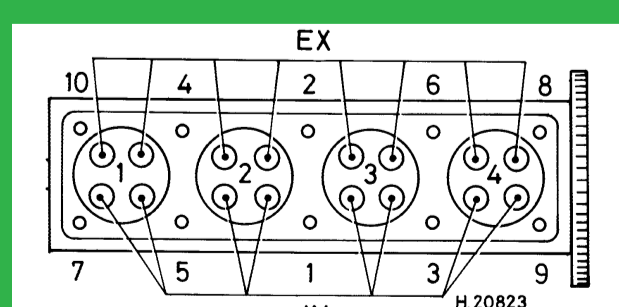

1984 cm<sup>3</sup>, 16V

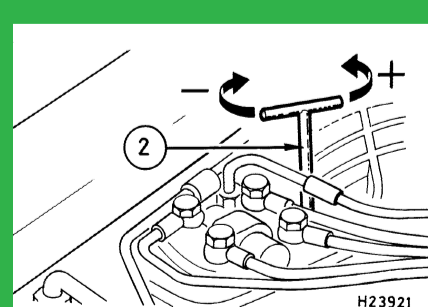

KE-Motronic, 6A