

Engine & Cooling	Fuel	Ignition	Electrical	Running gear	Torque settings	Capacities	Notes & Illustrations
------------------	------	----------	------------	--------------	-----------------	------------	-----------------------



Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

Engine and cooling system AX 11i CAT 1989 to 1992

Type		TU1M/Z (HDZ)
Capacity (cm ³) / number of cylinders		1124 / 4
Compression ratio / pressure	bar	9.4 / _
Oil pressure	bar	[4.0]
Oil temperature	°C	90
Valve clearance - inlet	mm	0.20±0.05
Valve clearance - exhaust	mm	0.40±0.05
Firing order		1-3-4-2
No 1 cylinder position		FE
Thermostat opening temperature	°C	90 to 95
Radiator cap pressure	bar	1.0. 92 ▶: 1.4

Fuel system AX 11i CAT 1989 to 1992

Idle speed - manual [auto]	rpm	850±50 N/A
Fast idle speed - manual [auto]	rpm	_
CO @ idle speed [3000 rpm] - see page VI	%	≤0.3
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO ₂ @ idle speed [3000 rpm] - see page VI	%	≥11.0
O ₂ @ idle speed [3000 rpm] - see page VI	%	_
Carburettor / fuel injection		Bosch
Type / ref		Mono-Jetronic A2.2
Main jet / needle		_
Injection pressure	bar	1.0
Pump pressure	bar	1.1
Octane rating	RON	95[U]

Ignition system AX 11i CAT 1989 to 1992

Type		Electronic
Ignition coil		BTR 02. 91 ▶: BTR 05
Primary resistance	ohms	0.8
Ballast resistor	ohms	_
Voltage - Tmnl 15(+) to earth	V	_
Distributor		Bosch/Ducellier
Points gap (air gap)	mm	_
Dwell angle	° (%)	_
Condenser capacity	µF	_
Rotation		Anticlockwise
Ignition timing - basic [static	° Crankshaft @ rpm	8±2 BTDC @ idle
V = Vacuum NV = No Vacuum		NV
Total ignition advance	° Crankshaft @ rpm	C061-D046
	° Crankshaft @ rpm	_
	° Crankshaft @ rpm	_
Centrifugal check.	° Crankshaft @ rpm	0 @ 1000 to 1300
	° Crankshaft @ rpm	13 to 17 @ 3000
	° Crankshaft @ rpm	21 to 25 @ 6000
Vacuum range check	mbar	130 to 250
Maximum vacuum advance	° Crankshaft	12 to 16
Spark plugs		Eyquem/Champion
Type		FC42LS / RC10YCC
Electrode gap	mm	0.80

Electrical system AX 11i CAT 1989 to 1992

Battery	V / CC / RC	12 / 150 / 25
Alternator voltage / full load current / engine rpm		13.5 / 50 / 3650
Starter motor current / voltage - cranking	A / V	105 / 12
- locked	A / V	220 / _

Running gear AX 11i CAT 1989 to 1992

Brakes -		
Front (min. friction material thickness)	mm	2.0
Rear (min. friction material thickness)	mm	1.0
Tyres		
Saloon	Size	145/70x13: 155/70x13
Estate / Van	Size	_
Pressure - front / rear - Saloon	bar	1.9 / 1.9
- Estate / Van	bar	_
Front suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	-2.0±1.5
Camber		0+30'
Castor		+2°15'±30'
King pin inclination		+12.58°
Rear suspension / wheel alignment		
Toe-in (+) / Toe-out (-)	mm [°]	+1.8 to 5.4
Camber		-1°15'±20'


Torque wrench settings AX 11i CAT 1989 to 1992

Cylinder head - stage 1	Nm	20
- stage 2	Nm	+ 240°
Cylinder head - stage 3	Nm	_
- stage 4	Nm	_
Big-end bearings	Nm	40
Main bearings	Nm	20 + 45°
Clutch cover	Nm	13
Flywheel [driveplate]	Nm	65 LkC
Front hubs	Nm	250
Rear hubs	Nm	140
Wheel nuts / bolts	Nm	90
Spark plugs	Nm	25


Capacities AX 11i CAT 1989 to 1992

Engine oil & filter	litres	3.5
Gearbox - 4-speed [5-speed]	litres	2.0
Automatic transmission - refill	litres	_
Final drive	litres	WT
Cooling system	litres	4.8
Fuel tank	litres	43

Notes and Illustrations

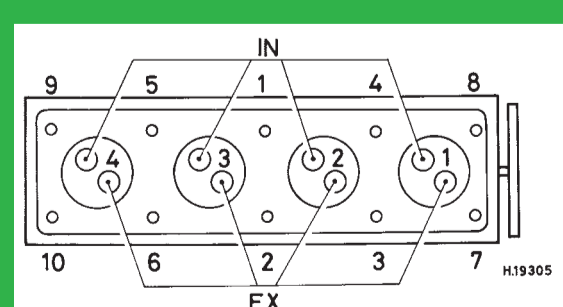

1124 cm³

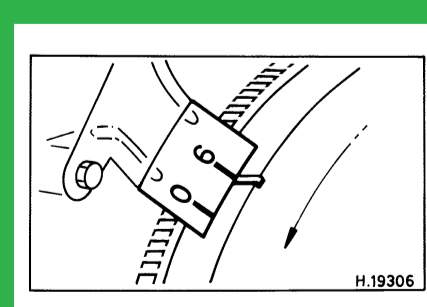

1124 cm³