

Engine &amp; Cooling

Fuel

Ignition

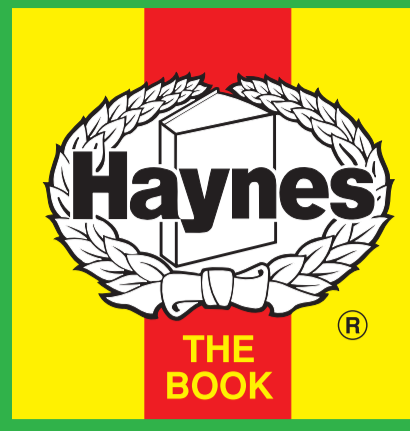
Electrical

Running gear

Torque settings

Capacities

Notes &amp; Illustrations



# Automotive Technical DATA BOOK

Click on one of the buttons above to view data for this car. To return to this screen and make another choice, click anywhere on the data screen.

MENU

HELP

## Engine and cooling system

240, 2.0 CAT 1990 to 1993

Type	B200F. SOHC 8V. 82kW	
Capacity (cm <sup>3</sup> ) / number of cylinders	1986 / 4	
Compression ratio / pressure	bar	10.0 / ≥9.2
Oil pressure	bar	1.0 [2.5 to 8.0]
Oil temperature	°C	80
Valve clearance - inlet	mm	0.30 to 0.40 H
- exhaust	mm	0.30 to 0.40 H
Firing order	1-3-4-2	
No 1 cylinder position	TBE	
Thermostat opening temperature	°C	86 to 88 or 91 to 93
Radiator cap pressure	bar	0.66 to 0.87

## Fuel system

240, 2.0 CAT 1990 to 1993

Idle speed - manual [auto]	rpm	775±50
Fast idle speed - manual [auto]	rpm	—
CO @ idle speed [3000 rpm] - see page VI	%	0.6±0.2
HC @ idle speed [3000 rpm] - see page VI	ppm	≤200
CO <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
O <sub>2</sub> @ idle speed [3000 rpm] - see page VI	%	—
Carburettor / fuel injection	Bosch	
Type / ref	LH2.4-Jetronic	
Main jet / needle	—	
Injection pressure	bar	—
Pump pressure	bar	1.9 to 3.0
Octane rating	RON	95[U]

## Ignition system

240, 2.0 CAT 1990 to 1993

Type	EZ 116K	
Ignition coil	Bosch	
Primary resistance	ohms	0.6 to 0.8
Ballast resistor	ohms	—
Voltage - Tmnl 15(+) to earth	V	—
Distributor	Bosch	
Points gap (air gap)	mm	—
Dwell angle	° (%)	—
Condenser capacity	µF	—
Rotation	Clockwise	
Ignition timing - basic [static	° Crankshaft @ rpm	12 BTDC @ 775±50
V = Vacuum NV = No Vacuum	—	
Total ignition advance	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Centrifugal check.	° Crankshaft @ rpm	Computer control
	° Crankshaft @ rpm	—
	° Crankshaft @ rpm	—
Vacuum range check	mbar	Computer control
Maximum vacuum advance	° Crankshaft	—
Spark plugs	Bosch/Champion	
Type	WR7DC / RN7YC	
Electrode gap	mm	0.70

## Electrical system

240, 2.0 CAT 1990 to 1993

Battery	V / CC / RC	12 / 450 / 90
Alternator voltage / full load current / engine rpm	Various	
Starter motor current / voltage - cranking	A / V	Various
- locked	A / V	Various

## Running gear

240, 2.0 CAT 1990 to 1993

<b>Brakes -</b>		
Front (min. friction material thickness)	mm	3.0
Rear (min. friction material thickness)	mm	3.0

<b>Tyres</b>		
Saloon	Size	175x14: 185/70x14
Estate / Van	Size	185x14
Pressure - front / rear - Saloon	bar	1.8 / 1.9
- Estate / Van	bar	1.9 / 2.1

<b>Front suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	[+24'±8'] PAS: [+16'±8']
Camber	+15' to 1°	
Castor	+2° to 3° PAS: +3° to 4°	
King pin inclination	—	

<b>Rear suspension / wheel alignment</b>		
Toe-in (+) / Toe-out (-)	mm [°]	—
Camber	—	

## Torque wrench settings

240, 2.0 CAT 1990 to 1993

Cylinder head - stage 1	Nm	20
- stage 2	Nm	60
- stage 3	Nm	+ 90°
- stage 4	Nm	—
Big-end bearings	Nm	20 + 90°
Main bearings	Nm	110
Clutch cover	Nm	—
Flywheel [driveplate]	Nm	70 N
Front hubs	Nm	68, - 120° & lock
Rear hubs	Nm	WSM
Wheel nuts / bolts	Nm	115
Spark plugs	Nm	20 to 30

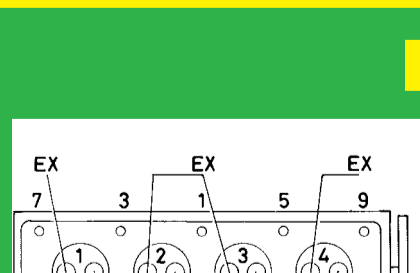
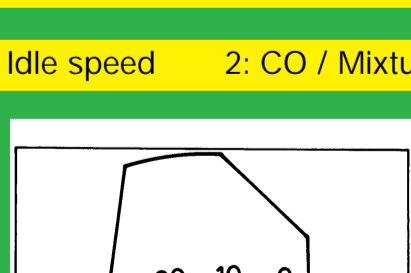
## Capacities

240, 2.0 CAT 1990 to 1993

Engine oil & filter	litres	3.85
Gearbox - 4-speed [5-speed]	litres	1.6
Automatic transmission - refill	litres	3.9
Final drive	litres	1031: 1.75. 1041: 1.6
Cooling system	litres	8.5
Fuel tank	litres	60

## Notes and Illustrations

1: Idle speed 2: CO / Mixture

1986 cm<sup>3</sup>1986 cm<sup>3</sup>

LH2.4-Jetronic



LH2.4-Jetronic