




Ludwig[®]

Replacement Parts Catalog

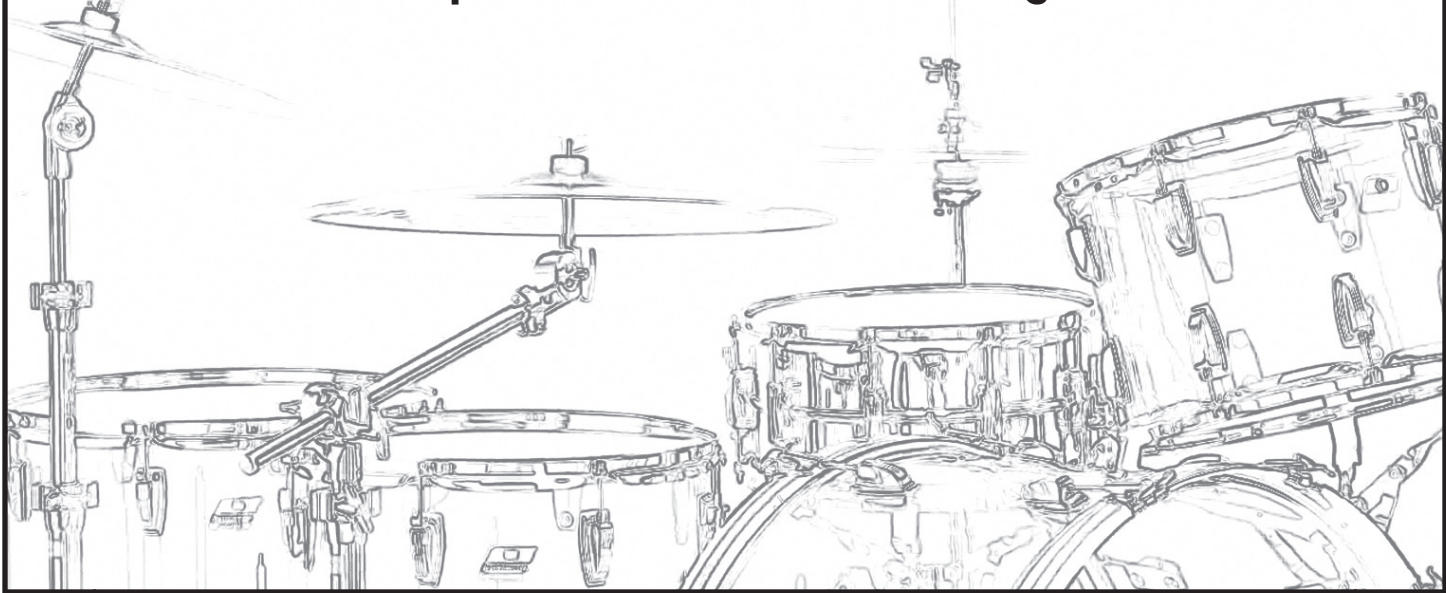

Ludwig[®]

www.ludwig-drums.com


We Make Legends., Conn-Selmer, Inc., P.O. Box 310, Elkhart, IN 46515

Ludwig Parts Catalog Index

Parts	Pages
Accessory Holders	50
Bass Drum Hoops	38
Bass Drum Mounting Plates	22, 24, 43
Bass Drum Pedals	1 - 4
Bass, Floor Tom & Tom-Tom Parts	28 - 31
Batter and Snare Hoops	39
Boom Cymbal Stands	12 - 13
Claw Hooks for Bass Drums	37
Concert Stands	46 - 47
Concert Bass Drum Parts	32
Concert Bass Drum Stands	48 - 49
Concert Tom Parts	32
Cymbal Holders & Add-Ons	14 - 16
Cymbal Stands	9 - 11
Floor Tom Legs	44
Hi-Hat Sands	5 - 8
Latin Drums	33
Marching Accessories	55
Marching Drum Parts	32 - 33
Multi-Clamps	15
Practice Pad and Stand	50
Quick Set	22
Rocker Outfit Tom Holder & Stand	43
Snare Drum Parts	26 - 27
Snare Stands	17 - 21
Snare Strainers	40 - 42
Spurs for Bass Drums	43 - 44
Strider Carriers Parts	52 - 54
Tension Lugs / Brackets	34 - 36
Tension Rods	37
Thrones	25
Tom-Tom Holders & Stands	22 - 24, 43
Tom-Tom Mounting Brackets	22 - 24, 43
Trap Table Stands	45
Vest Carrier Parts	51

Specifications are subject to change without notice. All products will be invoiced at the time of shipment. All prices are F.O.B. Factory. Parts are sold with the following designation: PP = Pair, PZ = Dozen, PS = Set, T = Ten.

Bass Drum Pedals

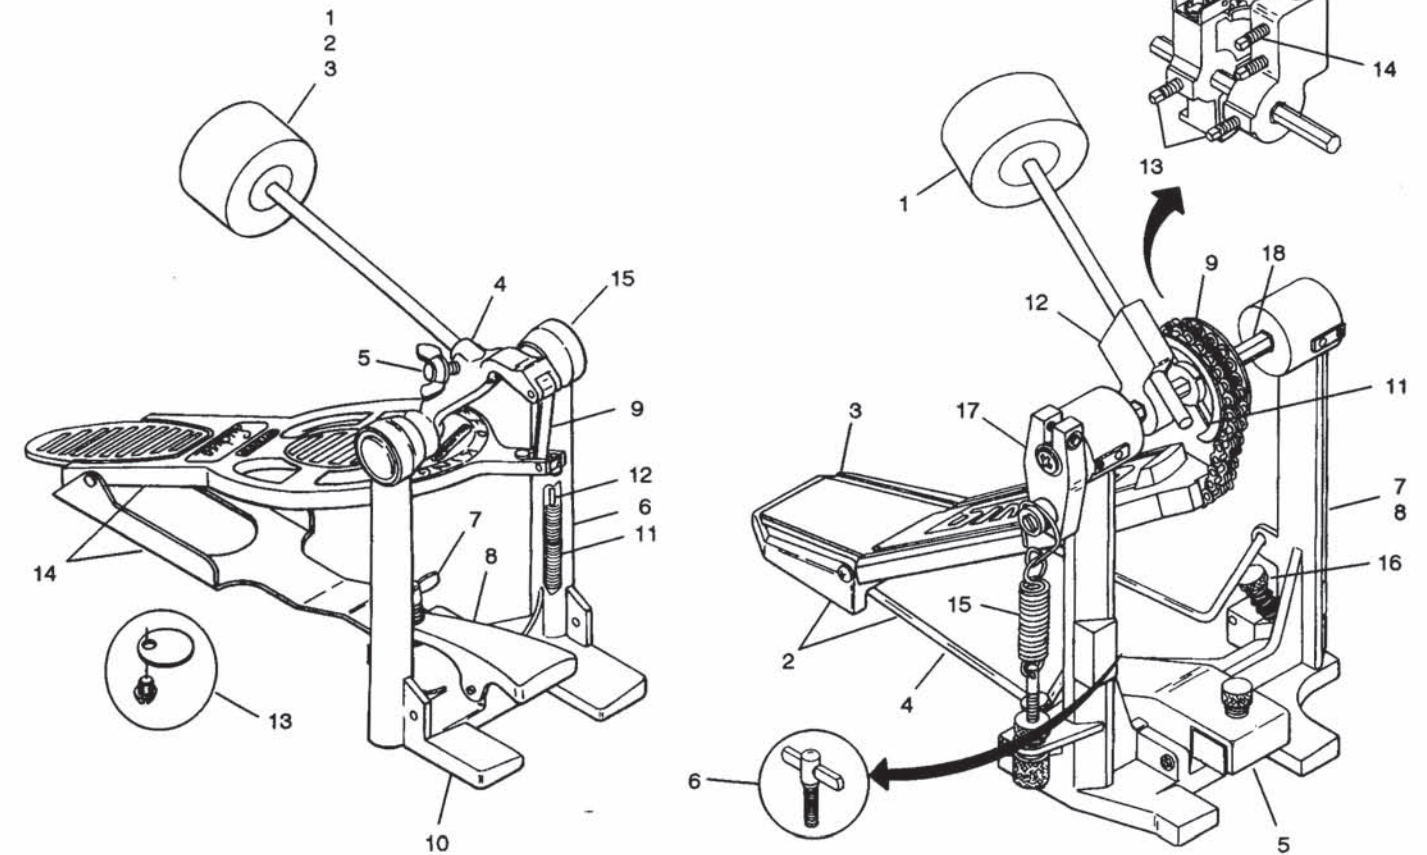


No. L-201 Speed King Pedal

Item No.	Part No.	Description
1	L-1285	Lamb's Wool Beater
2	L-1286	Hard Felt Beater
3	L-1287	Solid Wood Beater
4	P-1203-B	Rocker Assembly Complete
5	P-2791	Wing Screw
6	P-1202-B	Base Complete less Foot Board and Beater
7	P-1287-A2	Toe Clamp Wing Screw
8	P-1206-B	Toe Clamp Assembly Complete with Wing Screw and Pin
9	P-1210-A	Connecting Link and Pin and Bushing
10	P-1202-A1	Pedal Stand Assembly
11	P-1305	Compression Spring
12	P-1352-A1	Plunger Assembly
13	P-1241-A	Heel Clamp Assembly
14	P-1204-A	Foot Board Assembly with Floor Plate and Heel Clamp
15	PS-1228	Bearing Cam Set with Pin and Sealing Cap for Left and Right Side

No. LM-914-FP Modular Pedal

Item No.	Part No.	Description
1	L-1283	Felt Beater
2	P-3910-B	Foot Board Assembly with Spring Strap
3	P-3910	Foot Board Only
4	P-2963	Spring Strap
5	P-3691	Toe Clamp Assembly
6	P-3702	Toe Clamp T-Handle
7	P-3689-A	Base Complete less L-1283 and P-3910-B
8	P-3689	Base Only
9	P-3688	Chain
10	P-2976	Drum Key Set Screw for Chain
11	P-3181	Rocker Assembly with Set Screws and Felt Pad
12	P-3182	Rocker Beater Assembly with Set Screws
13	P-3183	Drum Key Set Screw for P-3181
14	P-3971	Drum Key Set Screw for P-3182
15	P-29681-A	Spring Assembly Complete
16	P-3961-A1	Pedal Spur with Spring
17	P-3690	Cam Assembly Complete
18	P-3184	Shaft Assembly Complete with Washers, Bearings and Lock Nut


Bass Drum Pedals

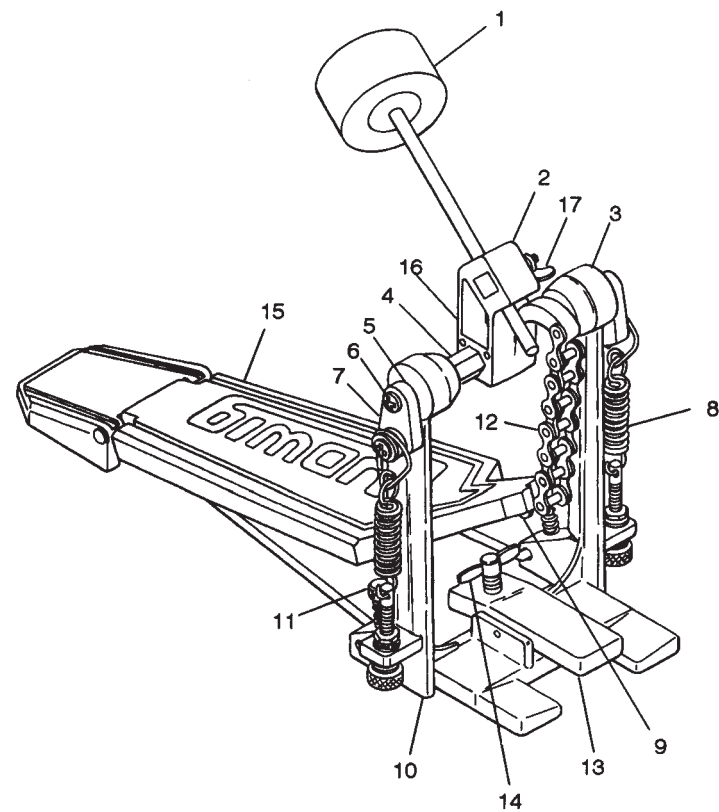

No. LC-614-FP

Item No.	Part No.	Description
1	L-1283	Pedal Beater
2	P-3662	Rocker Assembly Complete (Includes P-3909-A and P-3975)
3	P-3661	Frame Only
4	P-3663	Shaft with Bearings (Includes Hex Shaft, 2 Flatwashers, 2 Bearings, and 2 Screws)
5	P-3758	Bearing
6	P-3858	Screw
7	P-3664	Adjustable Rocker Cam Complete
8	P-2968-A	Spring Assembly Complete
9	P-280	Screw, Hex Head #10-32 x 3/4"
10	P-3661-A	Frame Complete (Includes everything except P-3910-C and L-1283)
11	P-3961-A	Pedal Spur with Spring
12	P-2944	Chain
13	P-2964	Toe Clamp with Roll Pin
14	P-3702	T-Handle
15	P-3910-C	Footboard with Spring Strap
16	P-3975	Set Screw
17	P-3909-A	Pedal Beater Stop Bolt Assembly

Bass Drum Pedals

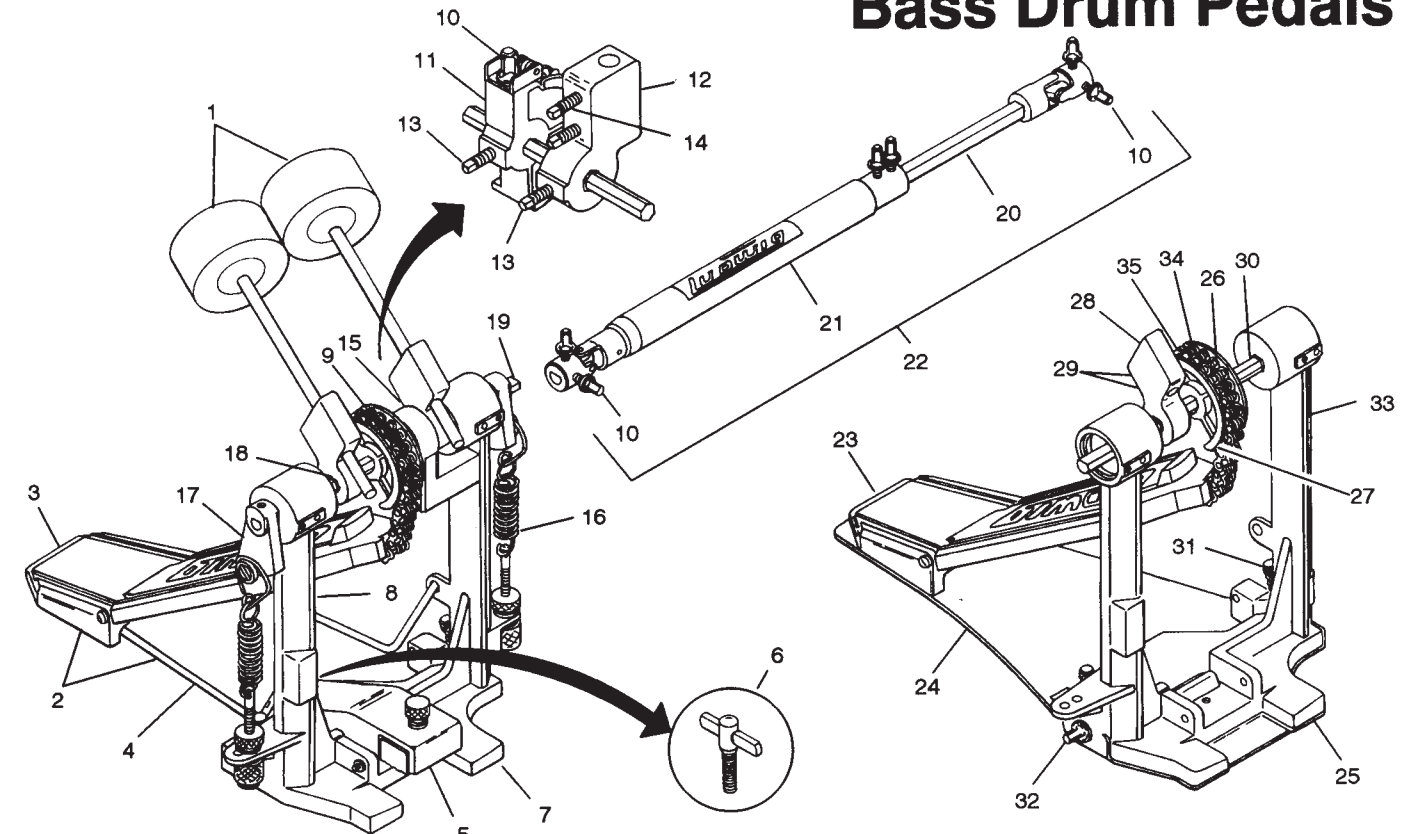


**No. LM-912-FPR Modular Twin Pedal
P-3188-RC Foot Pedal Right**

Item No.	Part No.	Description
1	L-1283	Felt Beater
2	P-3910-B	Foot Board Assembly with Spring Strap
3	P-3910	Foot Board Only
4	P-2963	Spring Strap
5	P-3691	Toe Clamp Assembly
6	P-3702	Toe Clamp T-Handle
7	P-3695-R	Base Complete (Right) less L-1283, P-3910-B & P-2975-A
8	P-3188-R	Base Only (Right)
9	P-3688	Chain
10	P-2976	Drum Key Set Screw for Chain and P-2975A
11	P-3181	Rocker Assembly with Set Screws and Felt Pad
12	P-3182	Rocker Beater Assembly with Set Screws
13	P-3183	Drum Key Set Screw
14	P-3971	Drum Key Set Screw for P-3182
15	P-3975	Allen Set Screw for Hex Shaft
16	P-2968-1A	Spring Assembly Complete
17	P-3697	Cam Assembly
18	P-3185	Long Shaft Assembly Complete
19	P-3186	Short Shaft Assembly Complete
20	P-29751	Male Connecting Arm
21	P-29752	Female Connecting Arm

**No. LM-912-FPR Modular Twin Pedal
P-3188-LC Foot Pedal Left**

Item No.	Part No.	Description
22	P-2975-A	Connecting Arm Assembly Complete
23	P-3910	Foot Board Only
24	P-3694	Base Plate
25	P-3695-L	Base Complete (Left) less P-3910, P-3694 & P-2975A
26	P-3688	Chain
27	P-3181	Rocker Assembly with Set Screw and Felt Pad
28	P-3182	Rocker Beater Assembly with Set Screws
29	P-3971	Drum Key Set Screw for P-3182 (See No. 14)
30	P-3187	Shaft Assembly Complete
31	P-3961-A1	Pedal Spur with Spring
32	P-3189	Drum Key Screw with Washer Assembly
33	P-3188-L	Base Only (Left)
34	P-2976	Drum Key Set Screw for Pedal Chain (See No. 10)
35	P-3971	Set Screw for P-3183 (See No. 13)

Bass Drum Pedals

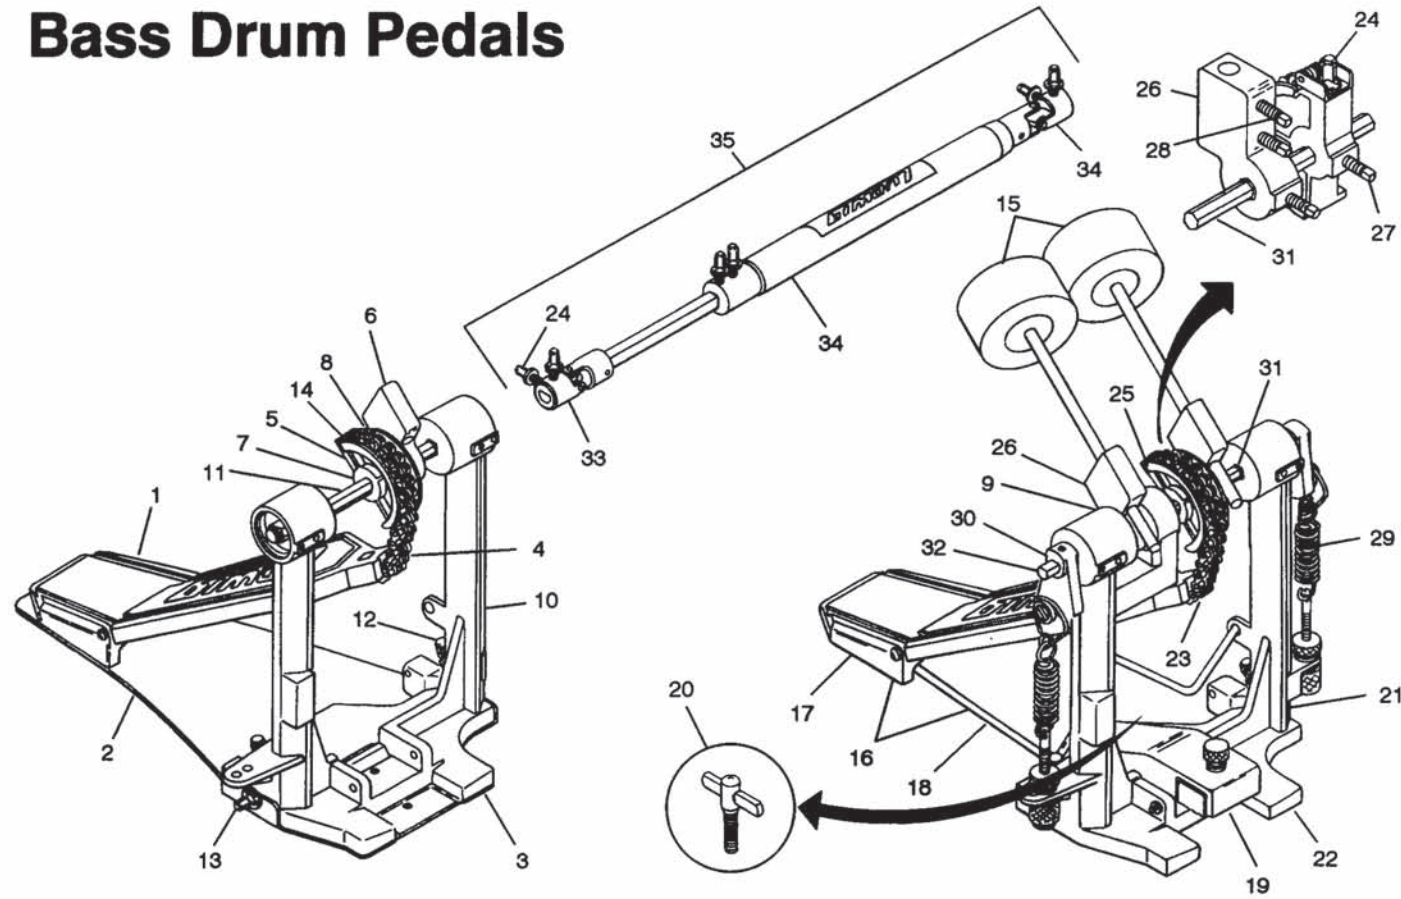


**No. LM-913-FPL Modular Twin Pedal
P-3190-RC Foot Pedal Right**

Item No.	Part No.	Description
1	P-3910	Foot Board Only
2	P-3694	Base Plate
3	P-3696-R	Base Complete (Right) less P-3910, P-3694 & P-2975A
4	P-3688	Chain
5	P-3181	Rocker Assembly with Set Screw and Felt Pad
6	P-3182	Rocker Beater Assembly with Set Screws
7	P-3183	Drum Key Set Screw for P-3181
8	P-3971	Drum Key Set Screw for P-3182
9	P-3975	Allen Set Screw for P-3181 and P-3182
10	P-3190-R	Base Only (Right)
11	P-3187	Shaft Assembly Complete
12	P-3961-A1	Pedal Spur with Spring
13	P-3189	Drum Key Set Screw with Washer Assembly
14	P-2976	Drum Key Set Screw for Pedal Chain and P-2975

**No. LM-913-FPL Modular Twin Pedal
P-3190-LC Foot Pedal Left**

Item No.	Part No.	Description
15	L-1283	Felt Beater
16	P-3910-B	Foot Board Assembly with Spring Strap
17	P-3910	Foot Board Only
18	P-2963	Spring Strap
19	P-3691	Toe Clamp Assembly
20	P-3702	Toe Clamp T-Handle
21	P-3696-L	Base Complete (Left) less L-1283, P-3910-B & P-2975-A
22	P-3190-L	Base Only (Left)
23	P-3688	Chain
24	P-2976	Drum Key Set Screw for Chain and P-2975
25	P-3181	Rocker Assembly with Set Screws and Felt Pad
26	P-3182	Rocker Beater Assembly with Set Screws
27	P-3183	Drum Key Set Screw for P-3181
28	P-3971	Drum Key Set Screw for P-3182
29	P-2968-1A	Spring Assembly Complete
30	P-3697	Cam Assembly Complete
31	P-3185	Long Shaft Assembly Complete
32	P-3186	Short Shaft Assembly Complete
33	P-29751	Male Connecting Arm
34	P-29752	Female Connecting Arm
35	P-2975-A	Connecting Arm Assembly Complete

Hi-Hat Stands

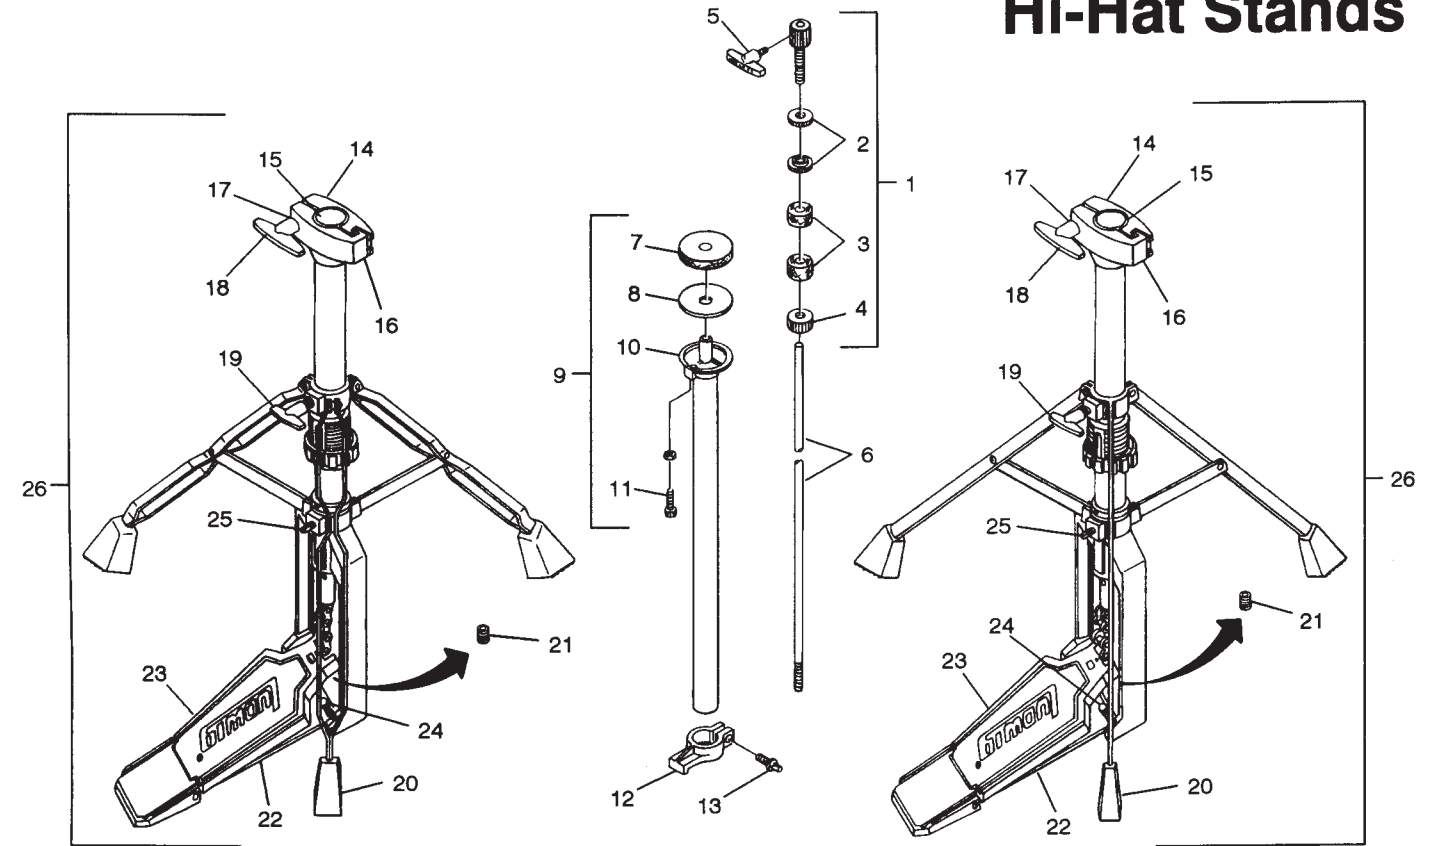


No. LM-917-HH Modular Hi-Hat

Item No.	Part No.	Description
1	L-2508	Hi-Hat Clutch
2	P-3841	Lock Nut
3	P-3840	Felt Washer
4	P-3842	Stop Nut
5	P-3951	T-Handle
6	P-3967	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3955-A	Upper Tube with Cymbal Seat
10	P-3944	Cymbal Seat
11	P-3905-A	Adjustment Screw Assembly
12	P-3683	Quick Set Clamp
13	P-3684	Quick Set Clamp Screw
14	P-3763	Bolt, Hex Head x 1-9/16"
15	P-3766	Nylon Collar Insert
16	P-3767	Collar Clamp
17	P-3970	Washer
18	P-3903	Female T-Handle
19	P-3901	Male T-Handle
20	P-3900	Crutch Tip
21	P-280	Pedal Chain Screw 10-32 x 3/4"
22	P-3913	Spring Strap
23	P-3910-A	Foot Board with Spring Strap
24	P-3961-A	Pedal Spur
25	P-3971	Drum Key Set Screw
26	P-3670	Base Assembly Complete

No. LM-817-HH Classic Hi-Hat

Item No.	Part No.	Description
1	L-2508	Hi-Hat Clutch
2	P-3841	Lock Nut
3	P-3840	Felt Washer
4	P-3842	Stop Nut
5	P-3951	T-Handle
6	P-3967	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3955-A	Upper Tube with Cymbal Seat
10	P-3944	Cymbal Seat
11	P-3905-A	Adjustment Screw Assembly
12	P-3683	Quick Set Clamp
13	P-3684	Quick Set Clamp Screw
14	P-3763	Bolt, Hex Head x 1-9/16"
15	P-3766	Nylon Collar Insert
16	P-3767	Collar Clamp
17	P-3970	Washer
18	P-3903	Female T-Handle
19	P-3901	Male T-Handle
20	P-3999	Crutch Tip
21	P-280	Pedal Chain Screw 10-32 x 3/4"
22	P-3913	Spring Strap
23	P-3910-A	Foot Board with Spring Strap
24	P-3961-A	Pedal Spur
25	P-3971	Drum Key Set Screw
26	P-3671	Base Assembly Complete

Hi-Hat Stands

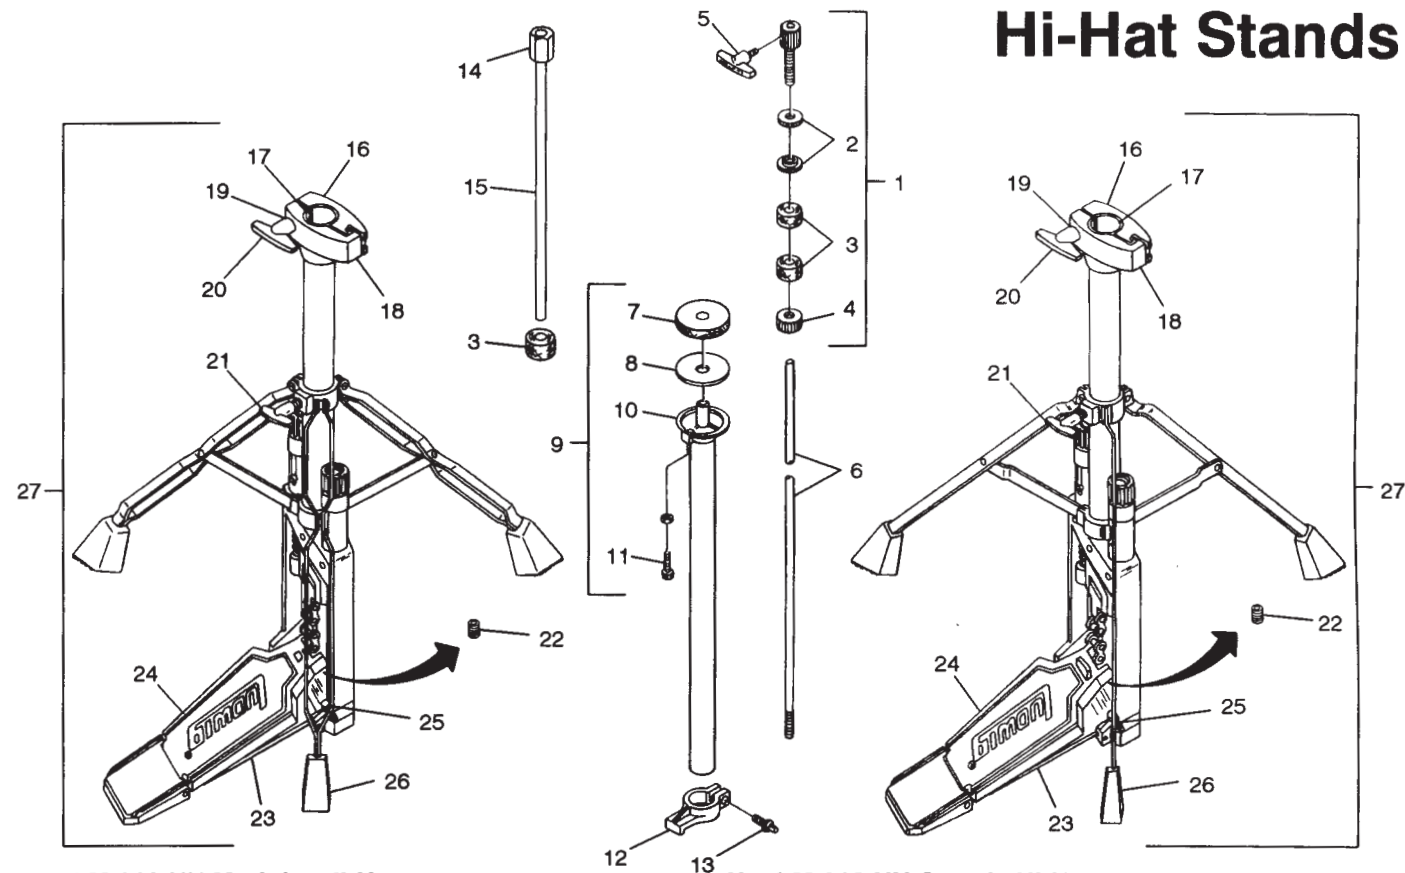


No. LM-916-HH Modular Hi-Hat

Item No.	Part No.	Description
1	L-2508	Hi-Hat Clutch
2	P-3841	Lock Nut
3	P-3840	Felt Washer
4	P-3842	Stop Nut
5	P-3951	T-Handle
6	P-3967	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3955-A	Upper Tube with Cymbal Seat
10	P-3944	Cymbal Seat
11	P-3905-A	Adjustment Screw Assembly
12	P-3683	Quick Set Clamp
13	P-3684	Quick Set Clamp Screw
14	P-3965	Pull Rod Coupler
15	P-3964	Lower Pull Rod
16	P-3763	Bolt, Hex Head x 1-9/16"
17	P-3766	Nylon Collar Insert
18	P-3767	Collar Clamp
19	P-3970	Washer
20	P-3903	Female T-Handle
21	P-3901	Male T-Handle
22	P-280	Pedal Chain Screw 10-32 x 3/4"
23	P-3913	Spring Strap
24	P-3910-A	Foot Board with Spring Strap
25	P-3961-A	Pedal Spur
26	P-3900	Crutch Tip
27	P-3686	Base Assembly Complete

No. LM-816-HH Classic Hi-Hat

Item No.	Part No.	Description
1	L-2508	Hi-Hat Clutch
2	P-3841	Lock Nut
3	P-3840	Felt Washer
4	P-3842	Stop Nut
5	P-3951	T-Handle
6	P-3967	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3955-A	Upper Tube with Cymbal Seat
10	P-3944	Cymbal Seat
11	P-3905-A	Adjustment Screw Assembly
12	P-3683	Quick Set Clamp
13	P-3684	Quick Set Clamp Screw
14	P-3965	Pull Rod Coupler
15	P-3964	Lower Pull Rod
16	P-3763	Bolt, Hex Head x 1-9/16"
17	P-3766	Nylon Collar Insert
18	P-3767	Collar Clamp
19	P-3970	Washer
20	P-3903	Female T-Handle
21	P-3901	Male T-Handle
22	P-280	Pedal Chain Screw 10-32 x 3/4"
23	P-3913	Spring Strap
24	P-3910-A	Foot Board with Spring Strap
25	P-3961-A	Pedal Spur
26	P-3999	Crutch Tip
27	P-3687	Base Assembly Complete

Hi-Hat Stands

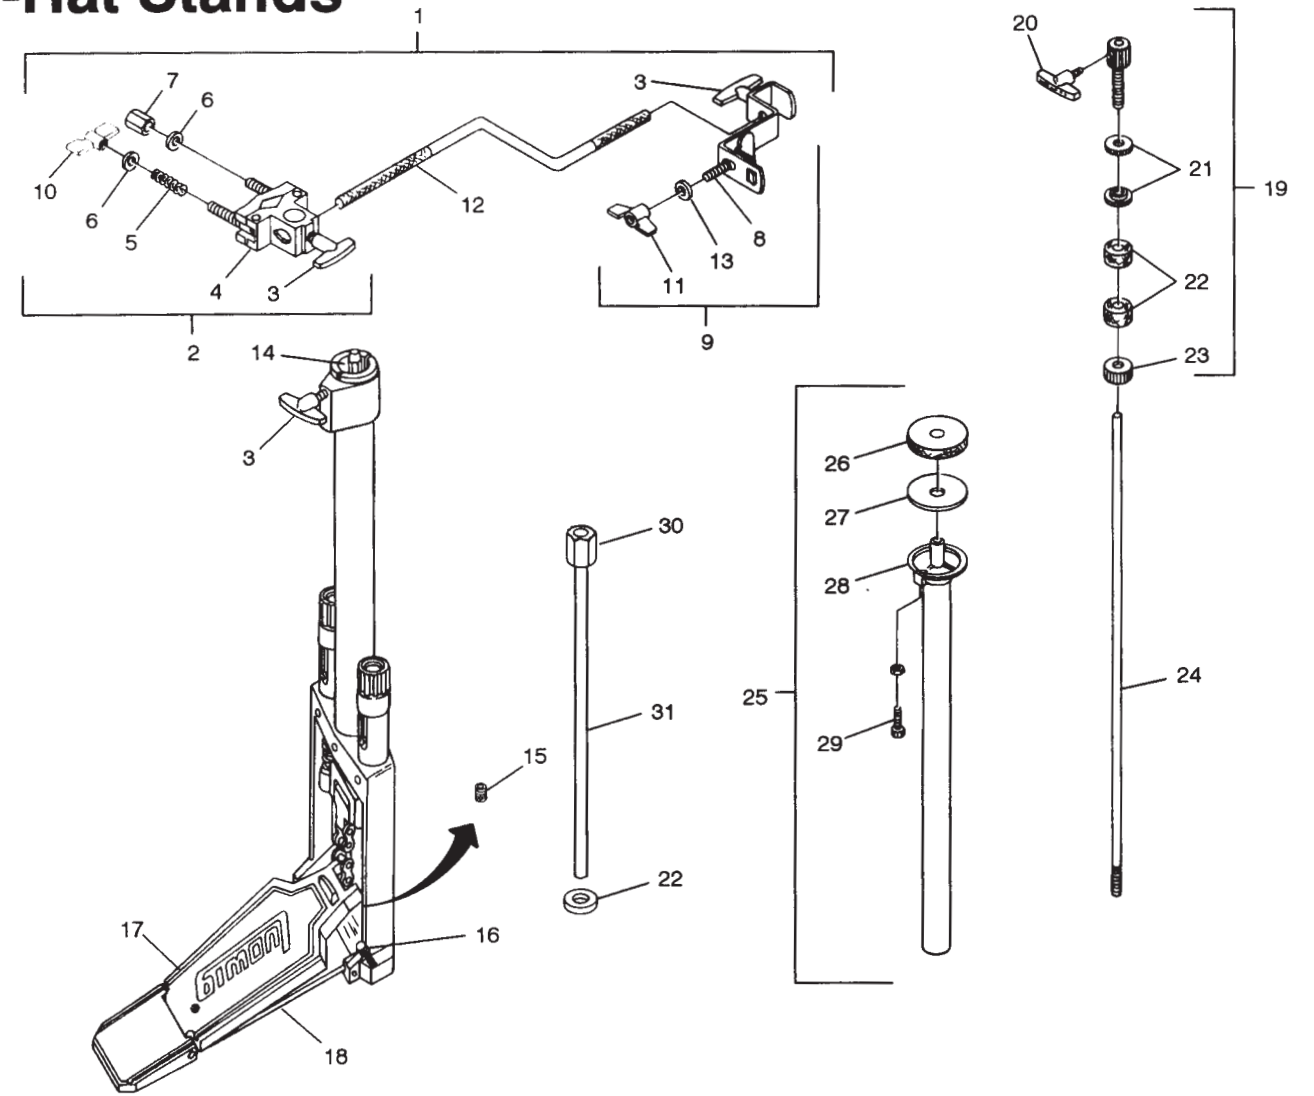


No. LM-417-HHL Legless Hi-Hat

Item No.	Part No.	Description
1	LM-462-CLH	Hi-Hat Clamp Complete
2	P-3984-A1	Tube Clamp Complete
3	P-3901	Male T-Handle
4	P-2956	Clamp Bracket Only
5	P-3933	Spring
6	P-3848	Washer
7	P-2955	Hex Nut
8	P-39571	Bolt
9	P-3985-A	Hoop Clamp
10	P-3986	Wing Nut
11	P-3988	Wing Nut
12	P-39831	Brace Rod
13	P-310	Washer
14	P-3948	Nylon Insert
15	P-3941	Screw for Pedal Chain
16	P-3961-A	Pedal Spur

Item No.	Part No.	Description
17	P-3910-A	Foot Board with Spring Strap
18	P-3913	Spring Strap
19	L-2508	Hi-Hat Clutch
20	P-3951	Male T-Handle
21	P-3841	Lock Nut
22	P-3840	Felt Washer
23	P-3842	Stop Nut
24	P-3967	Upper Pull Rod
25	P-3955-A	Upper Tube with Cymbal Seat
26	P-3745	Felt Washer
27	P-3746	Metal Washer
28	P-3944	Cymbal Seat
29	P-3905-A	Adjustment Screw
30	P-3965	Pull Rod Coupler
31	P-3964	Lower Pull Rod

Hi-Hat Stands

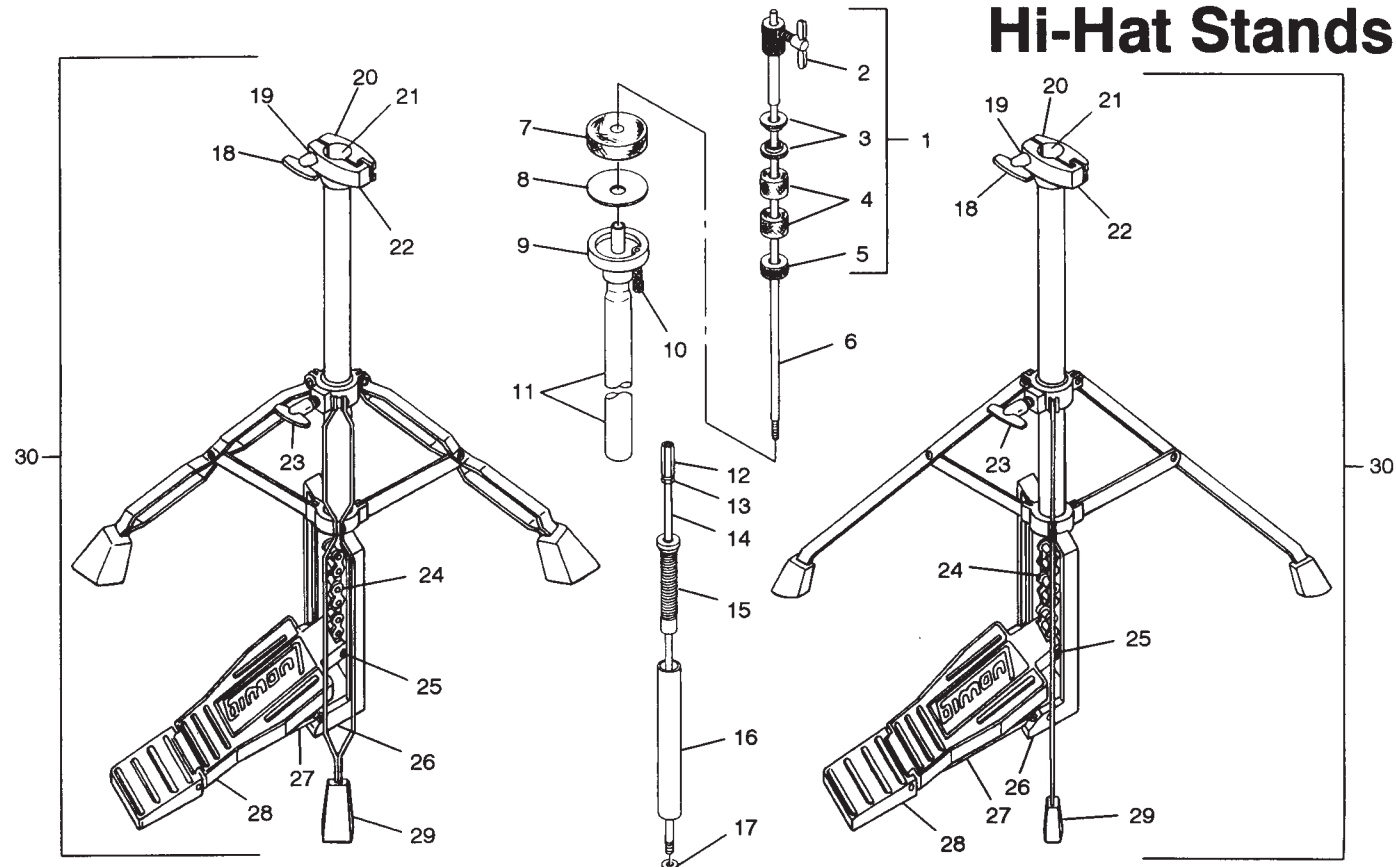


No. LC-716-HH Rocker HI-Hat

Item No.	Part No.	Description
1	L-2507	Hi-Hat Clutch
2	P-3701	Male T-Handle
3	P-3841	Lock Nut
4	P-3840	Felt Washer
5	P-3842	Stop Nut
6	P-3821	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3844	Cymbal Seat
10	P-3805-A	Adjustment Screw Assembly with Spring
11	P-3855-A	Upper Tube with Cymbal Seat
12	P-3782	Pull Rod Coupler
13	P-3783	Lock Nut
14	P-3781	Lower Pull Rod
15	P-3784	Spring Assembly
16	P-3779	Metal Tube Sleeve
17	P-3788	Rubber Washer
18	P-3903	Female T-Handle
19	P-3970	Washer
20	P-3762	Bolt, Hex Head x 1-1/4"
21	P-3776	Nylon Collar Insert 7/8" Diameter
22	P-3775	Collar Clamp 7/8" Diameter
23	P-3901	Male T-Handle
24	P-3785	Chain
25	P-3723	Roll Pin
26	P-3861-A	Pedal Spur
27	P-3713	Spring Strap
28	P-3710-D	Foot Board with Spring Strap
29	P-3900	Crutch Tip
30	P-3787	Base Assembly Complete

No. LC-616-HH Rocker HI-Hat

Item No.	Part No.	Description
1	L-2507	Hi-Hat Clutch
2	P-3701	Male T-Handle
3	P-3841	Lock Nut
4	P-3840	Felt Washer
5	P-3842	Stop Nut
6	P-3821	Upper Pull Rod
7	P-3745	Felt Washer
8	P-3746	Metal Washer
9	P-3844	Cymbal Seat
10	P-3805-A	Adjustment Screw Assembly with Spring
11	P-3855-A	Upper Tube with Cymbal Seat
12	P-3782	Pull Rod Coupler
13	P-3783	Lock Nut
14	P-3781	Lower Pull Rod
15	P-3784	Spring Assembly
16	P-3779	Metal Tube Sleeve
17	P-3788	Rubber Washer
18	P-3903	Female T-Handle
19	P-3970	Washer
20	P-3762	Bolt, Hex Head x 1-1/4"
21	P-3776	Nylon Collar Insert 7/8" Diameter
22	P-3775	Collar Clamp 7/8" Diameter
23	P-3901	Male T-Handle
24	P-3785	Chain
25	P-3723	Roll Pin
26	P-3861-A	Pedal Spur
27	P-3713	Spring Strap
28	P-3710-D	Foot Board with Spring Strap
29	P-3800	Crutch Tip
30	P-3786	Base Assembly Complete

Cymbal Stands

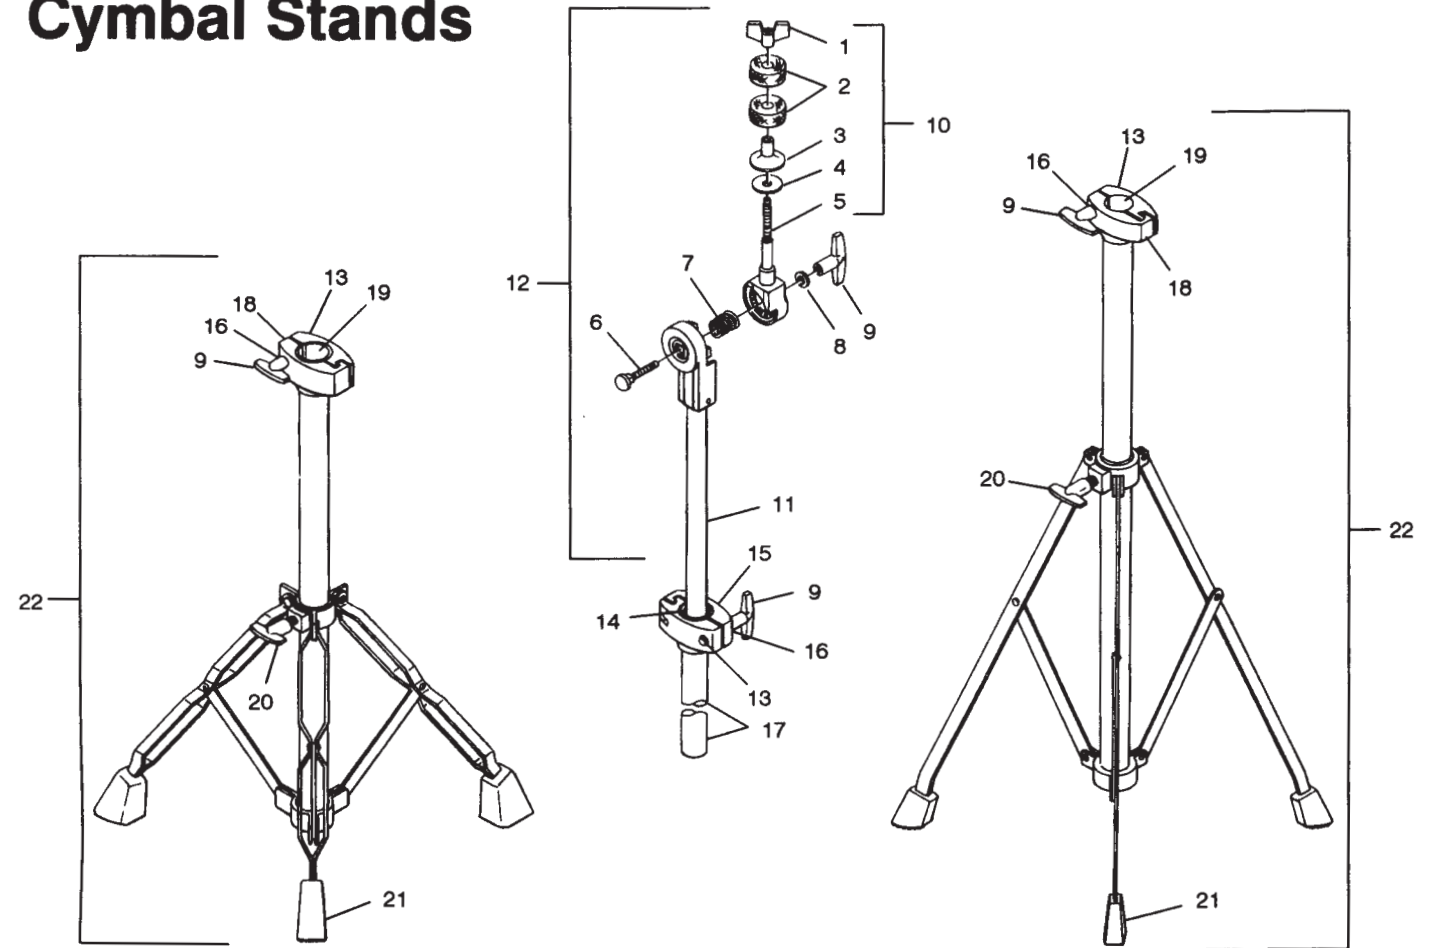


No. LM-926-CS Modular Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3763	Bolt, Hex Head x 1-9/16"
14	P-3764	Nylon Collar Insert, 3/4"
15	P-3765	Collar Clamp, 3/4"
16	P-3970	Washer
17	P-3768	Center Tube with Clamp
18	P-3767	Collar Clamp, 1"
19	P-3766	Nylon Collar Insert, 1"
20	P-3901	Male T-Handle
21	P-3900	Crutch Tip
22	P-3769	Base Complete

No. LM-826-CS Classic Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3763	Bolt, Hex Head x 1-9/16"
14	P-3764	Nylon Collar Insert, 3/4"
15	P-3765	Collar Clamp, 3/4"
16	P-3970	Washer
17	P-3768	Center Tube with Clamp
18	P-3767	Collar Clamp, 1"
19	P-3766	Nylon Collar Insert, 1"
20	P-3901	Male T-Handle
21	P-3999	Crutch Tip
22	P-3770	Base Complete

Cymbal Stands

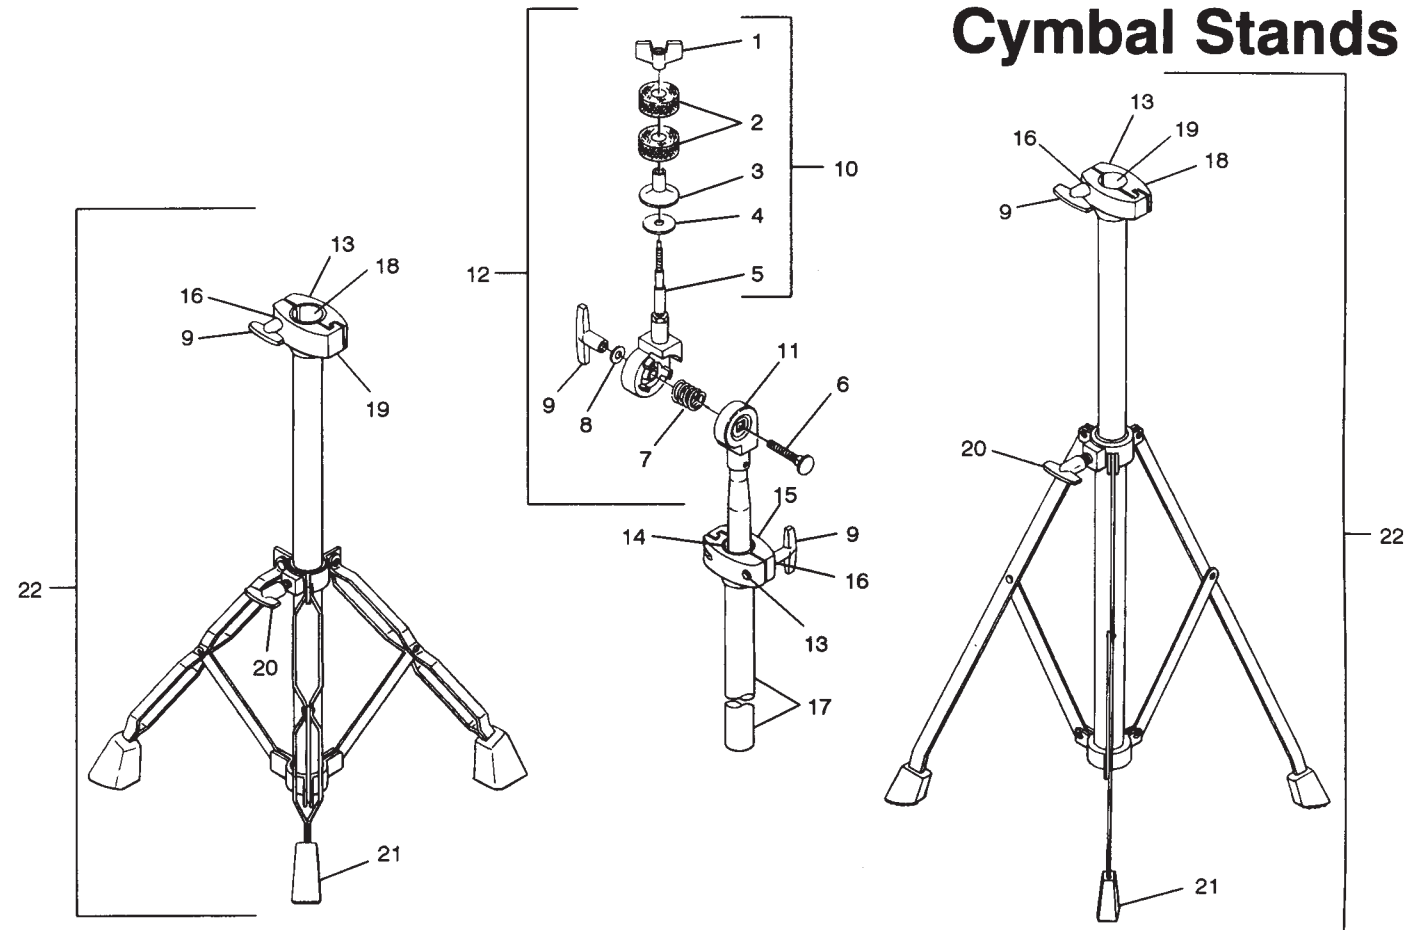


No. LC-726-CS Rocker Cymbal Stand

Item No.	Part No.	Description
1	P-3959	Wing Nut
2	P-3906	Felt Washer
3	P-3939	Plastic Cymbal Sleeve
4	P-3958	Metal Washer
5	P-3838	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-3838-A	Cymbal Tilter Assembly Complete
11	P-3837	Upper Tube with Ratchet Only
12	P-3837-A	Upper Tube with Cymbal Tilter Complete
13	P-3762	Bolt, Hex Head x 1-1/4"
14	P-3773	Nylon Collar Insert, 3/4"
15	P-3772	Collar Clamp, 3/4"
16	P-3970	Washer
17	P-3774	Center Tube with Clamp, 7/8" diameter
18	P-3776	Nylon Collar Insert, 7/8"
19	P-3775	Collar Clamp, 7/8"
20	P-3901	Male T-Handle
21	P-3900	Crutch Tip
22	P-3777	Base Complete

No. LC-626-CS Rocker II Cymbal Stand

Item No.	Part No.	Description
1	P-3959	Wing Nut
2	P-3906	Felt Washer
3	P-3939	Plastic Cymbal Sleeve
4	P-3958	Metal Washer
5	P-3838	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-3838-A	Cymbal Tilter Assembly Complete
11	P-3837	Upper Tube with Ratchet Only
12	P-3837-A	Upper Tube with Cymbal Tilter Complete
13	P-3762	Bolt, Hex Head x 1-1/4"
14	P-3773	Nylon Collar Insert, 3/4"
15	P-3772	Collar Clamp, 3/4"
16	P-3970	Washer
17	P-3774	Center Tube with Clamp
18	P-3776	Nylon Collar Insert, 7/8"
19	P-3775	Collar Clamp, 7/8"
20	P-3901	Male T-Handle
21	P-3800	Crutch Tip
22	P-3778	Base Complete

Cymbal Stands

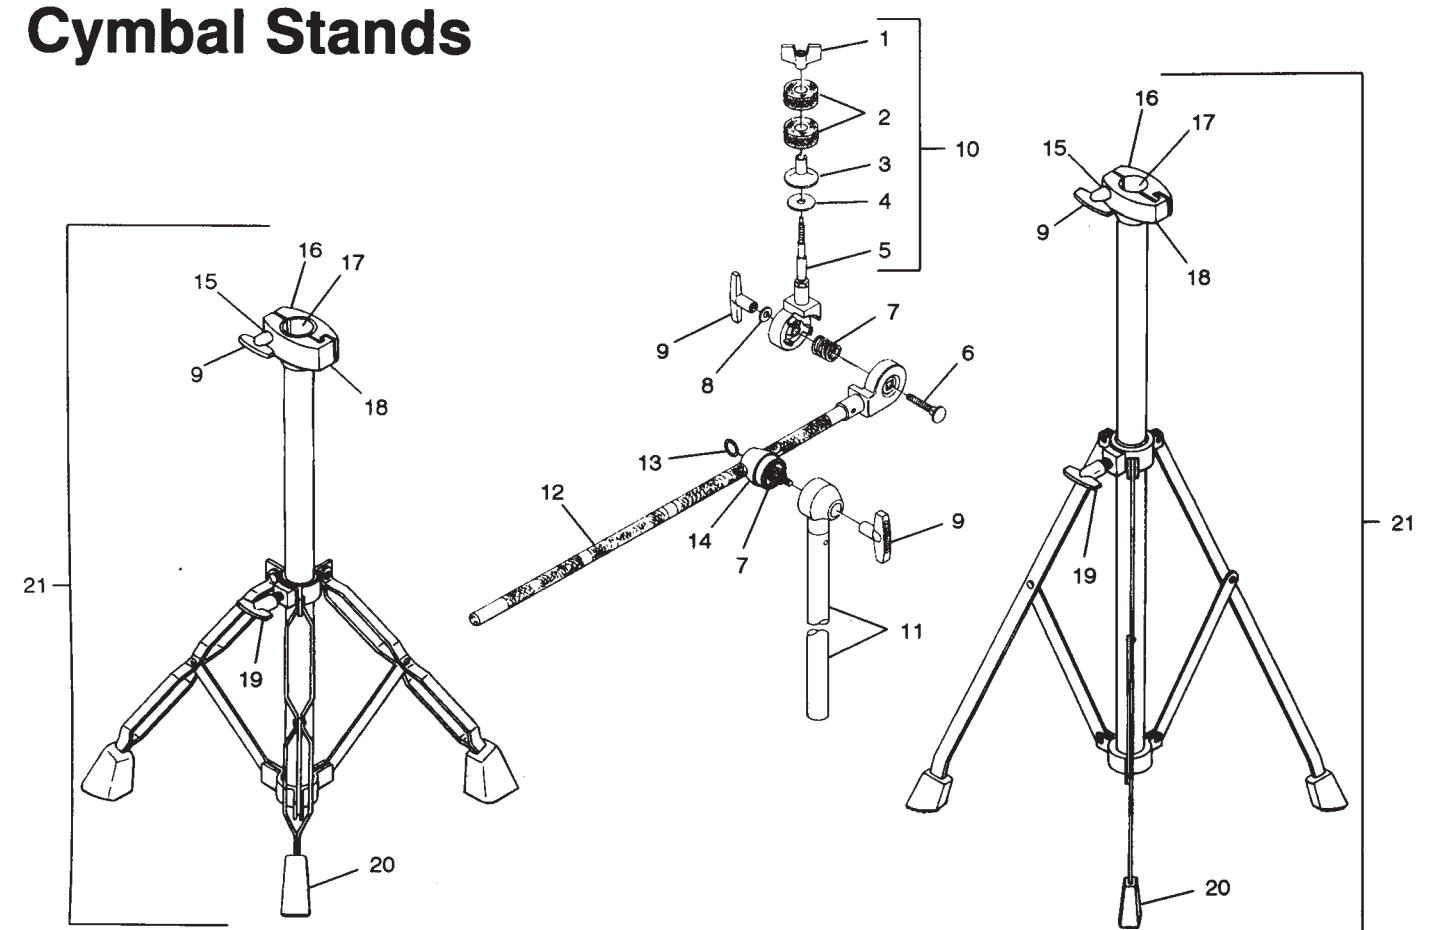


No. LC-736-MBS Boom Stand

Item No.	Part No.	Description
1	P-3959	Wing Nut
2	P-3906	Felt Washer
3	P-3939	Plastic Cymbal Sleeve
4	P-3958	Metal Washer
5	P-3838	Cymbal Tilter Stem
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-3838-A	Cymbal Tilter Assembly Complete
11	P-3869-A	Upper Tube with Ratchet Only
12	P-3789	Boom Arm with Ratchet
13	P-3870	Eye bolt
14	P-3868	Male Ratchet
15	P-3970	Washer
16	P-3762	Bolt, Hex Head x 1-1/4"
17	P-3776	Nylon Collar Insert, 7/8"
18	P-3775	Collar Clamp, 7/8"
19	P-3901	Male T-Handle
20	P-3900	Crutch Tip
21	P-3791	Base Complete

No. LC-636-MBS Boom Stand

Item No.	Part No.	Description
1	P-3959	Wing Nut
2	P-3906	Felt Washer
3	P-3939	Plastic Cymbal Sleeve
4	P-3958	Metal Washer
5	P-3838	Cymbal Tilter Stem
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-3838-A	Cymbal Tilter Assembly Complete
11	P-3869-A	Upper Tube with Ratchet Only
12	P-3789	Boom Arm with Ratchet
13	P-3870	Eye bolt
14	P-3868	Male Ratchet
15	P-3970	Washer
16	P-3762	Bolt, Hex Head x 1-1/4"
17	P-3776	Nylon Collar Insert, 7/8"
18	P-3775	Collar Clamp, 7/8"
19	P-3901	Male T-Handle
20	P-3800	Crutch Tip
21	P-3790	Base Complete

Boom Cymbal Stands

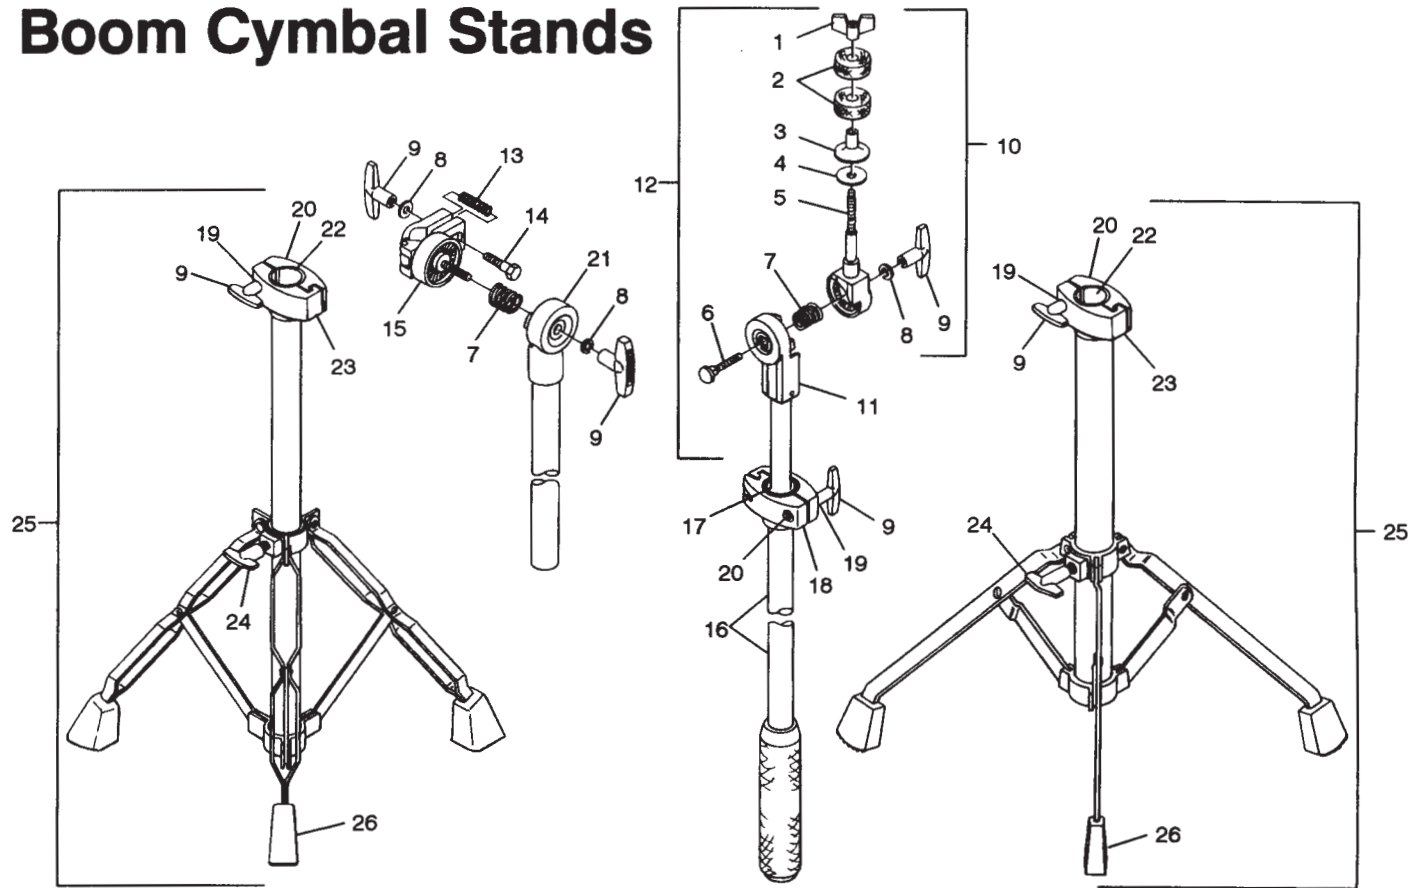


No. LM-931-BCS Modular Boom Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Carriage Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3933	Spring
14	P-3762	Bolt, Hex Head x 1-1/4"
15	P-3989-A	Hinge Clamp Assembly, 1"
16	P-3771	Boom Arm with Clamp Assembly Complete
17	P-3764	Nylon Collar Insert, 3/4"
18	P-3765	Collar Clamp, 3/4"
19	P-3970	Washer
20	P-3763	Bolt, Hex Head x 1-9/16"
21	P-3973-B	Center Tube with Ratchet
22	P-3766	Nylon Collar Insert
23	P-3767	Collar Clamp, 1"
24	P-3901	Male T-Handle
25	P-37691	Base Assembly Complete
26	P-3900	Crutch Tip

No. LM-831-BCS Classic Boom Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Carriage Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3933	Spring
14	P-3762	Bolt, Hex Head x 1-1/4"
15	P-3989-A	Hinge Clamp Assembly, 1"
16	P-3771	Boom Arm with Clamp Assembly Complete
17	P-3764	Nylon Collar Insert, 3/4"
18	P-3765	Collar Clamp, 3/4"
19	P-3970	Washer
20	P-3763	Bolt, Hex Head x 1-9/16"
21	P-3973-B	Center Tube with Ratchet
22	P-3766	Nylon Collar Insert
23	P-3767	Collar Clamp, 1"
24	P-3901	Male T-Handle
25	P-37701	Base Assembly Complete
26	P-3999	Crutch Tip

Boom Cymbal Stands

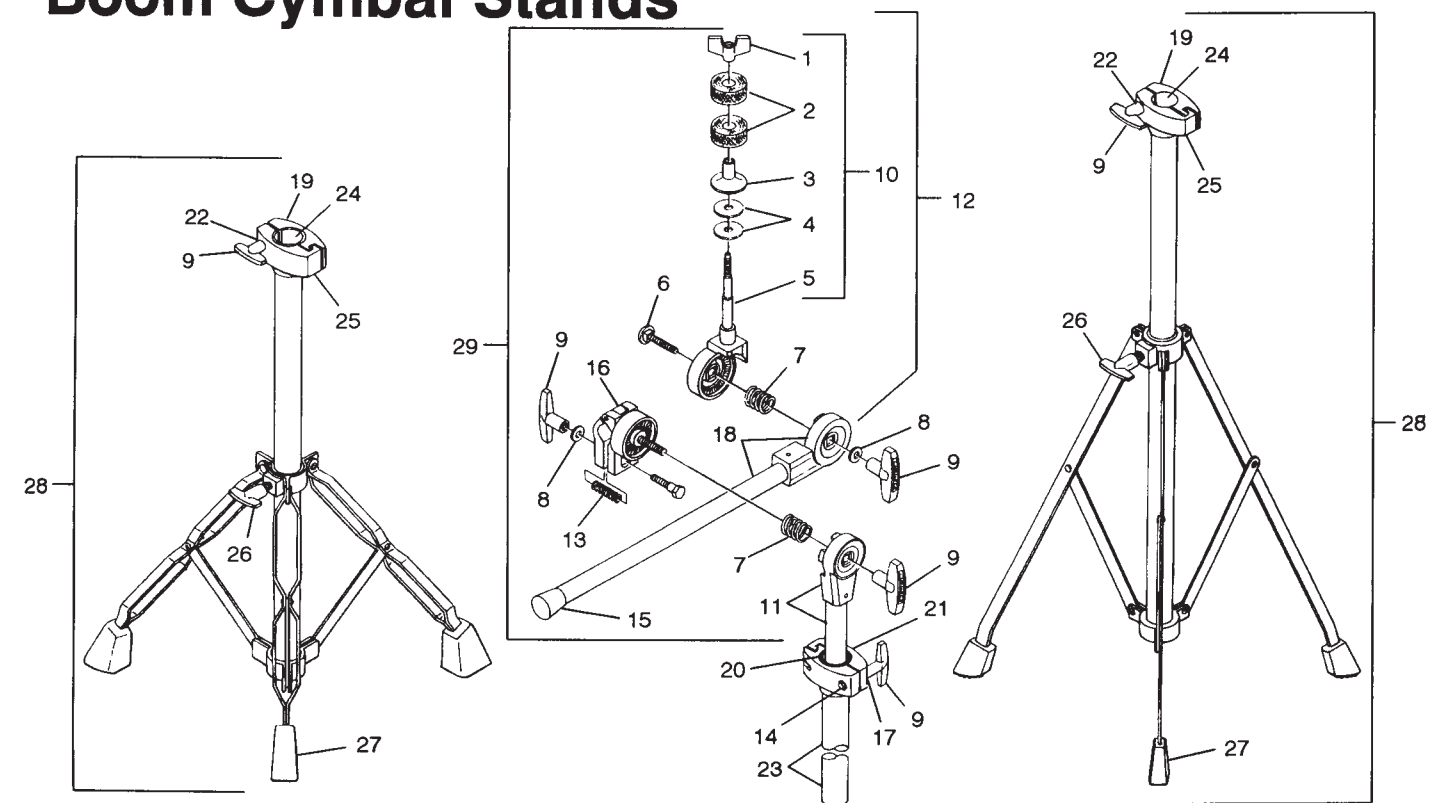


No. LM-936-MBS Modular Mini Boom Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3933	Spring
14	P-3763	Bolt, Hex Head x 1-1/4"
15	P-3761	Cap for P-3937 Tube
16	P-3934	Hinge Clamp Assembly
17	P-3970	Washer
18	P-3942	Boom Center Tube with Ratchet
19	P-3763	Bolt, Hex Head x 1-9/16"
20	P-3764	Nylon Collar Insert, 3/4"
21	P-3765	Collar Clamp, 3/4"
22	P-3970	Metal Bushing
23	P-3768	Center Tube with Clamp
24	P-3766	Nylon Collar Insert, 1"
25	P-3767	Collar Clamp, 1"
26	P-3901	Male T-Handle
27	P-3900	Crutch Tip
28	P-3769	Base Assembly Complete
29	P-3937-C	Upper Tube with Boom Arm

No. LM-836-MBS Classic Mini Boom Cymbal Stand

Item No.	Part No.	Description
1	P-39591	Wing Nut
2	P-39061	Felt Washer
3	P-39391	Plastic Cymbal Sleeve
4	P-39581	Metal Washer
5	P-39381	Cymbal Tilter
6	P-3957	Bolt
7	P-3904	Spring
8	P-3848	Washer
9	P-3903	Female T-Handle
10	P-39381-A	Cymbal Tilter Assembly Complete
11	P-3937	Upper Tube with Ratchet Only
12	P-3937-A	Upper Tube with Cymbal Tilter Complete
13	P-3933	Spring
14	P-3763	Bolt, Hex Head x 1-1/4"
15	P-3761	Cap for P-3937 Tube
16	P-3934	Hinge Clamp Assembly
17	P-3970	Washer
18	P-3942	Boom Center Tube with Ratchet
19	P-3763	Bolt, Hex Head x 1-9/16"
20	P-3764	Nylon Collar Insert, 3/4"
21	P-3765	Collar Clamp, 3/4"
22	P-3970	Metal Bushing
23	P-3768	Center Tube with Clamp
24	P-3766	Nylon Collar Insert, 1"
25	P-3767	Collar Clamp, 1"
26	P-3901	Male T-Handle
27	P-3999	Crutch Tip
28	P-3770	Base Assembly Complete
29	P-3937-C	Upper Tube with Boom Arm

Cymbal Holders & Add-Ons

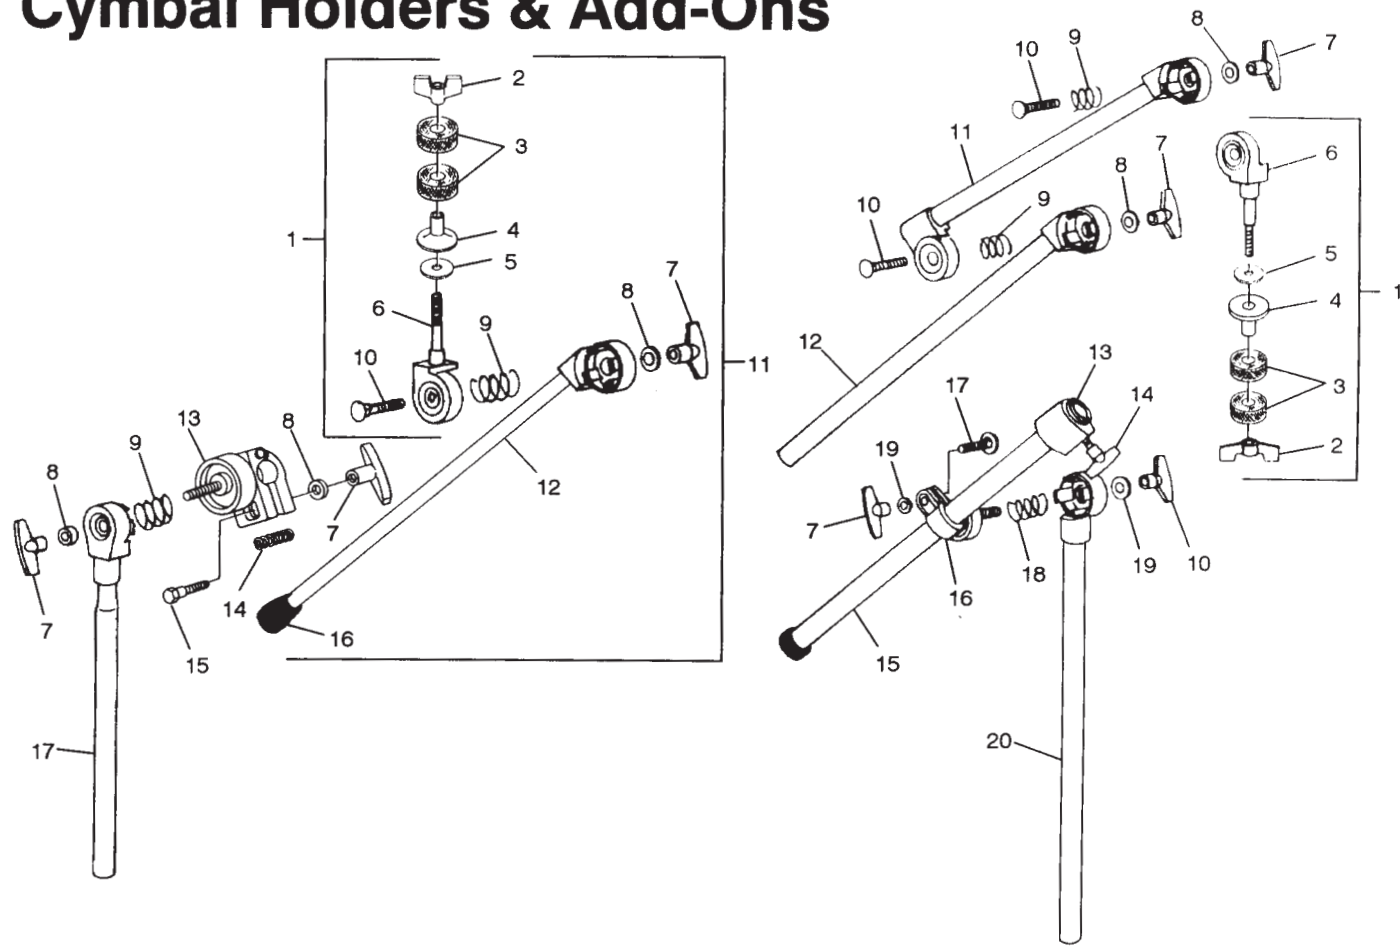


No. LM-451-CH Modular Add-On Boom Cymbal Holder

Item No.	Part No.	Description
1	P-39381-A	Cymbal Tilter Assembly Complete
2	P-39591	Wing Nut
3	P-39061	Felt Washer
4	P-39391	Plastic Cymbal Sleeve
5	P-39581	Metal Washer
6	P-39381	Cymbal Tilter Stem
7	P-3903	Female T-Handle
8	P-3848	Metal Washer
9	P-3904	Spring
10	P-3957	Carriage Bolt
11	P-3937-A	Upper Tube with Cymbal Tilter Complete
12	P-3937	Upper Tube with Ratchet Only
13	P-3934	Hinge Clamp Assembly
14	P-3933	Spring
15	P-3762	Bolt, Hex Head x 1-1/4"
16	P-3761	Cap
17	P-39941	Tube with Ratchet

No. LM-452-CHO Modular Overhang Boom Cymbal Holder

Item No.	Part No.	Description
1	P-39381-A	Cymbal Tilter Assembly Complete
2	P-39591	Wing Nut
3	P-39061	Felt Washer
4	P-39391	Plastic Cymbal Sleeve
5	P-39581	Metal Washer
6	P-39381	Cymbal Tilter Stem
7	P-3903	Female T-Handle
8	P-3848	Metal Washer
9	P-3904	Spring
10	P-3957	Carriage Bolt
11	P-3995-A	Overhang Arm
12	P-39371	Upper Tube with Ratchet Only
13	P-3949	Nylon Insert
14	P-3901	Male T-Handle
15	P-3973-D	Center Tube
16	P-3989-A	Boom Arm Retainer Clamp
17	P-3762	Bolt, Hex Head x 1-1/4"
18	P-3933	Spring
19	P-3970	Metal Bushing
20	P-3937-B	Lower Tube with Ratchet Only

Cymbal Holders & Add-Ons

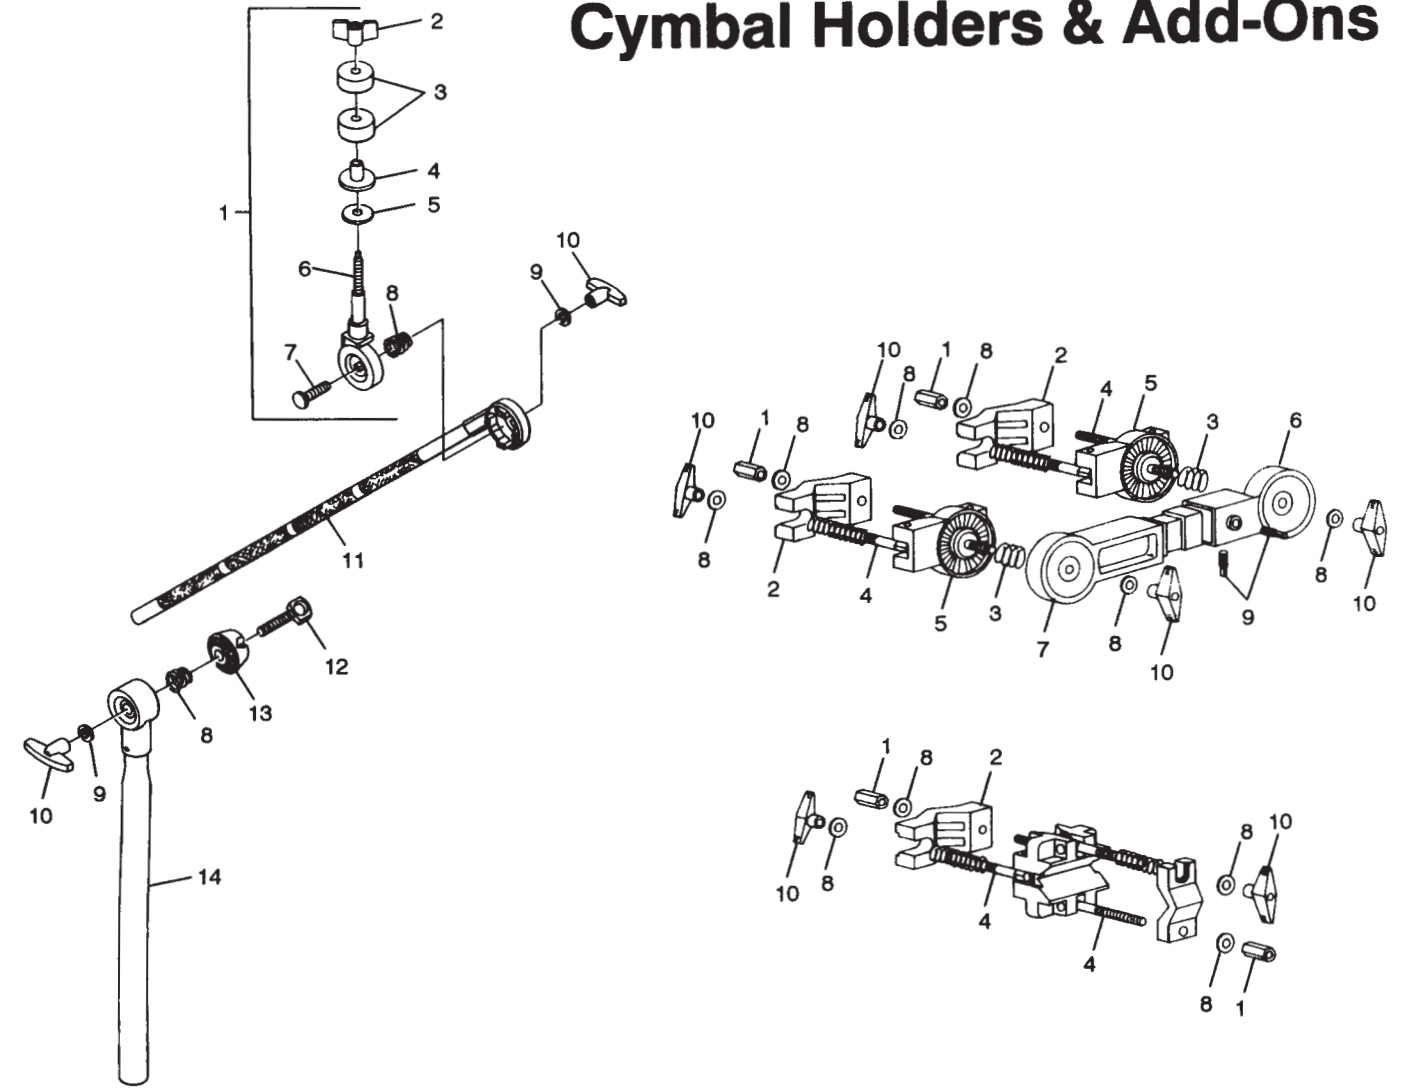


No. LR-251-CH Rocker Add-On Boom Cymbal Holder

Item No.	Part No.	Description
1	P-3839-A	Cymbal Tilter Assembly Complete
2	P-39591	Wing Nut
3	P-39061	Felt Washer
4	P-39391	Plastic Cymbal Sleeve
5	P-39581	Metal Washer
6	P-3839	Cymbal Tilter Stem
7	P-3802	Bolt
8	P-3904	Spring
9	P-3848	Metal Washer
10	P-3803	Female T-Handle
11	P-3868-B	Boom Arm with Ratchet
12	P-3870	Eye Bolt
13	P-38681	Male Ratchet
14	P-3869-B	Upper Tube with Ratchet

**No. LM-453-CLU Multi Clamp
No. LM-454-CLR Right Angle Clamp**

Item No.	Part No.	Description
1	P-2955	Hex Nut, 3/4" Long
2	P-2956	Clamp Bracket
3	P-2958	Spring
4	P-2959	Bracket Rod
5	P-2960	Clamp Ratchet
6	P-2961	Female Clamp
7	P-2962	Male Clamp
8	P-3848	Washer
9	P-3971	Set Screw (Drum Key Type)
10	P-3986	Wing Nut

Cymbal Holders & Add-Ons

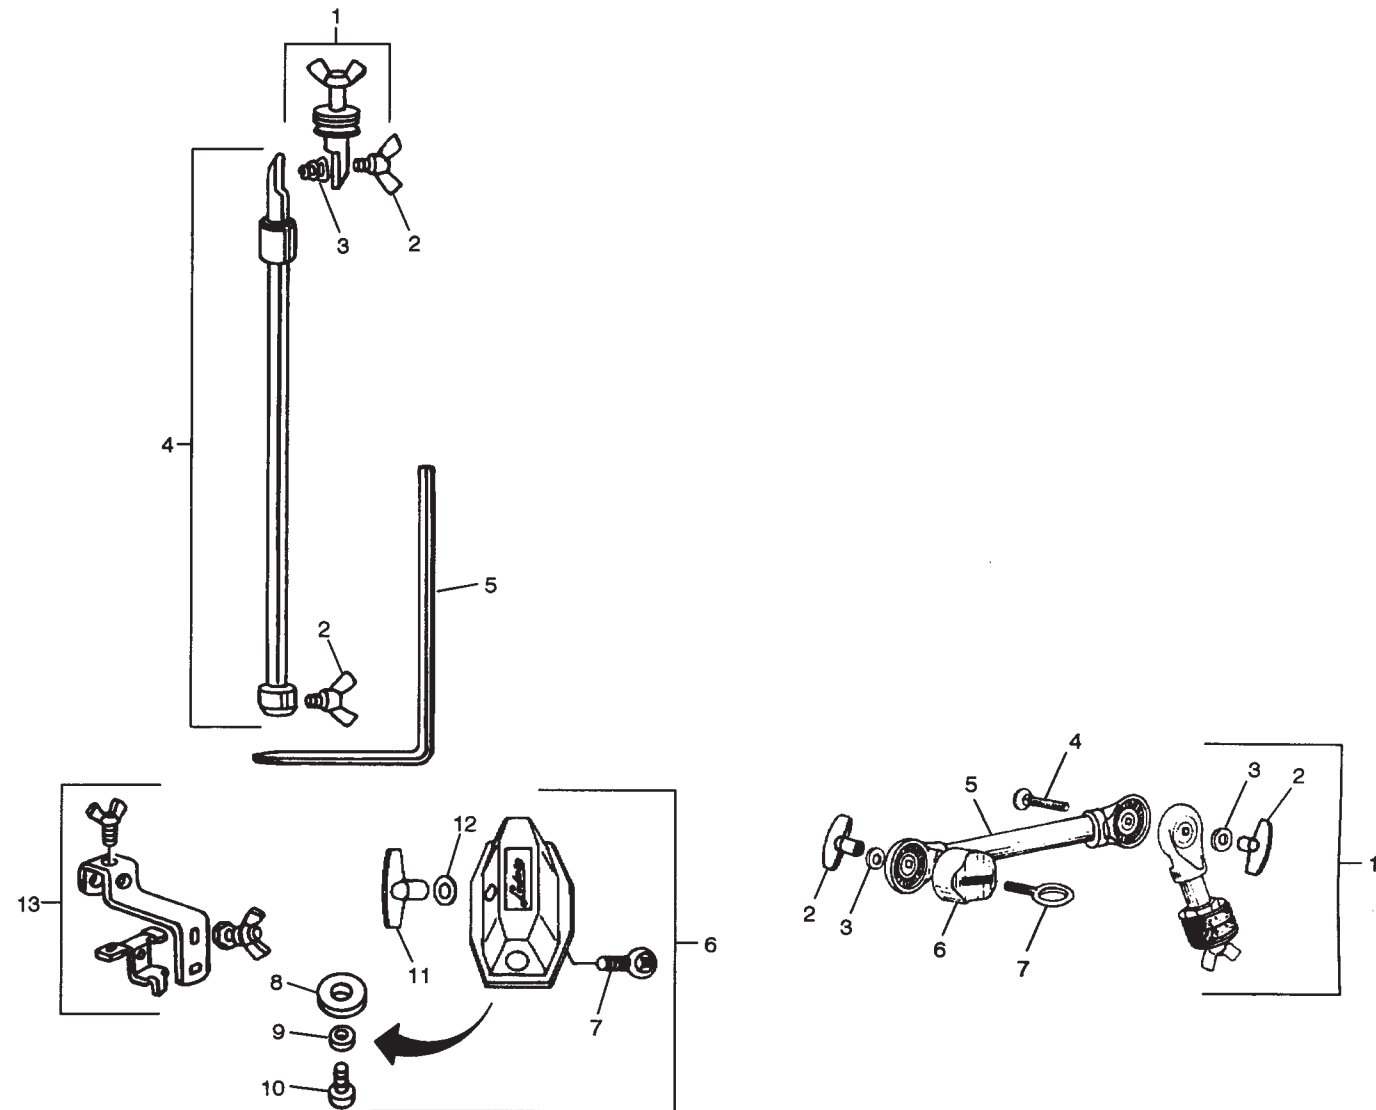


No. L-1372 Cymbal Holder (Shell Mount)

Item No.	Part No.	Description
1	P-1772-B	Cymbal Tilter less Spring
2	P-2781	Wing Screw
3	P-1771	Spring Only
4	P-1775-A2	Center Tube with Ratchet & Wing Screw
5	P-1784-2	Angle Arm Only
6	P-1216-D	Mounting Bracket Complete
7	P-1632	Eye Bolt
8	P-17321	Plate Disk
9	P-305	Lock Washer
10	P-250	Machine Screw
11	P-2952	Female T-Handle
12	P-316	Washer
13	P-1602-A	Hoop Mount Cymbal Holder Bracket Complete

No. LM-458-CH Splash Cymbal Holder

Item No.	Part No.	Description
1	P-2823-A	Cymbal Tilter Assembly Complete
2	P-2952	Female T-Handle
3	P-316	Metal Washer
4	P-232	Carriage Bolt
5	P-28002	Dog Bone Converter Link
6	P-28501	Boom Stand Clamp
7	P-28512	Eye Bolt

Snare Drum Stands

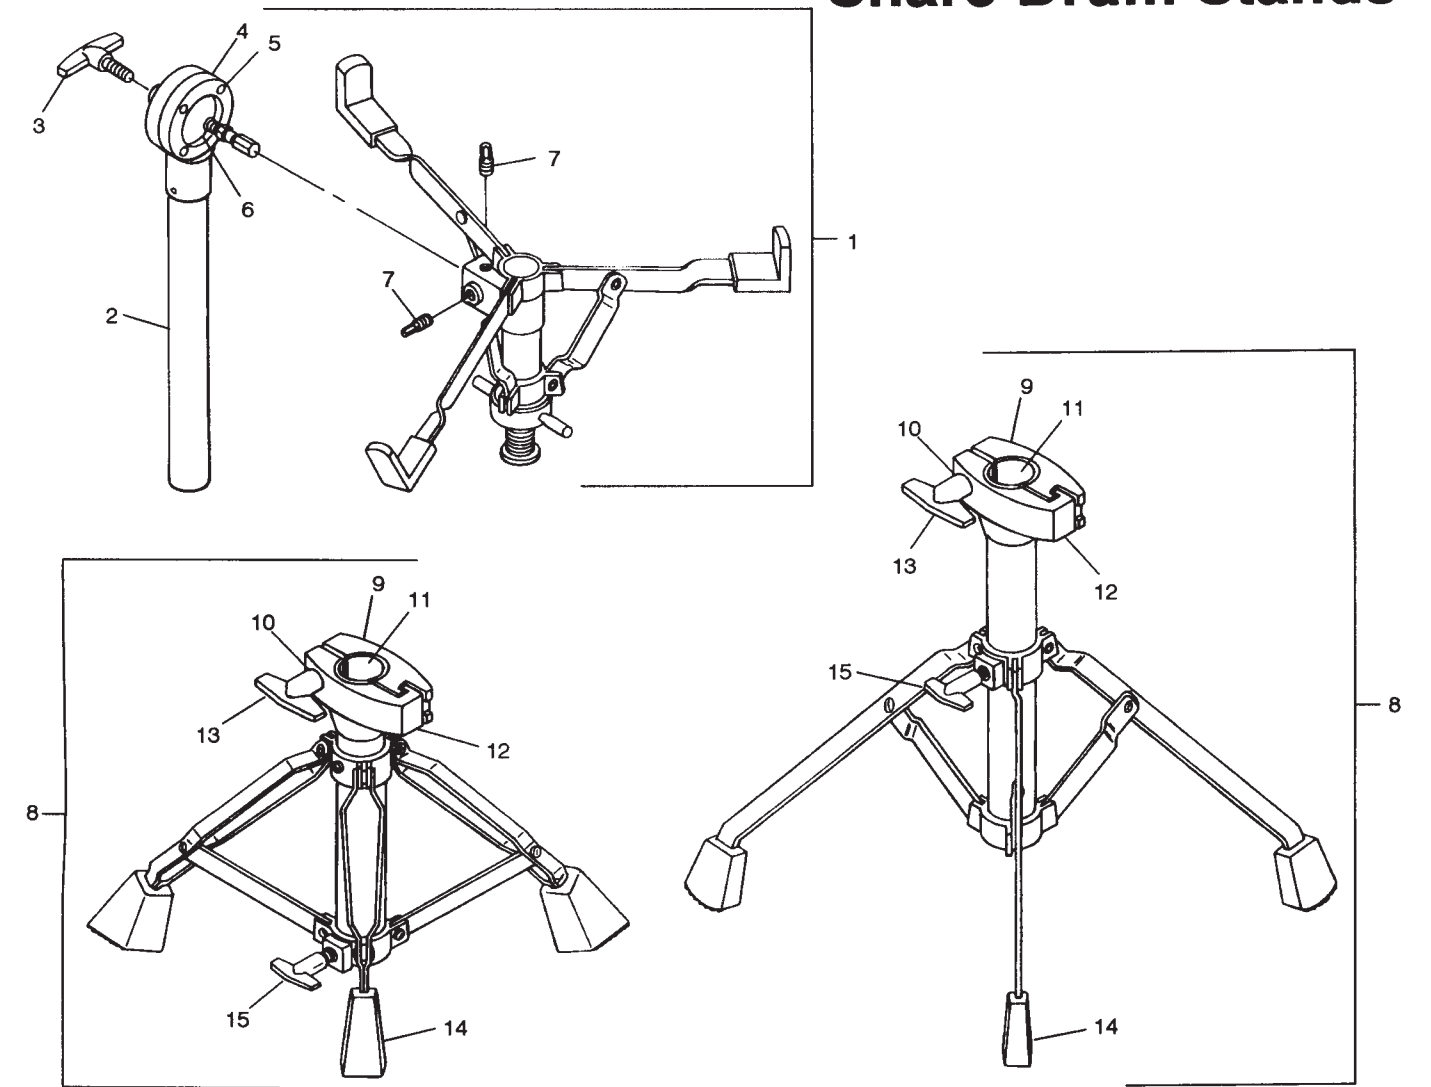


No. LM-922-SSL Modular Double Brace Low Profile Snare Drum Stand

Item No.	Part No.	Description
1	P-3978-A	Basket Assembly
2	P-3976-A	Upper Tube Assembly
3	P-3901	Male T-Handle
4	P-3976	Retaining Ring
5	P-3977	Allen Screw
6	P-3921	Adjustment Ball
7	P-3971	Drum Key Set Screw
8	P-3792	Base Assembly Complete
9	P-3763	Bolt, Hex Head
10	P-3970	Washer
11	P-3766	Nylon Collar Insert, 1"
12	P-3767	Collar Clamp
13	P-3903	Female T-Handle
14	P-3900	Crutch Tip
15	P-3901	Male T-Handle

No. LM-822-SSL Modular Snare Drum Stand

Item No.	Part No.	Description
1	P-3978-A	Basket Assembly
2	P-3976-A	Upper Tube Assembly
3	P-3901	Male T-Handle
4	P-3976	Retaining Ring
5	P-3977	Allen Screw
6	P-3921	Adjustment Ball
7	P-3971	Drum Key Set Screw
8	P-3793	Base Assembly Complete
9	P-3763	Bolt, Hex Head
10	P-3970	Washer
11	P-3766	Nylon Collar Insert, 1"
12	P-3767	Collar Clamp
13	P-3903	Female T-Handle
14	P-3999	Crutch Tip
15	P-3901	Male T-Handle


Snare Drum Stands

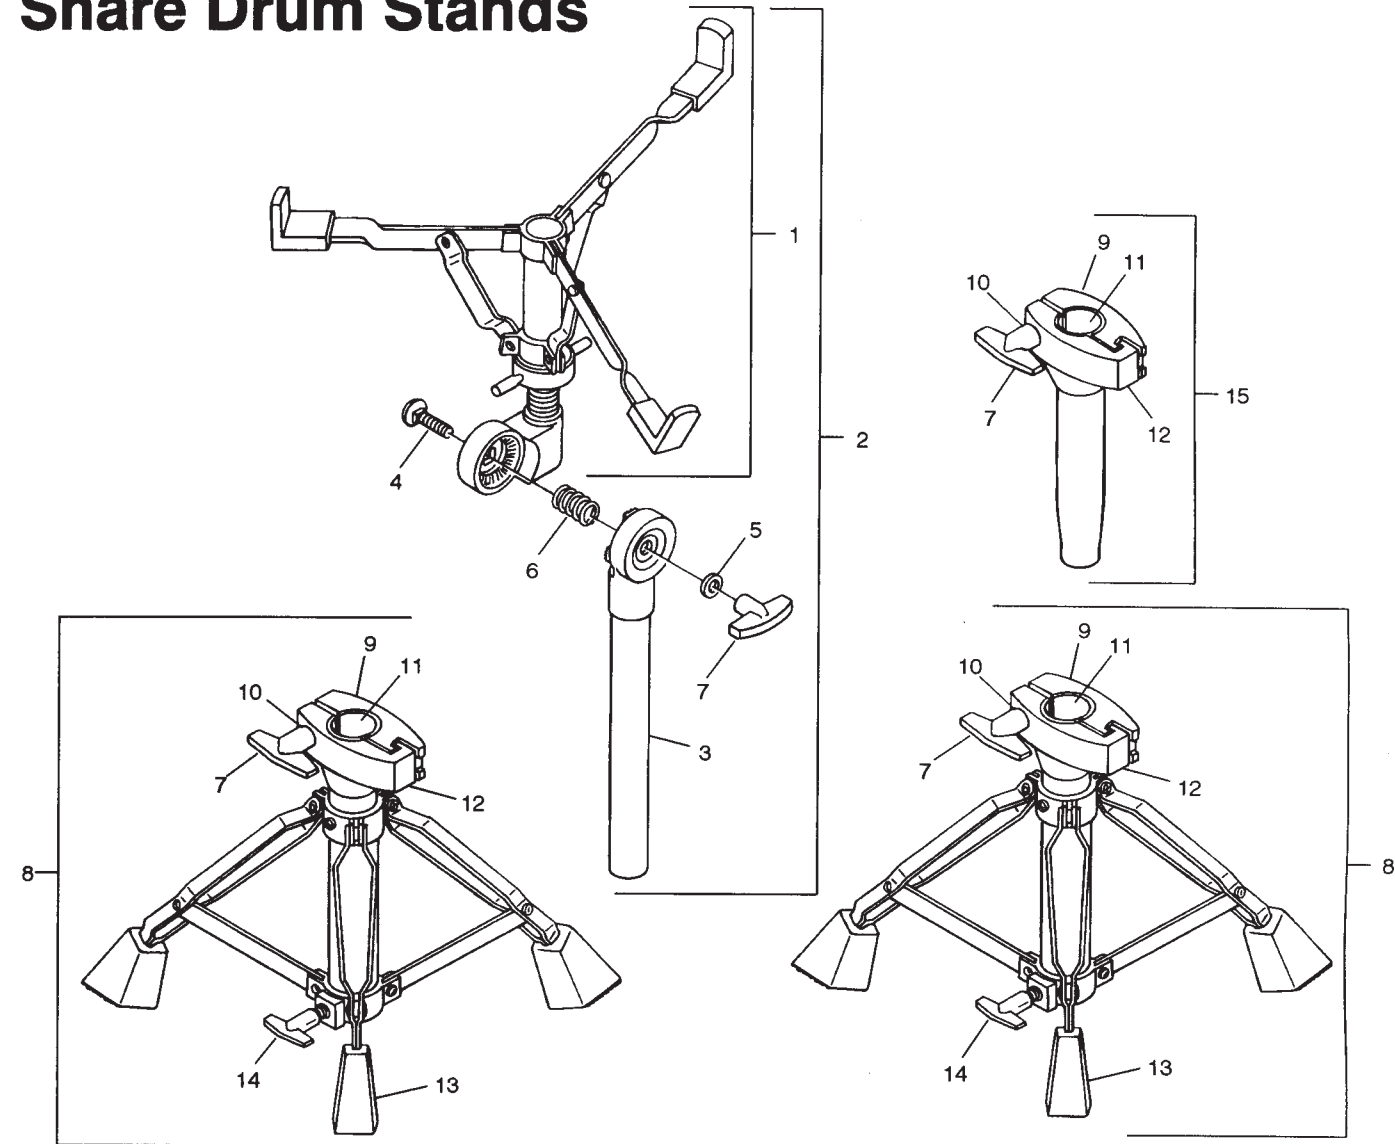

No. LM-923-SSC Modular Concert Double Brace Snare Stand

Item No.	Part No.	Description
1	P-3931-A1	Basket Assembly
2	P-3931-C	Basket Assembly with Inside Tube
3	P-39321	Upper Tube
4	P-3957	Bolt
5	P-3848	Washer
6	P-3904	Spring
7	P-3903	Female T-Handle
8	P-3792	Base Assembly Complete
9	P-3763	Bolt, Hex Head x 1-9/16"
10	P-3970	Washer
11	P-3766	Nylon Collar Insert, 1"
12	P-3767	Collar Clamp, 1"
13	P-3900	Crutch Tip
14	P-3901	Male T-Handle
15	LM-1394-CXT	Extension Tube

Snare Drum Stands

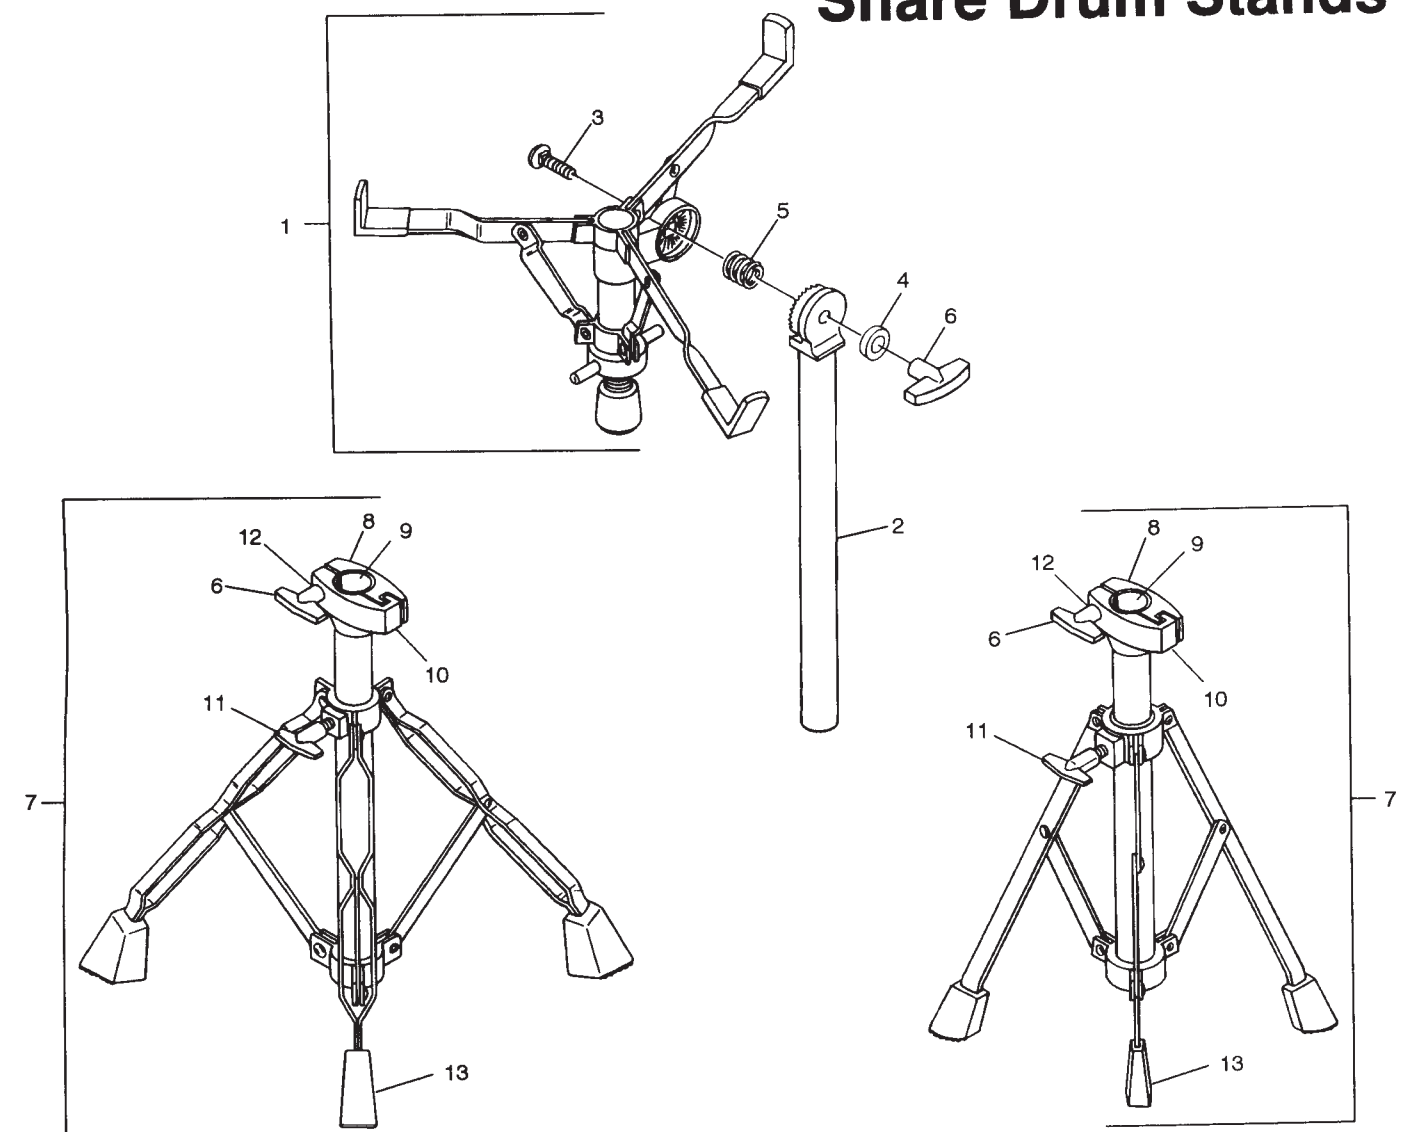


No. LC-722-SSL Classic Double Brace Low Snare Stand

Item No.	Part No.	Description
1	P-3794	Basket Assembly
2	P-3795	Upper Tube Assembly
3	P-3957	Bolt
4	P-3848	Washer
5	P-3904	Spring
6	P-3903	Female T-Handle
7	P-3796	Base Assembly Complete
8	P-3762	Bolt
9	P-3776	Nylon Collar Insert, 7/8"
10	P-3775	Collar Clamp
11	P-3901	Male T-Handle
12	P-3970	Washer
13	P-3900	Crutch Tip

No. LC-622-SSL Classic Single Brace Low Snare Stand

Item No.	Part No.	Description
1	P-3794	Basket Assembly
2	P-3795	Upper Tube Assembly
3	P-3957	Bolt
4	P-3848	Washer
5	P-3904	Spring
6	P-3903	Female T-Handle
7	P-3797	Base Assembly Complete
8	P-3762	Bolt
9	P-3776	Nylon Collar Insert, 7/8"
10	P-3775	Collar Clamp
11	P-3901	Male T-Handle
12	P-3970	Washer
13	P-3800	Crutch Tip

Snare Drum Stands

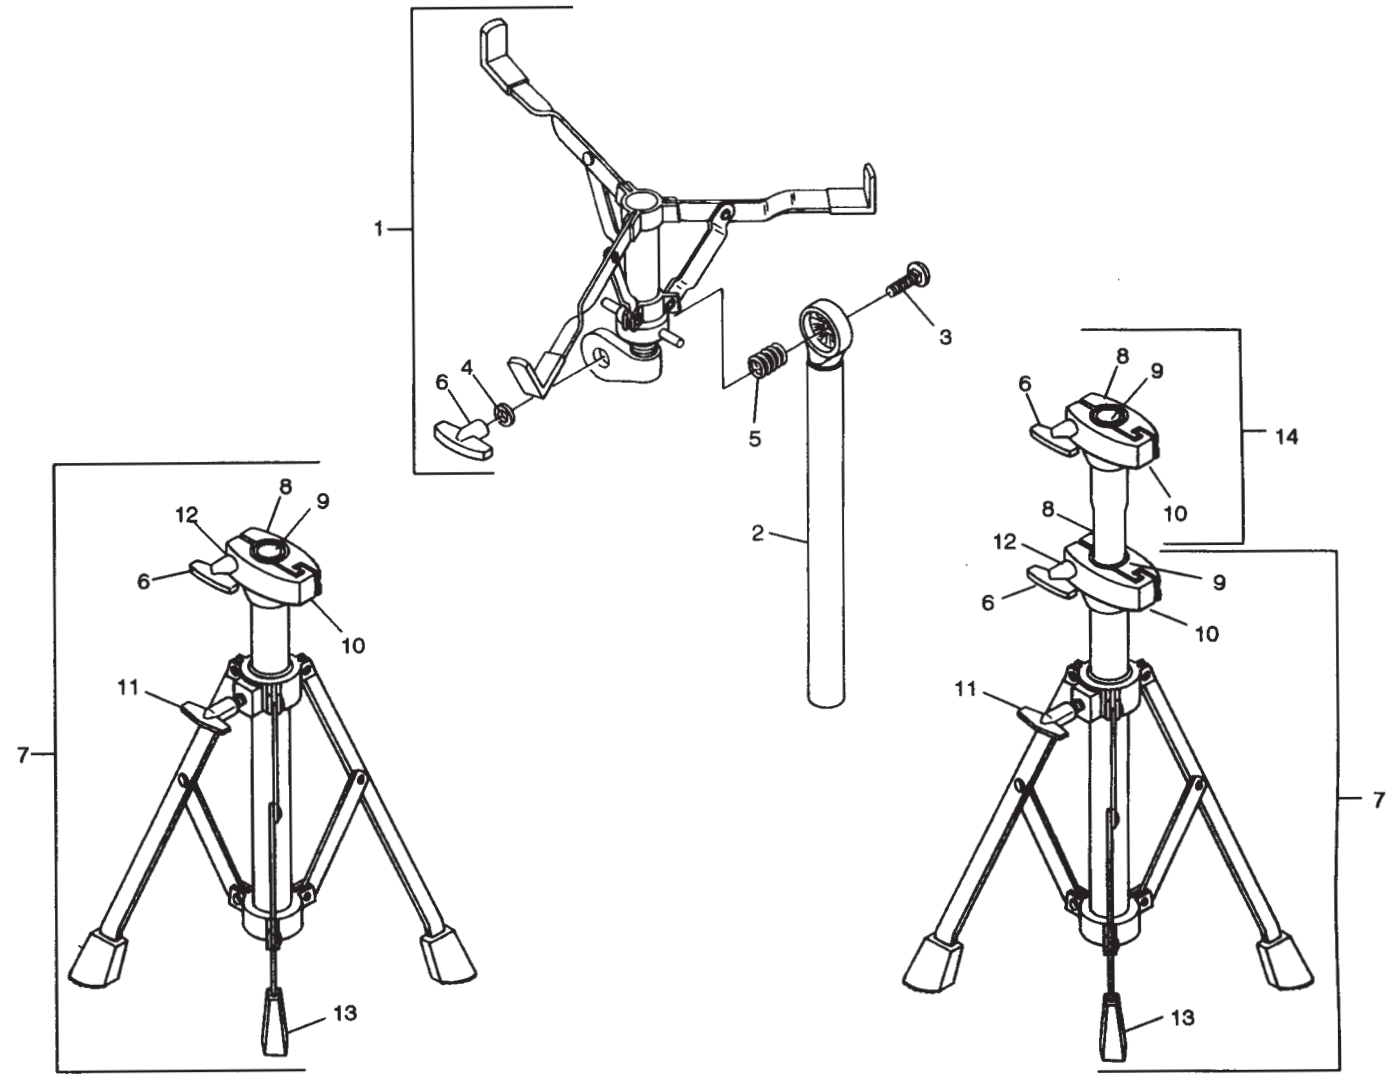


No. LC-621-SS Classic Single Base Snare Stand

Item No.	Part No.	Description
1	P-3798	Basket Assembly
2	P-3799	Upper Tube Assembly
3	P-3957	Bolt
4	P-3848	Washer
5	P-3904	Spring
6	P-3903	Female T-Handle
7	P-3797	Base Assembly Complete
8	P-3762	Bolt
9	P-3776	Nylon Collar Insert, 7/8"
10	P-3775	Collar Clamp
11	P-3901	Male T-Handle
12	P-3970	Washer
13	P-3800	Crutch Tip

No. LC-623-SSC Classic Concert Snare Stand Single Base

Item No.	Part No.	Description
1	P-3798	Basket Assembly
2	P-3799	Upper Tube Assembly
3	P-3957	Bolt
4	P-3848	Washer
5	P-3904	Spring
6	P-3903	Female T-Handle
7	P-3797	Base Assembly Complete
8	P-3762	Bolt
9	P-3776	Nylon Collar Insert, 7/8"
10	P-3775	Collar Clamp
11	P-3901	Male T-Handle
12	P-3970	Washer
13	P-3800	Crutch Tip
14	LR-1369CXT	Extension Tube



Snare Drum Stands

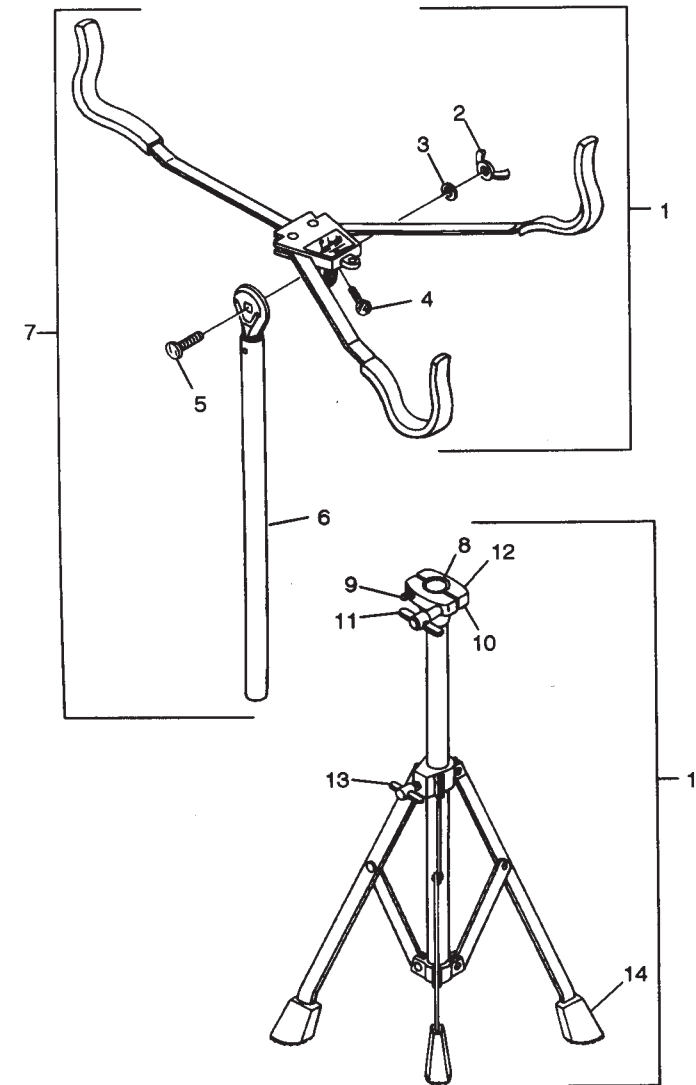

No. LT-121-SS Snare Stand

Item No.	Part No.	Description
1	P-3731-A	Basket Assembly
2	P-3704	Wing Nut
3	P-3733	Washer
4	P-3705	Thumb Screw
5	P-3734	Bolt
6	P-3732	Upper Tube with Ratchet
7	P-3731-B	Basket and Upper Tube Assembly
8	P-3699	Nylon Collar Insert, 5/8"
9	P-3007	Drum Key Rod
10	P-3696	Collar Clamp, 5/8"
11	P-7121	Female T-Handle
12	P-3698	Hex Bolt
13	P-3701	Male T-Handle
14	P-3700	Crutch Tip
15	P-3730-A	Base Assembly Complete


Tom Tom Holders and Stands

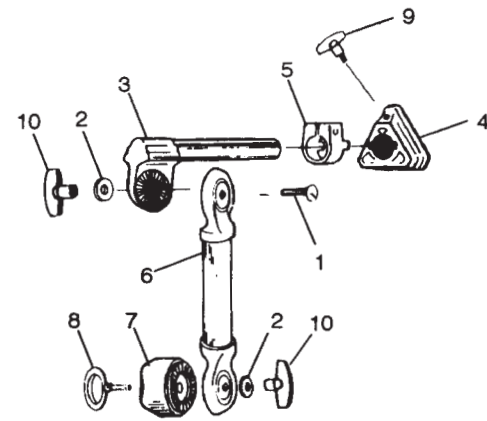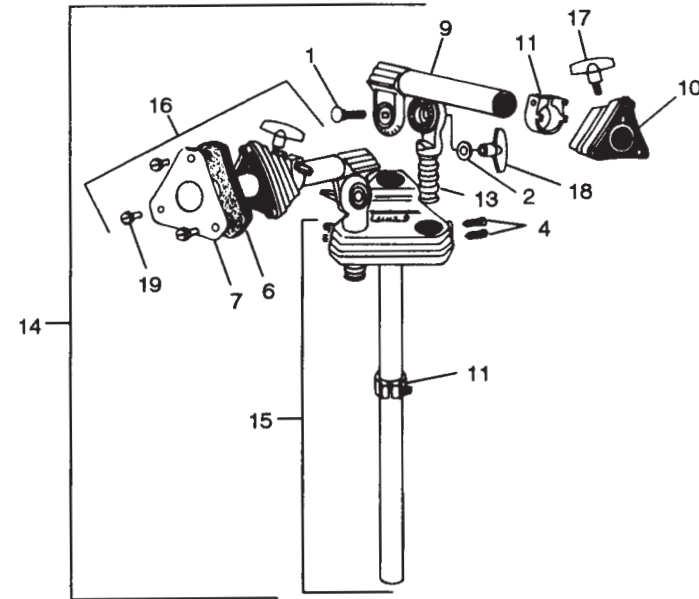

No. LM-455-STH Modular Add-On Single Tom Tom Holder

Item No.	Part No.	Description
1	P-232	Carriage Bolt
2	P-316	Washer
3	P-1761-C	Pistol Ratchet Arm
* 4	P-1762-B	Tom Mount Casting, Complete
5	P-1763-A	Quick Set Clamp, 1" dia.
6	P-2800-2	"Dog Bone" Converter Link
7	P-2850-1	Boom Ratchet
8	P-2851-2	Eye Bolt
9	P-2950-A	Male T-Handle
10	P-2952	Female T-Handle

* P-1762-B Tom Mounting Hardware sold separately.

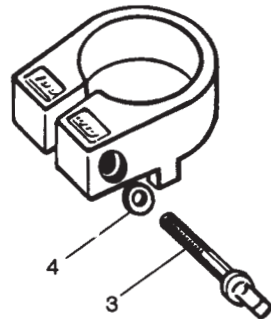

Quick Set Clamp


Item No.	Part No.	Description
1	P-1763-1A	Quick Set Clamp Assembly, Complete 7/8" dia.
2	P-1763-A	Quick Set Clamp Assembly, Complete 1" dia.
3	P-3008-R	Key Screw
4	P-3012-R	Key Rod Washer

No. LM-3002-MT Modular Double Tom Holder

Item No.	Part No.	Description
1	P-232	Carriage Bolt
2	P-316	Washer
3	P-16121	Retainer Shoe
4	P-1619-1	Set Screws
5	P-1672	Base Felt Pad
6	P-1677	Tom Felt Pad
7	P-17311	Metal Back Plate for P-1762-B
8	P-17541	Metal Back Plate for P-1765-B
9	P-1761-C	Pistol Ratchet Arm
* 10	P-1762-B	Tom Mount Casting, Complete
11	P-1763-A	Quick Set Clamp, 1" dia.
12	P-1765-B	Base Drum Modular Casting Assembly, Complete
13	P-1767	Grooved Ratchet
* 14	P-2905	Double Tom Holder Assembly, Complete
15	P-2909	Cluster Bracket with 17" Tube & 6 Set Screws
* 16	P-2920	Pistol Ratchet Arm
17	P-2950-A	Male T-Handle
18	P-2952	Female T-Handle
19	P-2982	Hex Head Mounting Screw

* P-1762-B Tom Mounting Hardware sold separately.

Tom Tom Holders and Stands

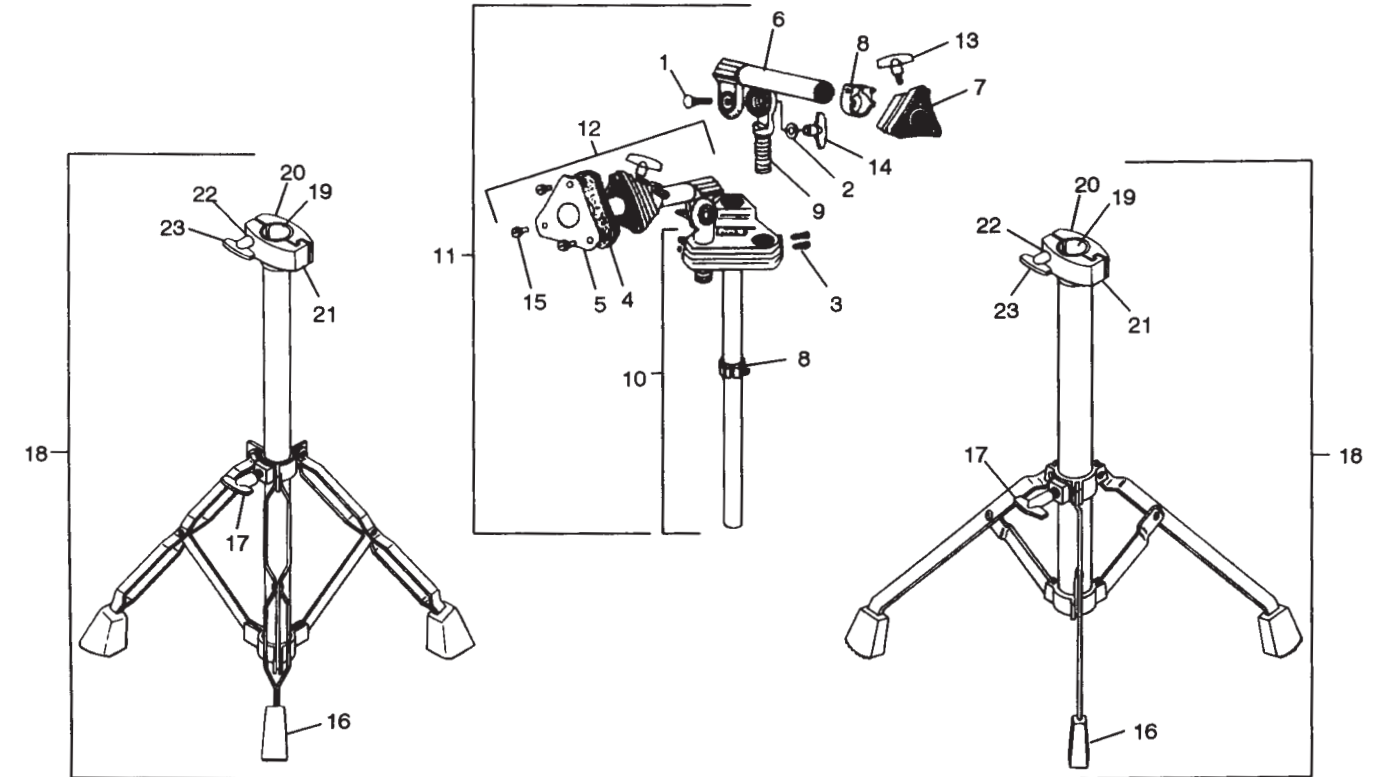

No. LM-441-TSM Modular Double Tom Stand

Item No.	Part No.	Description
1	P-232	Carriage Bolt
2	P-316	Washer
3	P-1619-1	Set Screws
4	P-1677	Tom Felt Pad
5	P-17311	Metal Back Plate for P-1762-B
6	P-1761-C	Pistol Ratchet Arm
7	P-1762-B	Tom Mount Casting, Complete
8	P-1763-A	Quick Set Clamp, 1" dia.
9	P-1767	Grooved Ratchet
10	P-2911	Cluster Bracket with 17" Tube, 6 Set Screws, Complete
* 11	P-2912	Modular Double Stand Tom without Base Assembly
* 12	P-2920	Pistol Ratchet Arm
13	P-2950-A	Male T-Handle
14	P-2952	Female T-Handle
15	P-2982	Hex Head Mounting Screw
16	P-3900	Crutch Tip
17	P-3901	Male T-Handle
18	P-37691	Base Assembly Complete
19	P-3766	Nylon Collar Insert, 1"
20	P-3763	Bolt, Hex Head x 1-9/16"
21	P-3767	Collar Clamp, 1"
22	P-3970	Washer
23	P-3903	Female T-Handle


* P-1762-B Tom Mounting Hardware sold separately.

No. LC-341-TSM Classic Double Tom Stand

Item No.	Part No.	Description
1	P-232	Carriage Bolt
2	P-316	Washer
3	P-1619-1	Set Screws
4	P-1677	Tom Felt Pad
5	P-17311	Metal Back Plate for P-1762-B
6	P-1761-C	Pistol Ratchet Arm
7	P-1762-B	Tom Mount Casting, Complete
8	P-1763-A	Quick Set Clamp, 1" dia.
9	P-1767	Grooved Ratchet
10	P-2911	Cluster Bracket with 17" Tube, 6 Set Screws, Complete
* 11	P-2912	Modular Double Stand Tom without Base Assembly
* 12	P-2920	Pistol Ratchet Arm
13	P-2950-A	Male T-Handle
14	P-2952	Female T-Handle
15	P-2982	Hex Head Mounting Screw
16	P-3999	Crutch Tip
17	P-3901	Male T-Handle
18	P-37701	Base Assembly Complete
19	P-3766	Nylon Collar Insert, 1"
20	P-3763	Bolt, Hex Head x 1-9/16"
21	P-3767	Collar Clamp, 1"
22	P-3970	Washer
23	P-3903	Female T-Handle

* P-1762-B Tom Mounting Hardware sold separately.

Tom Tom Holders and Stands

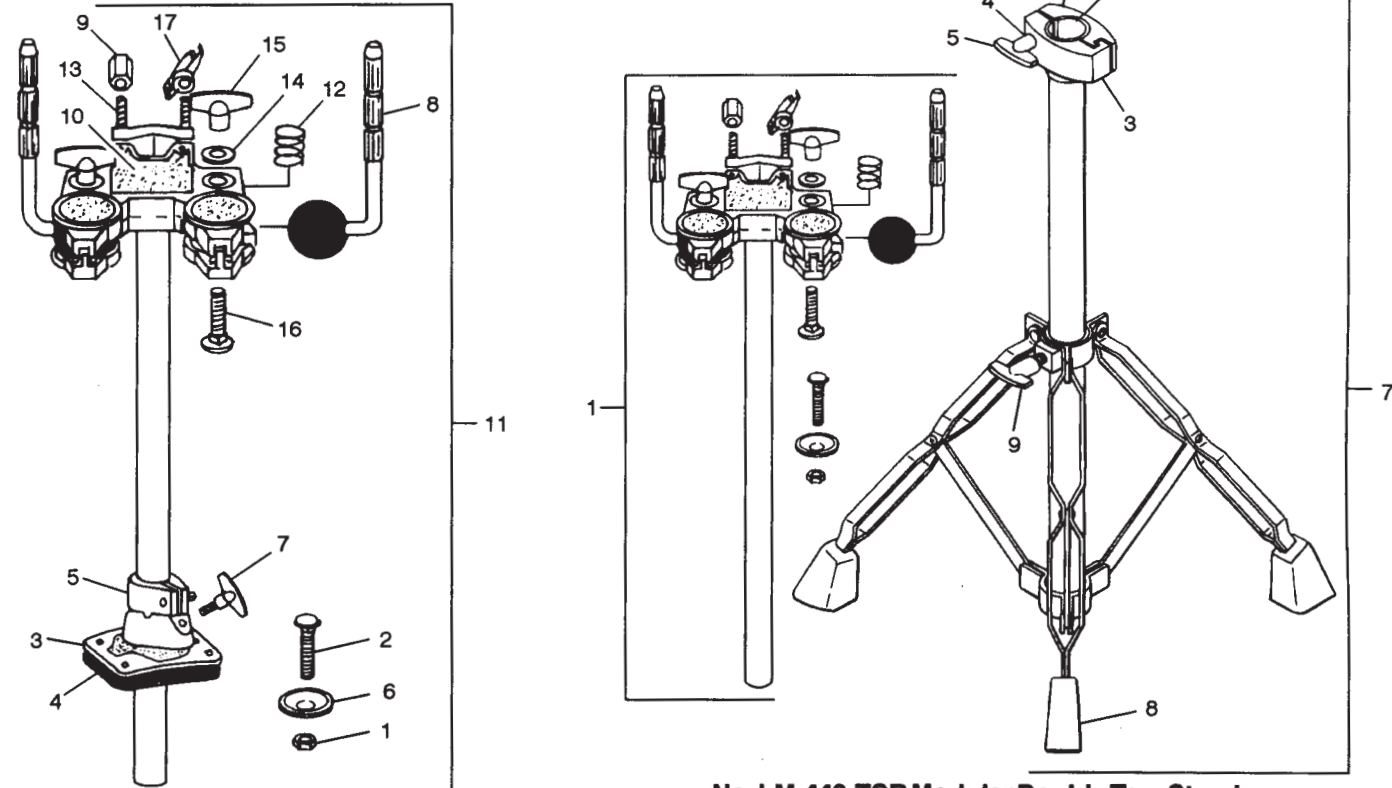

No. LR-2980-MT Rocker Double Tom Tom Holder


Item No.	Part No.	Description
1	P-150	Hex Nut
2	P-249	Bolt
3	P-1610-D	Base Drum Casting, Complete
4	P-1673	Felt Pad for P-1610-D
5	P-1763-A	Quick Set Clamp, 1" dia.
6	P-22221	Washer
7	P-2950-A	Male T-Handle
8	P-2954	L-Arm with Adjustment Ball
9	P-2955	Hex Nut, 3/4"
10	P-2956	Clamp Bracket
11	P-2957-C	Tom Holder with 17" Tube less P-1610-D
12	P-2958	Spring
13	P-2959	Bracket Rod
14	P-3848	Washer
15	P-3903	Female T-Handle
16	P-3957	Bolt
17	P-39591	Wing Nut

No. LM-442-TSR Modular Double Tom Stand with Rocker Mounts


Item No.	Part No.	Description
1	P-2957-C	Tom Holder with 17" Tube less P-1610-D
2	P-3766	Nylon Collar Insert, 1" dia.
3	P-3767	Collar Clamp, 1" dia.
4	P-3970	Washer
5	P-3903	Female T-Handle
6	P-3763	Bolt, Hex Head x 1-9/16"
7	P-37691	Base Assembly Complete
8	P-3900	Crutch Tip
9	P-3901	Male T-Handle

No. P-1216-D Mounting Bracket

Item No.	Part No.	Description
1	P-316	Washer
2	P-1216-D	Mounting Bracket, Complete
3	P-1632	Eye Bolt
4	P-2952	Female T-Handle
5	P-17321	Plate Disk
6	P-250	Machine Screw
7	P-305	Lock Washer

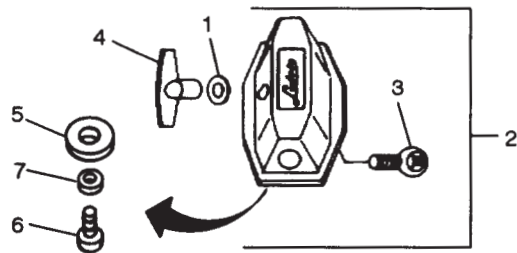

Thrones

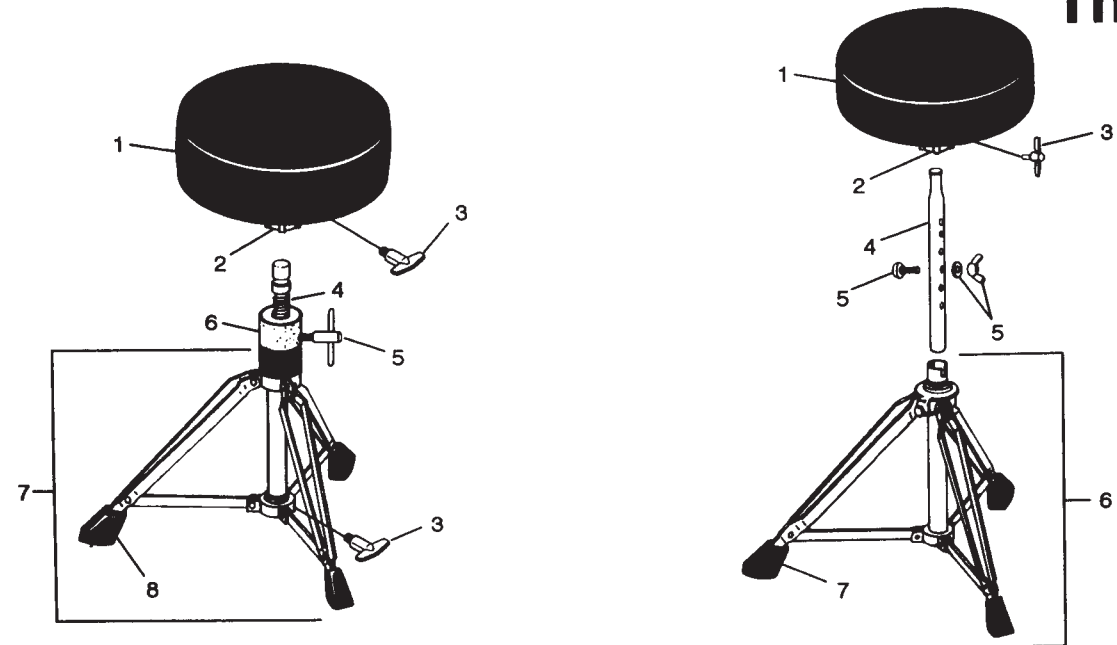


No. LM-446-TH Modular Drum Throne

Item No.	Part No.	Description
1	P-39931	Seat Only
2	P-3997	Seat Casting
3	P-3901	T-Handle
4	P-3996	Center Tube
5	P-3979	Adjustment T-Handle for P-8282
6	P-3882	Height Adjustment Ring
7	P-3998-A	Base Assembly
8	P-3900	Crutch Tip

No. LR-246-TH Rocker Throne

Item No.	Part No.	Description
1	P-39932	Seat Only
2	P-3997	Seat Casting
3	P-3995	T-Handle
4	P-39961	Center Tube
5	P-39971	Height Adjustment Bolt Assembly
6	P-3998	Base Assembly
7	P-3999	Crutch Tip

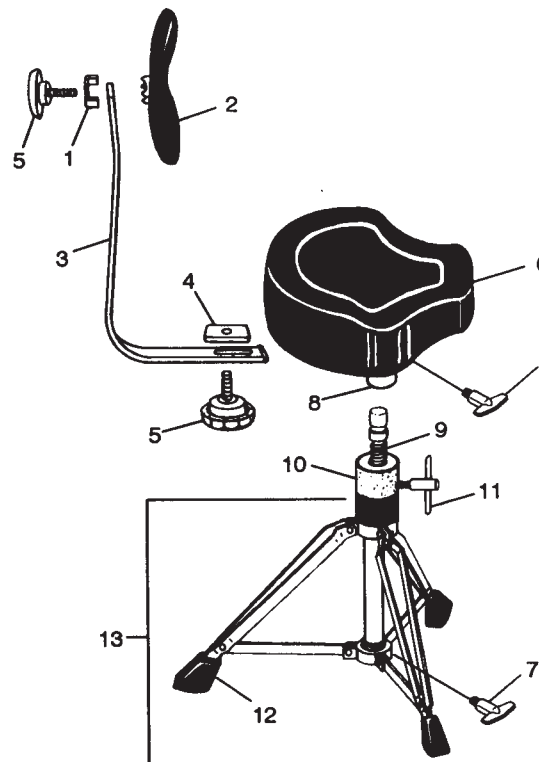

No. LM-449-THB Bicycle Seat Throne

Item No.	Part No.	Description
1	P-3886	U-Bracket
2	P-3888	Seat Back
3	P-3887	Back Post
4	P-3885	Knob Plate
5	P-3884	Seat Back Adjusting Knob
6	P-3963	Bicycle Seat Only
7	P-3901	Male T-Handle
8	P-3990	Seat Casting
9	P-3996	Center Tube
10	P-3882	Height Adjustment Ring
11	P-3979	Adjustment T-Handle for P-3882
12	P-3900	Crutch Tip
13	P-3998-A	Base Assembly

Original Equipment Drum Components

SNARE DRUMS

Bronze Series

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LB-550	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-550-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-552	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-552-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-553	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LB-553-K	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LB-554	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LB-554-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LB-556	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232
LB-556-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232

Brass Series

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LB-400-B	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-400-BT	5 x 14	P-2253-E (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-402-B	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-402-BT	6-1/2 x 14	P-2253-E (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-416	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-416-EN	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-416-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LB-417	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-417-EN	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-417-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LB-418	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LB-418-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LB-419	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232
LB-419-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232
LB-553-B	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LB-553-BEN	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LB-553-BK	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939

Metal Series

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LM-400	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LM-400-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LM-402	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LM-402-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930
LM-410	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LM-410-K	5 x 14	P-2230-B (10)	P-3052-A	P-21362-R	P-26432-R	P-70	L-1232
LM-411	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232
LM-411-K	6-1/2 x 14	P-2230-B (10)	P-3023-A	P-21362-R	P-26432-R	P-71	L-1232

Original Equipment Drum Components

SNARE DRUMS

Super Classic Series

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LS-558	3 x 14	P-2217-A (8)	P-3008-A	P-21362-R	P-26432-R	P-80	L-1930
LS-559	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LS-560	5 x 14	P-2240-F (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LS-560-T	5 x 14	P-2253-E (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LS-561	6-1/2 x 14	P-2239-C (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LS-561-T	6-1/2 x 14	P-2253-E (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LS-562-T	6 x 12	P-2253-E (8)	P-3009-B	P-32812-R	P-21352-R	P-85	L-1938
LS-462	6 x 12	P-2246-D (8)	P-3052-A	P-32812-R	P-21352-R	P-85	L-1938

Classic Series

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LC-555	3 x 13	P-2217-A (8)	P-3008-A	P-32822-R	P-21342-R	P-80	L-1939
LC-557	6 x 13	P-2240-F (8)	P-3023-A	P-32822-R	P-21342-R	P-85	L-1939
LC-401	5 x 14	P-2240-F (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LC-403	6-1/2 x 14	P-2239-C (10)	P-3052-A	P-21362-R	P-26432-R	P-85	L-1930
LC-472	6-1/2 x 14	P-2239-C (10)	P-3023-A	P-21362-R	P-26432-R	P-87	L-1110
LC-480	10 x 14	P-2250-E (12)	P-3051-A	P-32852-R	P-32912-R	P-87	L-1110
LC-481	10 x 14	P-2250-E (12)	P-3051-A	P-32852-R	P-32912-R	P-85	L-1930
LC-483	8 x 14	P-2239-C (12)	P-3023-A	P-32852-R	P-32912-R	P-87	L-1110
LC-484	8 x 14	P-2239-C (12)	P-3023-A	P-32852-R	P-32912-R	P-85	L-1930
LC-904	8 x 14	P-2239-C (12)	P-3023-A	P-32852-R	P-32912-R	P-85	L-1930

Miscellaneous

Rocker

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LR-717	5 x 14	P-2212-A (8)	P-3052-A	P-21222-R	P-21232-R	P-85	L-1930
LR-751	6-1/2 x 14	P-2212-A (8)	P-3023-A	P-21222-R	P-21232-R	P-85	L-1930

Aluminum Galaxy

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LM-404	5 x 14	P-2234-B (8)	P-3052-A	P-21222-R	P-21232-R	P-85	L-1930
LM-405	6-1/2 x 14	P-2234-B (10)	P-3023-A	P-21362-R	P-26432-R	P-85	L-1930

Original Equipment Drum Components

OUTFIT DRUMS

Long Lug Bass Drums

Model No.	Size (Inches)	Lug	T-Rod	Key Rod	Hoop	Claw Hook	Spur
LC-B548	14 x 18	P-2233-E (8)	P-3034-A (12)	P-3042-A (4)	P-2258-WX	P-2300-R	LR-2973-SP
LS-B648							
LC-B568	16 x 18	P-2233-E (8)	P-3011-A (12)	P-3041-A (4)	P-2258-WX	P-2300-R	LR-2973-SP
LS-B668							
LC-B540	14 x 20	P-2233-E (8)	P-3034-A (12)	P-3042-A (4)	P-2100-WX	P-2300-R	LR-2973-SP
LS-B640							
LC-B560	16 x 20	P-2233-E (8)	P-3011-A (12)	P-3041-A (4)	P-2100-WX	P-2300-R	LR-2973-SP
LS-B660							
LC-B542	14 x 22	P-2233-E (10)	P-3034-A (16)	P-3042-A (4)	P-2259-WX	P-2300-R	LR-2973-SP
LS-B642							
LC-B562	16 x 22	P-2233-E (10)	P-3011-A (16)	P-3041-A (4)	P-2259-WX	P-2300-R	LR-2973-SP
LS-B662							
LC-B544	14 x 24	P-2233-E (10)	P-3034-A (16)	P-3042-A (4)	P-2260-WX	P-2300-R	LR-2973-SP
LS-B644							
LC-B564	16 x 24	P-2233-E (10)	P-3011-A (16)	P-3041-A (4)	P-2260-WX	P-2300-R	LR-2973-SP
LS-B664							
LC-B546	14 x 26	P-2233-E (10)	P-3034-A (16)	P-3042-A (4)	P-2150-WX	P-2300-R	LR-2973-SP
LS-B646							
LC-B566	16 x 26	P-2233-E (10)	P-3011-A (16)	P-3041-A (4)	P-2150-WX	P-2300-R	LR-2973-SP
LS-B666							

Long Lug Tom Tom

Model No.	Size (Inches)	Lug	Rod	Hoop	
LC-T580	LS-T680	8 x 10	P-2251-E (6)	P-3052-A	P-32802-R
LC-T582	LS-T682	8 x 12	P-2251-E (6)	P-3052-A	P-21202-R
LCT-593	LS-T693	9 x 13	P-2251-E (6)	P-3052-A	P-21212-R
LC-T504	LS-T604	10 x 14	P-2250-E (6)	P-3023-A	P-21382-R
LC-T525	LS-T625	12 x 15	P-2250-E (8)	P-3052-A	P-21242-R
LC-T546	LS-T646	14 x 16	P-2233-E (8)	P-3023-A	P-21262-R
LC-T596	LS-T696	9 x 6	P-2251-E (4)	P-3023-A	P-21172-R
LC-T598	LS-T698	9 x 8	P-2251-E (4)	P-3023-A	P-21182-R
LC-T590	LS-T690	9 x 10	P-2251-E (6)	P-3023-A	P-32802-R
LC-T512	LS-T612	11 x 12	P-2251-E (6)	P-3023-A	P-21202-R
LC-T523	LS-T623	12 x 13	P-2250-E (6)	P-3023-A	P-21212-R
LC-T534	LS-T634	13 x 14	P-2250-E (8)	P-3023-A	P-21222-R
LC-T545	LS-T645	14 x 15	P-2233-E (8)	P-3023-A	P-21242-R
LC-T556	LS-T656	15 x 16	P-2233-E (8)	P-3051-A	P-21262-R

Long Lug Floor Tom

Model No.	Size (Inches)	Lug	Rod	Hoop	Legs
LC-F544	14 x 14	P-2233-E (8)	P-3023-A	P-21222-R	LC-5023-TL
LS-F644					
LC-F566	16 x 16	P-2233-E (8)	P-3010-A	P-21262-R	LC-5023-TL
LS-F666					
LC-F568	16 x 18	P-2233-E (8)	P-3010-A	P-21302-R	LC-5023-TL
LS-F668					

Original Equipment Drum Components

OUTFIT DRUMS

Short Lug Bass Drums

Model No.	Size (Inches)	Lug	T-Rod	Key Rod	Hoop	Claw Hook	Spur
LC-B348	14 x 18	P-2243-B (16)	P-3034-A (12)	P-3042-A (4)	P-2258-WX_	P-2300-R	LR-2973-SP
LS-B448							
LC-B368	16 x 18	P-2243-B (16)	P-3034-A (12)	P-3042-A (4)	P-2258-WX_	P-2300-R	LR-2973-SP
LS-B468							
LC-B340	14 x 20	P-2243-B (16)	P-3034-A (12)	P-3042-A (4)	P-2100-WX_	P-2300-R	LR-2973-SP
LS-B440							
LC-B360	16 x 20	P-2243-B (16)	P-3034-A (12)	P-3042-A (4)	P-2100-WX_	P-2300-R	LR-2973-SP
LS-B460							
LC-B342	14 x 22	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2259-WX_	P-2300-R	LR-2973-SP
LS-B442							
LC-B362	16 x 22	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2259-WX_	P-2300-R	LR-2973-SP
LS-B462							
LC-B344	14 x 24	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2260-WX_	P-2300-R	LR-2973-SP
LS-B444							
LC-B364	16 x 24	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2260-WX_	P-2300-R	LR-2973-SP
LS-B464							
LC-B346	14 x 26	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2150-WX_	P-2300-R	LR-2973-SP
LS-B446							
LC-B366	16 x 26	P-2243-B (20)	P-3034-A (16)	P-3042-A (4)	P-2150-WX_	P-2300-R	LR-2973-SP
LS-B466							

Short Lug Tom Tom

Model No.	Size (Inches)	Lug	Rod	Hoop	
LC-T380	LS-T480	8 x 10	P-2246-D (12)	P-3052-A	P-32802-R
LC-T382	LS-T482	8 x 12	P-2243-B (12)	P-3052-A	P-21202-R
LCT-393	LS-T693	9 x 13	P-2243-B (12)	P-3052-A	P-21212-R
LC-T304	LS-T404	10 x 14	P-2243-B (12)	P-3023-A	P-21382-R
LC-T325	LS-T425	12 x 15	P-2243-B (16)	P-3052-A	P-21242-R
LC-T346	LS-T446	14 x 16	P-2243-B (16)	P-3023-A	P-21262-R
LC-T396	LS-T496	9 x 6	P-2243-B (8)	P-3023-A	P-21172-R
LC-T398	LS-T498	9 x 8	P-2243-B (8)	P-3023-A	P-21182-R
LC-T390	LS-T490	9 x 10	P-2243-B (12)	P-3023-A	P-32802-R
LC-T312	LS-T412	11 x 12	P-2243-B (12)	P-3023-A	P-21202-R
LC-T323	LS-T423	12 x 13	P-2243-B (12)	P-3023-A	P-21212-R
LC-T334	LS-T434	13 x 14	P-2243-B (16)	P-3023-A	P-21222-R
LC-T345	LS-T445	14 x 15	P-2243-B (16)	P-3023-A	P-21242-R
LC-T356	LS-T456	15 x 16	P-2243-B (16)	P-3023-A	P-21262-R

Short Lug Floor Tom

Model No.	Size (Inches)	Lug	Rod	Hoop	Legs
LC-F344	14 x 14	P-2243-B (16)	P-3023-A	P-21222-R	LC-5023-TL
LS-F444					
LC-F366	16 x 16	P-2243-B (16)	P-3023-A	P-21262-R	LC-5023-TL
LS-F466					
LC-F368	16 x 18	P-2243-B (16)	P-3023-A	P-21302-R	LC-5023-TL
LS-F468					

Original Equipment Drum Components

ROCKER DRUMS

Bass Drum

Model No.	Size (Inches)	Lug	T-Rod	Key Rod	Hoop	Claw Hook	Spurs
LR-B242	14 x 22	P-2214-R (16)	P-3035-A (12)	P-3042-A (4)	P-2259-XX ()	P-2305-R	LR-2973-SP
LR-B262	16 x 22	P-2214-R (16)	P-3035-A (12)	P-3042-A (4)	P-2259-XX ()	P-2305-R	LR-2973-SP
LR-B264	16 x 24	P-2214-R (16)	P-3035-A (12)	P-3042-A (4)	P-2260-XX ()	P-2305-R	LR-2973-SP
LT-B142	14 x 22	P-2214-R (16)	P-3035-A (16)	—	P-3602-R	P-2305-R	LR-2924-SP

Floor Tom

Model No.	Size (Inches)	Lug	T-Rod	Key Rod	Hoop	Tom Legs
LR-F266	16 x 16	P-2214-R (16)	—	P-3023-A	P-2126-2R	LC-5023-TL
LR-F268	16 x 18	P-2214-R (16)	—	P-3023-A	P-2130-2R	LC-5023-TL

Tom Tom

Model No.	Size (Inches)	Lug	T-Rod	Key Rod	Hoop
LR-T270	8 x 10	P-2214-R (12)	—	P-3052-A	P-3280-1R
LR-T282	8 x 12	P-2214-R (12)	—	P-3052-A	P-2120-1R
LR-T293	9 x 13	P-2214-R (12)	—	P-3023-A	P-2121-1R
LR-T204	10 x 14	P-2214-R (12)	—	P-3023-A	P-2138-1R
LR-T225	12 x 15	P-2214-R (16)	—	P-3023-A	P-2124-1R

Original Equipment Drum Components

LS-700 SERIES OUTFIT DRUMS

Mini Classic Bass Drum

Model No.	Size (Inches)	Lug	T-Handle	Key Rod	Hoop	Claw Hook
LS-B748	14 x 18	P-2246-D (16)	P-3034-A (12)	P-3042-A (4)	P-2258-WX ()	P-2300-R (16)
LS-B768	16 x 18	P-2246-D (16)	P-3034-A (12)	P-3042-A (4)	P-2258-WX ()	P-2300-R (16)
LS-B740	14 x 20	P-2246-D (16)	P-3034-A (12)	P-3042-A (4)	P-2100-WX ()	P-2300-R (16)
LS-B760	16 x 20	P-2246-D (16)	P-3034-A (12)	P-3042-A (4)	P-2100-WX ()	P-2300-R (16)
LS-B742	14 x 22	P-2246-D (20)	P-3034-A (16)	P-3042-A (4)	P-2259-WX ()	P-2300-R (20)
LS-B762	16 x 22	P-2246-D (20)	P-3034-A (16)	P-3042-A (4)	P-2259-WX ()	P-2300-R (20)
LS-B764	16 x 24	P-2246-D (20)	P-3034-A (16)	P-3042-A (4)	P-2260-WX ()	P-2300-R (20)
LS-B766	16 x 26	P-2246-D (20)	P-3034-A (16)	P-3042-A (4)	P-2150-WX ()	P-2300-R (20)

All with LR2973-SP

- MX — P-1765-B Modular Bass Mount Only
- MH — LM-3002-MT Modular Double Tom Holder Complete
- LX — P-1610-D Ludwig Bass Mount Only
- LH — LR-2980-MT Rocker Double Tom Holder Complete
- XX — No Mounts

Mini Classic Tom Tom

Model No.	Size (Inches)	Lug	Rods	Hoop
LS-T788	8 x 8	P-2246-D (8)	P-3052-A (8)	P-21182-R
LS-T780	8 x 10	P-2246-D (12)	P-3052-A (12)	P-32802-R
LS-T782	8 x 12	P-2246-D (12)	P-3052-A (12)	P-21202-R
LS-T702	10 x 12	P-2246-D (12)	P-3052-A (12)	P-21202-R
LS-T793	9 x 13	P-2246-D (12)	P-3052-A (12)	P-21212-R
LS-T713	11 x 13	P-2246-D (12)	P-3052-A (12)	P-21212-R
LS-T704	10 x 14	P-2246-D (16)	P-3052-A (16)	P-21222-R
LS-T724	12 x 14	P-2246-D (16)	P-3052-A (16)	P-21222-R
LS-T735	13 x 15	P-2246-D (16)	P-3052-A (16)	P-21242-R
LS-T746	14 x 16	P-2246-D (16)	P-3052-A (16)	P-21262-R

- MM — P-1762-B Modular Mount Installed
- LM — P-1216-D Ludwig Mount Installed
- XX — No Mount

Mini Classic Floor Tom

Model No.	Size (Inches)	Lug	Rods	Hoop	Legs
LS-F744-XX	14 x 14	P-2246-D (16)	P-3023-A (16)	P-21222-R	LC-5023-TL
LS-F766-XX	16 x 16	P-2246-D (16)	P-3023-A (16)	P-21262-R	LC-5023-TL
LS-F768-XX	16 x 18	P-2246-D (16)	P-3023-A (16)	P-21302-R	LC-5023-TL

Original Equipment Drum Components

CONCERT SERIES

Concert Toms

Model No.	Size (Inches)	Lug	Rod	Hoop
LC-S396	9 x 6	P-2243-B (4)	P-3023-A	P-21172-R
LC-S398	9 x 8	P-2243-B (4)	P-3023-A	P-21182-R
LC-S390	9 x 10	P-2243-B (6)	P-3023-A	P-32802-R
LC-S312	11 x 12	P-2243-B (6)	P-3023-A	P-21202-R
LC-S323	12 x 13	P-2243-B (6)	P-3023-A	P-21212-R
LC-S334	13 x 14	P-2243-B (8)	P-3023-A	P-21222-R
LC-S345	14 x 15	P-2243-B (10)	P-3023-A	P-21402-R
LC-S356	15 x 16	P-2243-B (10)	P-3023-A	P-32832-R

Concert Bass Drums

Model No.	Size (Inches)	Lug	Rod	Hoop	Claw Hook
LE-CB28	14 x 28	P-2250-E (10)	P-3024-A	P-2152-XX *	P-2300-R
LE-CB32	16 x 32	P-2250-E (12)	P-3024-A	P-2158-XX *	P-2300-R
LE-CB36	16 x 36	P-2250-E (12)	P-3024-A	P-2189-XX *	P-2300-R
LE-CB40	18 x 40	P-2250-E (16)	P-3029-A	P-2190-XX *	P-2300-R
LE-CB86	18 x 36	P-2250-E (12)	P-3029-A	P-2189-XX *	P-2300-R

* Color Code

MARCHING SERIES

Challenger Snare Drum

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LF-V924	12 x 14	P-2250-M (12)	P-3051-A	L-4143	L-4146	P-90	L-1102
LF-T124	12 x 14	P-2250-M (12)	P-3051-A	L-4143	P-32912-R	P-87	L-1108
LF-T125	12 x 15	P-2250-M (12)	P-3051-A	P-32842-R	P-32902-R	P-87	L-1105
LF-C104	10 x 14	P-2250-M (10)	P-3052-A	P-21362-R	P-26432-R	P-87	L-1108
LF-C124	12 x 14	P-2250-M (10)	P-3051-A	P-21362-R	P-26432-R	P-87	L-1108
LF-C125	12 x 15	P-2250-M (10)	P-3051-A	P-21402-R	P-26412-R	P-87	L-1105

USA Free Floater Snare Drum

Model No.	Size (Inches)	Swivel Nut	Retaining Ring	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LF-F024	12 x 14	P-3090-R	P-3091	P-3052-A	L-4143-B (Black)	L-4146-B (Black)	P-90	L-1103
					L-4143-W (White)	L-4146-W (White)		

Challenger Multi-Toms

Model No.	Size (Inches)	Lug	Rod	Hoop
LC-P306	6	P-2243-M (4)	P-3023-A	P-21172-R
LC-P308	8	P-2243-M (6)	P-3023-A	P-22192-R
LC-P310	10	P-2243-M (6)	P-3023-A	P-32802-R
LC-P312	12	P-2243-M (8)	P-3023-A	P-32812-R
LC-P313	13	P-2243-M (8)	P-3023-A	P-32822-R
LC-P314	14	P-2243-M (10)	P-3023-A	P-21362-R
LC-P315	15	P-2243-M (10)	P-3023-A	P-21402-R
LC-P316	16	P-2243-M (10)	P-3023-A	P-32832-R

Original Equipment Drum Components

MARCHING SERIES

Challenger Bass Drums

Model No.	Size (Inches)	Lug	Rod	Hoop	Claw Hooks
LF-C626	10 x 26	P-2243-M (20)	P-3010-A	P-2150-XX X	P-2304
LF-C628	10 x 28	P-2243-M (20)	P-3010-A	P-2152-XX X	P-2304
LF-C218	14 x 18	P-2250-M (10)	P-3041-A	P-2258-XX X	P-2304
LF-C 220	14 x 20	P-2250-M (12)	P-3041-A	P-2100-XX X	P-2304
LF-C222	14 x 22	P-2250-M (12)	P-3041-A	P-2259-XX X	P-2304
LF-C224	14 x 24	P-2250-M (12)	P-3041-A	P-2260-XX X	P-2304
LF-C226	14 x 26	P-2250-M (12)	P-3041-A	P-2150-XX X	P-2304
LF-C228	14 x 28	P-2250-M (12)	P-3041-A	P-2152-XX X	P-2304
LF-C230	16 x 30	P-2250-M (12)	P-3040-A	P-2154-XX X	P-2304
LF-C232	16 x 32	P-2250-M (12)	P-3040-A	P-2158-XX X	P-2304

Strider Snare Drums

Model No.	Size (Inches)	Lug	Rod	Batter Hoop	Snare Hoop	Strainer	Snare
LF-S104	10 x 14	P-2246-D (16)	P-3023-A	P-21222-R	P-21232-R	P-85	L-1929
LF-S124	12 x 14	P-2243-M (16)	P-3051-A	P-21222-R	P-21232-R	P-85	L-1929
LF-S125	12 x 15	P-2243-M (16)	P-3051-A	P-21242-R	P-21252-R	P-85	L-1932

Strider Bass Drums

Model No.	Size (Inches)	Lug	Rod	Hoop	Claw Hooks
LF-S218	14 x 18	P-2243-M (16)	P-3010-A	P-2258-XX *	P-2304
LF-S220	14 x 20	P-2243-M (16)	P-3010-A	P-2100-XX *	P-2304
LF-S222	14 x 22	P-2243-M (20)	P-3010-A	P-2259-XX *	P-2304
LF-S224	14 x 24	P-2243-M (20)	P-3010-A	P-2260-XX *	P-2304
LF-S226	14 x 26	P-2243-M (20)	P-3010-A	P-2150-XX *	P-2304
LF-S228	14 x 28	P-2243-M (20)	P-3010-A	P-2152-XX *	P-2304


* Color Code

LATIN SERIES


Model No.	Size (Inches)	Lug	Rod	Hoop
Congas	12	P-2243-B (6)	P-3010-A	P-21201-R
Bongos	6	P-2243-B (4)	P-3052-A	P-21151-R
	8	P-2243-B (4)	P-3052-A	P-21161-R
Timbales	13	P-2246-D (6)	P-3023-A	P-21212-R
	14	P-2246-D (8)	P-3023-A	P-21222-R

Tension Lugs


Item No.	Part No.	Description
1	P-2234-B	Twin Lug for Metal Snare Drums
1a	P-2201-R	Short Swivel Nut
1b	P-2200-R	Plastic Insert Retainer
1c	P-260-A	Mounting Screw for Metal Shells

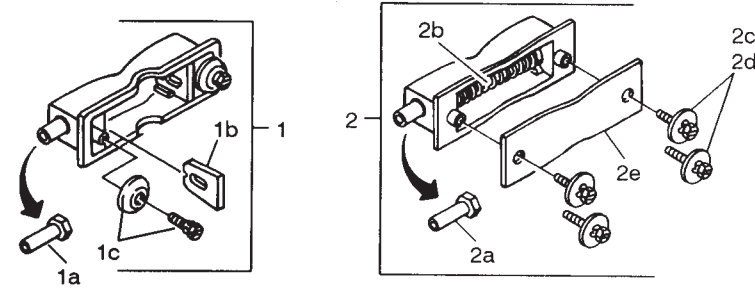

2	P-2240-F	Twin Lug for Wood Shells
2a	P-2201-R	Short Swivel Nut
2b	P-2242	Spring
2c	P-22492	Mounting Screws for Classic Wood Shell
2d	P-22491	Mounting Screws for Super Classic Wood Shell
2e	P-6266	Gasket

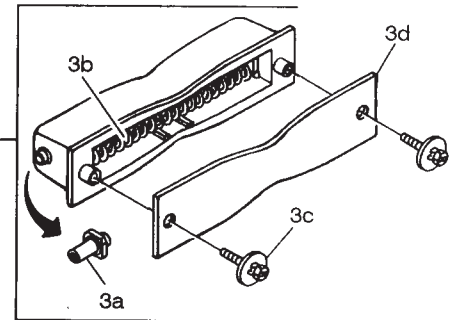


3	P-2239-C	Twin Lug for Wood Shells
3a	P-2201-R	Short Swivel Nut
3b	P-2238	Spring
3c	P-22492	Mounting Screws for Classic Wood Shell
3d	P-6265	Gasket

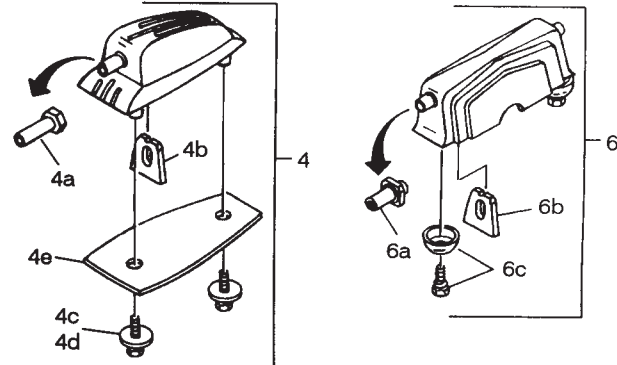

4	P-2243-B	Large Classic Lug
4a	P-2202-R	Long Swivel Nut
4b	P-2200-R	Plastic Insert Retainer
4c	P-22492	Mounting Screws for Classic Wood Shell
4d	P-22491	Mounting Screws for Super Classic Wood Shell
4e	P-6264	Gasket

5	P-2246-D	Small Classic Lug
5a	P-2210-R	Short Swivel Nut
5b	P-2248	Spring
5c	P-22492	Mounting Screws for Classic Wood Shell
5d	P-22491	Mounting Screws for Super Classic Wood Shell
5e	P-6267	Gasket

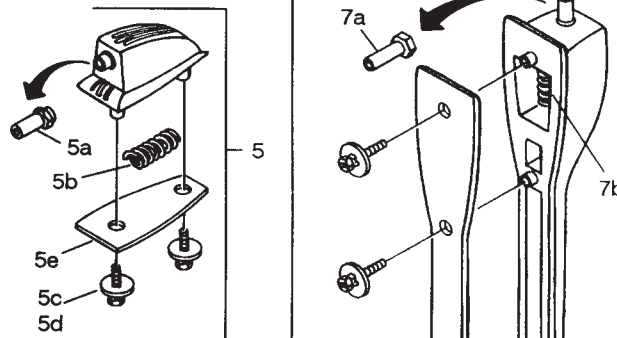


6	P-2230-B	Imperial Lug for Metal Snare Drum
6a	P-2210-R	Short Swivel Nut
6b	P-2200-R	Plastic Insert Retainer
6c	P-260-A	Mounting Screws for Metal Snare Srum

7	P-2233-E	Custom Lug for Wood Shell (L)
7a	P-2208-R	Long Swivel Nut
7b	P-2248	Spring
7c	P-22492	Mounting Screws for Classic Wood Shell
7d	P-22491	Mounting Screws for Super Classic Wood Shell
7e	P-6263	Gasket


Tension Lugs

Item No.	Part No.	Description
1	P-2250-E	Custom Lug for Wood Shell (M)
1a	P-2208-R	Long Swivel Nut
1b	P-2248	Spring
1c	P-22492	Mounting Screws for Classic Wood Shell
1d	P-22491	Mounting Screws for Super Classic Wood Shell
1e	P-6262	Gasket

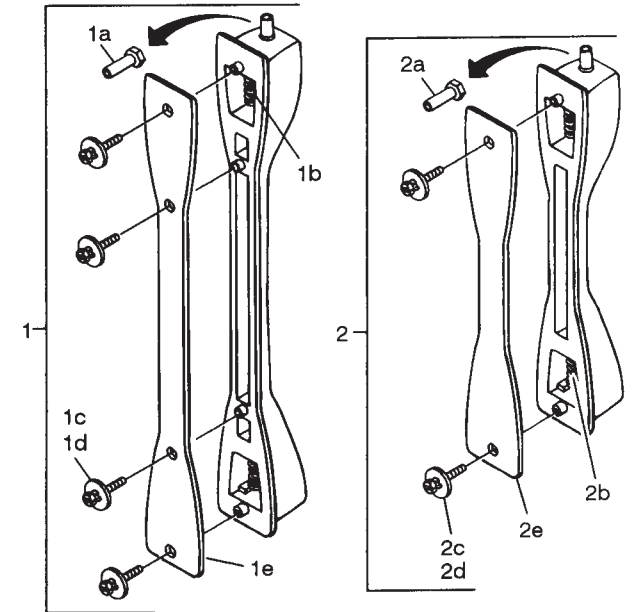


2	P-2251-E	Custom Lug for Wood Shell (S)
2a	P-2208-R	Long Swivel Nut
2b	P-2248	Spring
2c	P-22492	Mounting Screws for Classic Wood Shell
2d	P-22491	Mounting Screws for Super Classic Wood Shell
2e	P-6261	Gasket

3	P-2250-M	Custom Lug for Wood Shell Marching Drums
3a	P-22081	Long Swivel Nut
3b	P-2248	Spring
3c	P-22492	Mounting Screws for Classic Wood Shell
3d	P-22491	Mounting Screws for Super Classic Wood Shell
3e	P-6262	Gasket

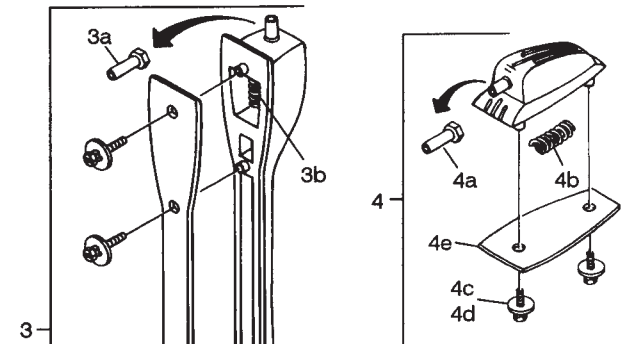


4	P-2243-M	Large Classic Lug for Wood Shell Marching Drums
4a	P-22081	Long Swivel Nut
4b	P-2248	Spring
4c	P-22492	Mounting Screws for Classic Wood Shell
4d	P-22491	Mounting Screws for Super Classic Wood Shell
4e	P-6264	Gasket

5	P-2217-A	Piccolo Lug
5a	P-2302-R	Swivel Nut
5b	P-2248	Spring
5c	P-22492	Mounting Screws for Classic Wood Shell
5d	P-22491	Mounting Screws for Super Classic Wood Shell
5e	P-260-A	Mounting Screws for Metal Shell
5f	P-6269	Gasket

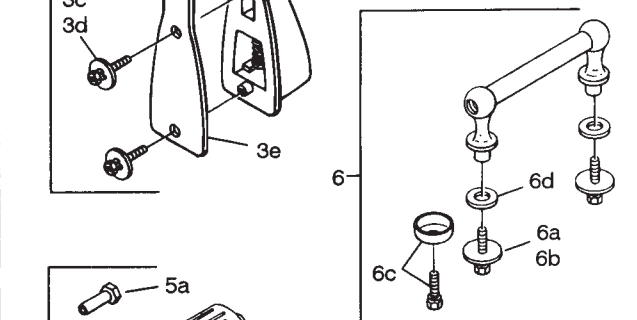

6	P-2253-E	Tube Lug for 5 x 14, 6 x 12 and 6-1/2 x 14 Snare Drums
6a	P-22491	Mounting Screw for Classic Wood Shell
6b	P-3013-R	Mounting Screws for Super Classic Wood Shells
6c	P-260	Mounting Screws for Metal Snare Drums
6d	P-6268	Gasket

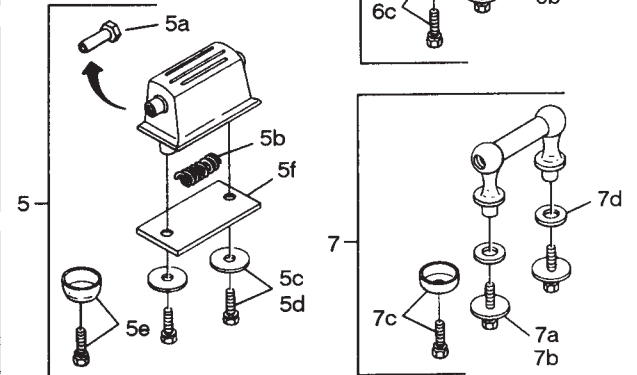

7	P-2253-1E	Tube Lug for 3 x 13 and 3-1/2 x 14 Snare Drums
7a	P-22491	Mounting Screw for Classic Wood Shell
7b	P-3013-R	Mounting Screws for Super Classic Wood Shells
7c	P-260-A	Mounting Screws for Metal Snare Drums
7d	P-6268	Gasket

Tension Lugs

Item No.	Part No.	Description
1	P-7129	Rocker Bass Tube Lug
1a	P-2201-R	Swivel Nut
1b	P-2200-R	Plastic Insert
1c	P-7135	Mounting Screws



2	P-71293	Rocker Floor Tom Tube Lug for 16 x 18 and 16 x 16
2a	P-2201-R	Swivel Nut
2b	P-2200-R	Plastic Insert
2c	P-7135	Mounting Screws

3	P-71294	Rocker Tom Tube Lug for 12 x 14
3a	P-2201-R	Swivel Nut
3b	P-2200-R	Plastic Insert
3c	P-7135	Mounting Screws


4	P-71292	Rocker Tom Tube Lug for 11 x 13
4a	P-2201-R	Swivel Nut
4b	P-2200-R	Plastic Insert
4c	P-7135	Mounting Screws

5	P-71291	Rocker Tom Tube Lug for 10 x 12
5a	P-2201-R	Swivel Nut
5b	P-2200-R	Plastic Insert
5c	P-7135	Mounting Screws

6	P-71295	Rocker Tom Tube Lug for 8 x 10
6a	P-2201-R	Swivel Nut
6b	P-2200-R	Plastic Insert
6c	P-7135	Mounting Screws

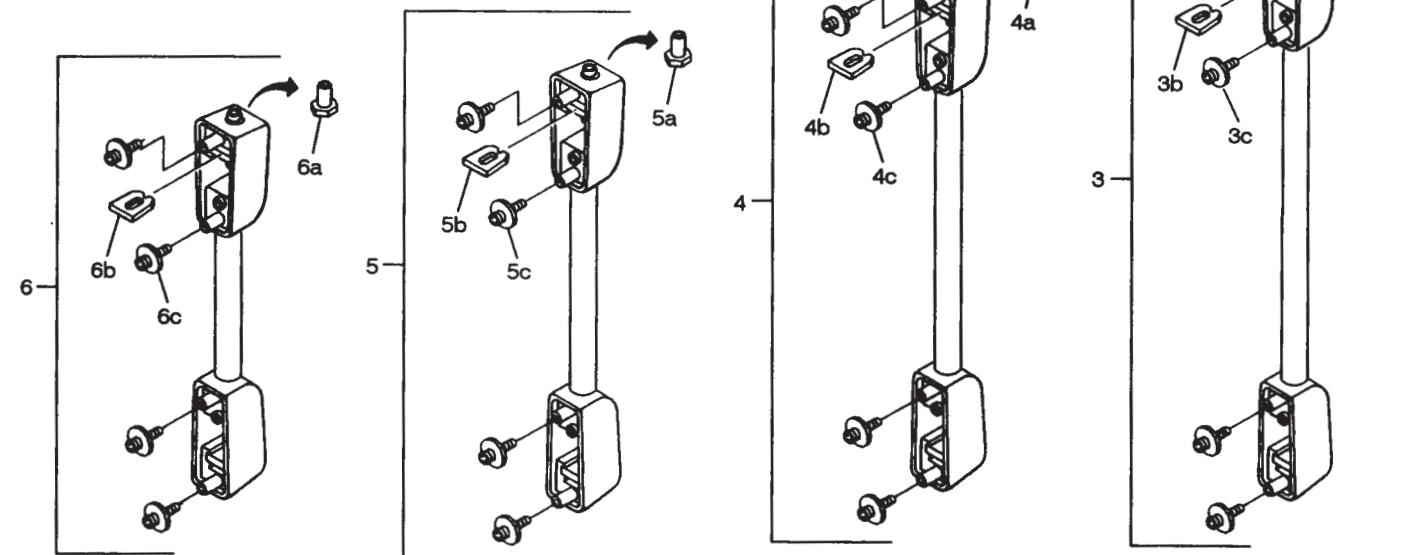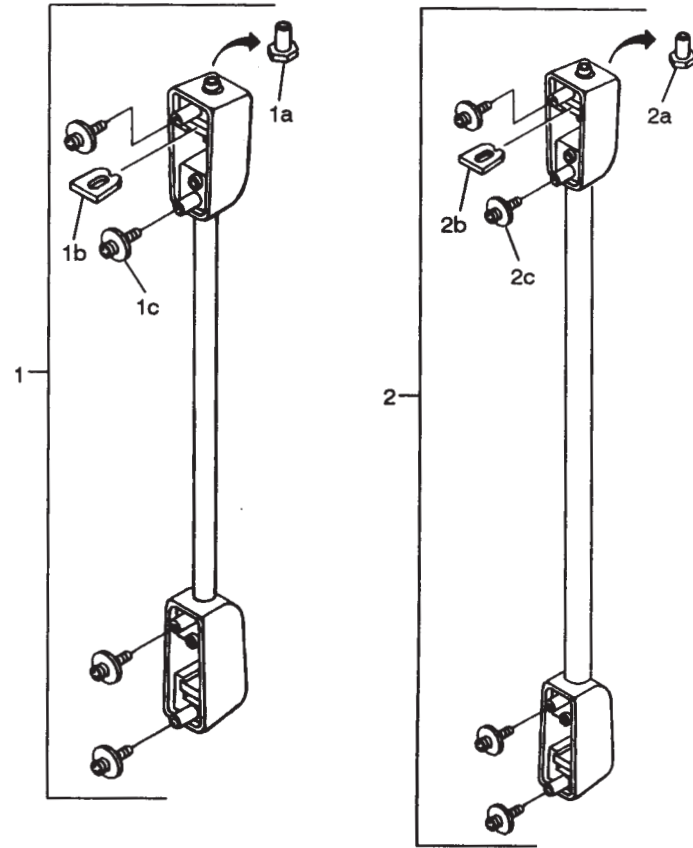

Tension Rods & Clawhooks

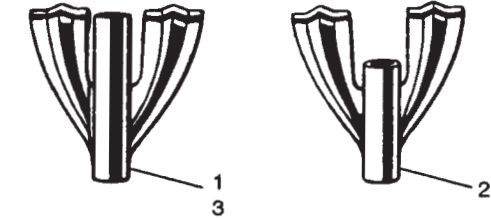


T-Handle Rods

Part No.	Description
P-3034-A	T-Handle Rod with Washer, 4-1/8"
P-3024-A	T-Handle Rod with Washer, 6-1/8"
P-3029-A	T-Handle Rod with Washer, 7"
P-3054-A	T-Handle Rod with Washer, 7-5/8"
P-3035-A	T-Handle Rod with Washer, 4-1/2"
P-3011-A	T-Handle Rod with Washer, 4-3/8"

Double Clawhooks

Item No.	Part No.	Description
1	P-2300-R	Clawhook for T-Handle Rod
2	P-2304	Clawhook for Key Tension Rod
3	P-2305-R	Clawhook for T-Handle Rod (Rocker II)

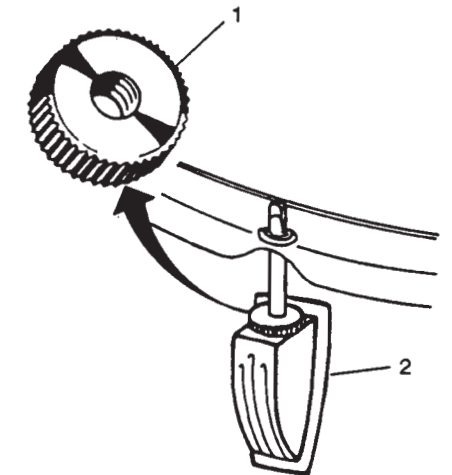

Key Rods

Part No.	Description
P-3052-A	Key Rod with Washer, 1-5/8"
P-3023-A	Key Rod with Washer, 2-5/16"
P-3051-A	Key Rod with Washer, 2-3/4"
P-3010-A	Key Rod with Washer, 3-3/8"
P-3041-A	Key Rod with Washer, 5"
P-3040-A	Key Rod with Washer, 5-5/8"
P-3008-A	Key Rod with Washer, 1-1/8"
P-3009-A	Key Rod with Washer, 1-7/8"
P-3042-A	Key Rod with Washer, 4-3/16"


Tension Rod Locknut (For All Snare drums and Tom Toms)

Item No.	Part No.	Description
1	P-2429-1	Tension Rod Lock Nut

Key Rod and T-Handle Rod Washers


2	P-3012-R	Key Rod Washer
---	----------	----------------

Drum Hoops

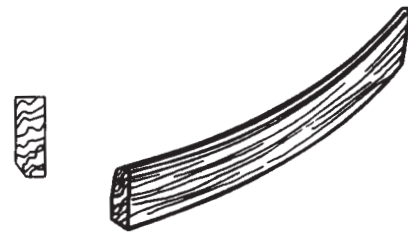


Outfit Wood Bass Drum Hoops 1-7/8" Wide

Size	Model No.	Colors Available
18"	P-2258	WXT – Sable for All Pearl Finished Drums
20"	P-2100	WXA – Purple Shadow
22"	P-2259	WXJ – Blue Shadow
24"	P-2260	WXK – Emerald Shadow
26"	P-2150	WXL – Cherry Stain
		WXN – Natural Maple
		WXV – Artic Classic Coat
		WXY – Charcoal Shadow
		WXZ – Flame Shadow
		XX – Special Order (Specify Color)

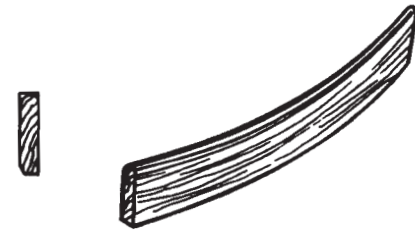

Concert and Marching Wood Bass Drum Hoops 1-1/2" Wide


Size	Model No.	Colors Available
18"	P-2258	XXX – Black for All Pearl Finished Drums
20"	P-2100	XXN – Natural Maple
22"	P-2259	XXM – Mahogany Stain
24"	P-2260	XX_ – Special
26"	P-2150	
28"	P-2152	
30"	P-2154	
32"	P-2158	
36"	P-2189	
40"	P-2190	

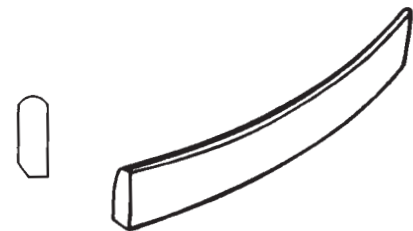

Outfit Metal Bass Drum Hoops 1-7/8" Wide


Size	Model No.	Colors Available
22"	P-3602-R	Chrome
22"	P-3602-RB	Black

Drum Hoops

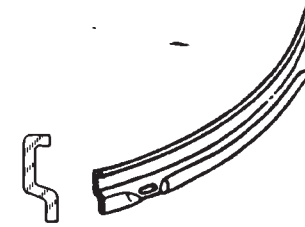


Triple Flanged, Batter Hoops

1.9mm Model No.	2.3mm Model No.	Size	Description
P-2117-1R	P-2117-2R	6"	4 Rod
P-2118-1R	P-2118-2R	8"	4 Rod
P-2219-1R	P-2219-2R	8"	6 Rod
P-3280-1R	P-3280-2R	10"	6 Rod
P-2120-1R	P-2120-2R	12"	6 Rod
P-3281-1R	P-3281-2R	12"	8 Rod
P-2121-1R	P-2121-2R	13"	6 Rod
P-3282-1R	P-3282-2R	13"	8 Rod
P-2138-1R	P-2138-2R	14"	6 Rod
P-2122-1R	P-2122-2R	14"	8 Rod
P-2136-1R	P-2136-2R	14"	10 Rod
P-3285-1R	P-3285-2R	14"	12 Rod
P-2124-1R	P-2124-2R	15"	8 Rod
P-2140-1R	P-2140-2R	15"	10 Rod
P-3284-1R	P-3284-2R	15"	12 Rod
P-2126-1R	P-2126-2R	16"	8 Rod
P-3283-1R	P-3283-2R	16"	10 Rod
P-2130-1R	P-2130-2R	18"	8 Rod
P-3220-1R	P-3220-2R	20"	8 Rod

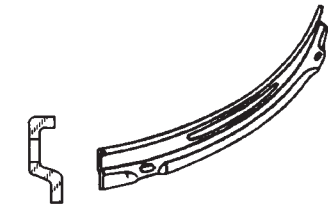

Triple Flanged, Snare Hoops

1.9mm Model No.	2.3mm Model No.	Size	Description
P-2123-1R	P-2123-2R	14"	8 Rod
P-2125-1R	P-2125-2R	15"	8 Rod
—	P-2134-2R	13"	8 Rod
—	P-2135-2R	12"	8 Rod
—	P-2141-2R	15"	10 Rod

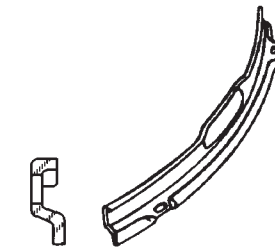


Dropgate, Triple Flanged Snare Hoops

1.9mm Model No.	2.3mm Model No.	Size	Description
P-2643-1R	P-2643-2R	14"	10 Rod
P-3291-1R	P-3291-2R	14"	12 Rod
P-2641-1R	P-2641-2R	15"	10 Rod
P-3290-1R	P-3290-2R	15"	12 Rod


Bongo Hoops, Double Flanged

1.8mm Model No.	Size	Description
P-2115-1R	6"	4 Rod
P-2116-1R	8"	4 Rod

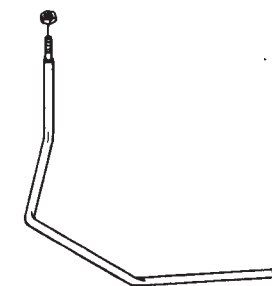

Die-Cast Hoops for the Free Floater


Model No.	Size	Description
L-4143-W	14"	12 Rod Batter White
L-4143-B	14"	12 Rod Batter Black
L-4146-W	14"	12 Rod Snare White
L-4146-B	14"	12 Rod Snare Black
P-10781	—	Snare Guard, also used on Vector Drum
P-120	—	Hex Nut

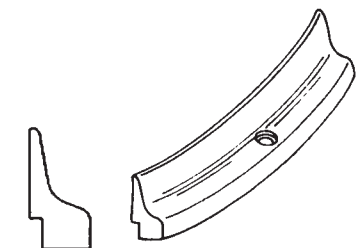

Die-Cast Hoops

Model No.	Size	Description
L-4143	14"	12 Rod Batter
L-4146	14"	12 Rod Snare

Snare Strainers

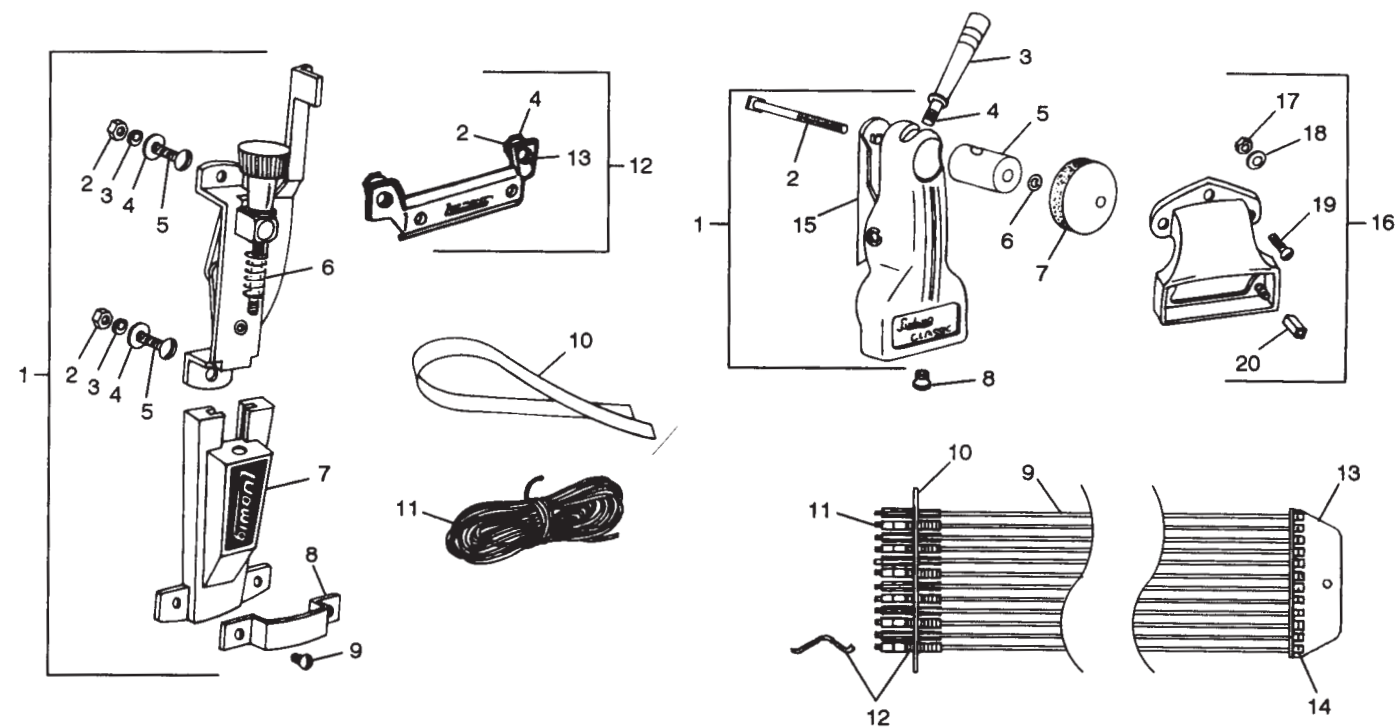


No. P-85 Snare Strainer and No. P-32 Bracket

Item No.	Part No.	Description
1	P-85	Snare Strainer Complete
2	P-151	Hex Nut
3	P-300	Lock Washer
4	P-302	Washer
5	P-228	Bolt
6	P-2232	Spring
7	P-1017-R	Cover Slide
8	P-10121	Clamp Bracket for Cover Slide
9	P-236	Clamp Bracket Screw
10	P-1014	Plastic Strap
11	P-4078-A	Snare Cord, 10 Yard Roll
12	P-32	Snare Butt Complete
13	P-271	Machine Screw
14	PS-85	Snare Strainer Replacement Kit Complete with P-32 Snare Butt cord and Plastic Strap
15	L-1929	12 Strand Heavy Wire Snares, 14" Metal End
16	L-1930	20 Strand Thin Wire Snares, 14" Metal End
17	L-1932	12 Strand Heavy Wire Snares, 15" Metal End
18	L-1933	12 Strand Thin Wire Snares, 15" Metal End
19	L-1935	20 Strand Thin Wire Snares, 14" Plastic End

No. P-87 Classic Strainer and No. P-34 Butt

Item No.	Part No.	Description
1	P-87	Classic Snare Strainer Complete
2	P-10981	Adjustment Screw
3	P-10211	Release Lever Only
4	P-11062	Brass Bushing
5	P-10932	Bushing
6	P-1097	Brass Washer
7	P-10881	Tension Nut
8	P-1541	Knurled Nut
9	P-40814	Synthetic Gut Snare, 16-1/8" long each
10	P-1083-A	Snare Adjustment Plate
11	P-1108-A	Snare Adjustment Screw
12	P-1146	Friction Spring
13	P-1087	Snare Plate
14	P-1128	Brass Eyelet
15	P-16291	Spacer
16	P-34	Snare Butt Complete
17	P-151	Hex Nut
18	P-3421	Washer
19	P-228	Bolt
20	P-125	Square Nut
21	L-1105	12 Strand Gut Snares, 15"
22	L-1107	12 Strand Wire Snares, 15"
23	L-1108	12 Strand Gut Snares, 14"
24	L-1110	12 Strand Wire Snares, 14"

Snare Strainers

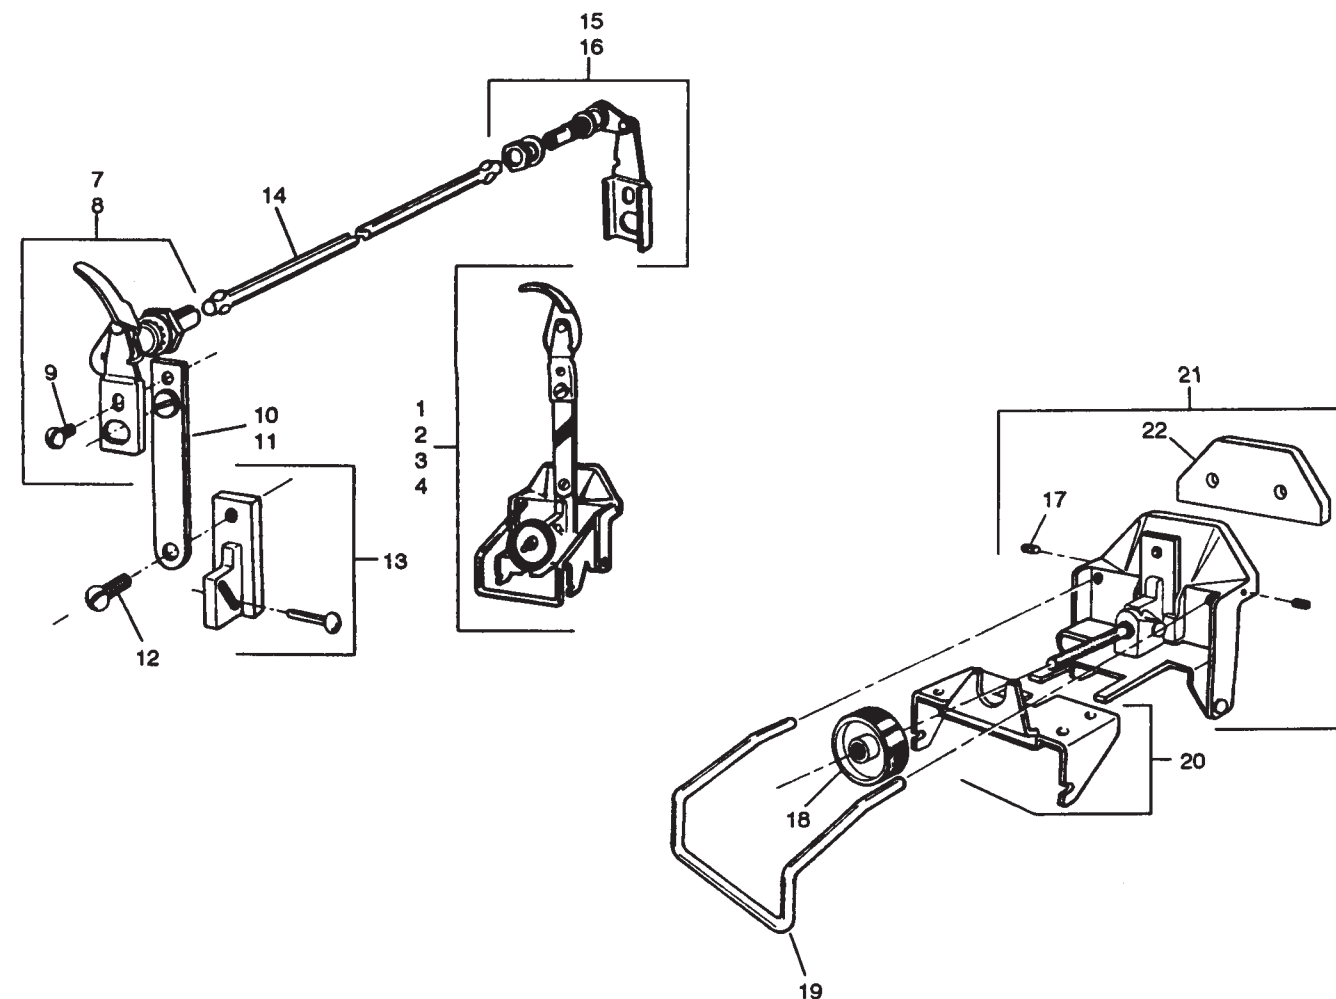


No. P-70 and No. P-71 Super Sensitive Snare Strainer

Item No.	Part No.	Description
1	P-47	Butt Side 5" Deep Shell
2	P-48	Butt Side 6-1/2" Deep Shell
3	P-49	Throw Off Side 5" Deep Shell
4	P-50	Throw Off Side 6-1/2" Deep Shell
5	P-70	Super Sensitive Snare Strainer Complete for 5" Deep Drums
6	P-71	Super Sensitive Snare Strainer Complete for 6-1/2" Deep Drums
7	P-1141-C	Long Lever Assembly for 6-1/2" Deep Snare Drum
8	P-1141-D	Short Lever Assembly for 5" Deep Snare Drum
9	P-237	Screw for Upper Cam Arm
10	P-1172-A	Short Cam Arm Assembly for 5" Deep Snare Drum
11	P-1173-A	Long Cam Arm Assembly for 6-1/2" Deep Snare Drum
12	P-2371	Screw for Lower Cam Arm
13	P-1160-A	Cam Slide with Rivet

Item No.	Part No.	Description
14	P-1132-14	Inside Rod for 14" Dia. Snare Drum
15	P-1123-D	Short Link for 5" Deep Snare Drum
16	P-1123-C	Link for 6-1/2" Deep Snare Drum
17	P-261	Allen Screw
18	P-1163-1	Tension Adjustment Wheel Only
19	P-1162-A	Snare Guard with Allen Screws
20	P-1158-A	Slide Assembly
21	P-1155-A	Housing with Mounting Screws
22	P-627	Spacer Gasket
23	L-1224	18 Strand Wire Snares, 14" Swivel Mounted, Not Individually Adjustable
24	L-1232	24 Strand Wire Snares, 14" Not Individually Adjustable
25	L-1235	15 Strand Gut Snares, 14" Individually Adjustable
26	L-1242	15 Strand Gut Snares, 15" Individually Adjustable

Snare Strainers

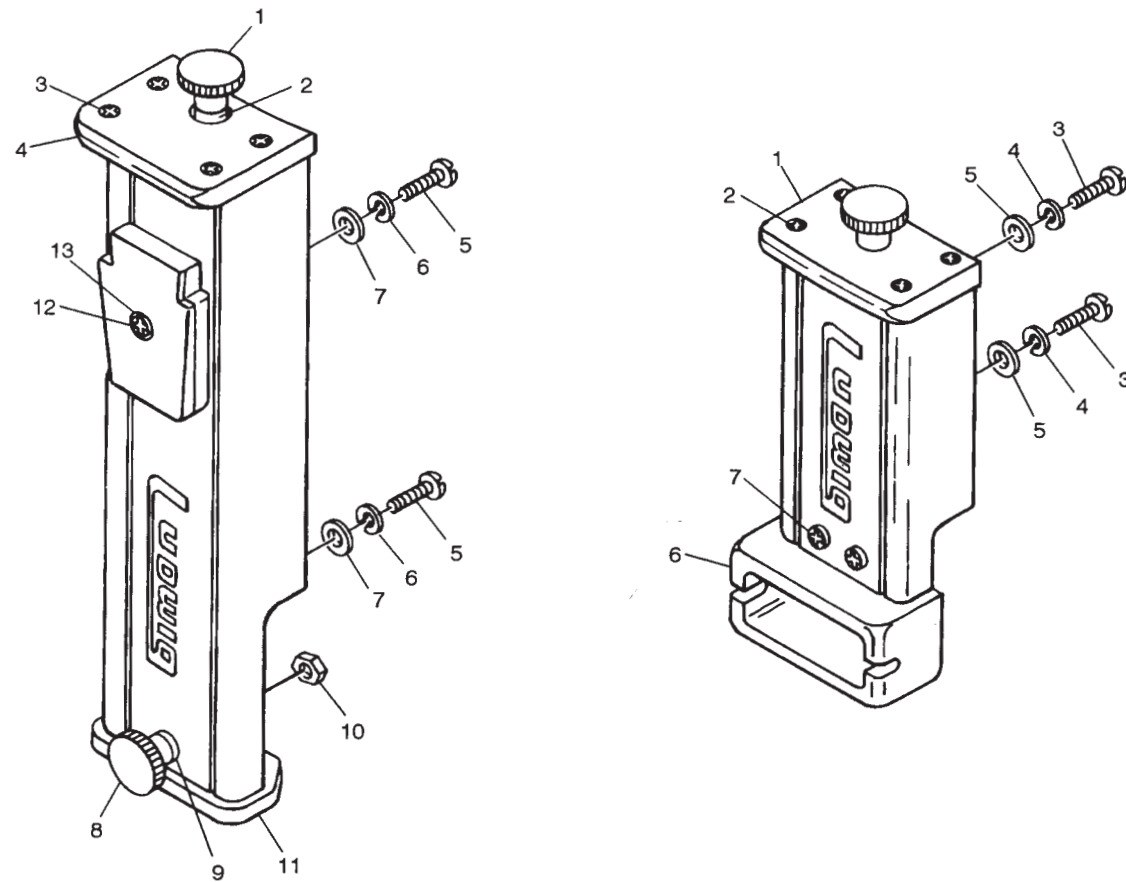


No. P-90 Snare Strainer

Item No.	Part No.	Description
1	P-1066-A	Adjustment Screw Assembly, Vertical
2	P-314	Washer
3	P-222	Phillips Flat Head Screws, 8-32 x 3/4"
4	P-1065	Cap Top
5	P-206	Mounting Screw, 1/4-20 x 3/4" Round Head Slot
6	P-306	Lock Washer
7	P-311	Flat Washer
8	P-1067-A	Adjustment Screw Assembly
9	P-4016	Nylon Washer
10	P-120	Hex Nut, #10-32 x 1-1/4"
11	P-1063	Cap Bottom
12	P-213	Phillips Pan Head Screw 10-32
13	P-301-1	Flat Washer, Black Nickel Plated

No. P-91 Snare Butt

Item No.	Part No.	Description
1	P-1073-A	Cap Assembly, Sold Complete Only
2	P-222	Phillips Flat Head Screws, 8-32 x 3/4"
3	P-206	Mounting Screw, 1/4-20 x 3/4" Round Head Slot
4	P-306	Lock Washer
5	P-311	Flat Washer
6	P-1072-1	Retainer
7	P-229	Phillips Plain Head Screw #10-32 x 5/8"

Miscellaneous Drum Parts

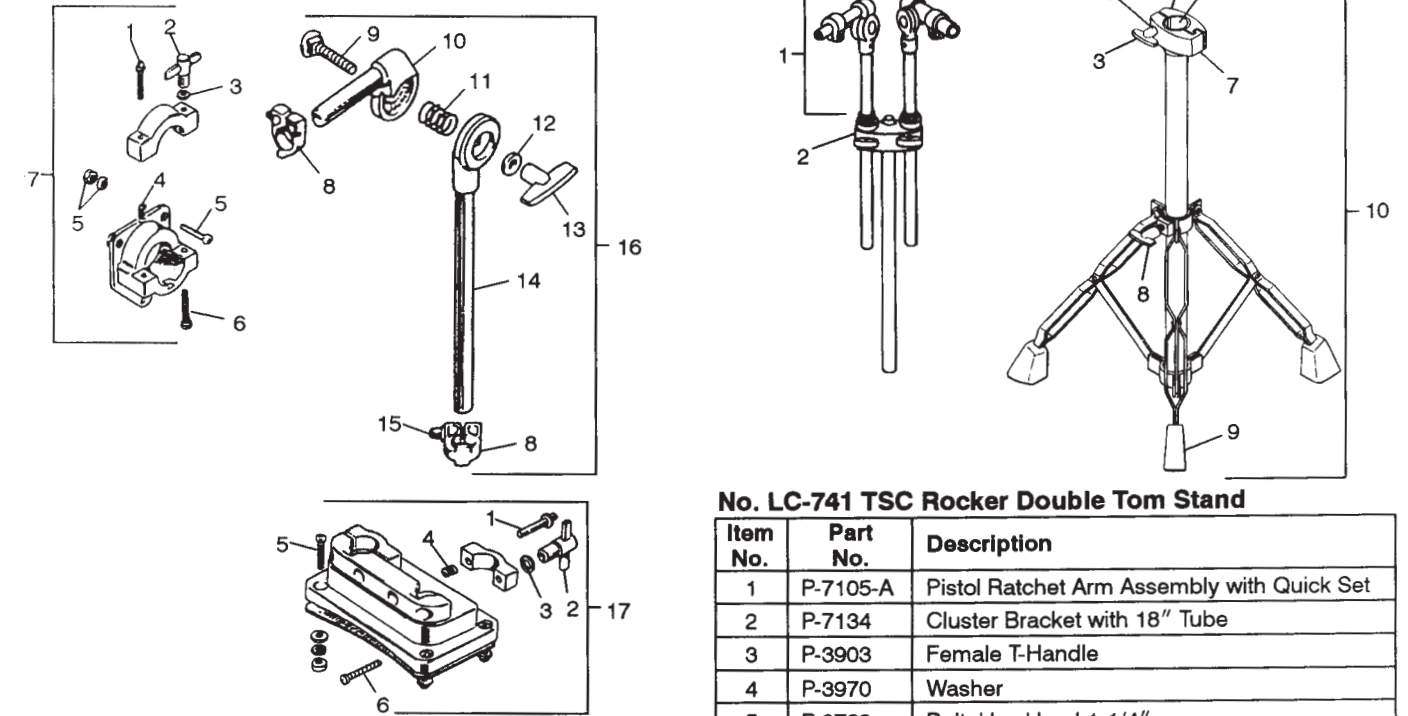

No. SP-7000 Rocker Double Tom Holder

Item No.	Part No.	Description
1	P-3008-R	Drum Key Set Screw
2	P-7121	Female T-Handle
3	P-3012-R	Washer
4	P-7122	Spring
5	P-7132	Mounting Bolt, Washer and Nut Complete
6	P-7123	Bolt
7	P-7108	Tom Tom Bracket Complete with Back Plate and Mounting Bolts
8	P-7106	Quick Set
9	P-3969	Bolt
10	P-7120	Pistol Ratchet Arm
11	P-3904	Spring
12	P-3848	Washer
13	P-3903	Female T-Handle
14	P-7105	Pistol Ratchet Arm Bottom
15	P-3007	Drum Key Set Screw
16	P-7105-A	Pistol Ratchet Arm Assembly with Quick Set
17	P-7107	Base Casting Complete with Back Plate and Mounting Bolts


No. LC-741 TSC Rocker Double Tom Stand

Item No.	Part No.	Description
1	P-7105-A	Pistol Ratchet Arm Assembly with Quick Set
2	P-7134	Cluster Bracket with 18" Tube
3	P-3903	Female T-Handle
4	P-3970	Washer
5	P-3762	Bolt, Hex Head 1-1/4"
6	P-3776	Nylon Collar Insert
7	P-3775	Collar Clamp, 7/8"
8	P-3901	Male T-Handle
9	P-3900	Crutch Tip
10	P-3791	Base Complete

Rocker Spur


Item No.	Part No.	Description
1	P-7127	Spur Mounting Casting
2	P-7128	Mounting Screws
3	P-1937	Spring
4	P-7126	Male T-Handle
5	P-3848	Metal Washer
6	P-7124	Adjustable Spur
7	P-7125	Drum Key Set Screw
8	P-2994	Knurled Nut
9	P-2993	Rubber Tip with Insert
10	P-7109	Rocker Spur Complete

Miscellaneous Drum Parts

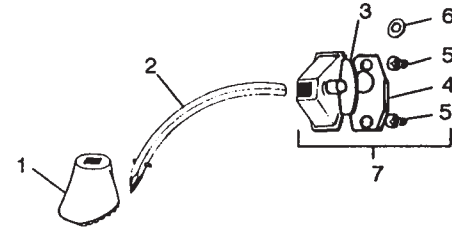


No. LC-1308-SP Classic Heavy Duty Spurs

Item No.	Part No.	Description
1	P-669	Crutch Tip Square Opening
2	P-1679-A	Heavy Duty 1/2" Spur Only
3	P-2950-A	Male T-Handle
4	P-16781	Back Plate
5	P-255	Screw
6	P-628	Spacer
7	P-1676-A	Basket Assembly Complete

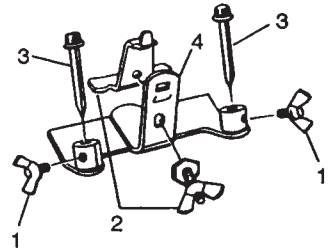


No. L-1304-BA Bass Drum Anchor

Item No.	Part No.	Description
1	P-290	Wing Screws
2	P-1603-A	Hoop Bracket Assembly
3	P-1604-A	Spur Points, Complete
4	P-1607-A	Support Plate Assembly

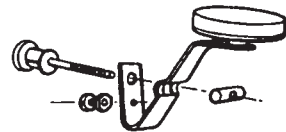


No. P-4066-2 Tone Control, Complete

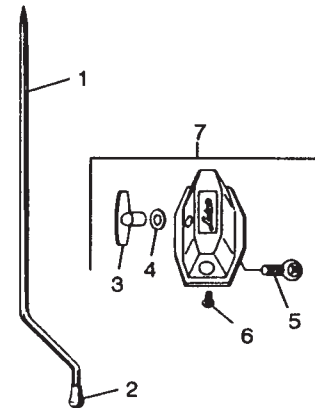


No. LC-5023-TL Tom Tom Legs

Item No.	Part No.	Description
1	P-1785-A	23" Tom Tom Leg with Tip
2	P-603	Rubber Crutch Tip
3	P-2952	Female T-Handle
4	P-316	Washer
5	P-1632	Eye Bolt
6	P-1657-A	Bracket Mounting Assembly, Includes P1657 Flat Washers, P-305 Washers & P-250 Mounting Screws
7	P-1216-D	Mounting Bracket, Complete

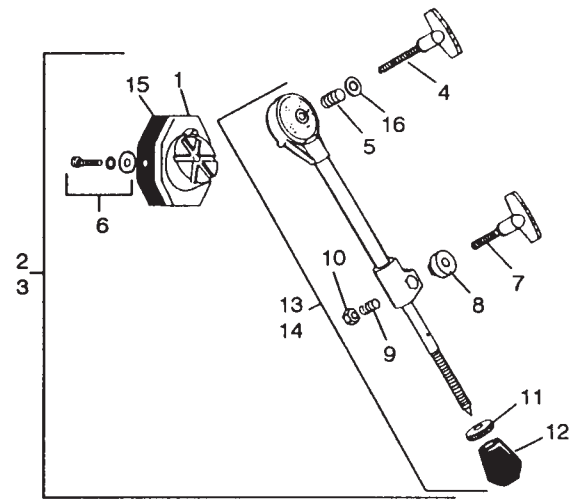


No. LR-2973-SP Rocker Spurs

Item No.	Part No.	Description
1	P-1645-1	Mounting Casting
2	P-1645-L	Left Spur Assembly, Complete
3	P-1645-R	Right Spur Assembly, Complete
4	P-1936	T-Handle
5	P-1937	Large Spring
6	P-1938	Mounting Screw
7	P-1939	T-Handle
8	P-1986	Bushing
9	P-1987	Small Spring
10	P-1988	Hex Insert
11	P-1989	Knurled Nut
12	P-1995	Threaded Tip
13	P-1996	Left Spur Only
14	P-1997	Right Spur Only
15	P-1999	Felt Pad
16	P-3848	Washer

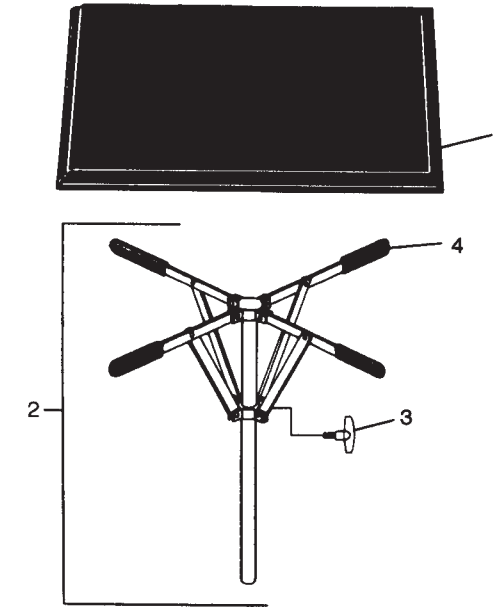


No. LE-1378 Concert Trap Table with Stand

Item No.	Part No.	Description
1	LE-1379	Concert Trap Table Only
2	P-2437-BR	Upper Tube Assembly Complete
3	P-3901	Male T-Handle
4	P-2545	Rubber Sleeve
5	P-3766	Nylon Collar Insert, 1"
6	P-3767	Collar Clamp, 1"
7	P-3903	Female T-Handle
8	P-3763	Bolt Hex Head 9/16"
9	P-3970	Washer
10	P-3999	Crutch Tip
11	P-37701	Base Assembly Complete

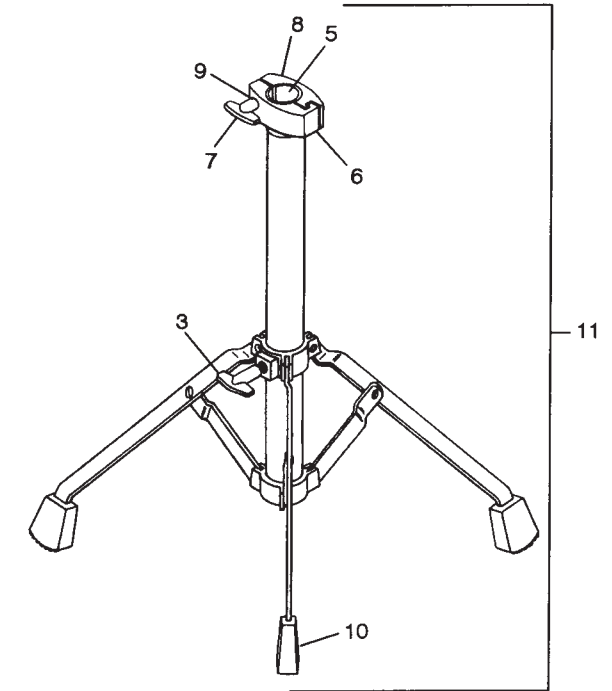


Concert Stands

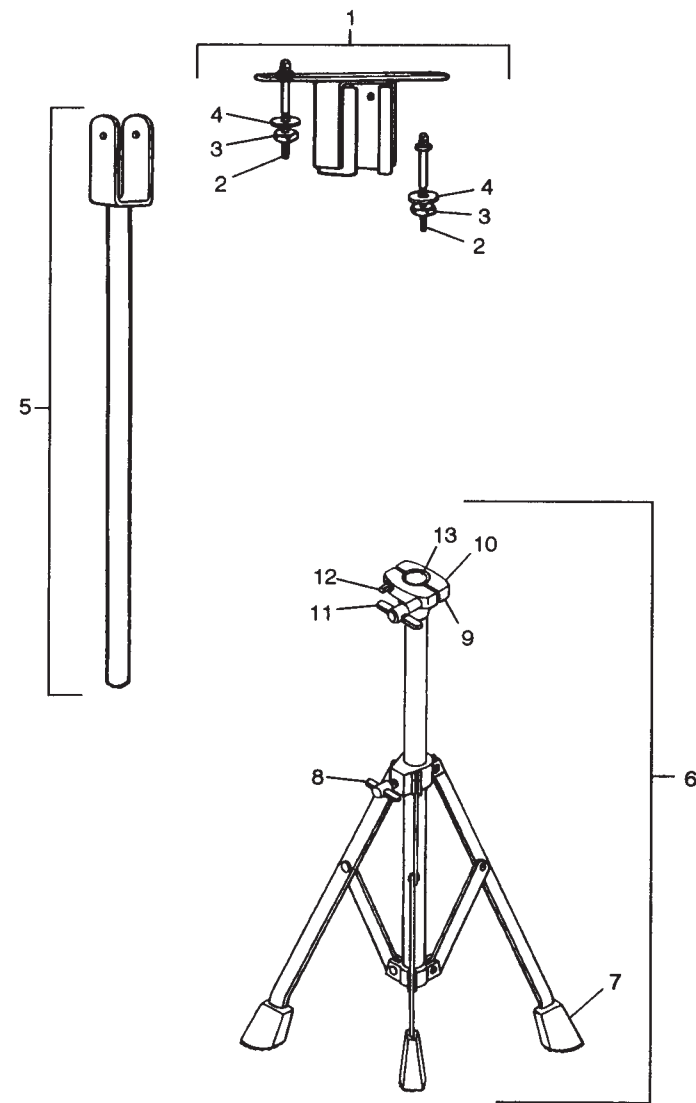

No. LE-1346 Bongo Floor Stand


Item No.	Part No.	Description
1	P-1712-B	Mounting Clip Assembly
2	P-3051-A	2-3/4" Key Rods
3	P-122	Hex Nut, 12-24
4	P-306	Lock Washer
5	P-2500-A1	Upper Tube
6	P-3730-A	Base Complete
7	P-3700	Crutch Tip
8	P-3701	T-Handle
9	P-3696	Collar Clamp 5/8"
10	P-3698	Hex Bolt
11	P-7121	Female T-Handle
12	P-3007	Hex Rod, 3/4" Long
13	P-3699	Nylon Collar Insert, 5/8"

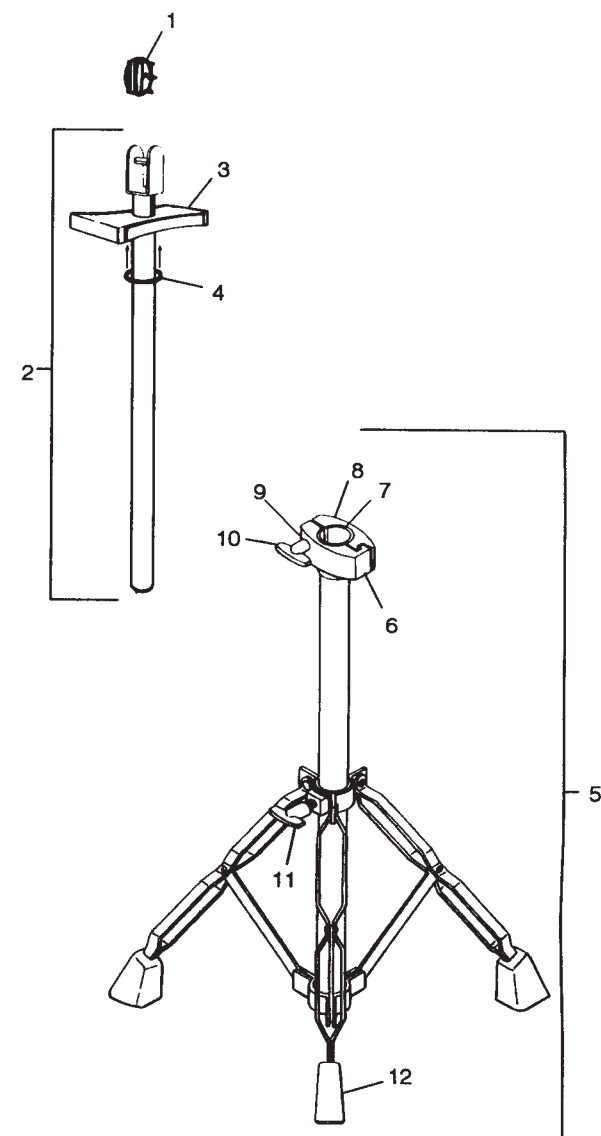

No. LE-1383 Timbale Stand


Item No.	Part No.	Description
1	P-1703-A	Mounting Clip Assembly (Not Included)
2	P-2413-B	Upper Tube Complete
3	P-1705-A	Spacer Block
4	P-649	Ring
5	P-37691	Base Assembly
6	P-3767	Collar Clamp, 1"
7	P-3766	Nylon Insert, 1"
8	P-3763	Bolt, Hex Head 1-9/16"
9	P-3970	Washer
10	P-3903	Female T-Handle
11	P-3901	Male T-Handle
12	P-3900	Crutch Tip

Concert Stands

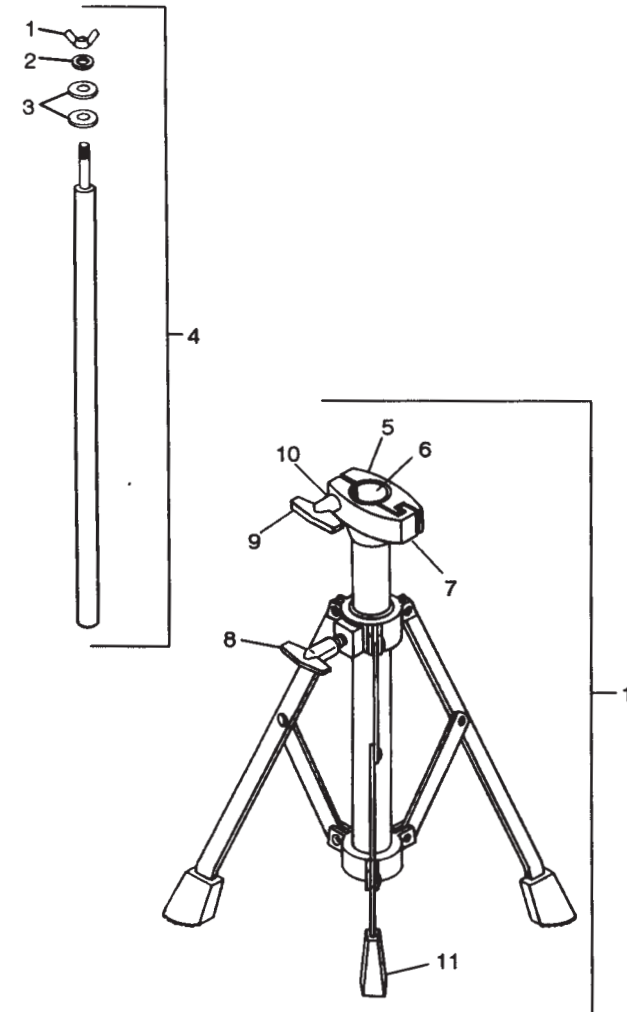

No. LE-1351 Temple Block Stand


Item No.	Part No.	Description
1	P-136	Wing Nut
2	P-308	Lock Washer
3	P-3401	Washer
4	P-1797	Center Tube Assembly
5	P-3762	Bolt
6	P-3776	Nylon Collar Insert, 7/8"
7	P-3775	Collar Clamp
8	P-3901	Male T-Handle
9	P-3903	Female T-Handle
10	P-3970	Washer
11	P-3800	Crutch Tip
12	P-3797	Base Assembly Complete

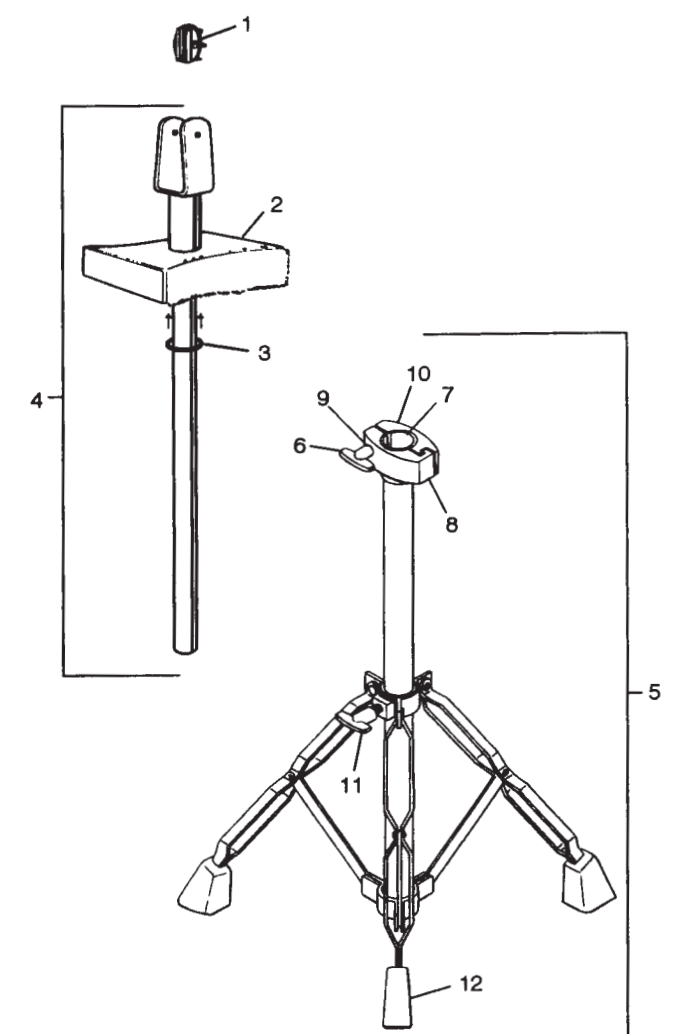

No. LE-1384 Conga Stand


Item No.	Part No.	Description
1	P-1703-B	Mounting Clip Assembly
2	P-1726-A	Spacer Block
3	P-649	Rubber Retaining Ring
4	P-2413-C	Upper Tube Complete
5	P-37691	Base Assembly Complete
6	P-3903	Female T-Handle
7	P-3766	Nylon Collar Insert, 1"
8	P-3767	Collar Clamp, 1"
9	P-3970	Washer
10	P-3763	Bolt
11	P-3901	Male T-Handle
12	P-3900	Crutch Tip

Bass Drum Stands

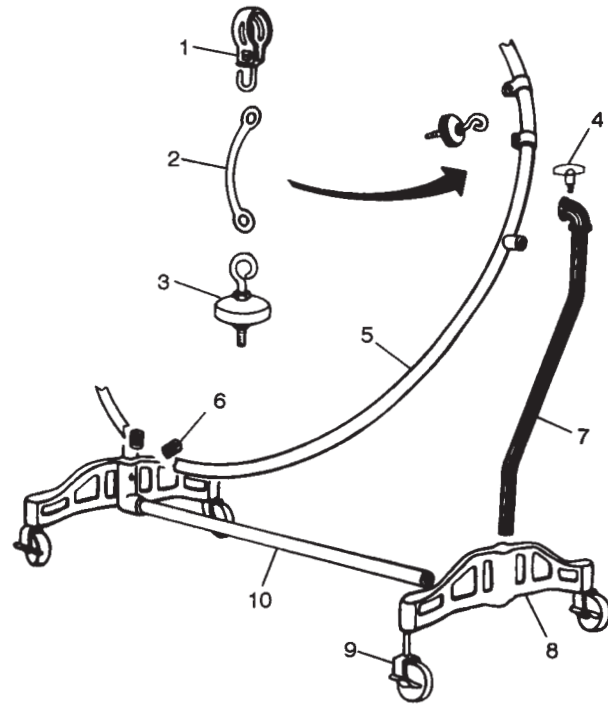


No. LE-789 Suspended Bass Drum Stand

Item No.	Part No.	Description
1	P-1314-A	Clamp and Hook Assembly
2	P-789-S	Poly Strap
3	P-208-A	Eye Bolt Assembly
4	P-2950-A	Male T-Handle
5	P-31581	Hoop Only
6	P-281	Allen Set Screw
7	P-3142-A	Side Post with Elbow and Nylon Insert
8	P-3104-A	Base Casting with Casters
9	P-1445	3" Casters with Brake
10	P-31401	Base Support Tube Only

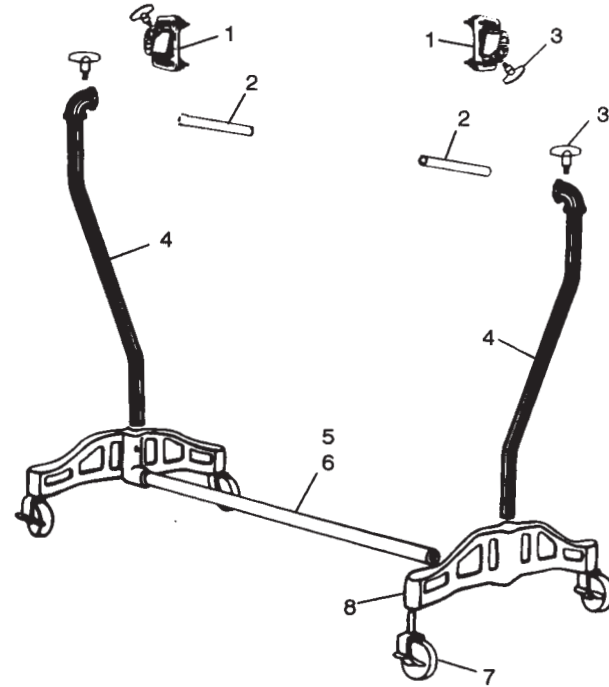

No. LE-792 and LE-793 Tilting Bass Drum Stands


Item No.	Part No.	Description
1	P-1610-D	Bass Drum Casting Complete
2	P-31481	Pivot Tubes
3	P-2950-A	Male T-Handle
4	P-3142-A	Side Post with Elbow and Nylon Insert
5	P-3139-1	Bass Support Tube Only for LE-792
6	P-3147-1	Bass Support Tube Only for LE-793
7	P-1445	3" Casters with Brake
8	P-3104-A	Base Casting with Casters

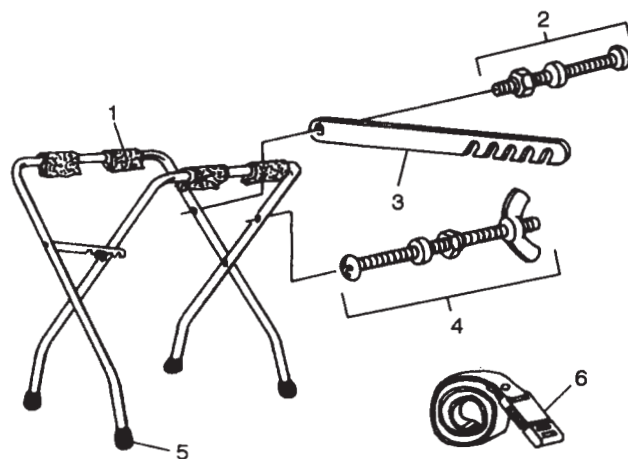

No. LE-790 Folding Bass Drum Stand


Item No.	Part No.	Description
1	P-3655	Felt
2	P-3656	Pivot Screw Assembly
3	P-3657	Connecting Bar
4	P-3658	Latch Screw Assembly
5	P-3660	Crutch Tip
6	P-3659	Strap

Bass Drum Stands

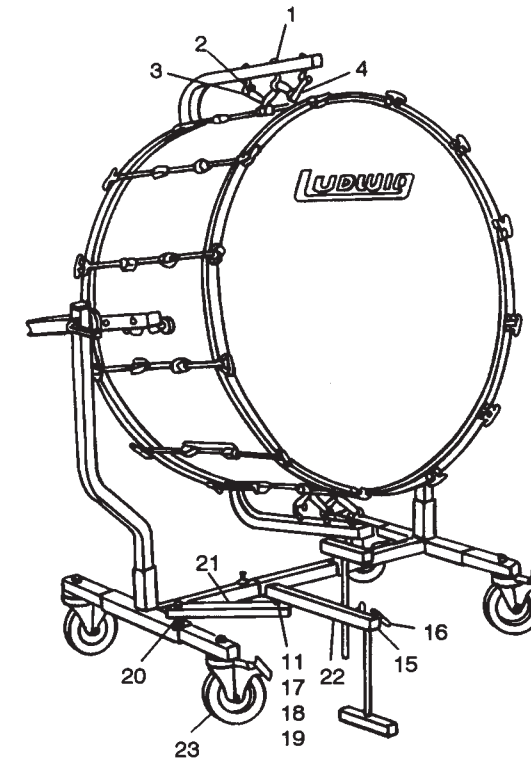


No. LE-788 Concert Bass Drum Stand

Item No.	Part No.	Description
1	P-1411	Elastic Nut
2	P-107	Nut, 1/4-20
3	P-2081	Eye Bolt
4	P-788-S	Polystrap
5	P-205	Bolt, 1/4-20 x 1-3/4"
6	P-3161	Clamp Handle
7	P-3401	Washer, 1-1/8" Dia.
8	P-3162	Friction Washer
9	P-3163	Washer, 3" Outside Dia.
10	P-29032	Bolt, 5/16-18 x 2"
11	P-102	Elastic Nut, 5/16-18
12	P-160	Jam Nut, 1/2-13
13	P-31661	Anti-Slip Tape

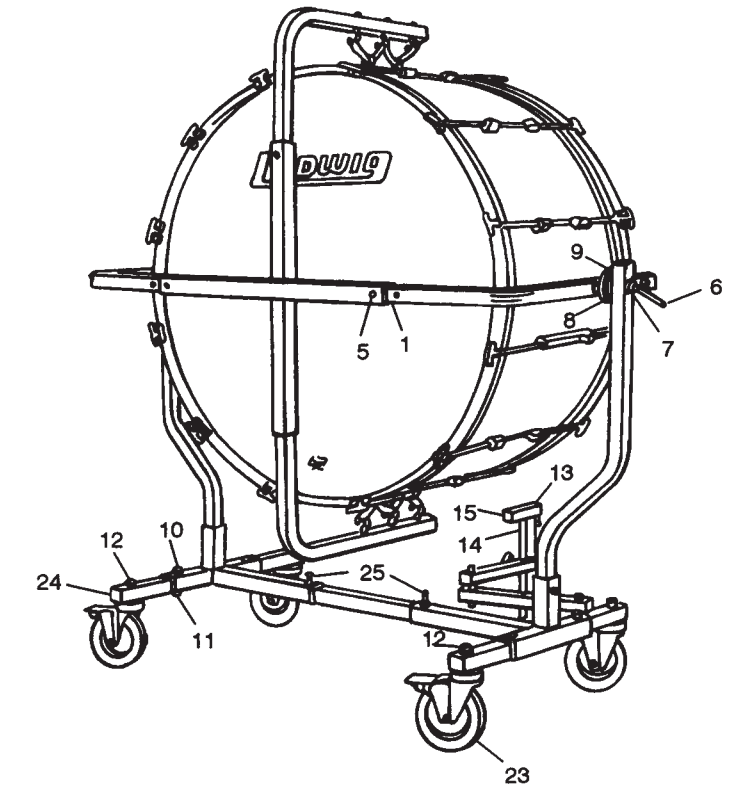

Item No.	Part No.	Description
14	P-3160	Foot Stand
15	P-2571	Cap, 1" Square
16	P-2950-A	Male T-Handle
17	P-2903	Bolt, 5/16-18 x 3-1/4"
18	P-316	Flat Washer
19	P-4593	Spacer Nut, 3/8-16
20	P-29031	Bolt, 5/16-18 x 3-1/2"
21	P-3157	Arm, Short
22	P-3159	Arm, Long
23	P-14451	Caster
24	P-2572	Square Cap, 1-1/4"
25	P-2980	Bolt, 5/16-18 x 1"

Cowbell, Wood Block and Stick Holders/ Practice Pads and Stands

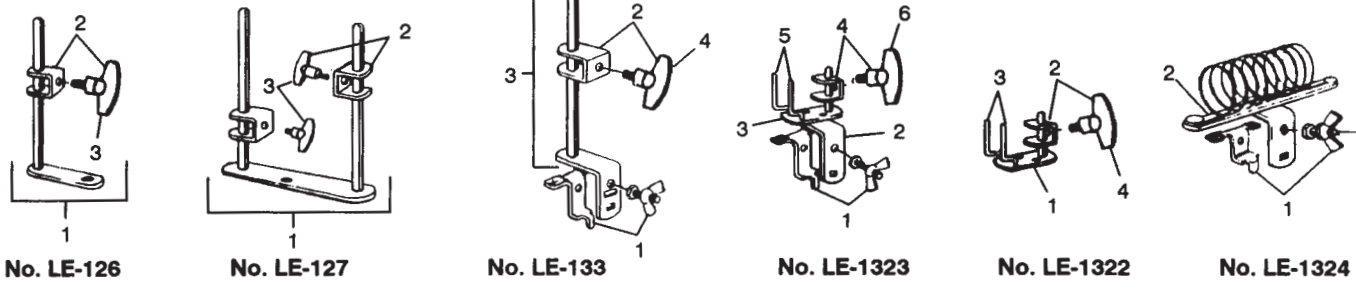

No. LE-126 Single Cowbell Holder

Item No.	Part No.	Description
1	P-1627-A1	Support Plate Assembly
2	P-1635-A	Bracket and T-Handle
3	P-2791	Male T-Handle

No. LE-133 Double Cowbell

Item No.	Part No.	Description
1	P-1603-A	Hoop Bracket Assembly
2	P-1635-A	Bracket and T-Handle
3	P-1642-A1	Support Assembly
4	P-2791	Male T-Handle

No. LE-1322 Bell and Block Holder

Item No.	Part No.	Description
1	P-1628-A3	Support Plate Assembly
2	P-1635-A	Bracket and T-Handle
3	P-16441	Offset Pins
4	P-2791	Male T-Handle

No. LE-127 Double Cowbell


Item No.	Part No.	Description
1	P-1621-A1	Support Plate Assembly
2	P-1635-A	Bracket and T-Handle
3	P-2791	Male T-Handle

No. LE-1323 Bell Block Holder

Item No.	Part No.	Description
1	P-1603-A	Hoop Bracket Assembly
2	P-16231	Bracket
3	P-1628-A2	Support Plate Assembly
4	P-1635-A	Bracket and T-Handle
5	P-16441	Offset Pins
6	P-2791	Male T-Handle


No. L-13245-H Hoop Mount Stick Holder

Item No.	Part No.	Description
1	P-1603-A	Hoop Bracket Assembly
2	P-1618-B	Plate and Spring Assembly

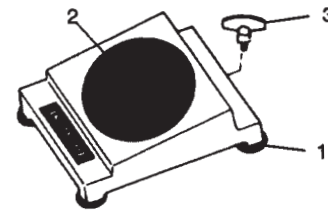

No. L-355 Metal Practice Pad

Item No.	Part No.	Description
1	P-614	Suction Cup
2	P-4051	Rubber Pad
3	P-2791	Male T-Handle

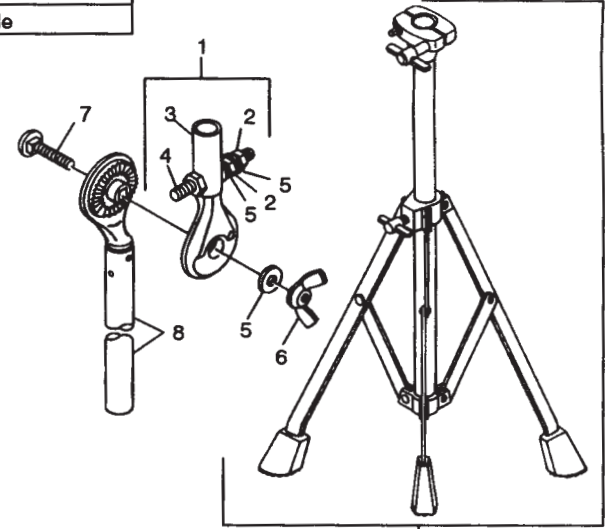

See No. LE-1359 Practice Pad Stand (Part Nos. 2-9)

No. LE-1359 Practice Pad Stand

Item No.	Part No.	Description
1	P-25001	Center Tube
2	P-3007	Key Rod
3	P-3699	Nylon Collar Insert
4	P-3698	Hex Bolt
5	P-3696	Collar Clamp
6	P-7121	Female T-Handle
7	P-3701	Male T-Handle
8	P-3700	Crutch Tip
9	P-3730-A	Base Assembly


No. LE-1353 Practice Pad Stand for L-379

Item No.	Part No.	Description
1	P-24754-A	Adaptor Complete
2	P-107	Hex Nut (2)
3	P-1601	Bushing
4	P-17922	Hex Stud
5	P-311	Flat Washer
6	P-100	Wing Nut
7	P-207	Carriage Bolt
8	P-2500-C	Center Tube with Ratchet

For Base Assembly See No. LE-1359 Practice Pad Stand (Part Nos. 2-9)


Vest Carriers

No. LF-2740 Snare, LF-2741 Bass Drum, LF-2742 Large Trio, LF-2743 Small Trio, LF-2744 Quad and LF-2745 Quint Vest Carrier

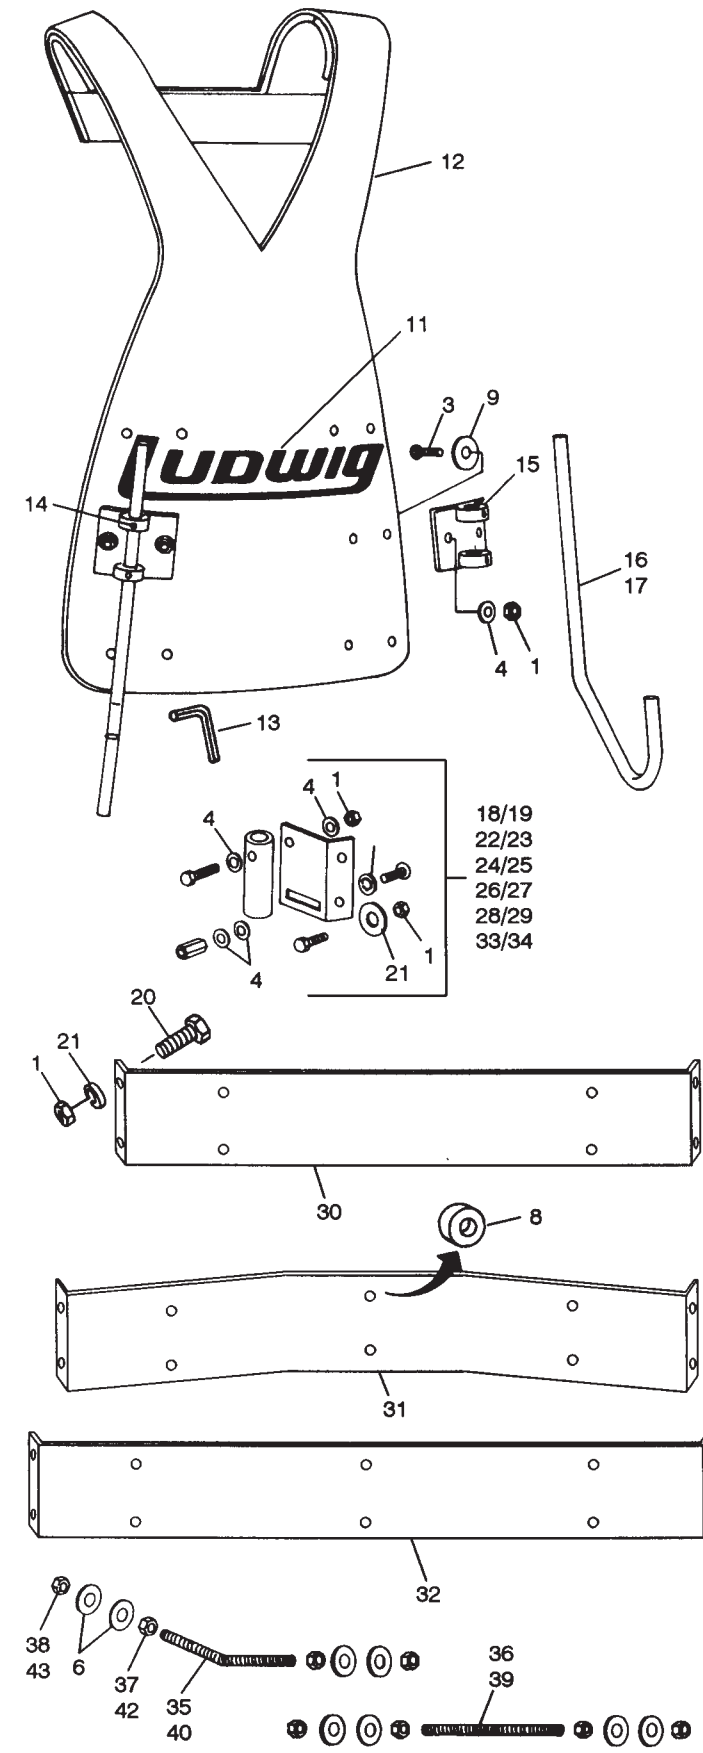


Item No.	Part No.	Description
1	P-140	Nylock Nut
2	P-259	Cap Screw (Not Shown)
3	P-277	Bolt
4	P-310	Washer
5	P-326	Flat Washer for LF-2741
6	P-3401	Washer
7	P-509	Rivet, Tubular for LF-2741
8	P-618	Rubber Bumper used Between Drum and Cross Bar
9	P-1657	Flat Washer
10	P-1688	Clip and D-Ring for LF-2741
11	P-4036	Small Decal
12	P-4500	Fiberglass Vest
13	P-4505	Allen Wrench
14	P-4509	Allen Screw
15	P-4510	Slide Adjustment Bracket
16	P-4520	J-Arm Rods for LF-2740, 42, 43 44, 45
17	P-4521	J-Arm Rods for LF-2741
18	P-4530-L	Left Swivel Bracket for LF-2740
19	P-4530-R	Right Swivel Bracket for LF-2740
20	P-4531	Hex Bolt (Not Shown)
21	P-4532	Flat Washer
22	P-4540-L	Left Swivel Bracket for LF-2741
23	P-4540-R	Right Swivel Bracket for LF-2741
24	P-4550-L	Left Swivel Bracket for LF-2742
25	P-4550-R	Right Swivel Bracket for LF-2742
26	P-4560-L	Left Swivel Bracket for LF-2743
27	P-4560-R	Right Swivel Bracket for LF-2743
28	P-4570-L	Left Swivel Bracket for LF-2744
29	P-4570-R	Right Swivel Bracket for LF-2744
30	P-4575	Cross Bar for LF-2744
31	P-4576	Cross Bar for LF-2745
32	P-4577	Cross Bar for LF-2746, LF-3746
33	P-4580-L	Left Swivel Bracket for LF-2745
34	P-4580-R	Right Swivel Bracket for LF-2745
35	P-4591	Bent Threaded Rod for LF-2742
36	P-4592	Straight Threaded Rod for LF-2743
37	P-4593	Hex Nut for LF-2742, LF-2743
38	P-4594	Nylock Nut for LF-2742, LF-2743
39	P-4595	Straight Threaded Rod for LF-2744, LF-2745
40	P-4596	Bent Threaded Rod for LF-2744
41	P-45961	Straight Threaded Rod for LF-2744, 45, 46
42	P-4598	Hex Nut for LF-2744, LF-2745
43	P-4599	Nylock Nut for LF-2744, LF-2745

Strider Carriers

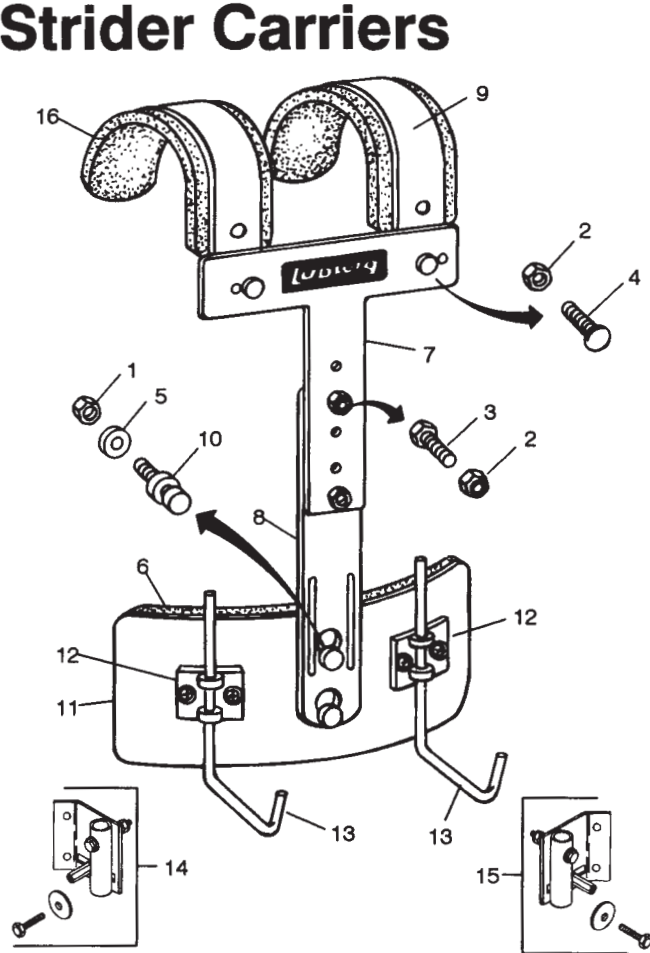

No. LF-3740 Strider II Snare Drum Carrier

Item No.	Part No.	Description
1	P-112	Hex Nut
2	P-140	Nylock Nut
3	P-259	Hex Head Screw
4	P-270	Carriage Bolt
5	P-308	Washer
6	P-673	Belly Plate Pad
7	P-42001	T Brace
8	P-42021	Bottom Brace
9	P-4203-A	Shoulder Bracket Assembly
10	P-42051	Stop Stud
11	P-27991	Breast Plate with Pad
12	P-4510	Slide Adjustment Bracket
13	P-4520	J Arm Rods
14	P-4530-L	Swivel Bracket, Left
15	P-4530-R	Swivel Bracket, Right
16	P-4204	Shoulder Pad

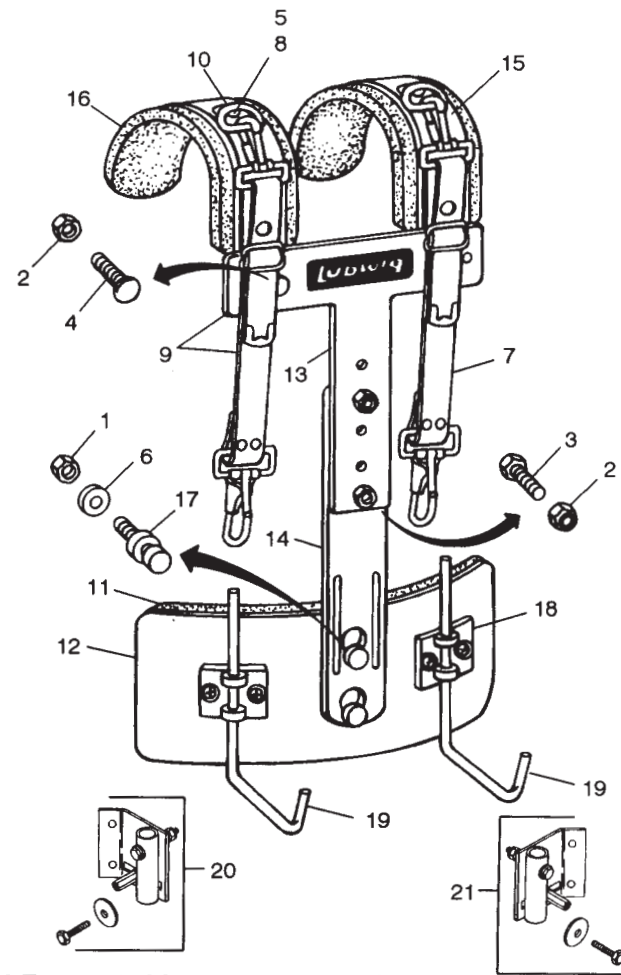

No. LF-3741 Strider II Bass Drum Carrier

Item No.	Part No.	Description
1	P-112	Hex Nut
2	P-140	Nylock Nut
3	P-259	Hex Head Screw
4	P-270	Carriage Bolt
5	P-301	Washer
6	P-308	Washer
7	LF-384-W	Mounting Straps
8	P-509	Rivet
9	LF-535	Shoulder Carrier with D-Rings, Complete
10	P-1688	D-Ring and Clip
11	P-673	Breast Pad
12	P-27991	Breast Plate with Pad
13	P-42001	T Brace
14	P-42021	Bottom Brace
15	P-4203-C	Shoulder Bracket with D-Ring and Pad
16	P-4204	Shoulder Pad
17	P-42051	Stop Stud
18	P-4510	Slide Adjustment Bracket
19	P-4521	J Arm Rod
20	P-4540-L	Swivel Bracket, Left
21	P-4540-R	Swivel Bracket, Right

Strider Carriers

No. LF-3743 Carrier for Trio (Not Shown)

Part No.	Description
P-4560-L	Swivel Bracket, Left
P-4560-R	Swivel Bracket, Right
P-112	Steel Hex Nut
P-140	Elastic Stop Nut
P-150	Hex Nut
P-1737	Name Plate
P-250	Machine Screw
P-259	Cap Screw
P-270	Carriage Bolt
P-277	Screw
P-27991	Breast Plate Assembly
P-308	Lock Washer
P-310	Flat Washer
P-311	Flat Washer
P-316	Flat Washer
P-3401	Washer
P-42001	T-Brace, Plated
P-42021	Bottom Brace, Plated
P-4203-A	Shoulder Bracket Assembly
P-42051	Brace Stud
P-4505	Allen Wrench
P-4510	Slide Adjustment Bracket
P-4520	Rods
P-4531	Bolt, 1"
P-4532	Washer
P-4592	Bolt
P-4593	Nuts
P-4594	Nuts
P-604	Recess Bumper

No. LF-3744 Carrier for Quad - 8", 10", 12", 13" (Not Shown)

Part No.	Description
P-4570-L	Swivel Bracket, Left
P-4570-R	Swivel Bracket, Right
P-112	Steel Hex Nut
P-140	Elastic Stop Nut
P-150	Hex Nut
P-1737	Name Plate
P-250	Machine Screw
P-259	Cap Screw
P-270	Carriage Bolt
P-277	Screw
P-27991	Breast Plate Assembly
P-308	Lock Washer
P-310	Flat Washer
P-311	Flat Washer
P-42001	T-Brace, Plated
P-42021	Bottom Brace, Plated
P-4203-A	Shoulder Bracket Assembly
P-42051	Brace Stud
P-4505	Allen Wrench
P-4510	Slide Adjustment Bracket
P-4520	Rods
P-4531	Bolt, 1"
P-4532	Washer
P-4575	Supporting Cross Bar, 27
P-4595	Bolt, 3"
P-4596	Threaded Rod, 3-1/2" Long
P-45961	Threaded Rod, 4-1/2" Long
P-4598	Nut
P-4599	Nut
P-604	Recess Bumper


Strider Carriers

No. LF-3745 Carrier for Quad – 10", 12", 13", 14"
and Quint – 6", 10", 12", 13", 14" (Not Shown)

Part No.	Description
P-4580-L	Swivel Bracket, Left
P-4580-R	Swivel Bracket, Right
P-112	Steel Hex Nut
P-140	Elastic Stop Nut
P-150	Hex Nut
P-1737	Name Plate
P-250	Machine Screw
P-259	Cap Screw, Hex Head
P-270	Carriage Bolt
P-277	Screw
P-27991	Breast Plate Assembly
P-308	Lock Washer
P-310	Flat Washer
P-311	Flat Washer
P-316	Flat Washer
P-42001	T-Brace, Plated
P-42021	Bottom Brace, Plated
P-4203-A	Shoulder Bracket Assembly
P-42051	Brace Stud
P-4505	Allen Wrench, 1/8"
P-4510	Slide Adjustment Bracket
P-4520	Rods
P-4531	Bolt, 1"
P-4532	Washer
P-4576	Supporting Cross Bar, M-27
P-4595	Bolt, 3"
P-4596	Threaded Rod, 3-1/2" Long
P-45961	Threaded Rod, 4-1/2" Long
P-4598	Nut
P-4599	Nut
P-604	Recess Bumper


No. LF-3746 Carrier for Quint – 6", 8", 10", 12", 13"
(Not Shown)

Part No.	Description
P-4570-L	Swivel Bracket, Left
P-4570-R	Swivel Bracket, Right
P-112	Steel Hex Nut
P-140	Elastic Stop Nut
P-150	Hex Nut
P-1737	Name Plate
P-250	Machine Screw
P-259	Cap Screw, Hex Head
P-270	Carriage Bolt
P-277	Screw
P-27991	Breast Plate Assembly
P-308	Lock Washer
P-310	Flat Washer
P-311	Flat Washer
P-42001	T-Brace, Plated
P-42021	Bottom Brace, Plated
P-4203-A	Shoulder Bracket Assembly
P-42051	Brace Stud
P-4505	Allen Wrench, 1/8"
P-4510	Slide Adjustment Bracket
P-4520	Rods
P-4531	Bolt, 1"
P-4532	Washer
P-4577	Supporting Cross Bar
P-4595	Bolt, 3"
P-4596	Threaded Rod, 3-1/2" Long
P-45961	Threaded Rod, 4-1/2" Long
P-4598	Nut
P-4599	Nut
P-604	Recess Bumper

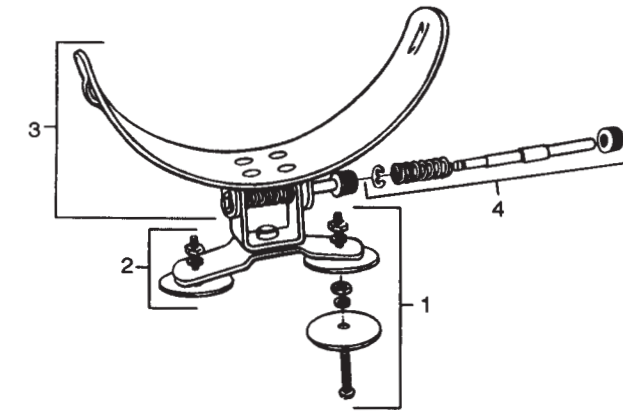


No. LF-390 Leg Rest (Shell Mount)

Item No.	Part No.	Description
1	P-227-A	Mounting Bolt with Nut and Washer
2	P-4065-A	Mounting Plate
3	P-4123-A	Leg Band Only
4	P-4126-A	Lock Pin Assembly, Complete

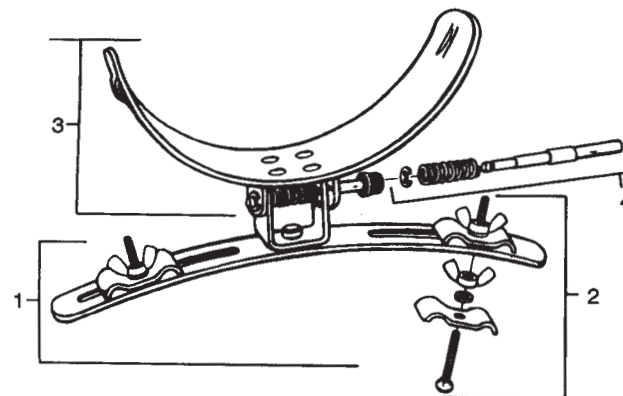

No. LF-479 Leg Rest (Rod Mount)


Item No.	Part No.	Description
1	P-4012 -A	Mount Strap Assembly
2	P-4015-A	Clamp Assembly
3	P-4123-A	Leg Band Only
4	P-4126-A	Lock Pin Assembly

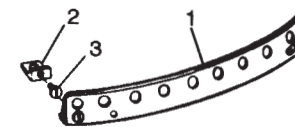

No. LF-475 Multi Angle Carrying Bar

Item No.	Part No.	Description
1	P-25152	Mount Bracket
2	P-25171	Adjustment Bracket
3	P-283	Screw

Marching Accessory Parts

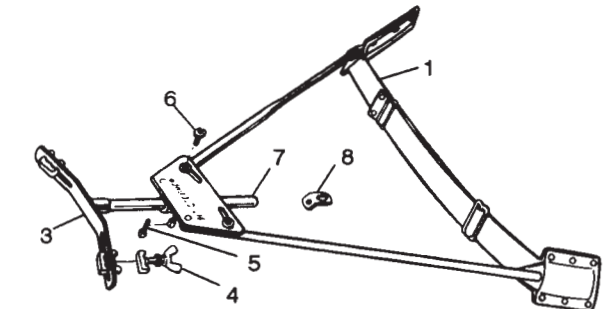

No. LF-473 Hi-Stepper

Item No.	Part No.	Description
1	P-2710	Belt Assembly
2	P-2711	Shoulder Sling Assembly (Not Shown)
3	P-2713	Drum Bracket with Mounting Bolt Assemblies
4	P-2714	Mounting Bolt Assembly
5	P-2715	Set Screw
6	P-2716	Flanged Arm Screw
7	P-2717	Adjustable Rod
8	P-40081	Eyehook




Carrying Hooks

Item No.	Part No.	Description
1	P-40081	Carrying Hook for Metal Hoop Drums
2	P-4010	Carrying Hook for Wood Hoop Drums


No. P-1638-A Bracket

Item No.	Part No.	Description
1	P-150	Hex Nut
2	P-16381	U-Bracket
3	P-216	Machine Screw
4	P-311	Washer

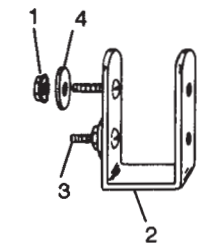

No. LE-1338 Bongo Mounting Attachment

Item No.	Part No.	Description
1	P-122	Hex Nut
2	P-306	Lock Washer
3	P-3023-A	Key Rod

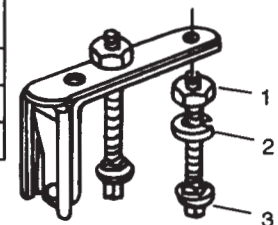

No. PS-1952-B Sure Grip Tabs



No. P-208-A Eye Bolt Assembly Complete