

ENGLISH

4S-0305-00E0

01 SEP 1996

**HAMEG**<sup>®</sup>  
Instruments

**Oscilloscope  
HM 305**

**SERVICE-MANUAL**


**HM305**

Y- Input, Attenuator, Preamplifier CH1 .....	2
Y- Input, Attenuator, Preamplifier CHII .....	3
Y- Intermediate Amplifier CHI + CHII, Channel Switch + Chopper Generator, .....	4
Analog/ digital Switch, TRIG. and X- Signal Amplifier .....	4
Trigger Amplifier, Trigger Coupling, TV Sync. Separator, .....	5
Peak Value Detection, Trigger Comparator .....	5
Timebase Sweep & Hold off Generator .....	6
Component Tester, Calibrator .....	7
Timebase, Trigger Logic .....	8
XY- Amplifier, YF- Amplifier, Overscan Circuit .....	9
Front/ Controlboard .....	10
CRT- Circuit, Unblanking, CRT- Board .....	11
Power Supply .....	12
Driver Stage (A/D) .....	13
A/D Converter, Address Counter, RAM'S, Timebase (Digital), Control Logic .....	14
Display- Control, Address Counter, RAM, Control Logic, HAMEG Bus Driver .....	15
Y D/A Converter, Dot Join, Y- Analog Output Driver .....	16
+5V Analog Power Supply, IC Power Supply .....	17
YPA Board (Topside) .....	18
YPA Board (Bottomside) .....	19
Power Supply Board (Topside) .....	20
Adjustment Plan : Power Supply Board .....	21
Digital Board (Topside) .....	22
Adjustment Plan: Digital Board .....	23
Front Controlboard (Topside, Bottomside) .....	24
CRT Board (Topside, Bottomside) .....	25
XY Board (Topside) .....	26
XY Board (Bottomside) .....	27
TB Board (Topside) .....	28
TB Board (Bottomside) .....	29
CCT Board (Topside, Bottomside) .....	30
<b>Adjustment Procedure .....</b>	<b>31</b>



**Service Manual  
Circuit Diagrams  
Adjustment Procedure  
HM305**

# Y- Input, Attenuator, Preamplifier CH1

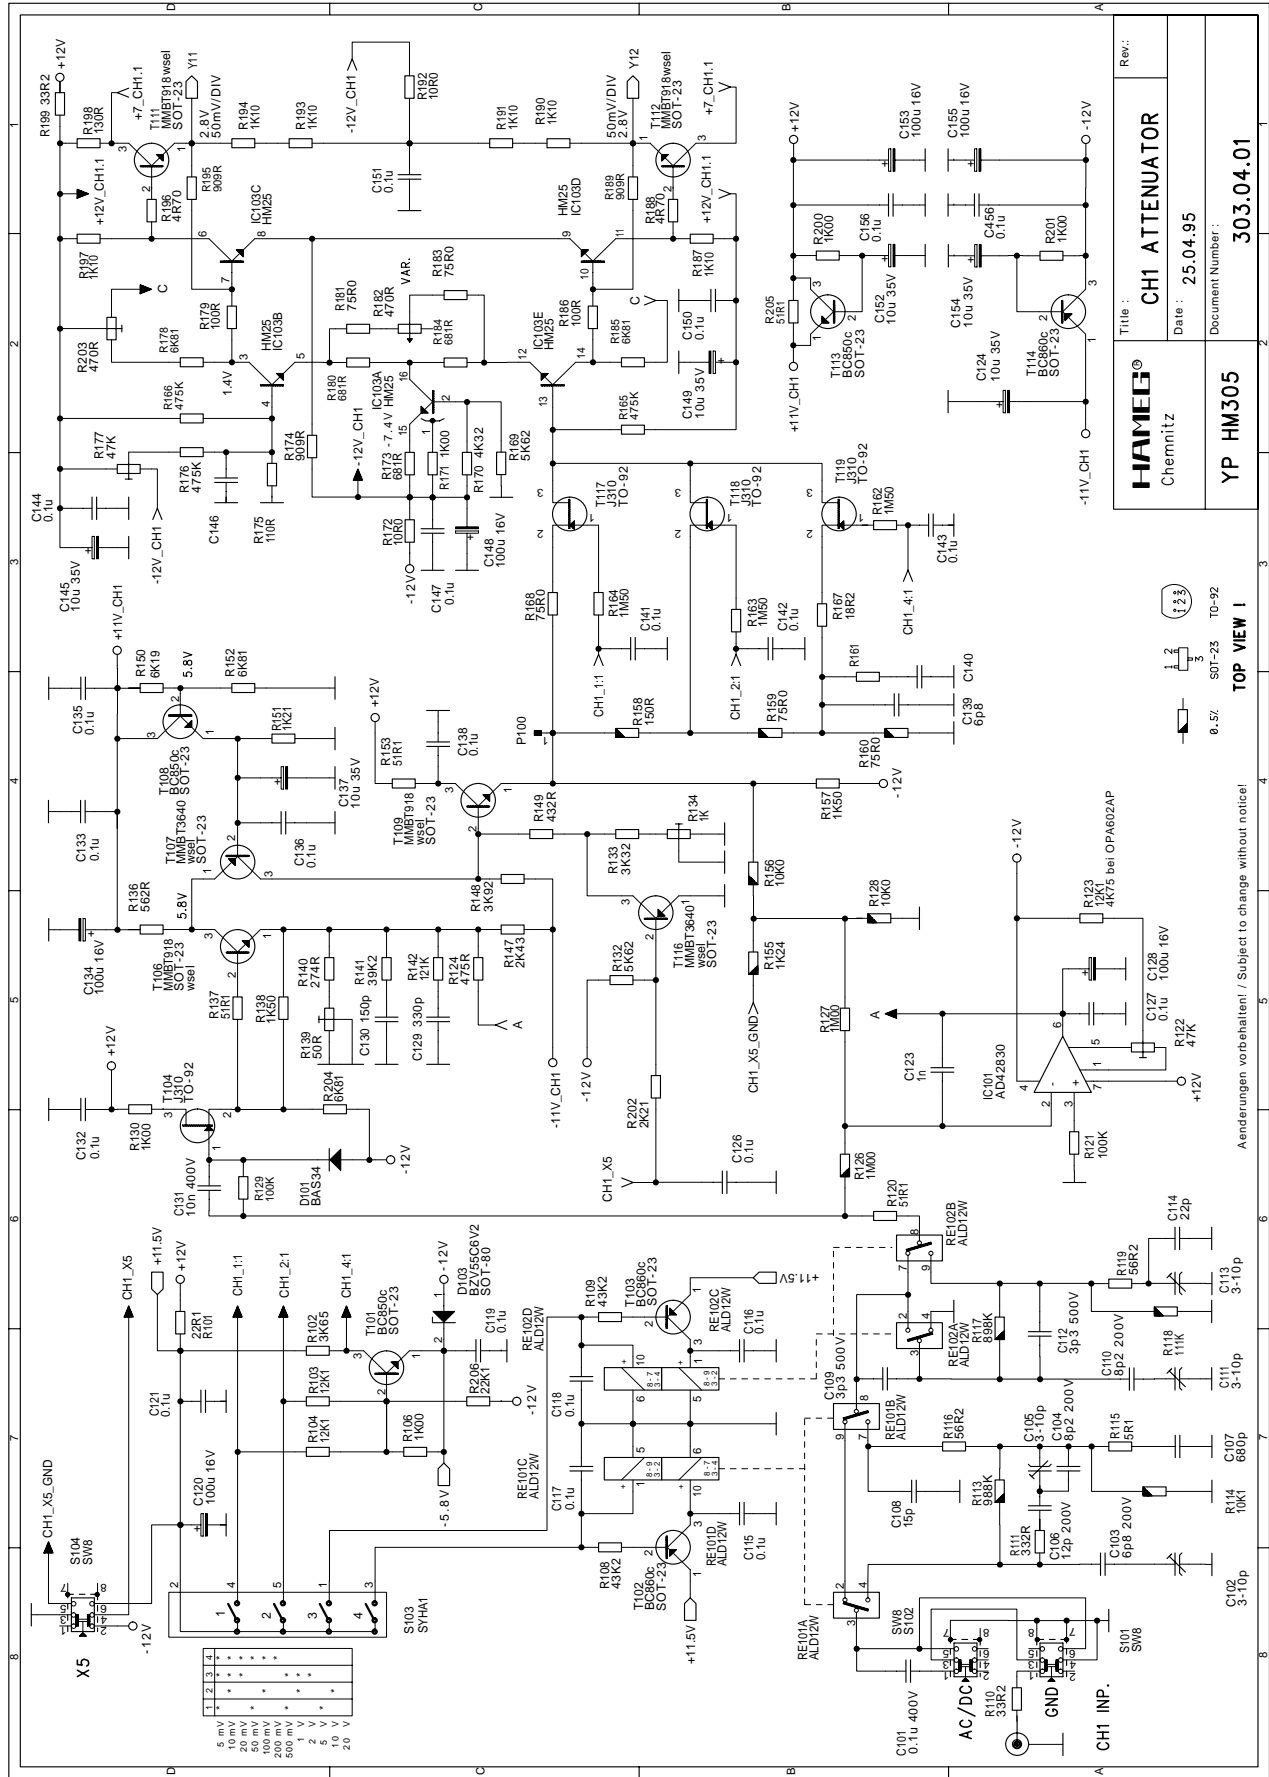


 Chemnitz	Title : <b>CH1 ATTENUATOR</b>
	Date : 25.04.95
YP HM305	Document Number : 303.04.01

0.5V SOT-23 TO-92  
 1.5V SOT-23 TO-92  
 3.3V SOT-23 TO-92

**TOP VIEW I**

Änderungen vorbehalten! / Subject to change without notice!

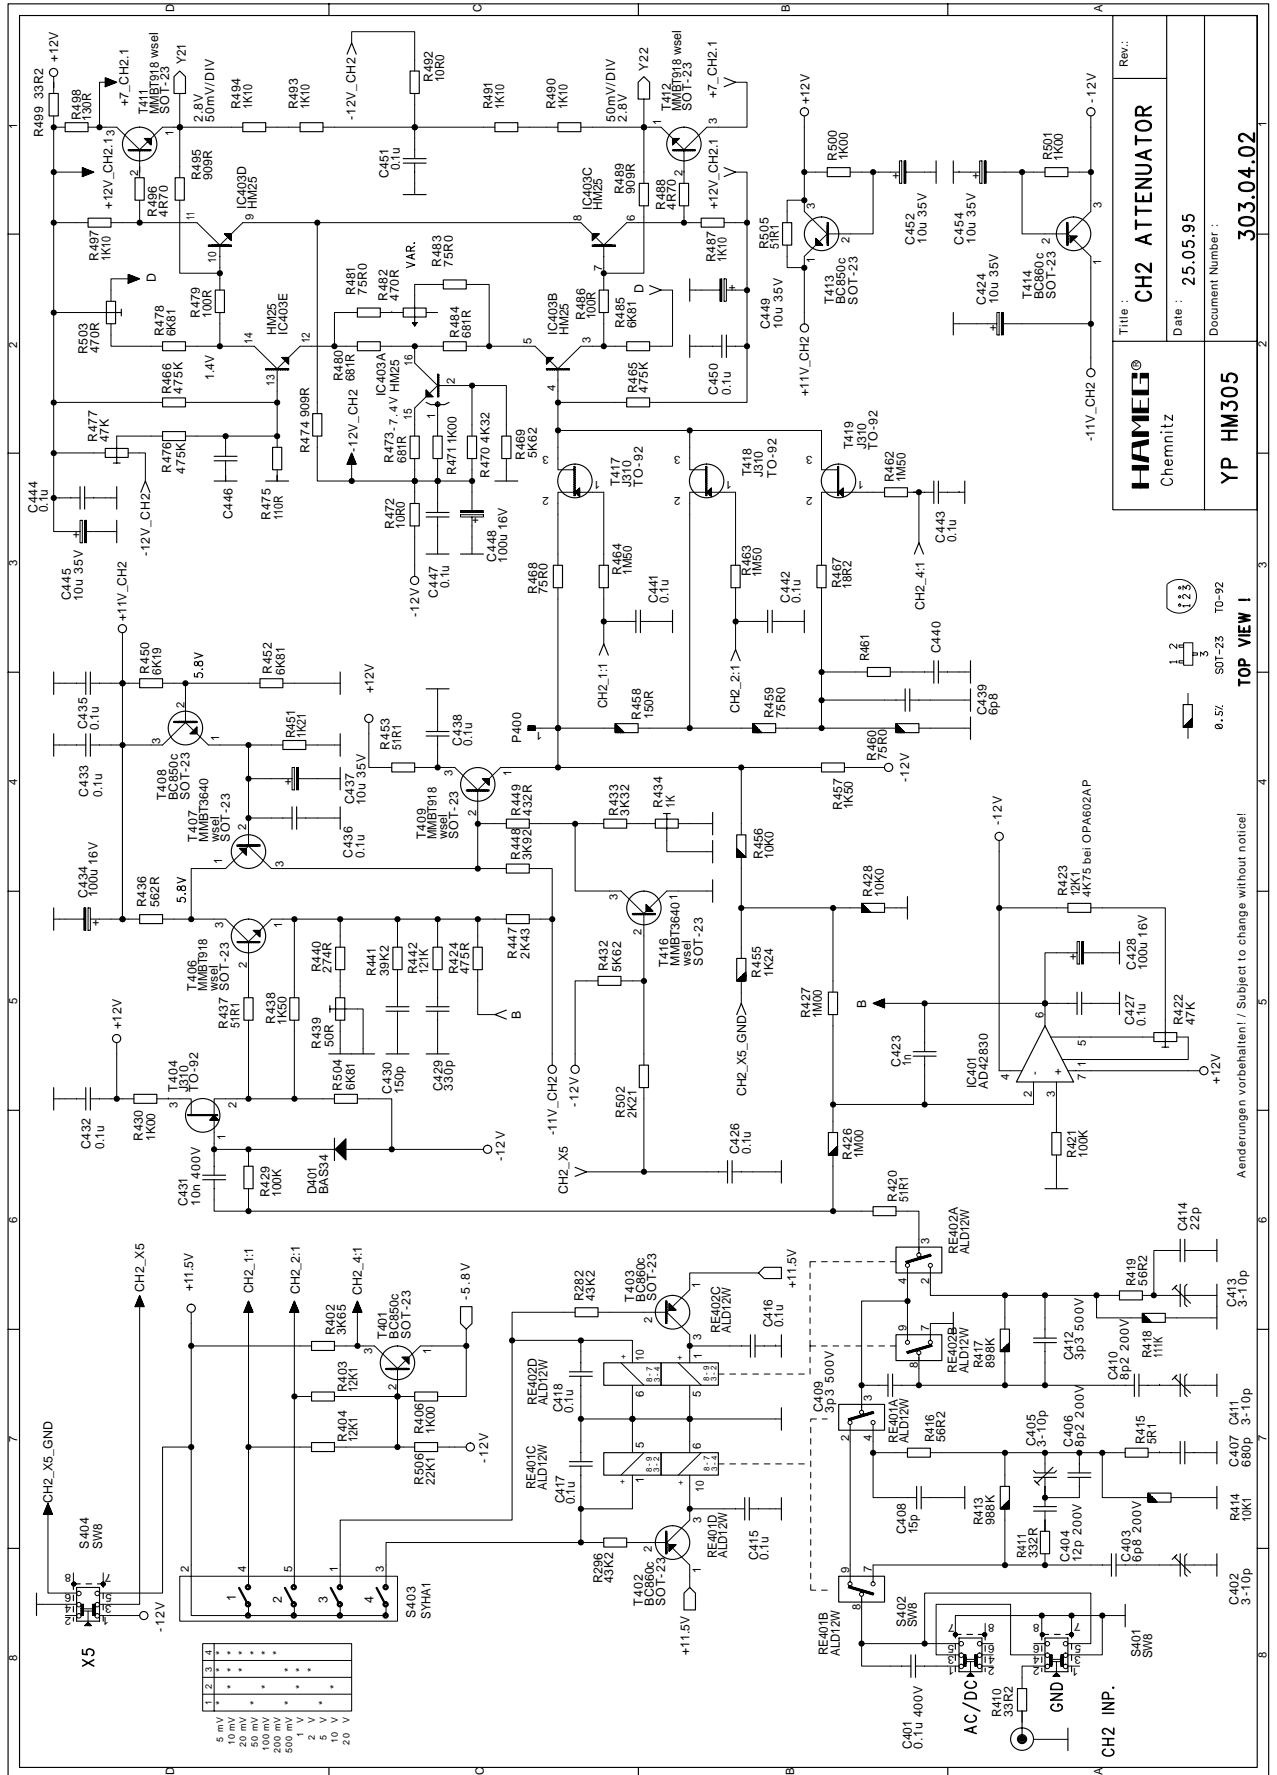

**HAMEG®**  
Chemnitz

**YP HM305**

Title: **CH2 ATTENUATOR**

Date: 25.05.95

Document Number: 303.04.02


Rev.:

8.5: SOT-23 TO-92

TOP VIEW I

Anderungen vorbehalten / Subject to change without notice!

Y- Intermediate Amplifier CHI + CHII, Channel Switch + Chopper Generator, Analog/ digital Switch, TRIG. and X- Signal Amplifier

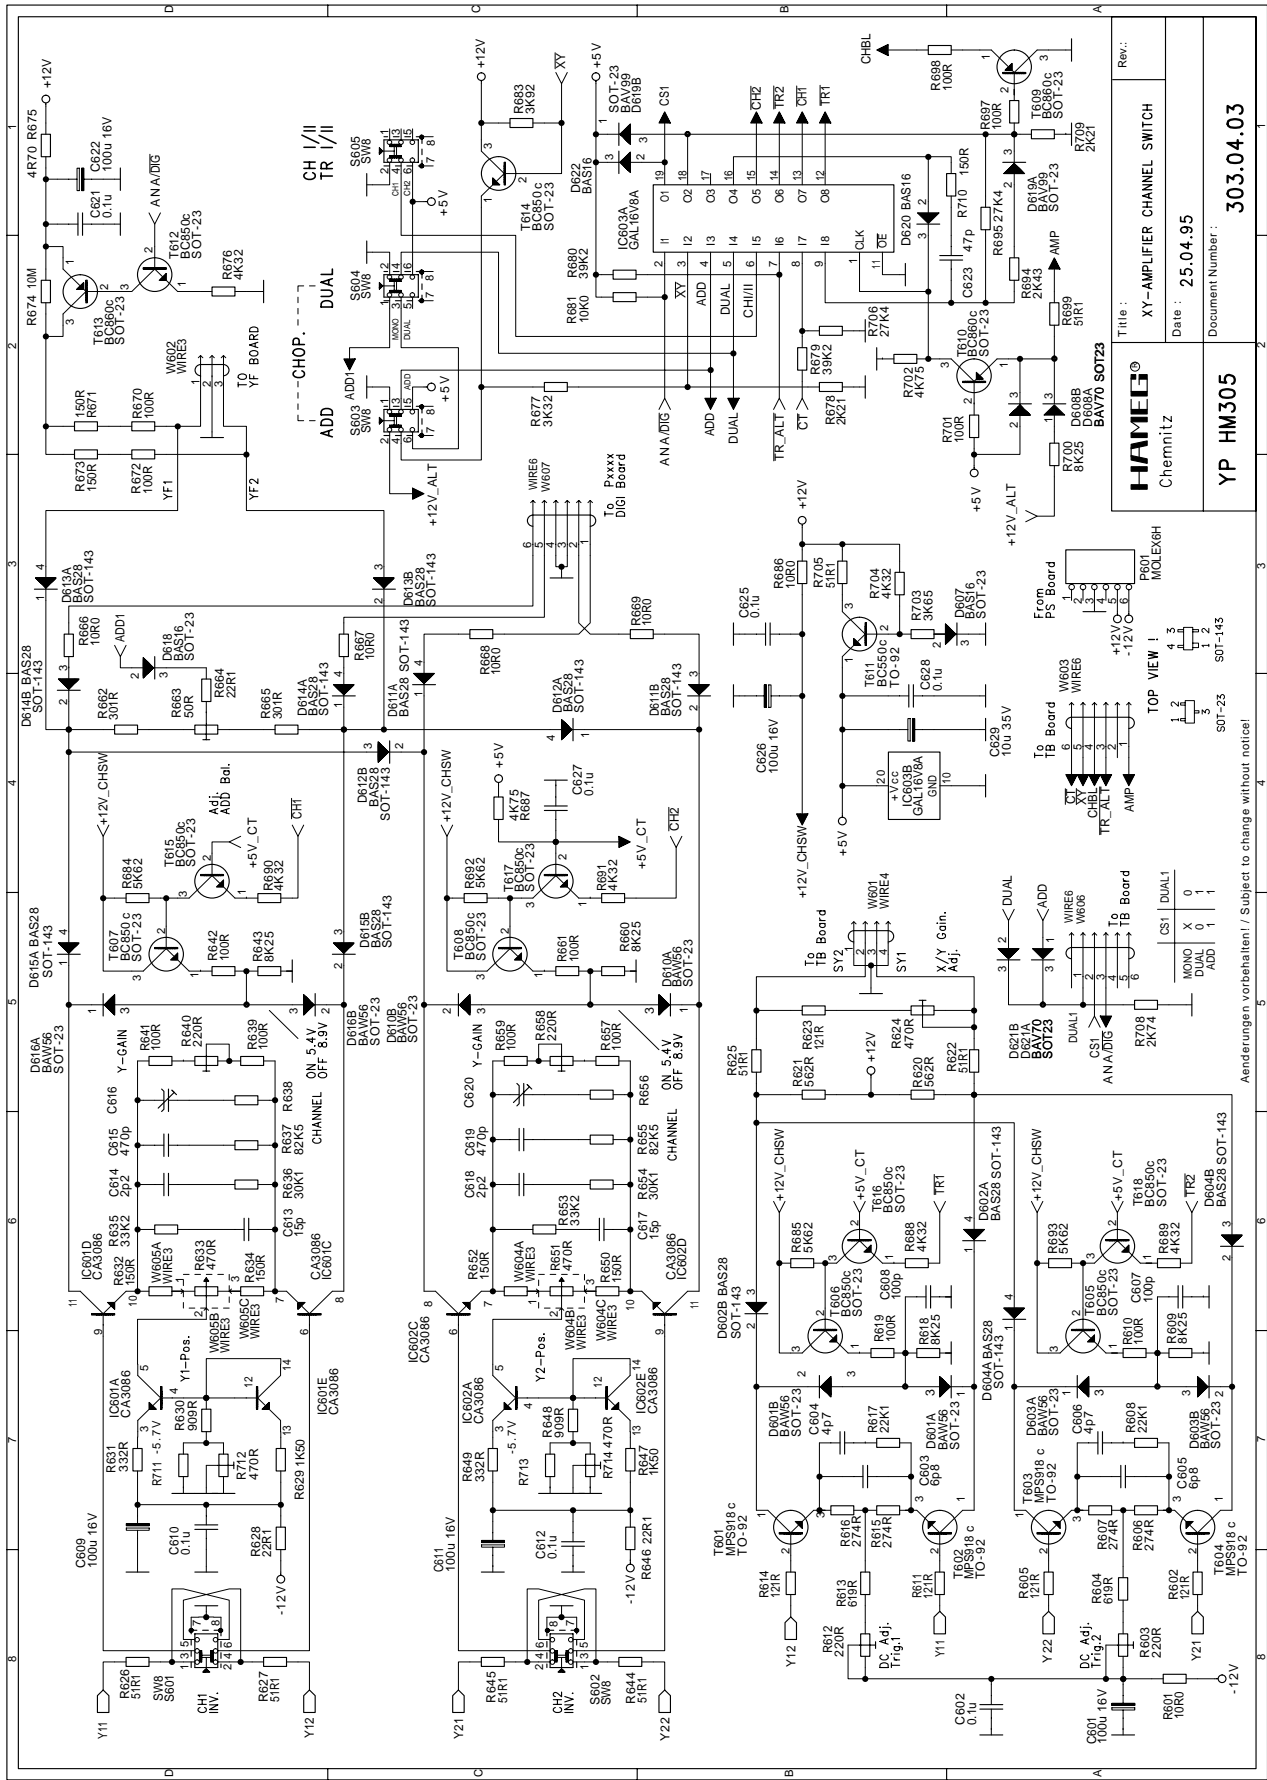

Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	

Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	

Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	


Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	

Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	

Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	


Title : XY-AMPLIFIER CHANNEL SWITCH	
Date : 25.04.95	Document Number :
Rev.:	
YIP HM305	
Ciemnitz	
303.04.03	


# Trigger Amplifier, Trigger Coupling, TV Sync. Separator, Peak Value Detection, Trigger Comparator

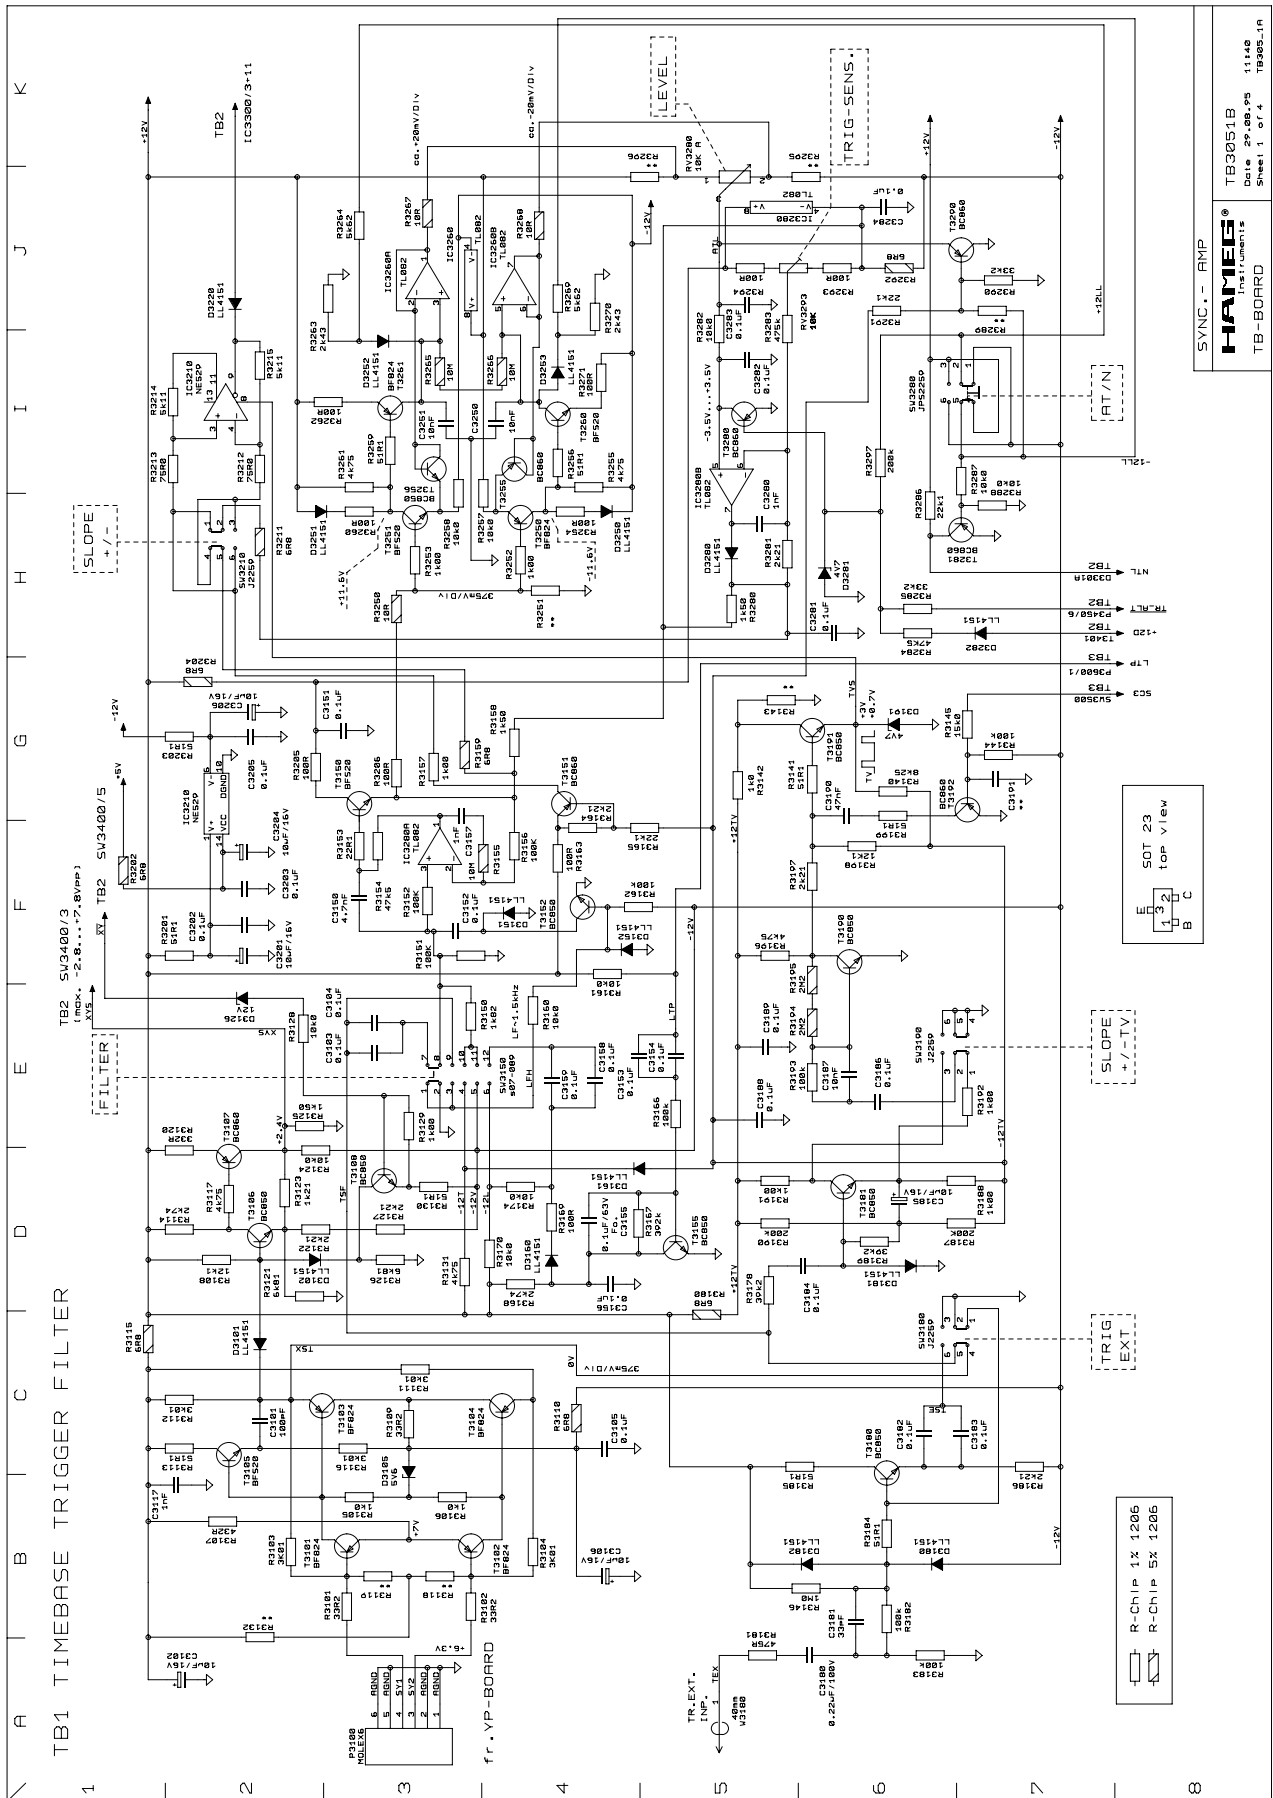

SYNC. - AMP  
**HAMEIS**  
 Instruments  
 TB3051B  
 Date 29.09.93 11140  
 TB-BOARD  
 Sheet 1 of 4 TB305.1A

# Timebase Sweep & Hold off Generator

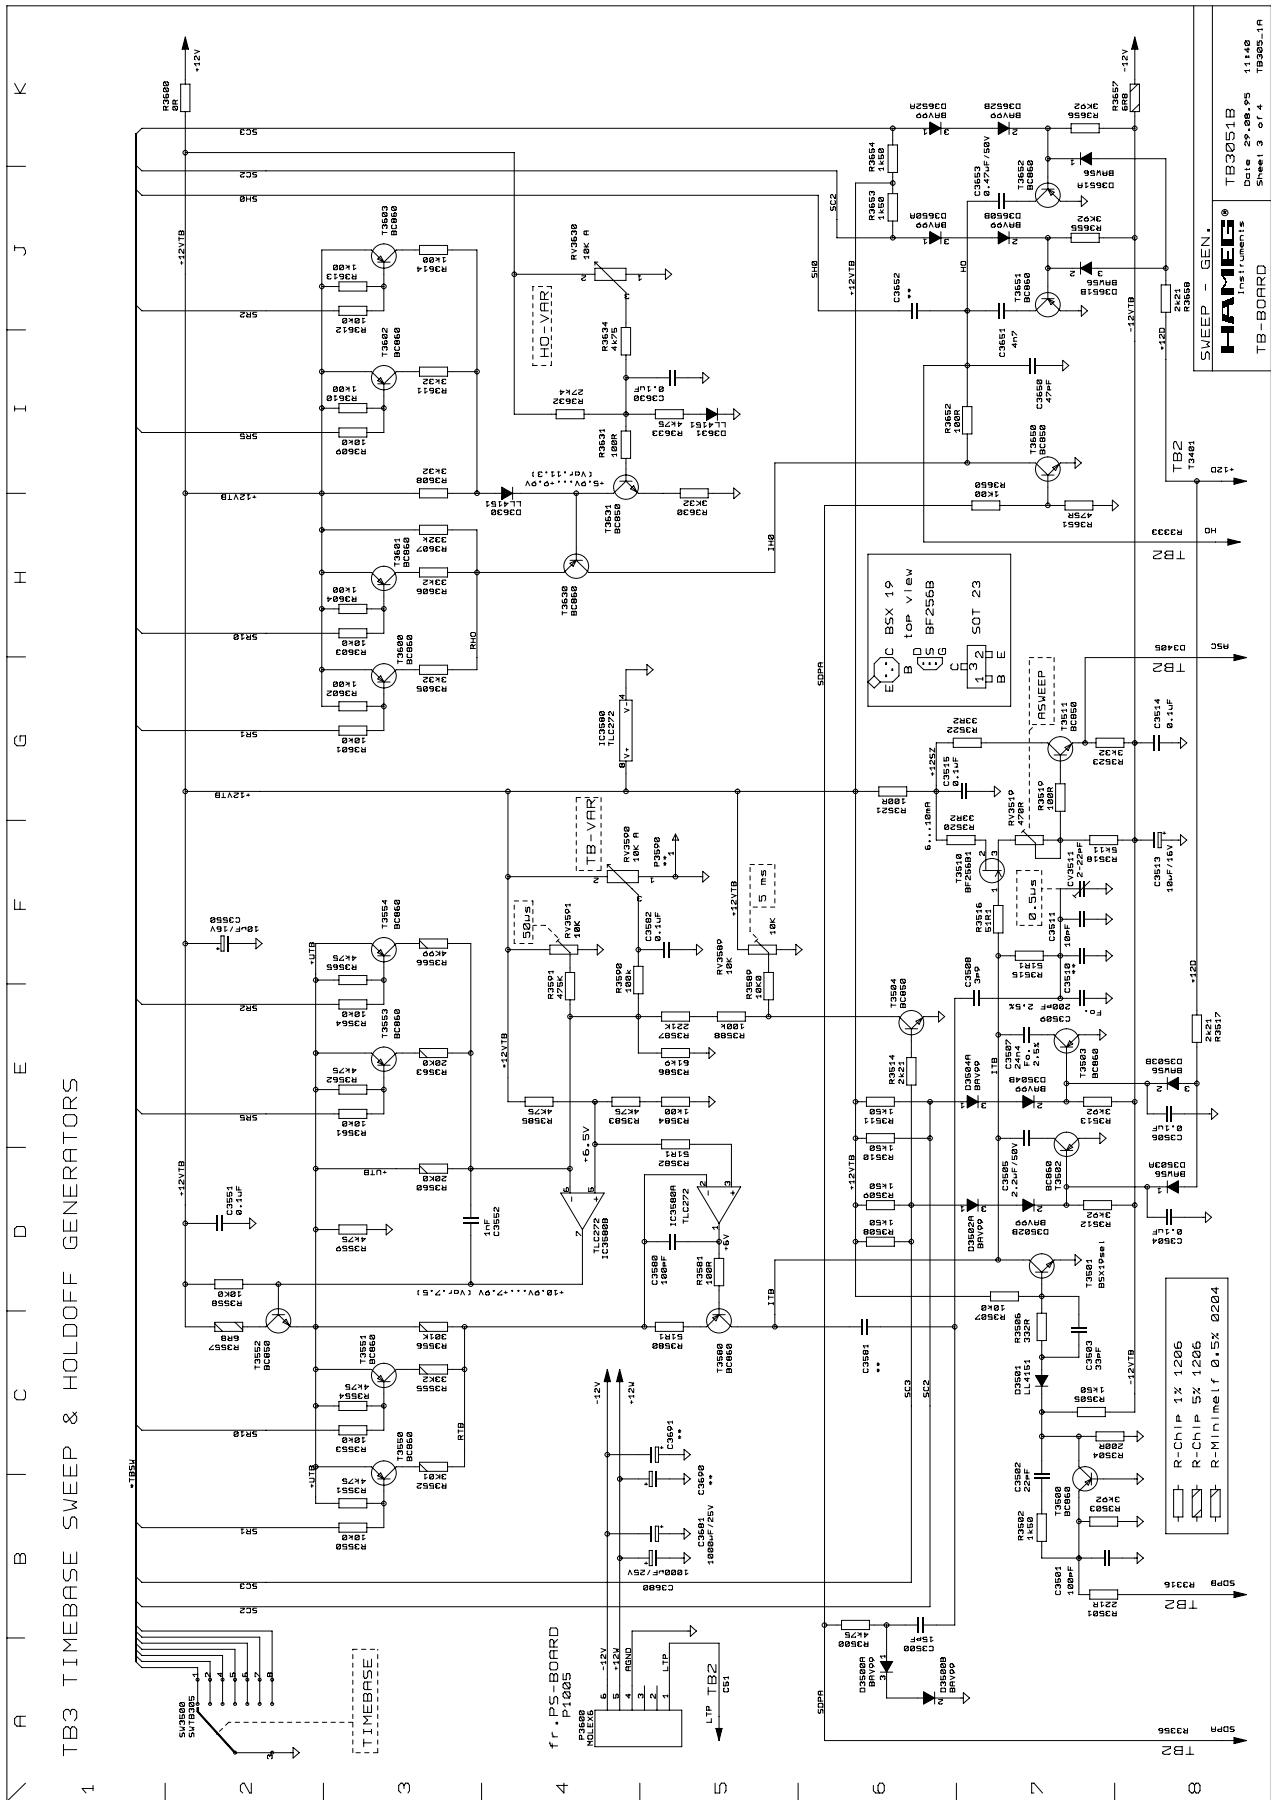


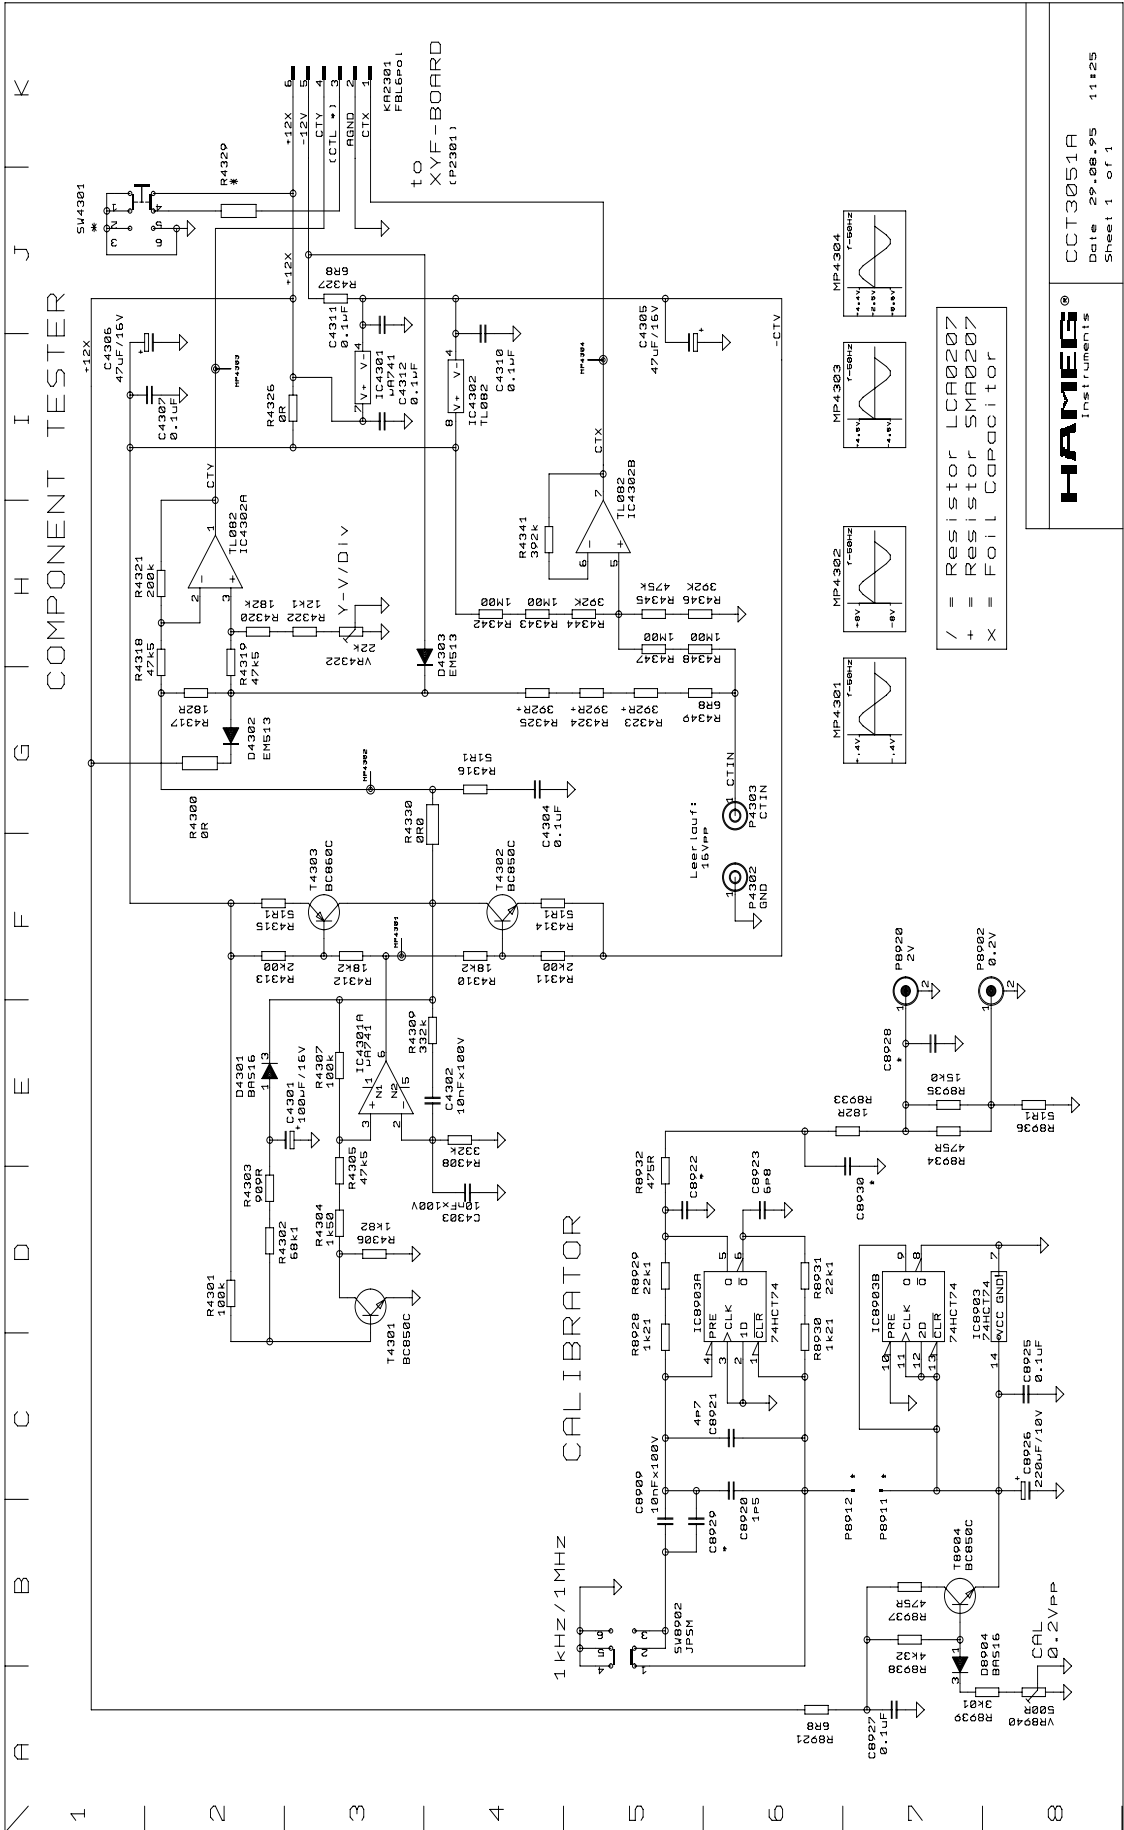


CCT3051A  
 Date 29.08.95  
 Sheet 1 of 1

**HAMEG**  
 Instruments




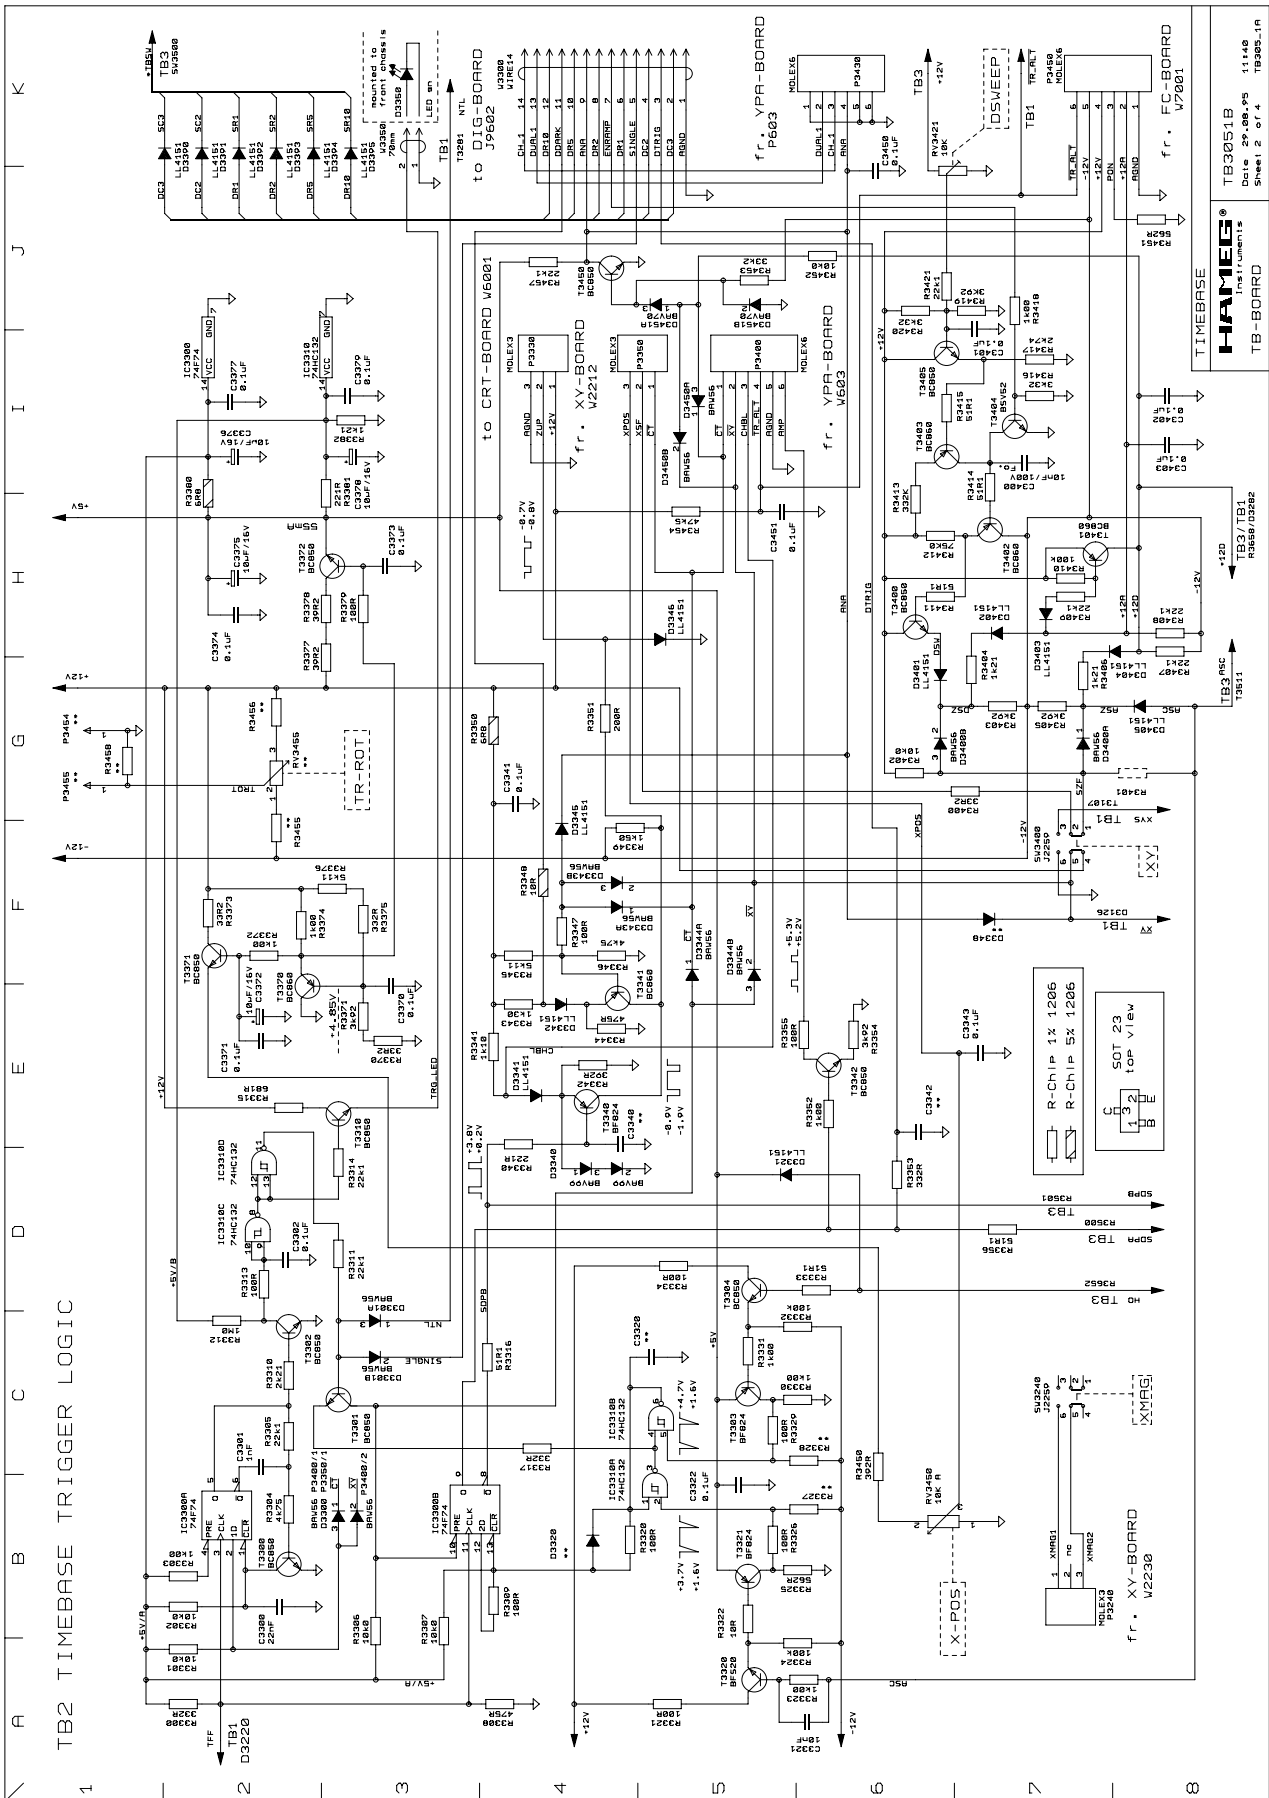

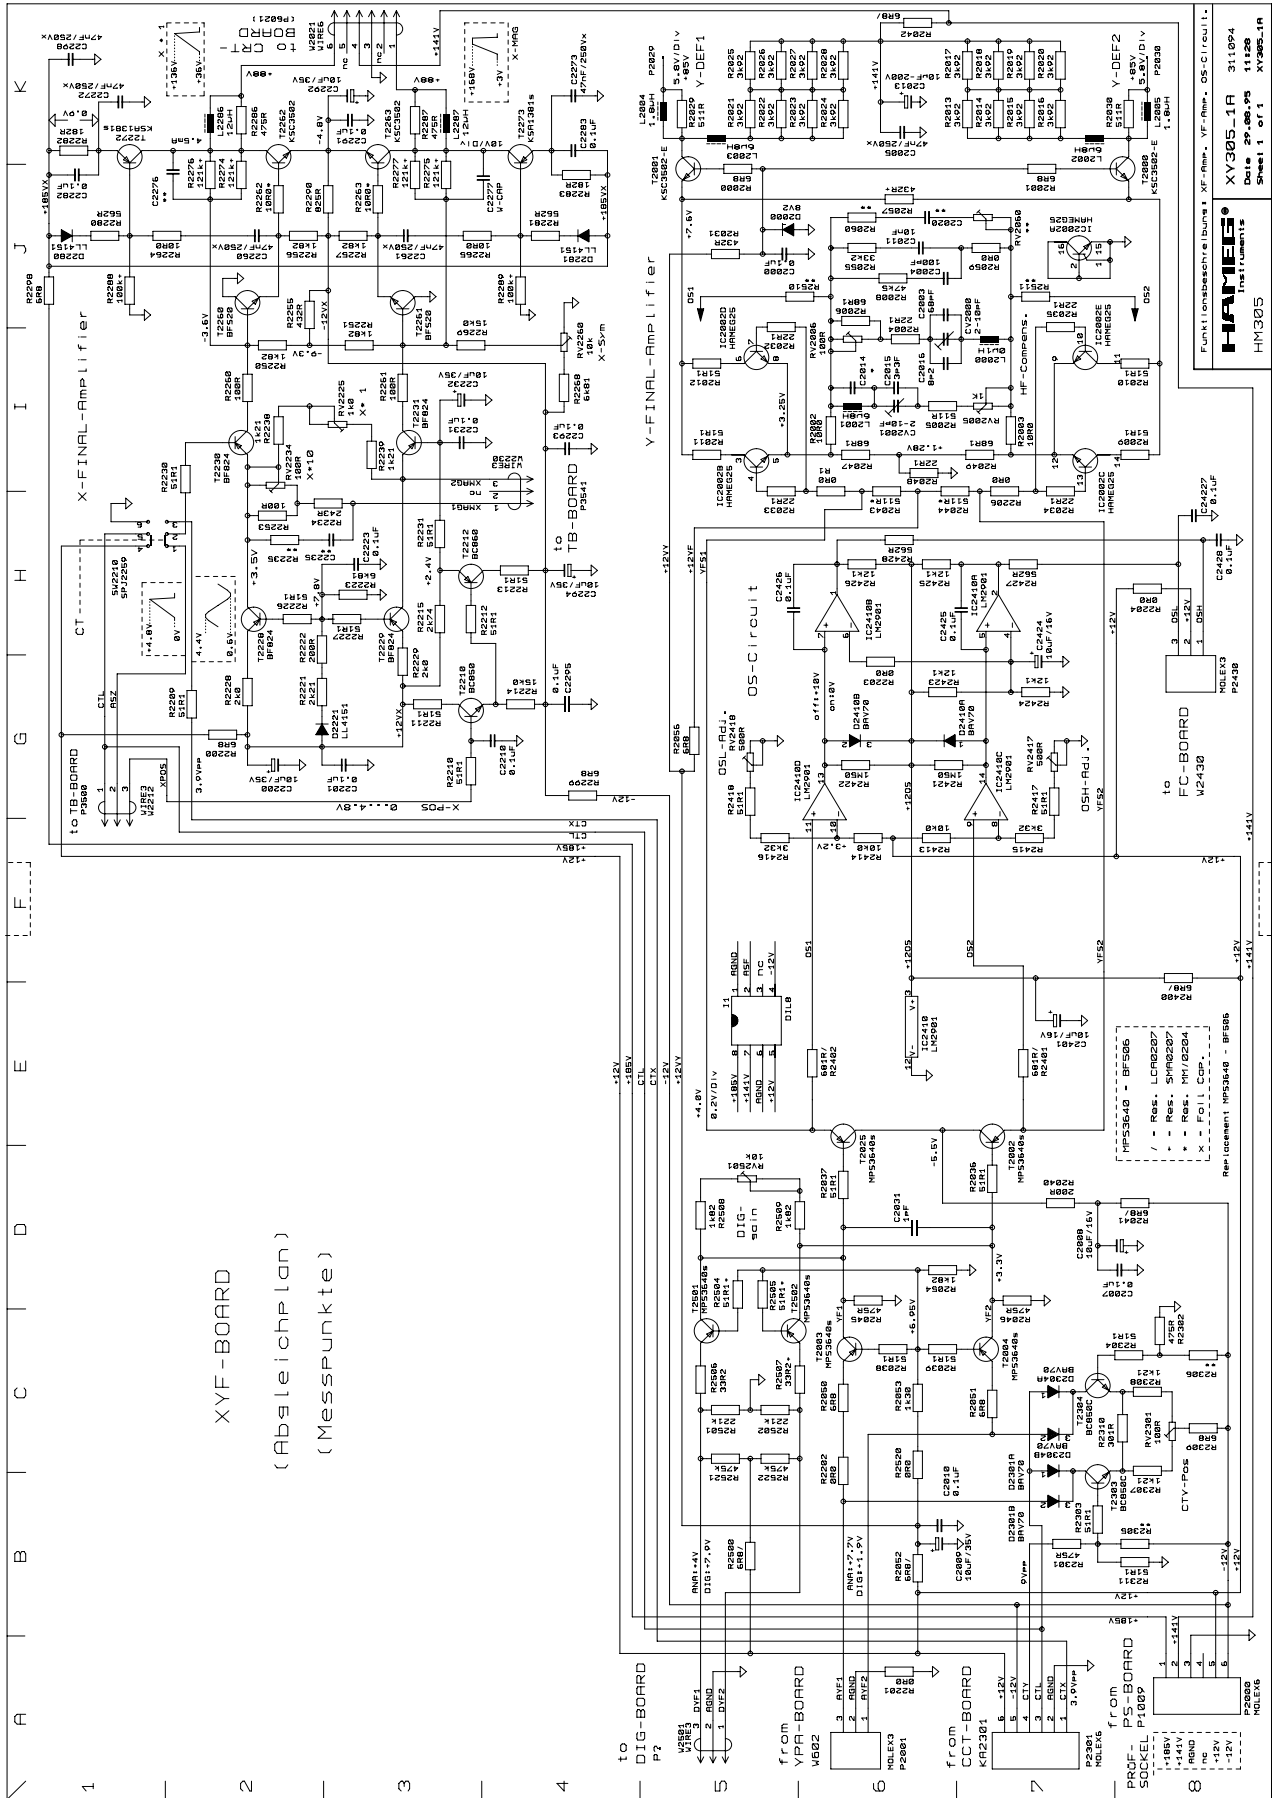

XYF-BOARD  
(Ableschplan)  
(Messpunkte)

Funktionsschaltplan XY-Ampl., YF-Ampl., OS-Circuit  
**HM305**  
 XY305\_1A 31.10.94  
 Date 29.06.93 11:20  
 Sheet 1 of 1 XY305\_1A

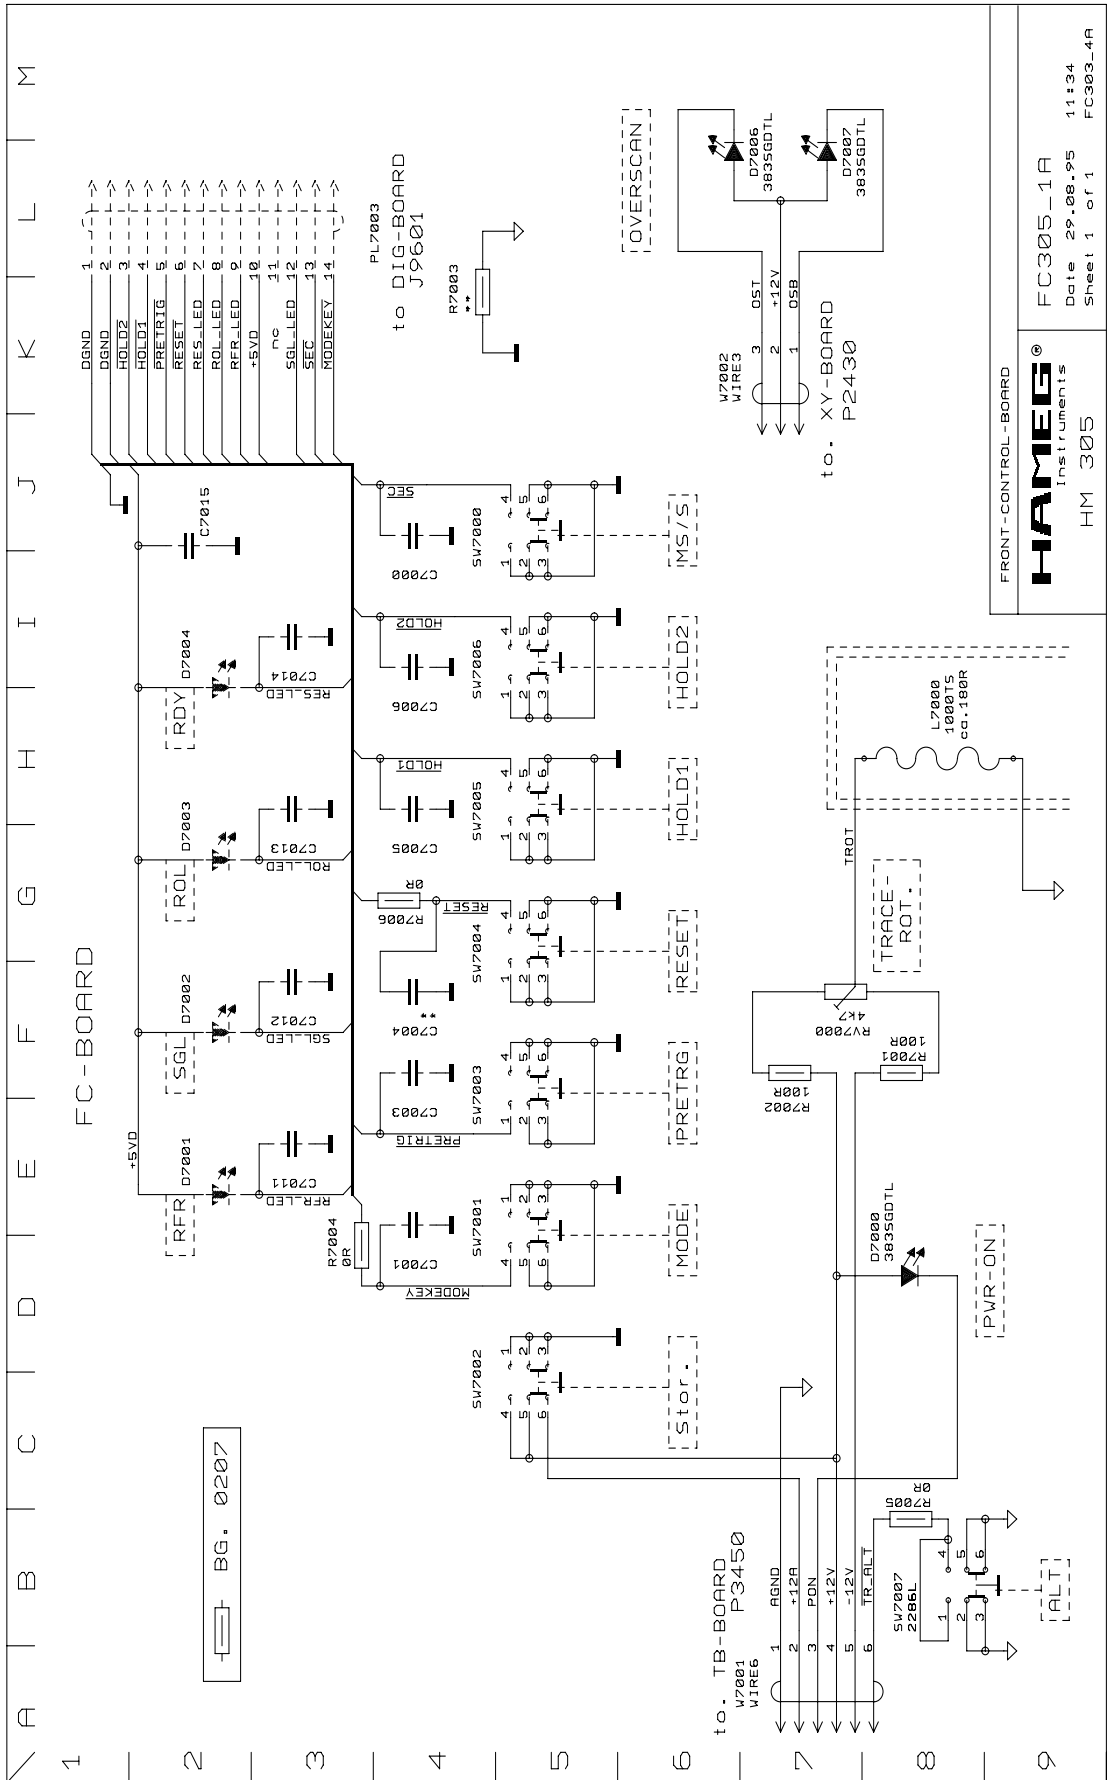


FRONT-CONTROL-BOARD

**HAMEG®**  
Instruments

HM 305

---

FC305-1A  
Date 29.08.95 11:34  
Sheet 1 of 1 FC303-4A

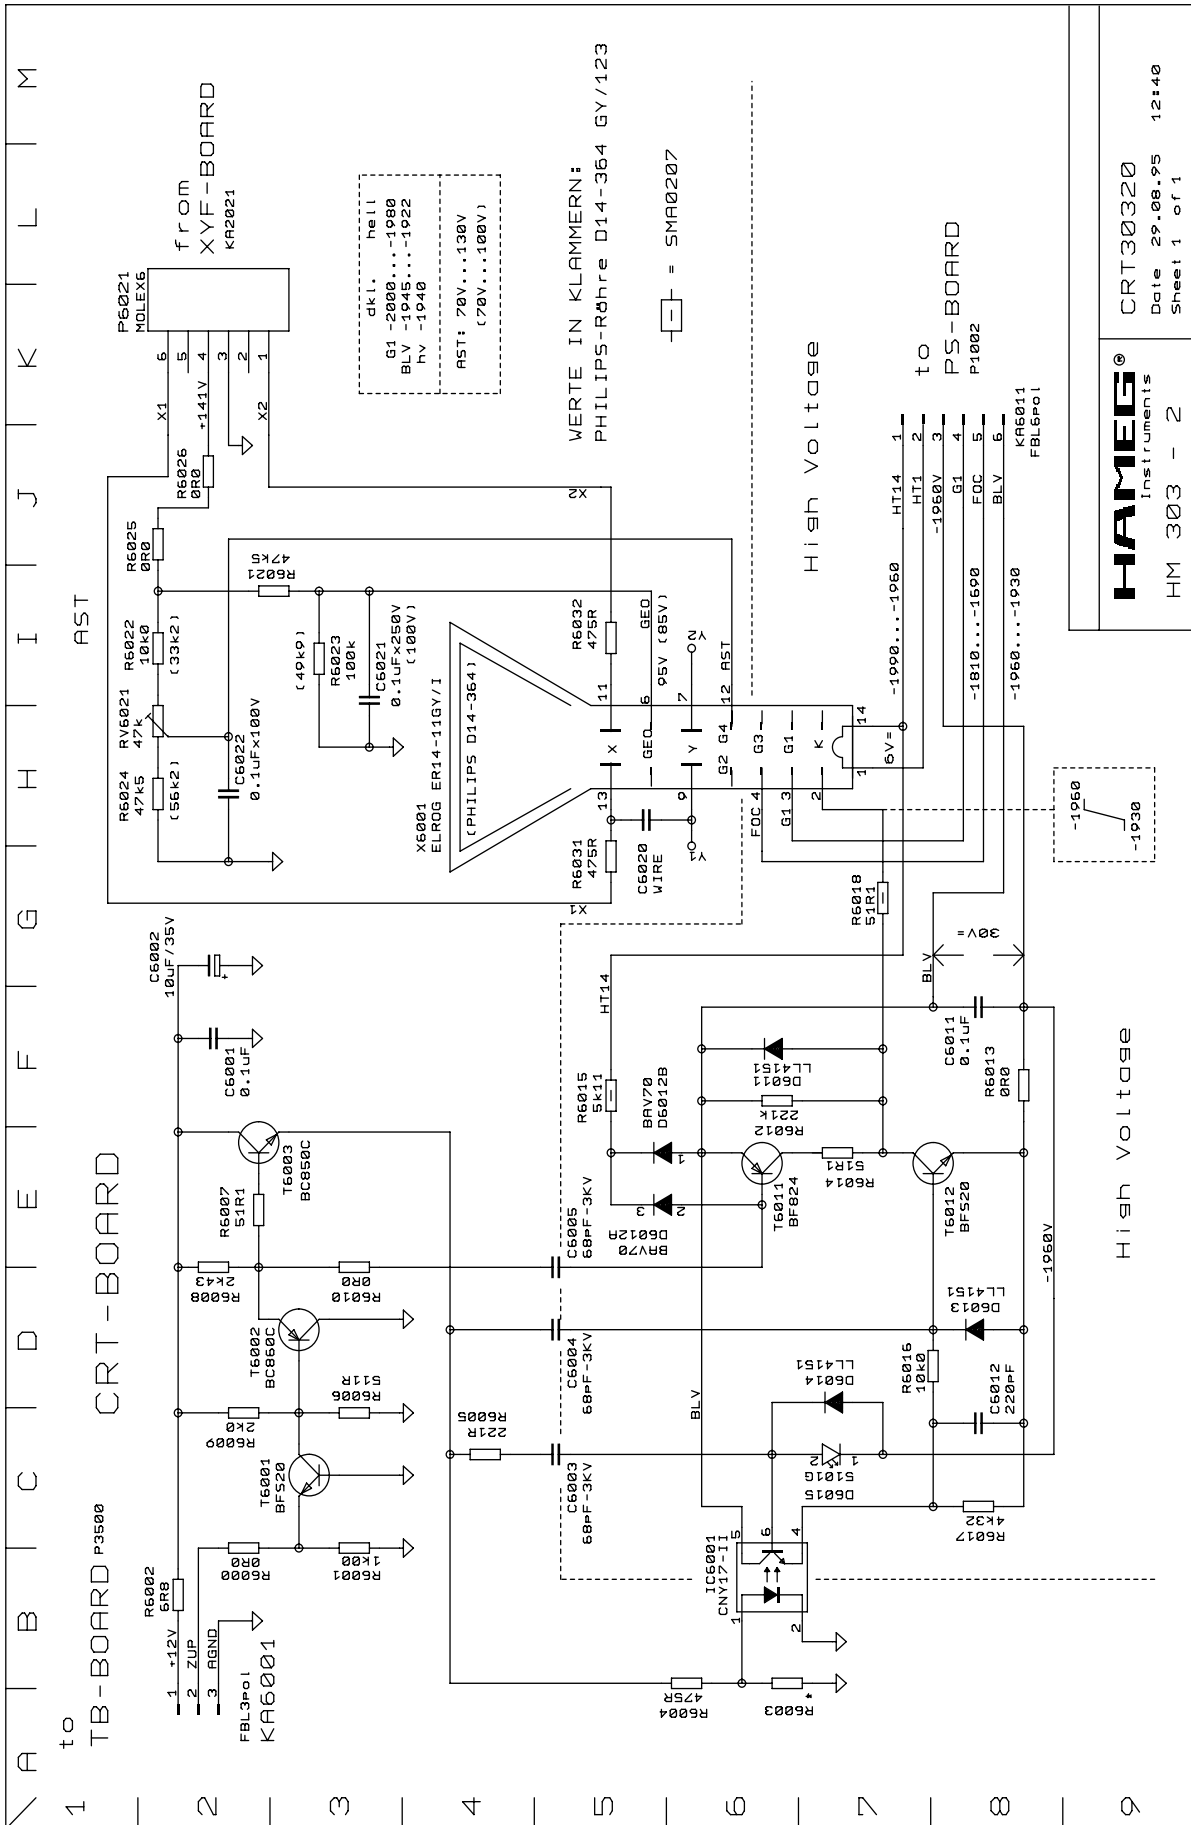


HM 303 - 2


**HAMEG**  
Instruments

CRT30320

Date 29.08.95 12:40


Sheet 1 of 1

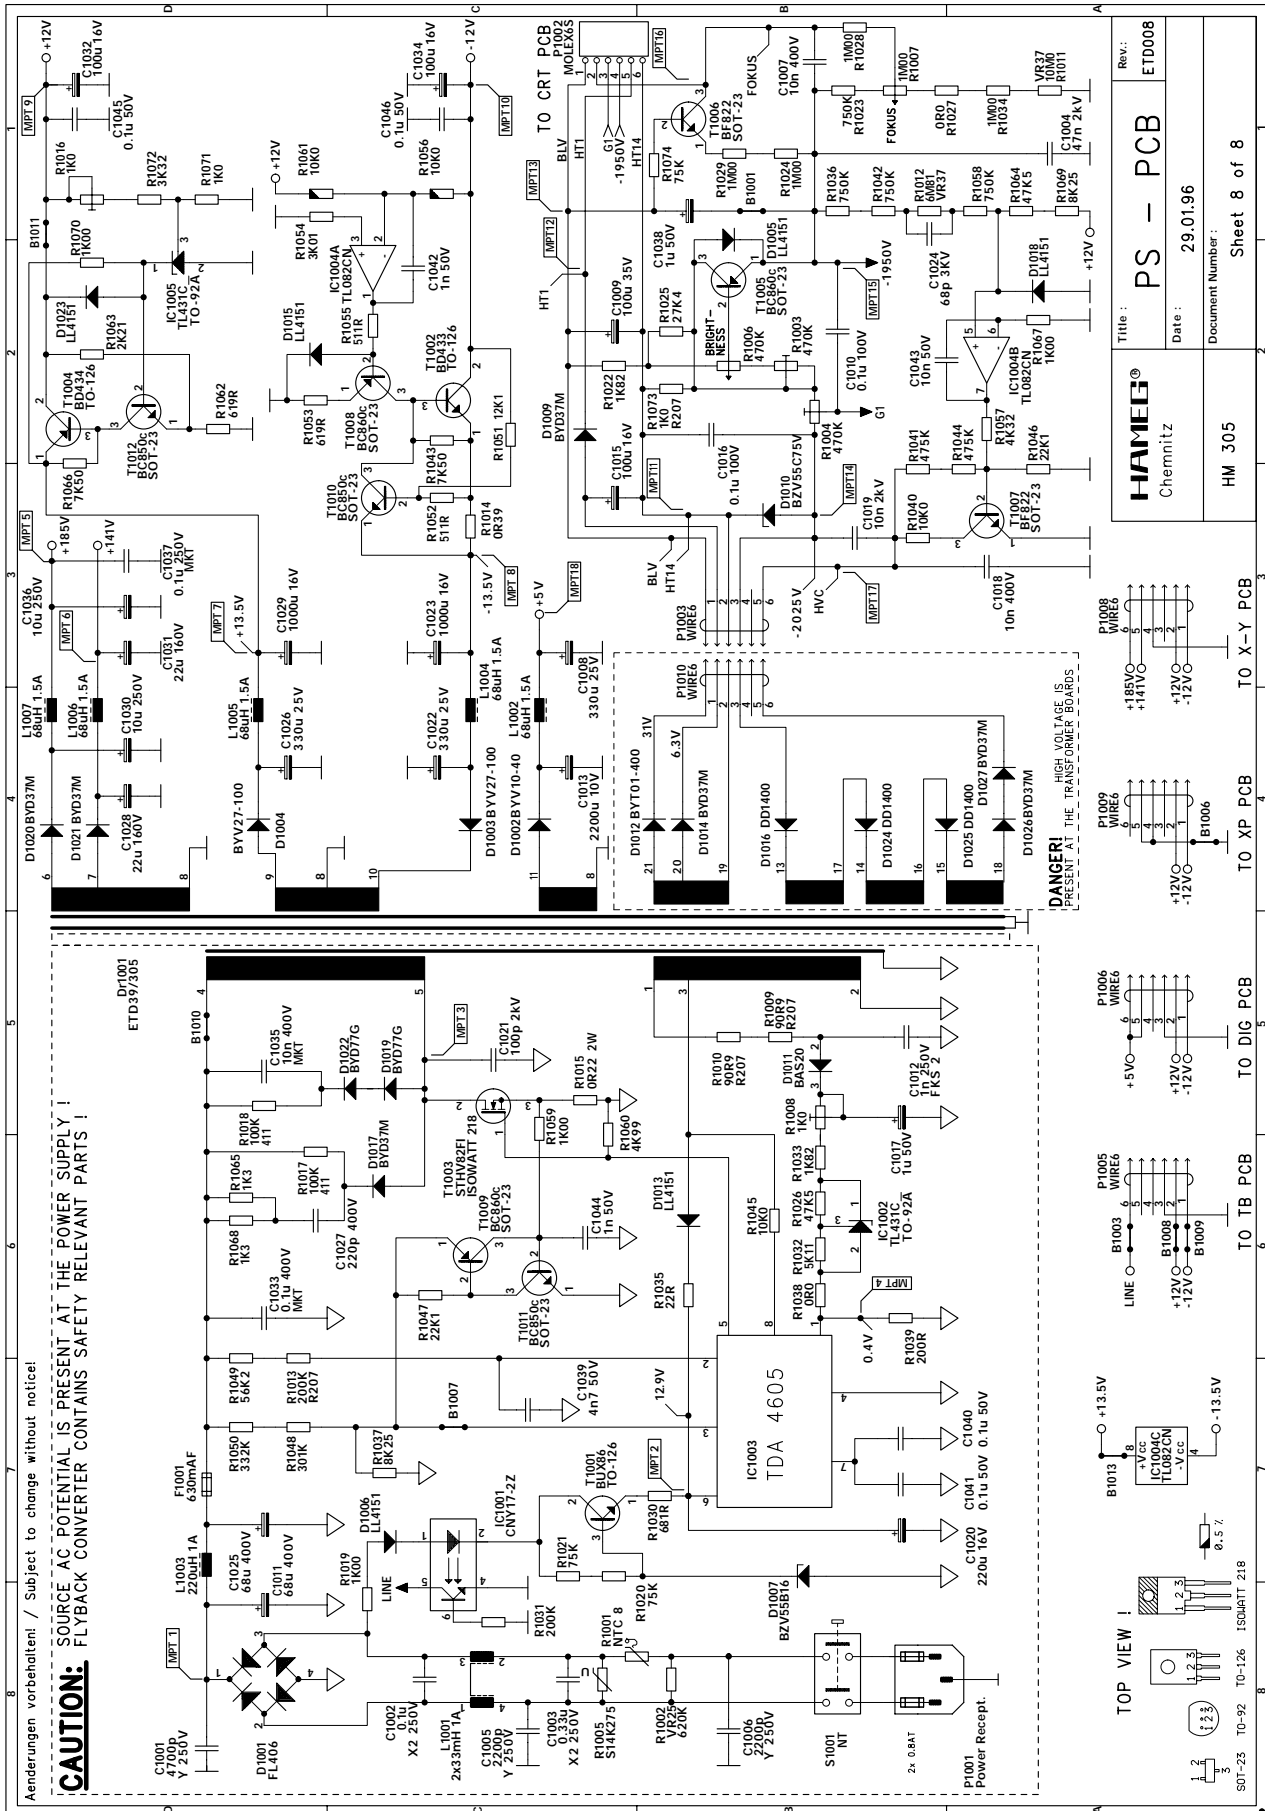

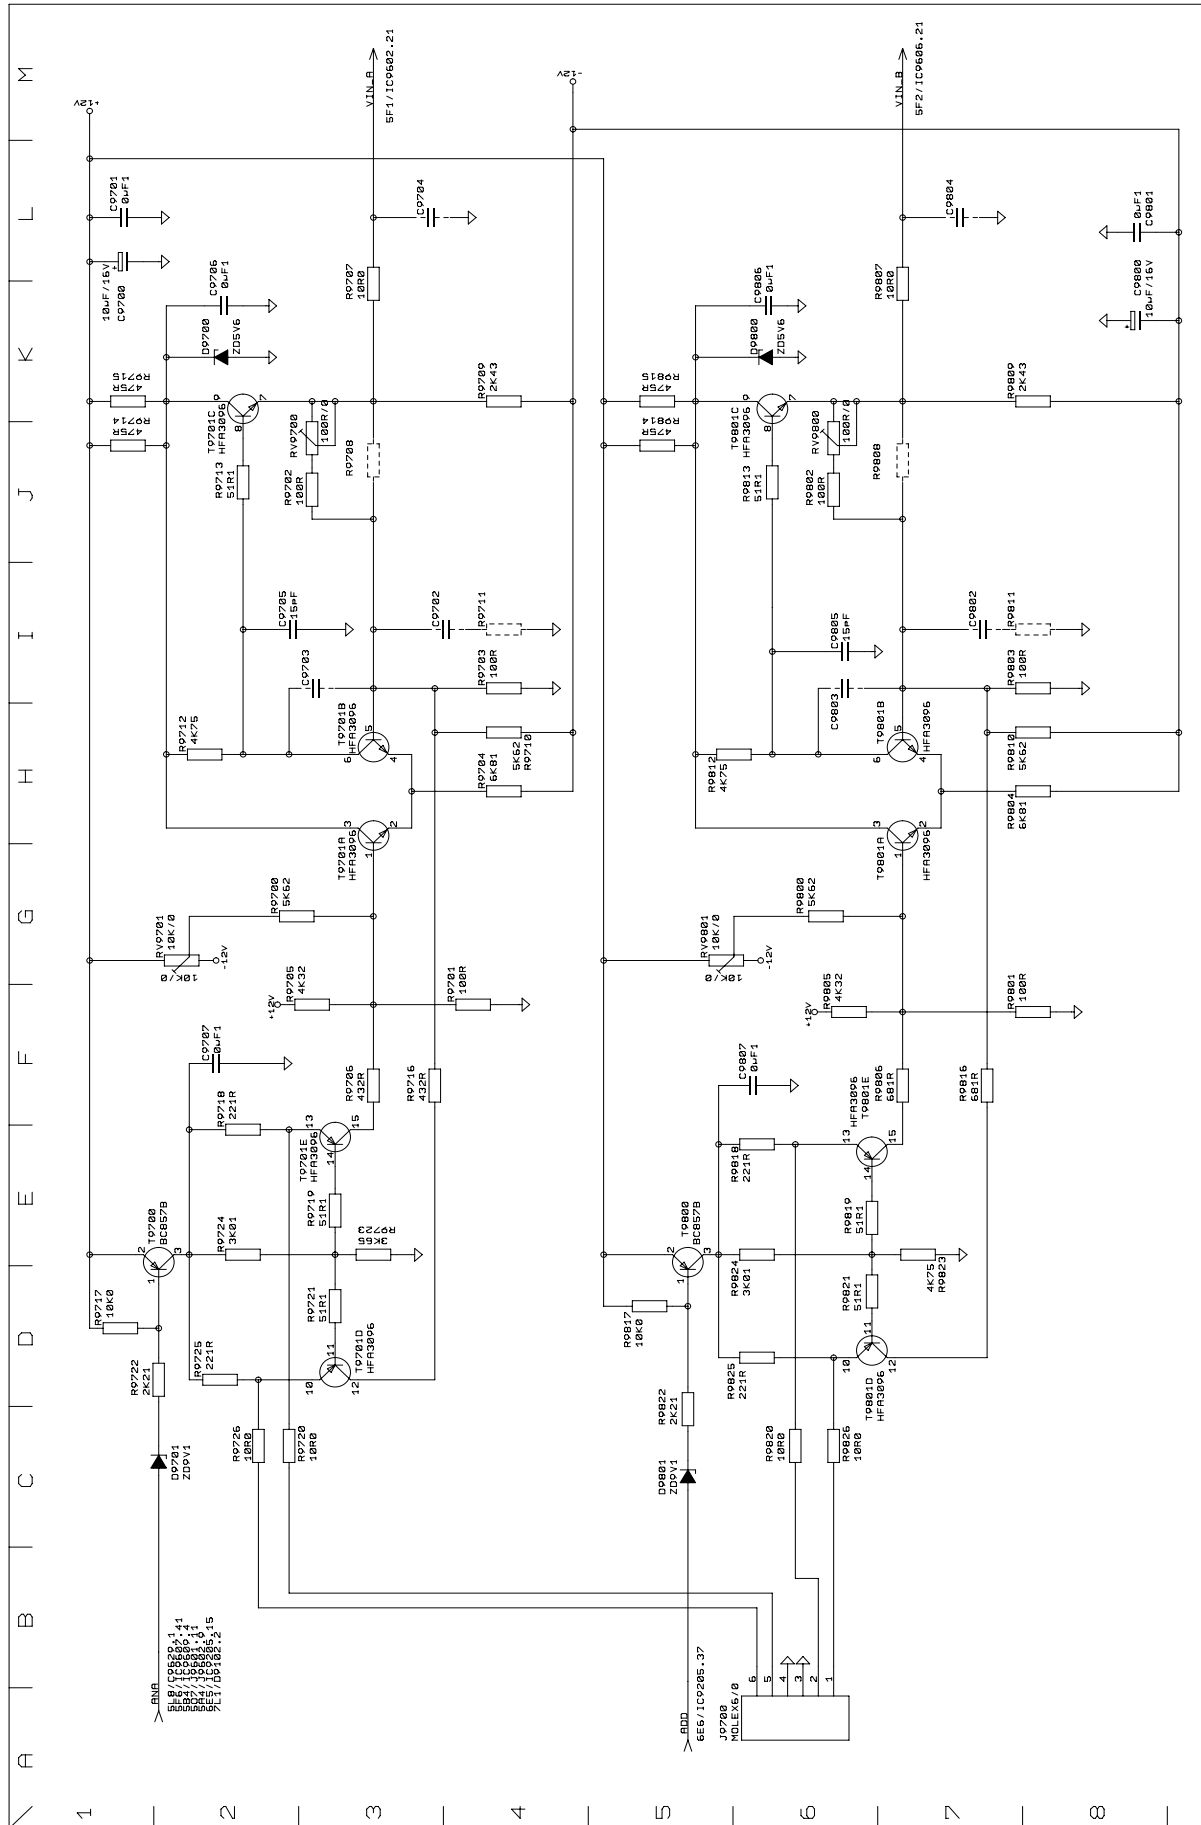

Analog Input  
**HAMEG**  
 Instruments  
**HM 305**  
 DI305-1A  
 Date 31.01.96  
 Sheet 4 of 9  
 REV. 1.0

# A/D Converter, Address Counter, RAM'S, Timebase (Digital), Control Logic

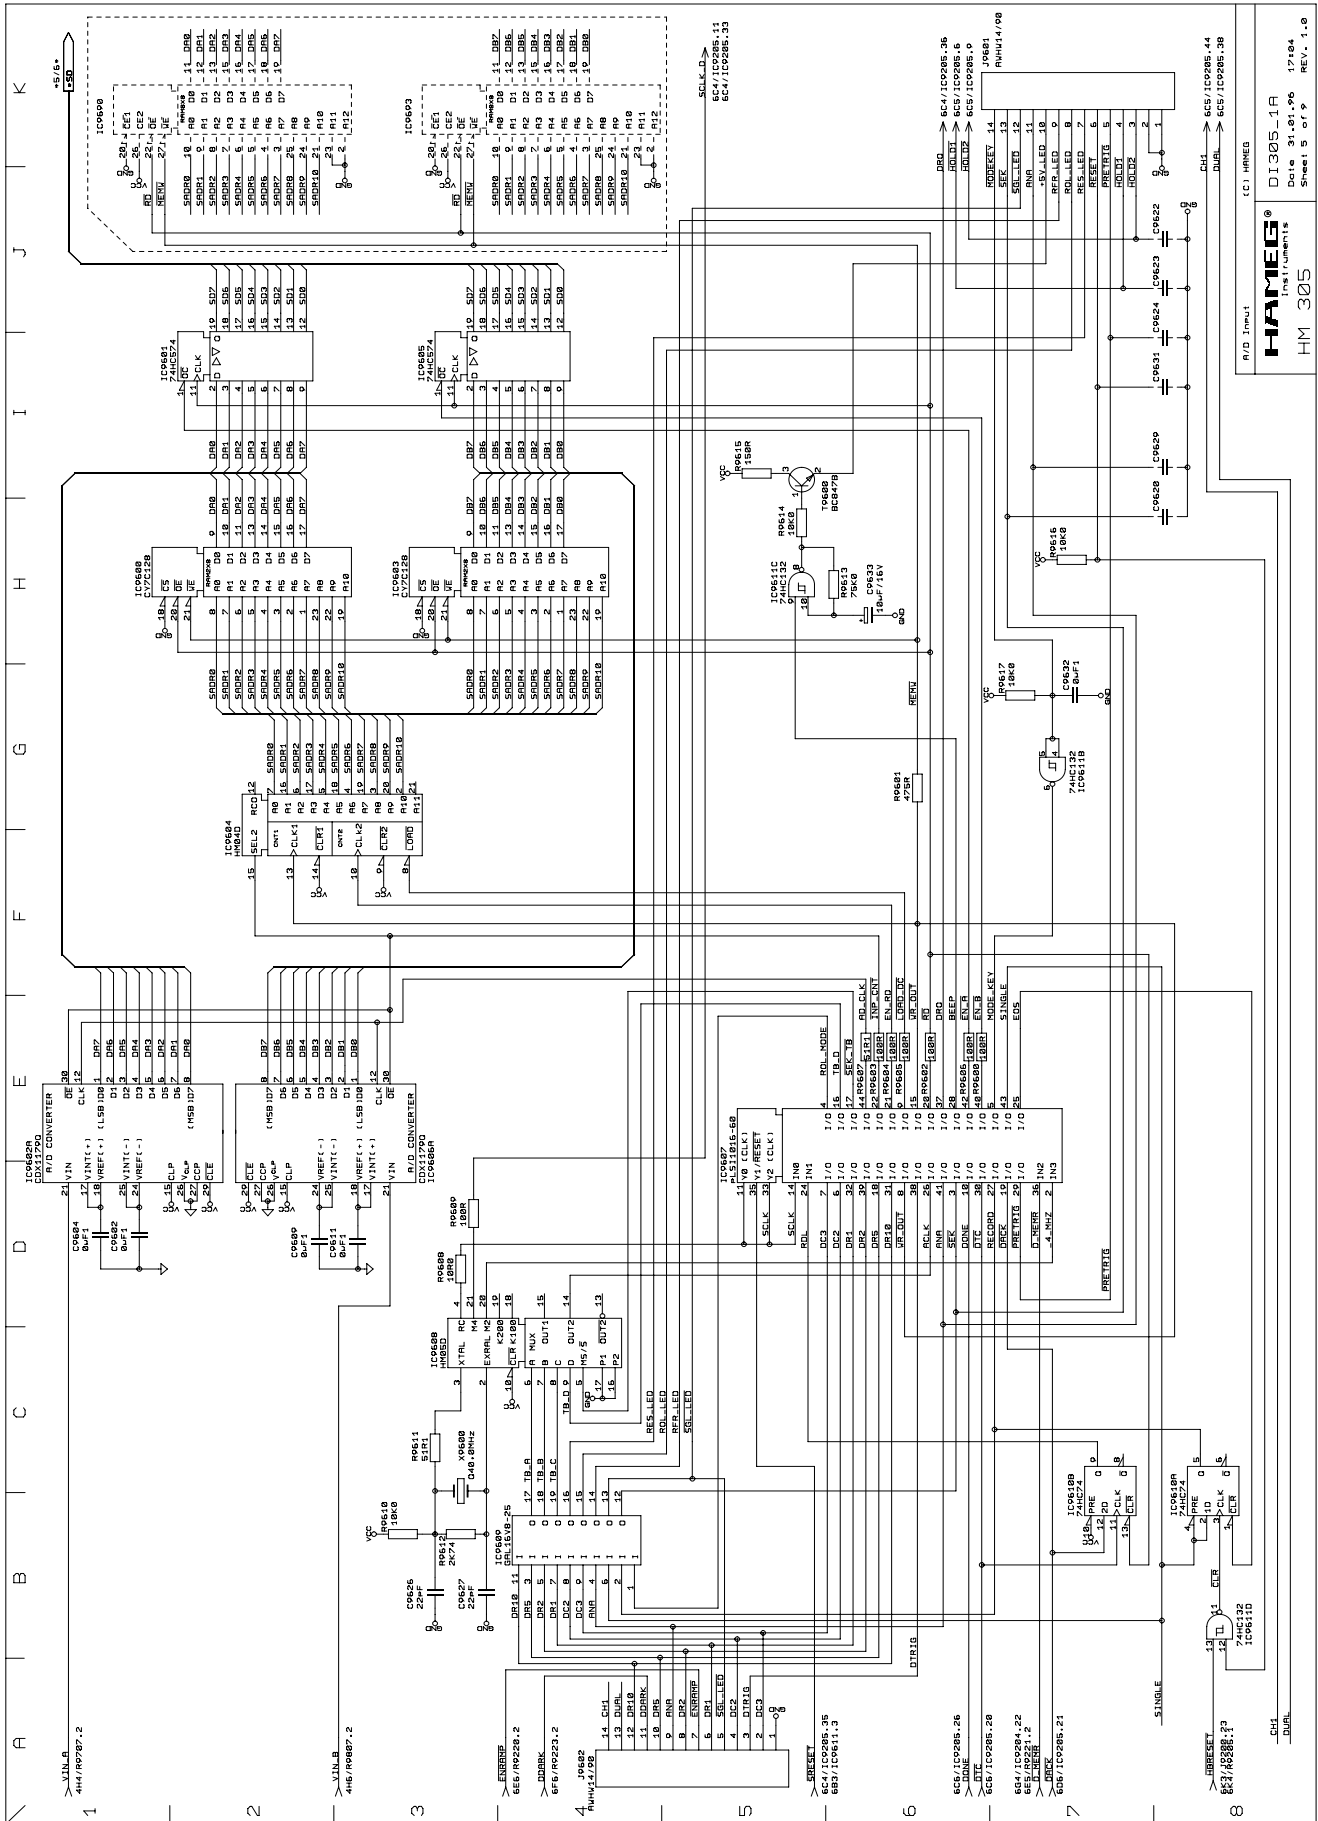


A/D Converter  
 Address Counter  
 RAM'S  
 Timebase (Digital)  
 Control Logic

DI305-1A  
 Instruments  
 HM 305

Date 31.01.96 17:54  
 Sheet 5 of 9  
 REV. 1.0


# Display- Control, Address Counter, RAM, Control Logic, HAMEG Bus Driver

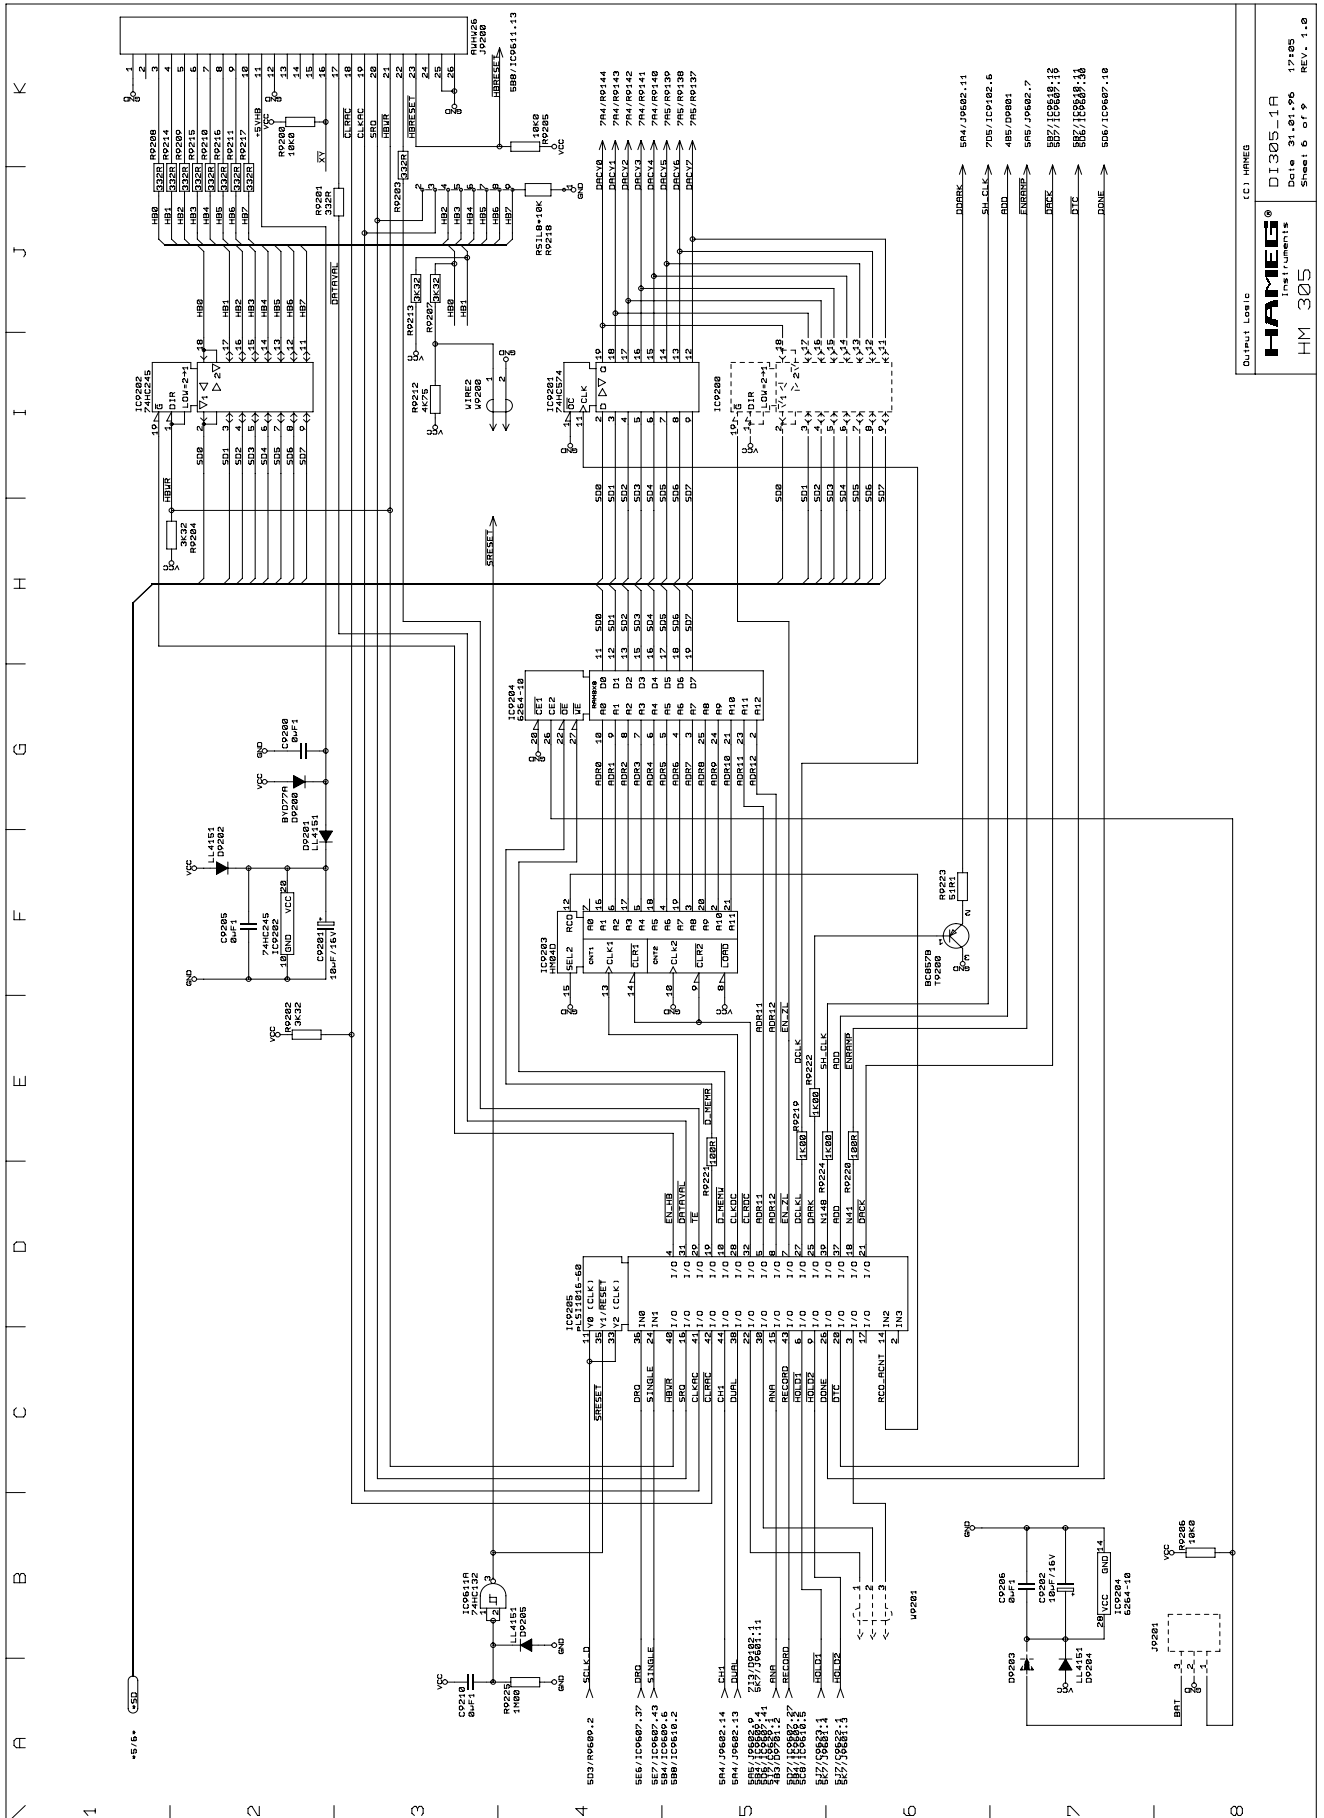


Output Logic  
 IC J HAMEG  
**HAMEG**  
 Instruments  
**HM 305**  
 DI305\_1A  
 Date 31.01.96 17:53  
 Sheet 6 of 9 REV. 1.0





# Y D/A Converter, Dot Join, Y- Analog Output Driver

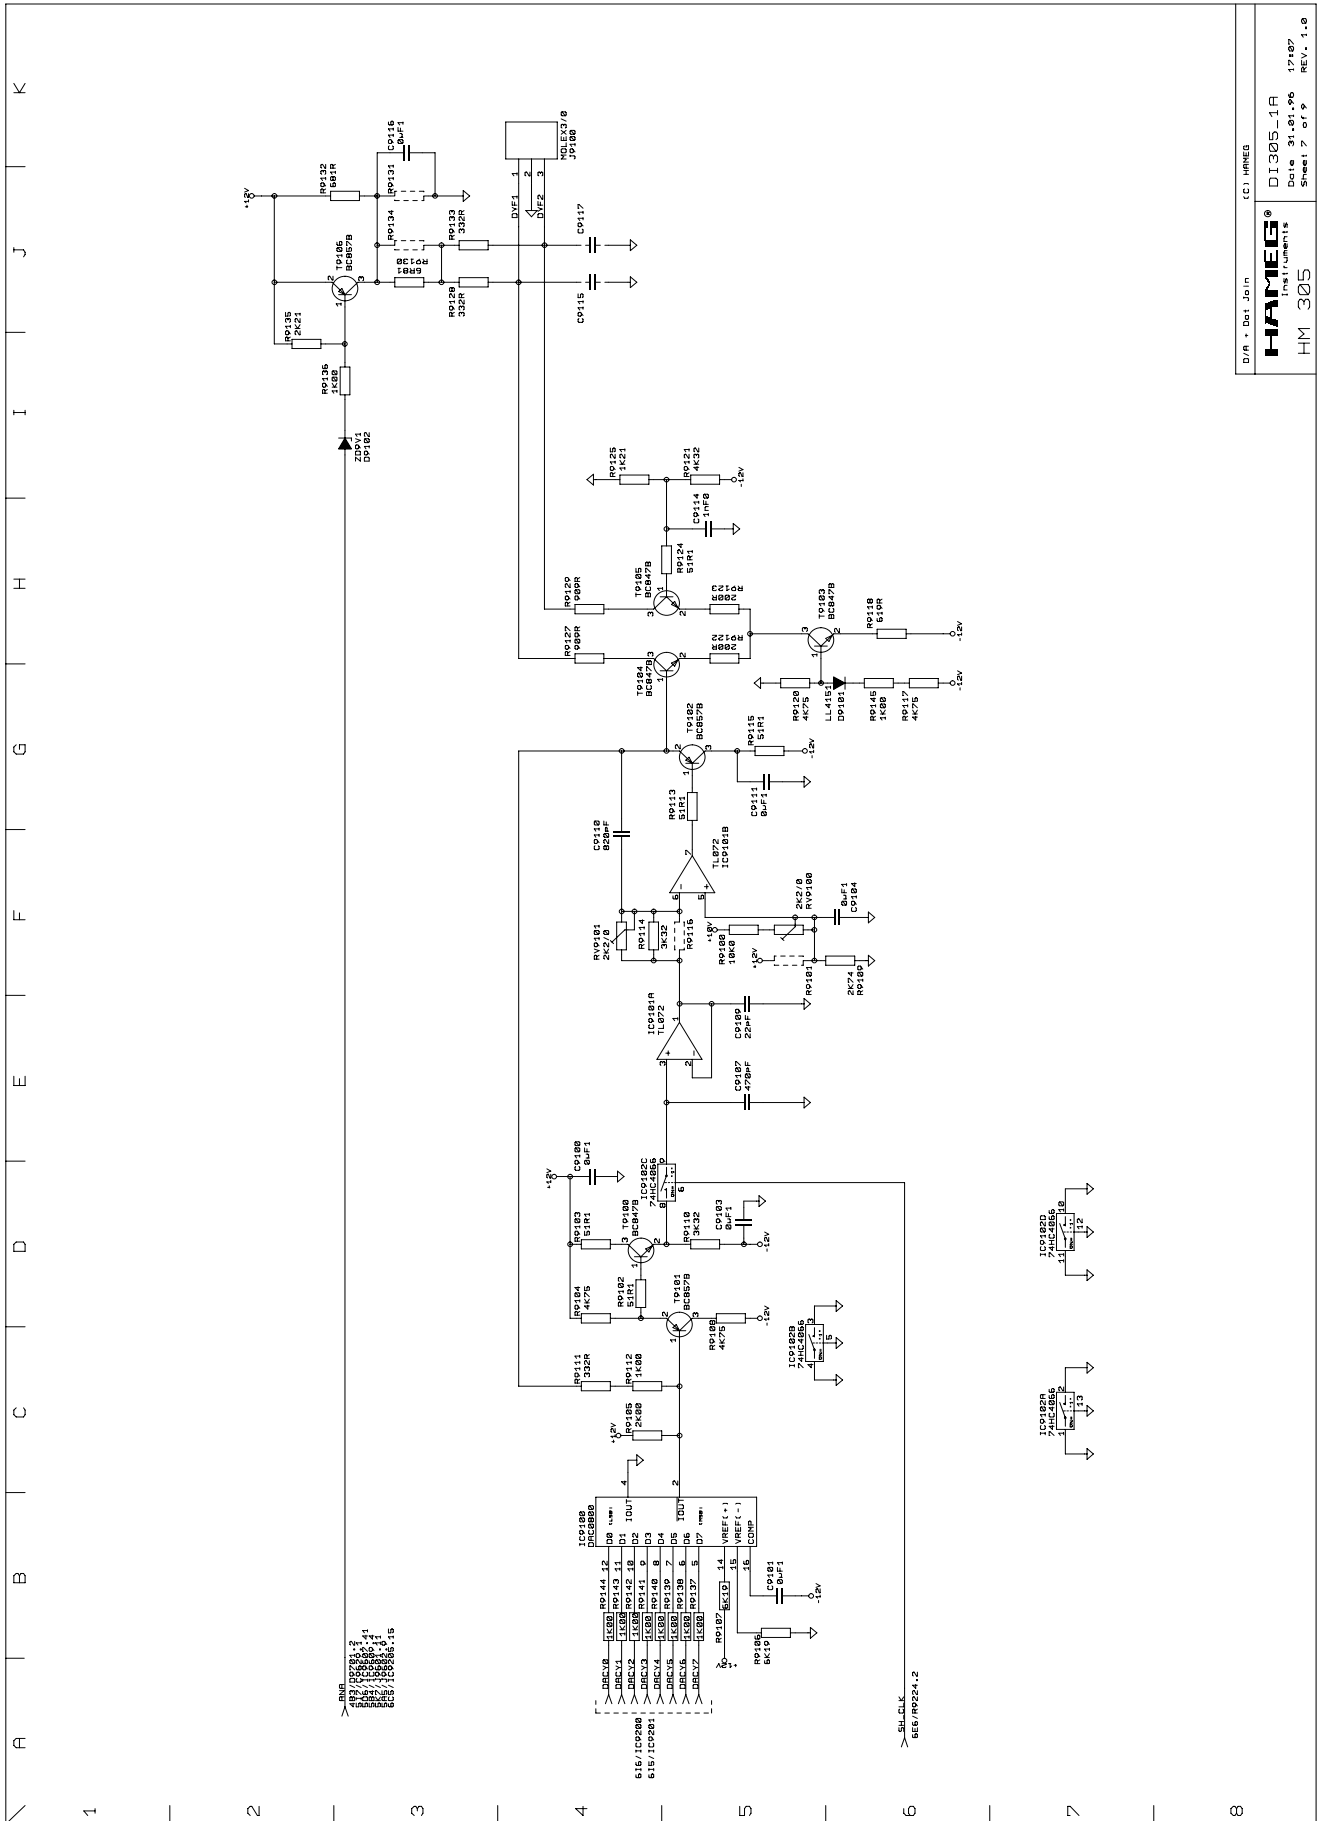


D/A - Dot Join (C) HAMEG  
**HAMEG**  
 Instruments  
 HM 305  
 DI305-1A  
 Date 31.01.96 17:57  
 Sheet 7 of 9 REV. 1.0

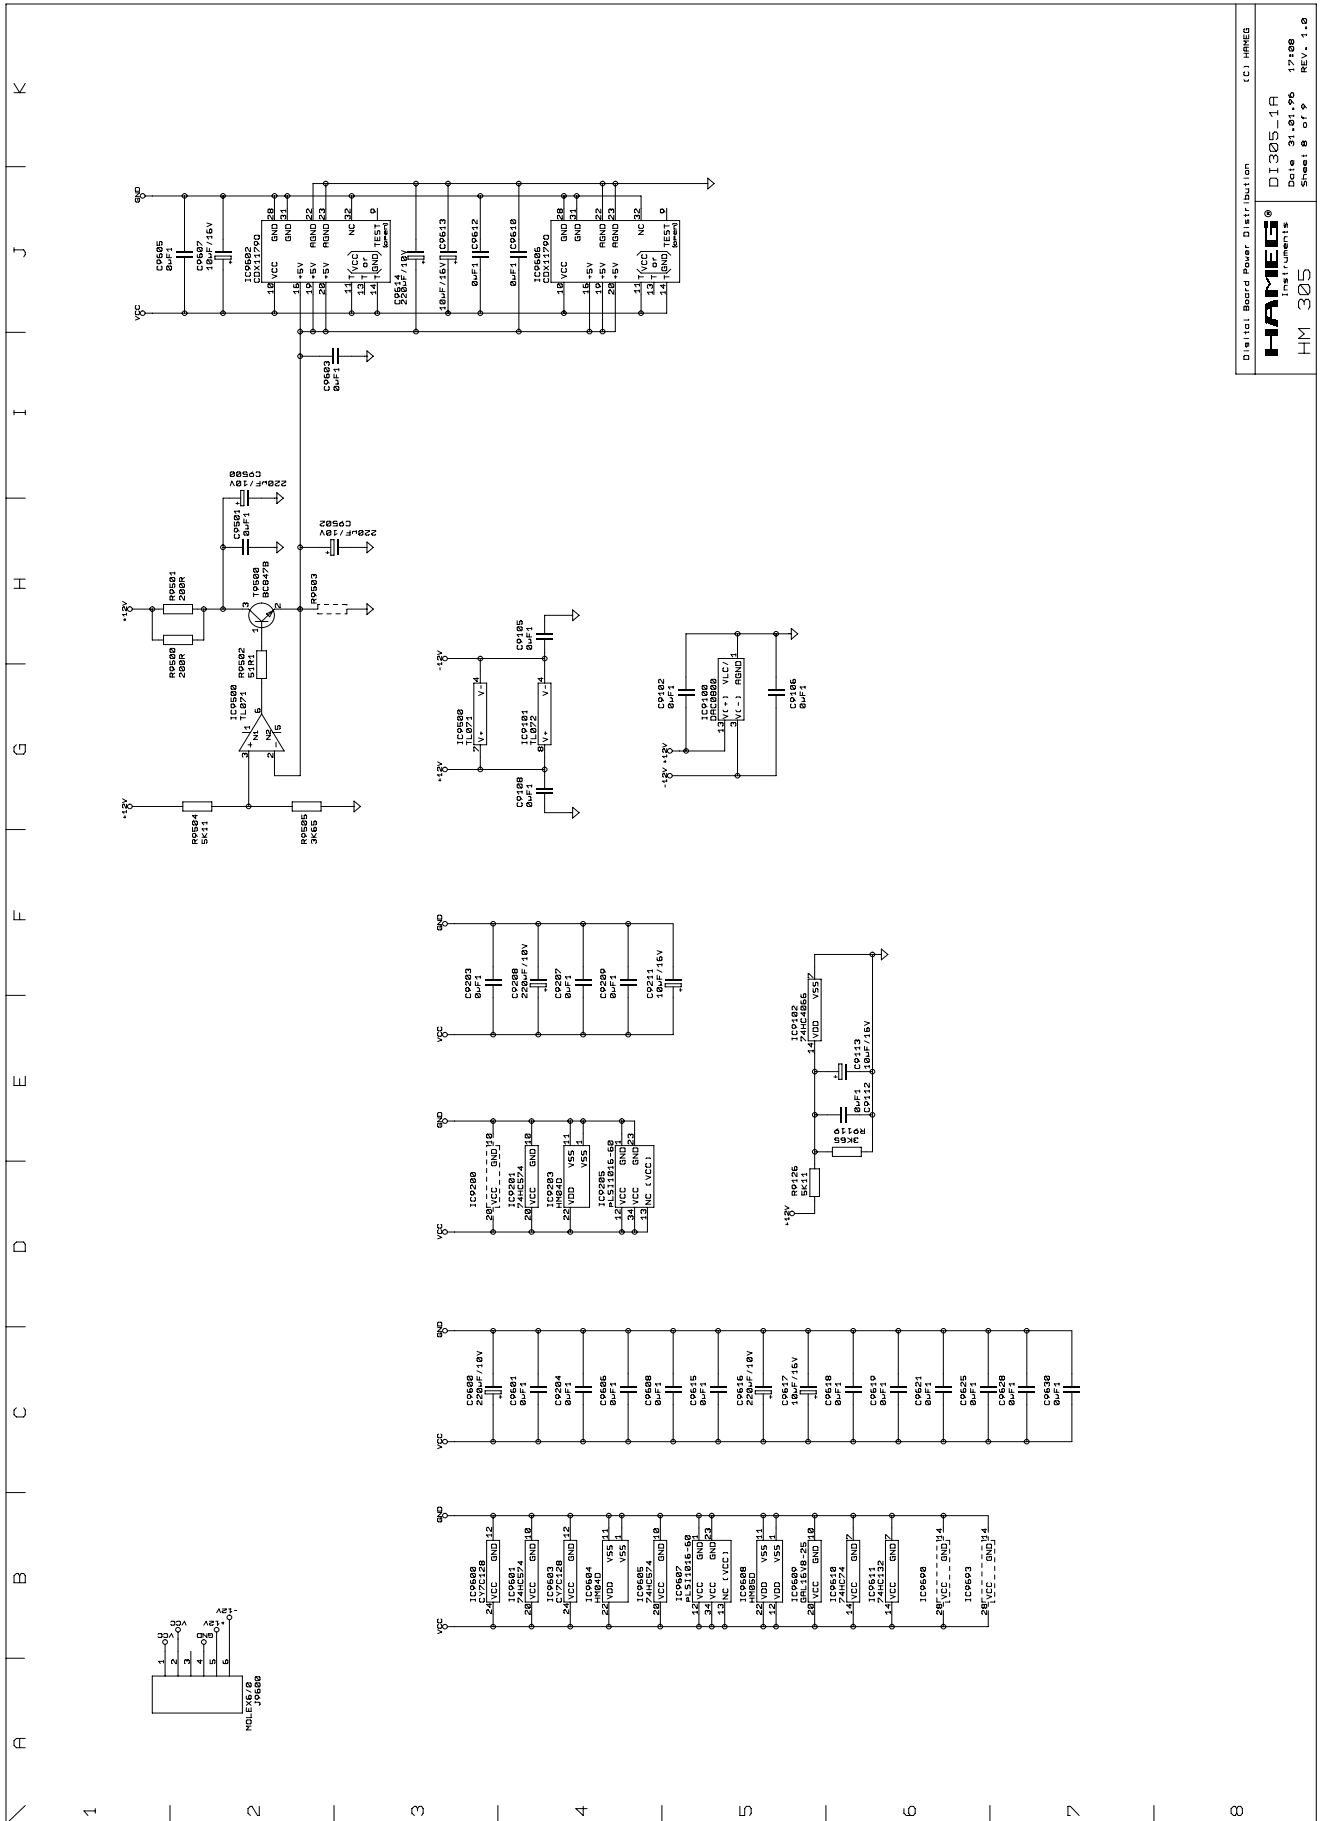


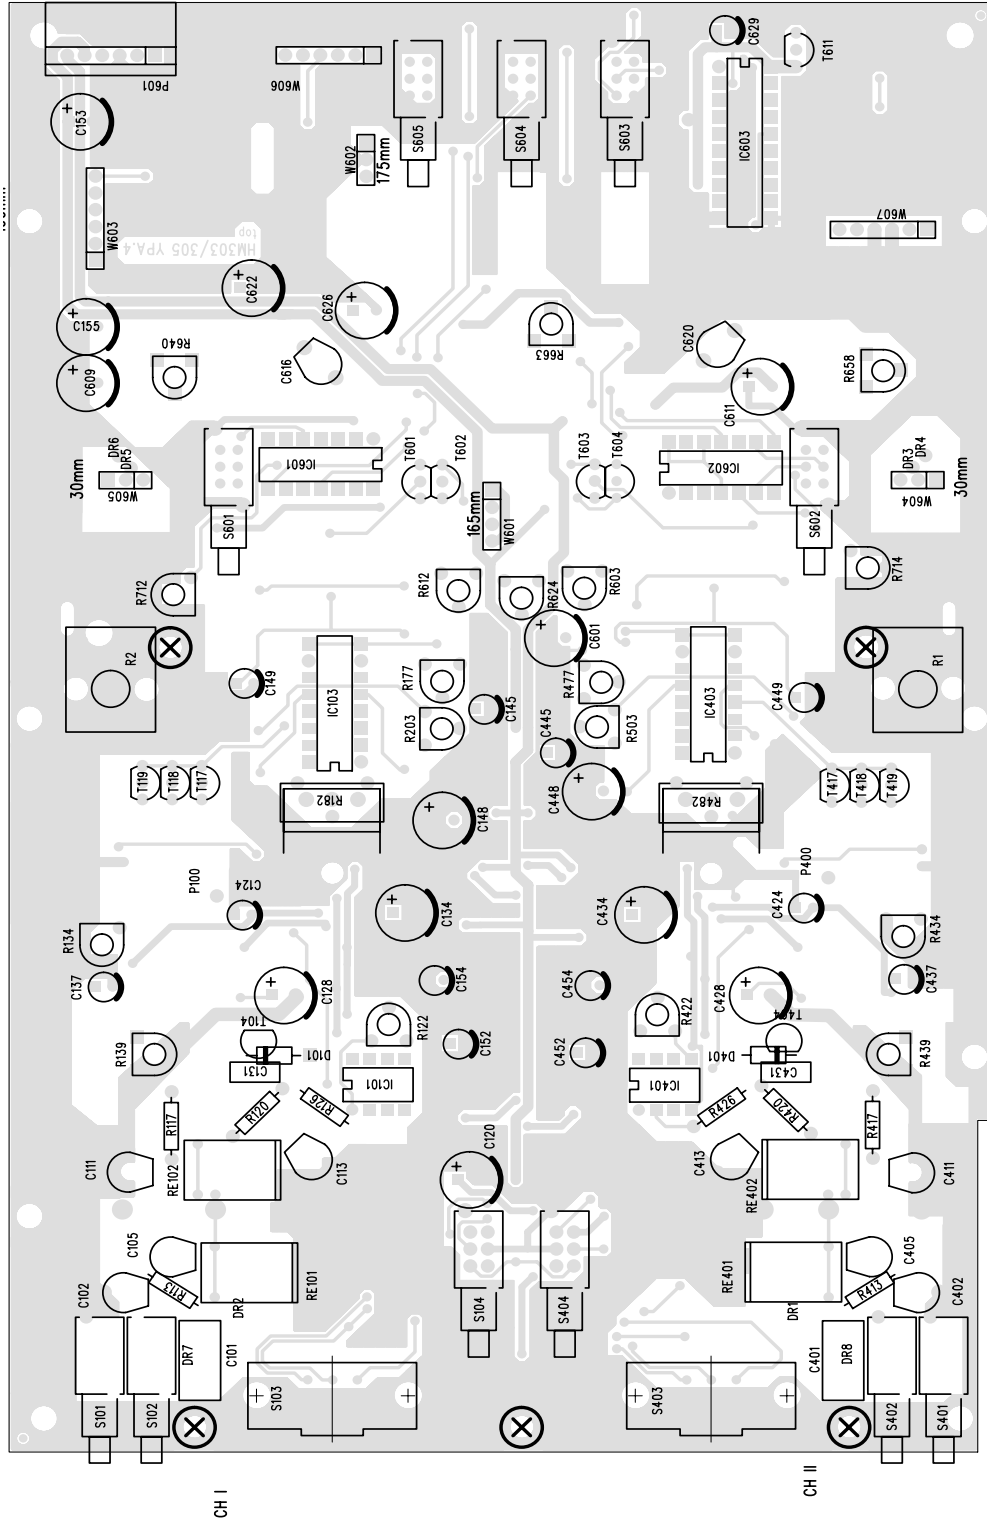


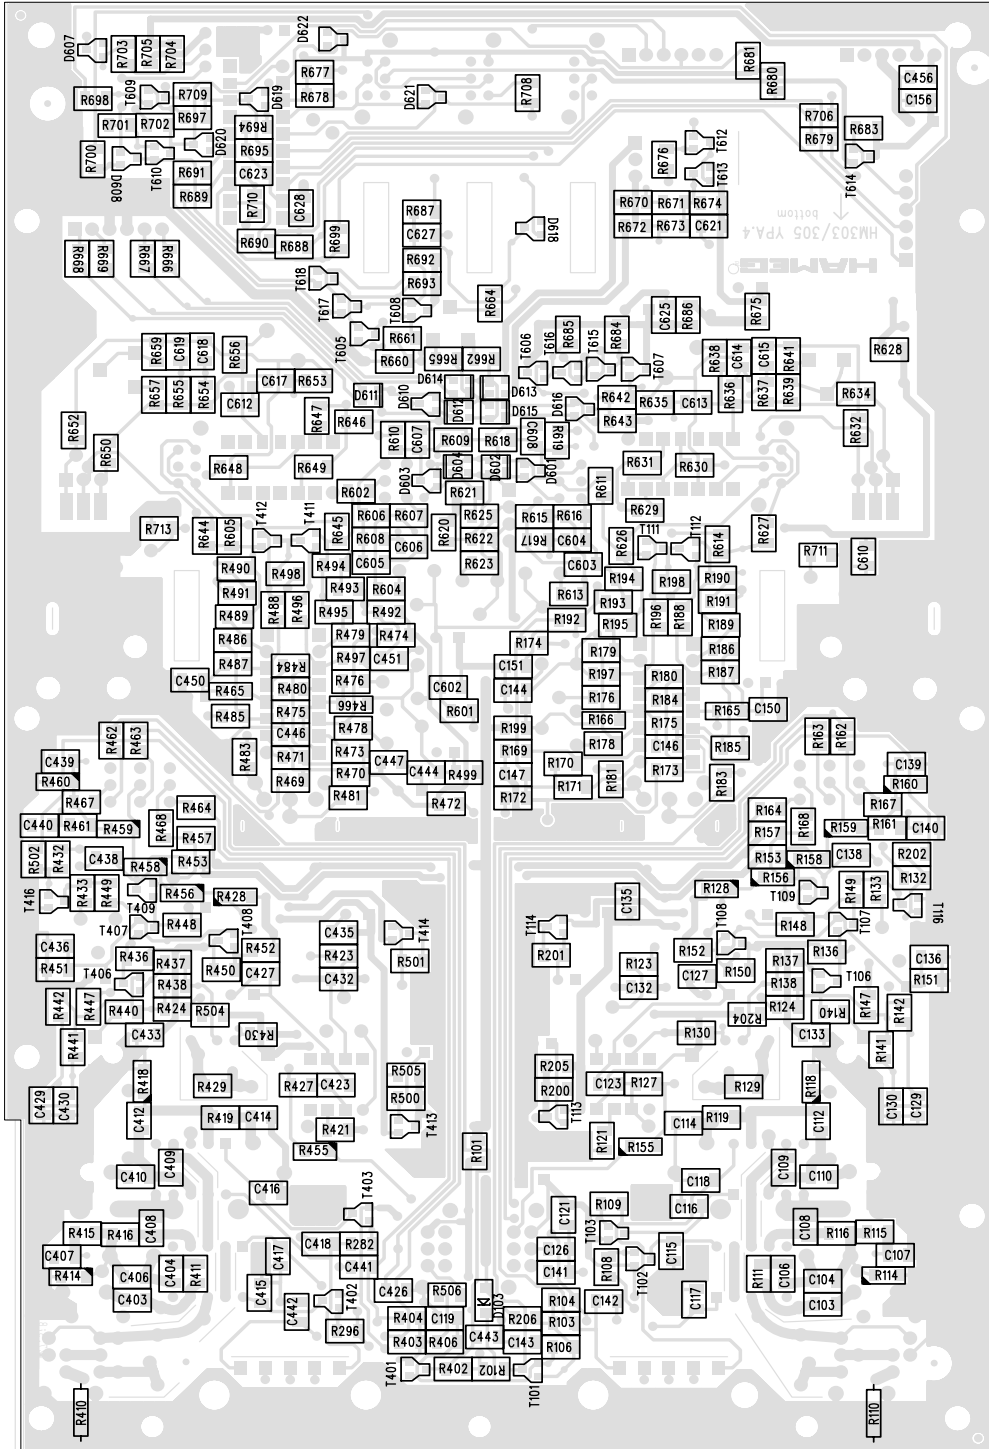


PS30X

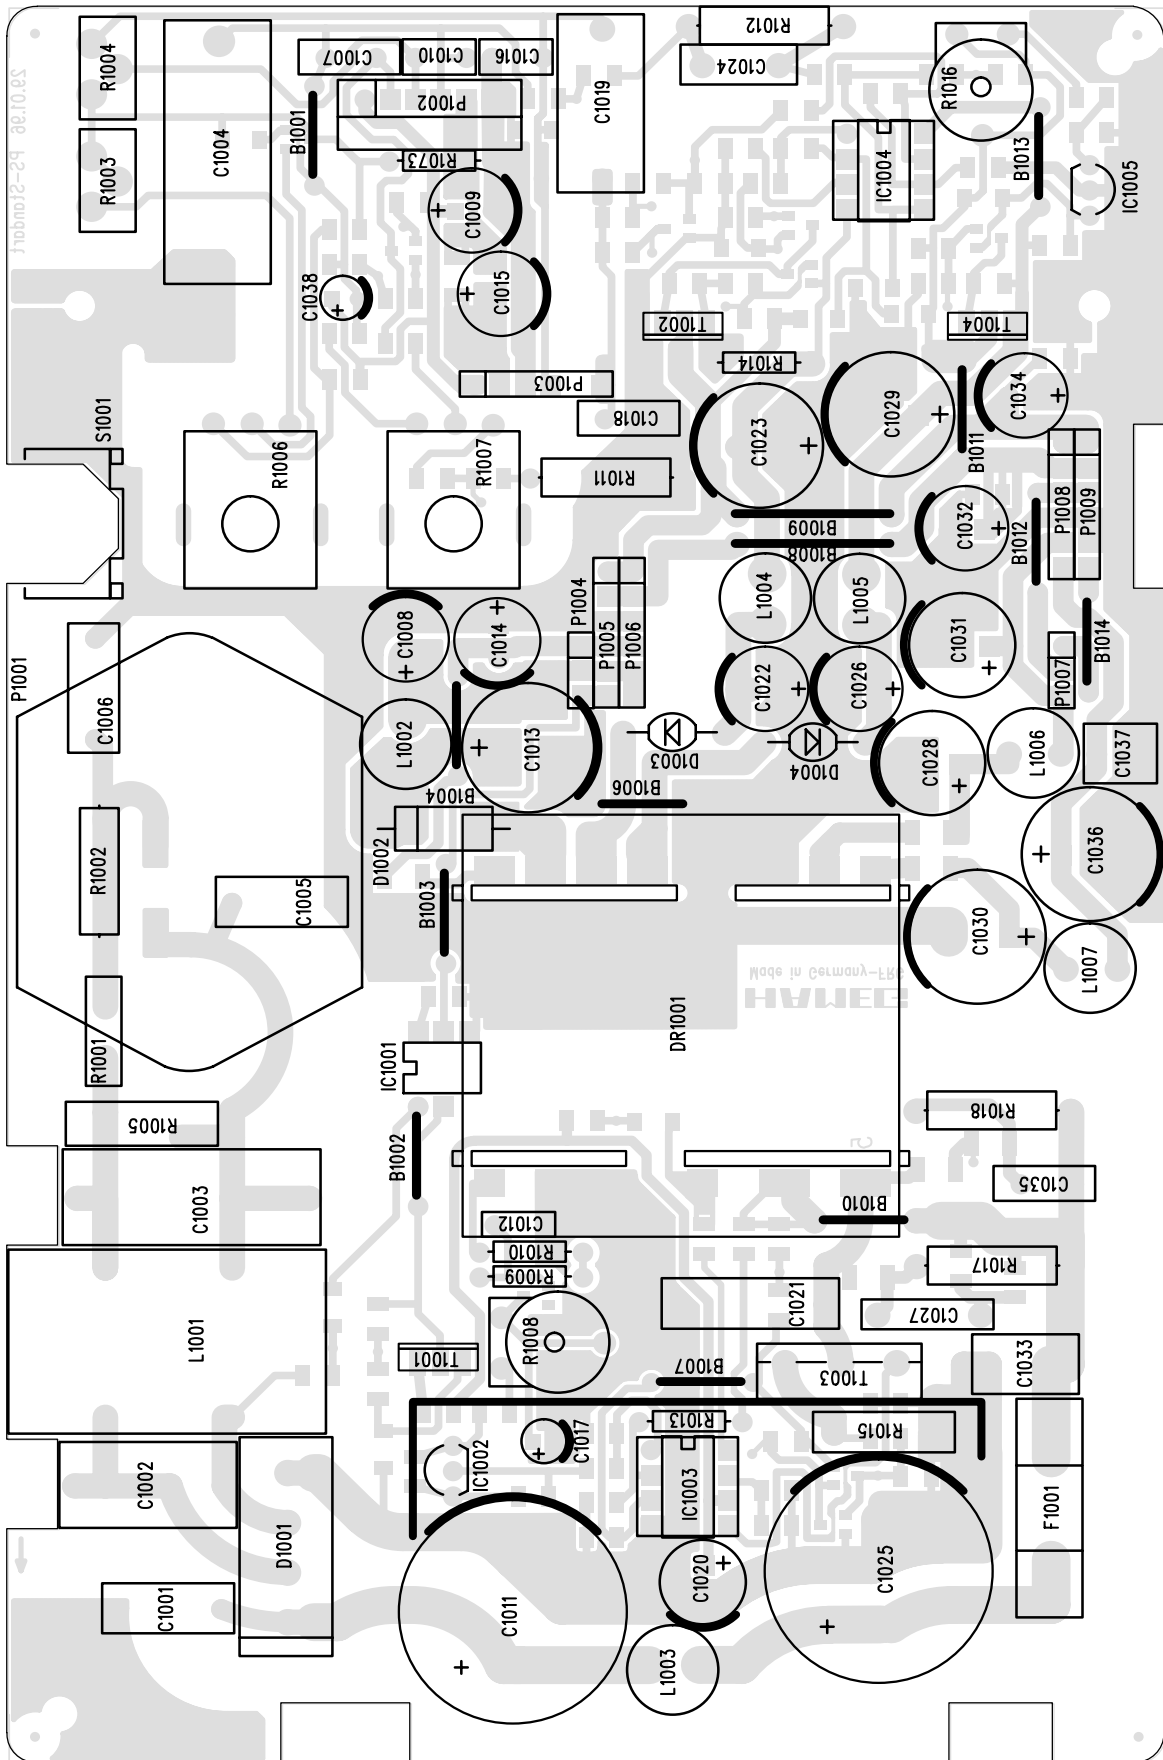


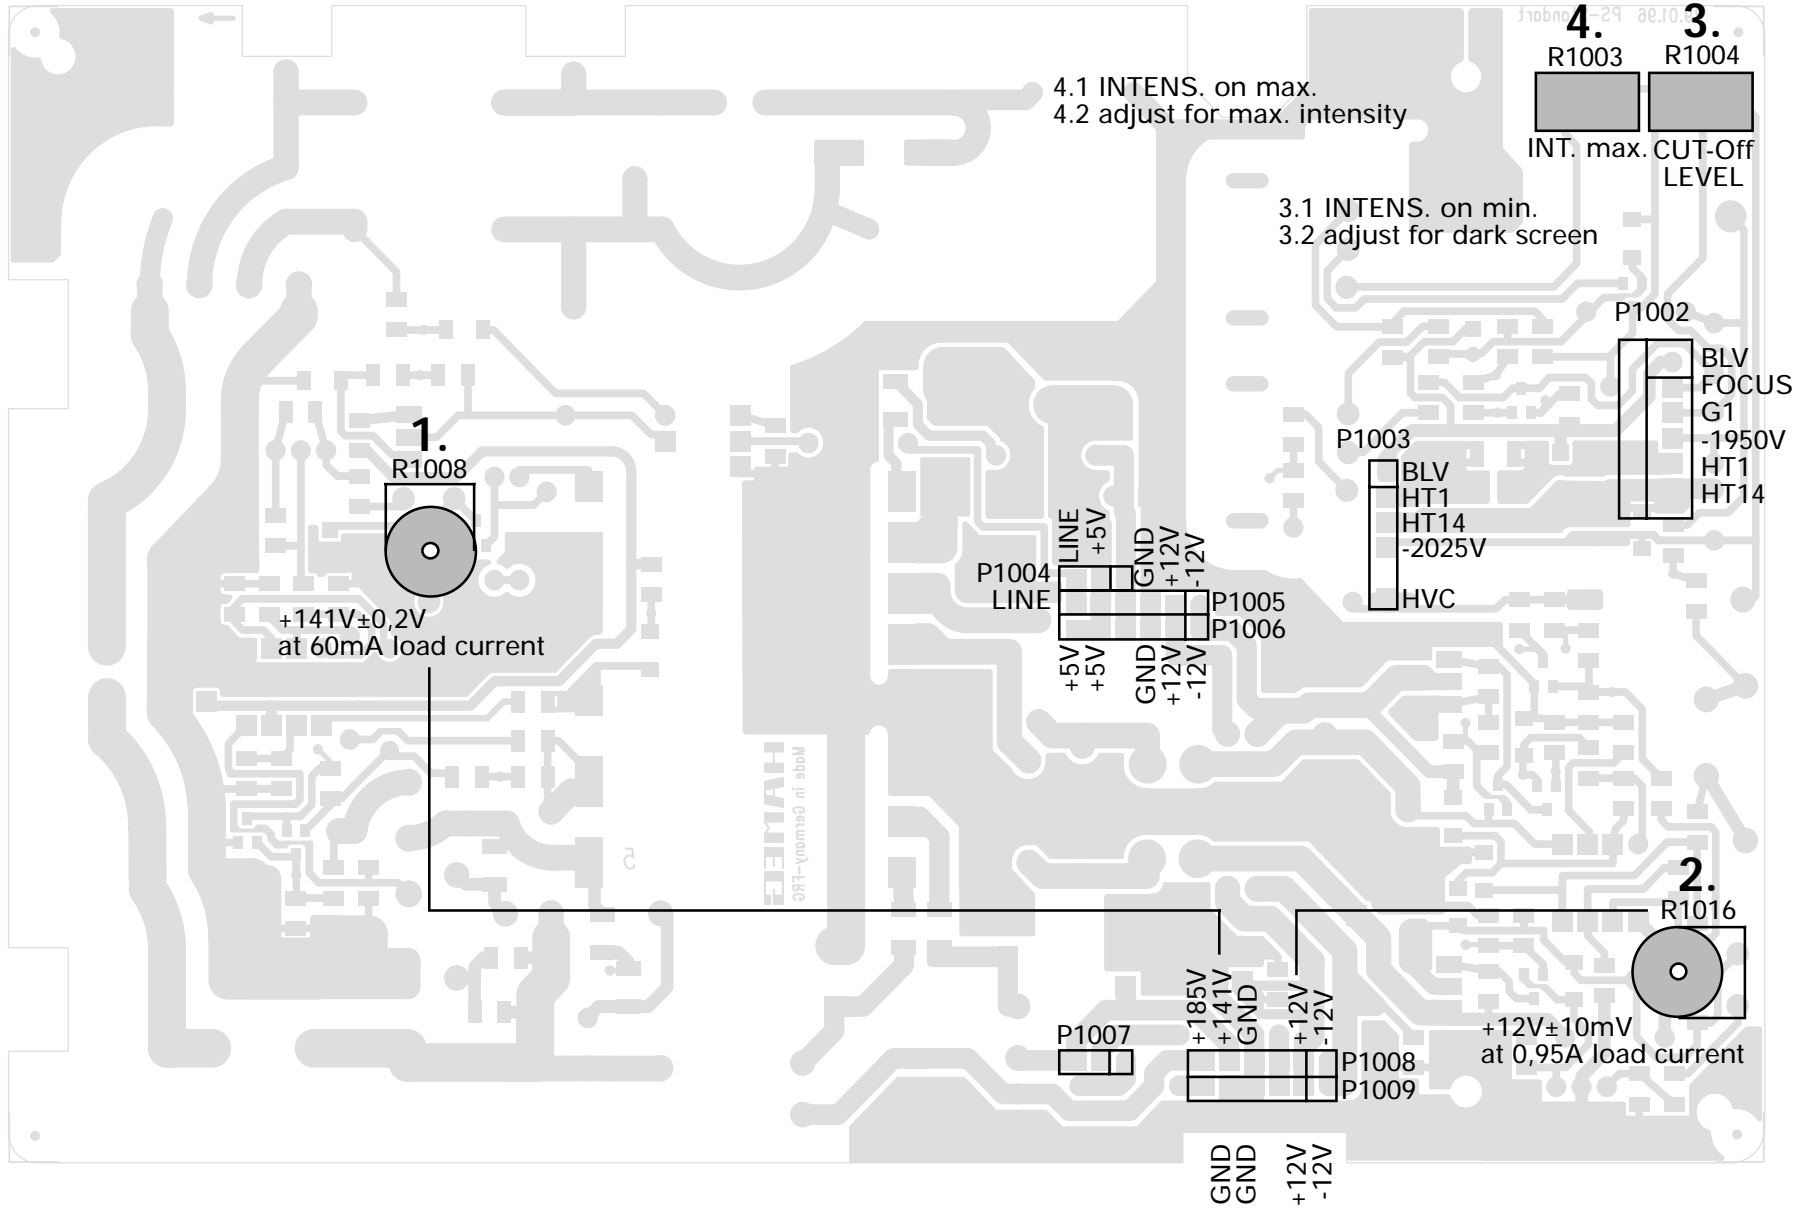



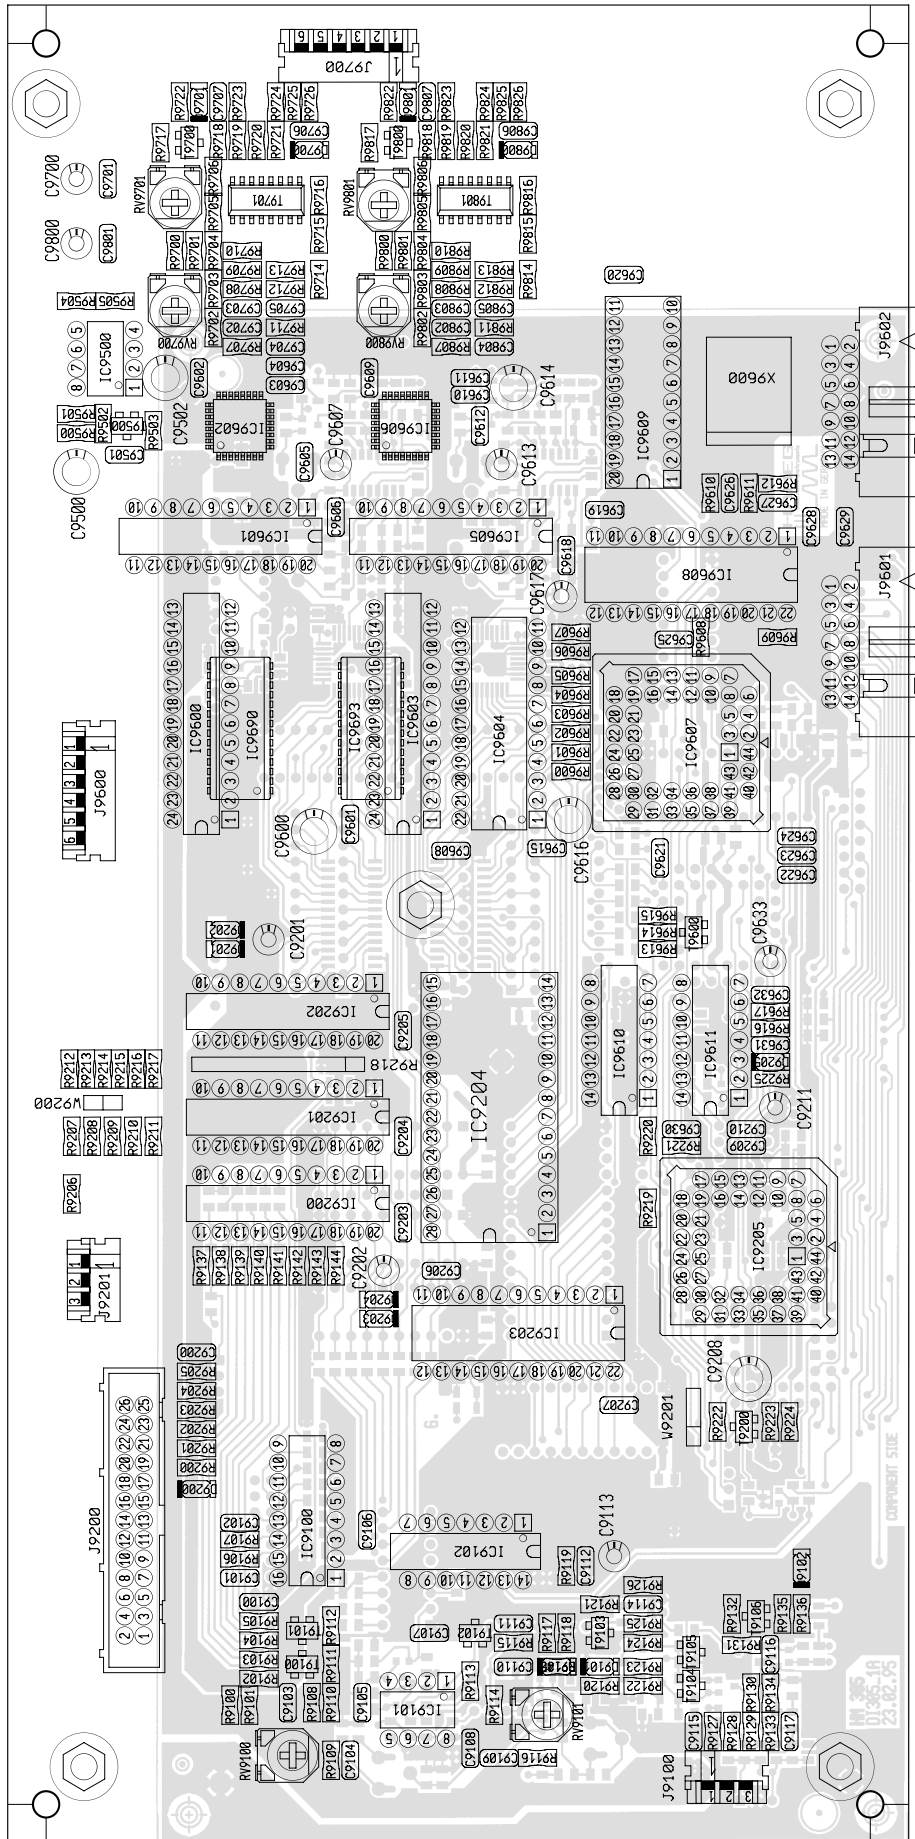


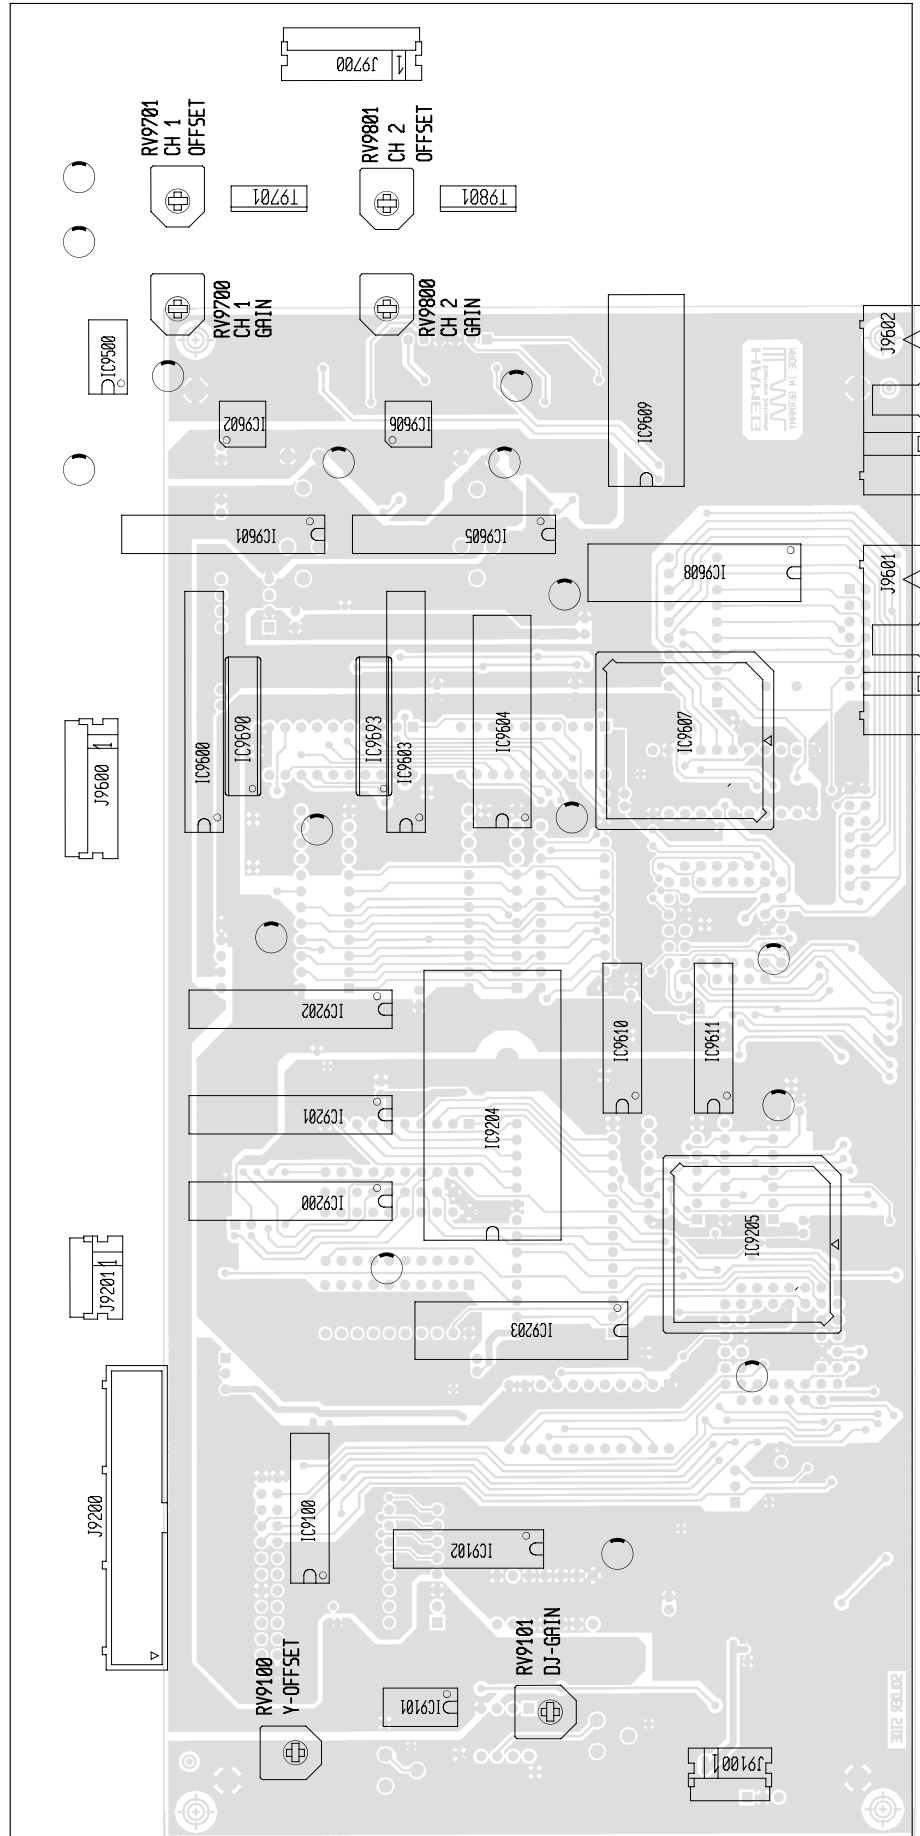




Front Controlboard (Topside, Bottomside)

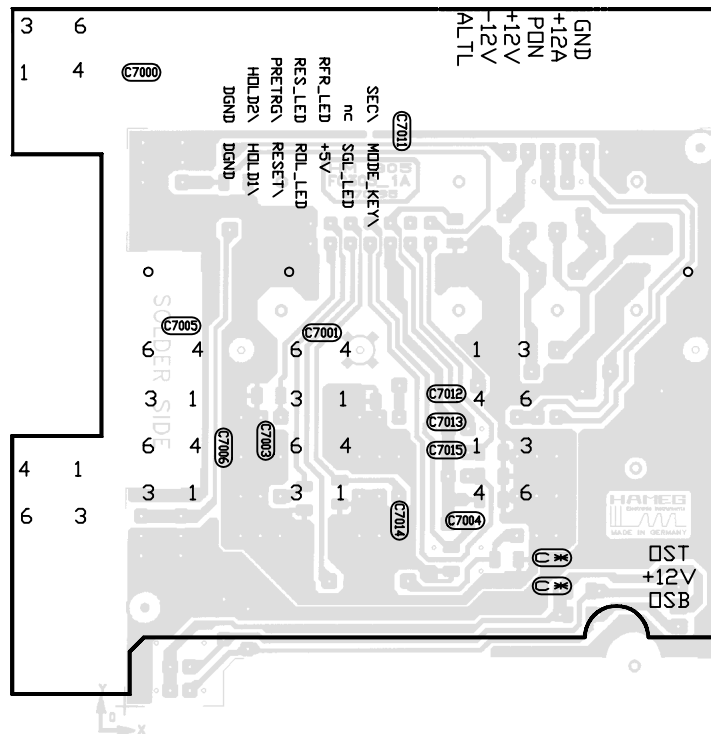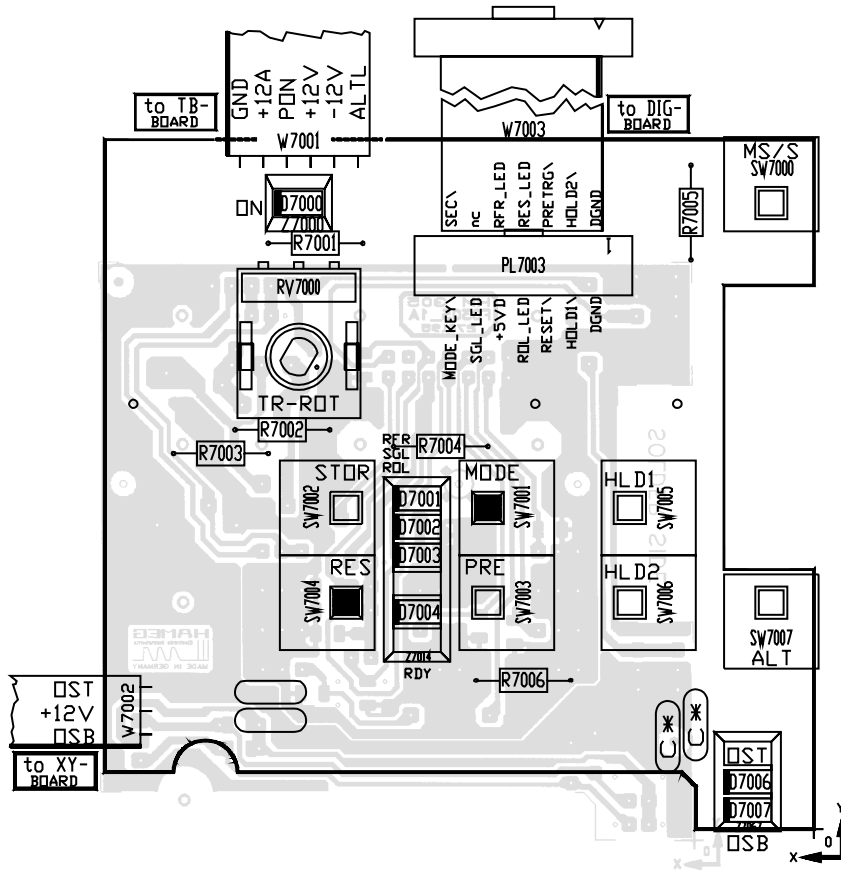


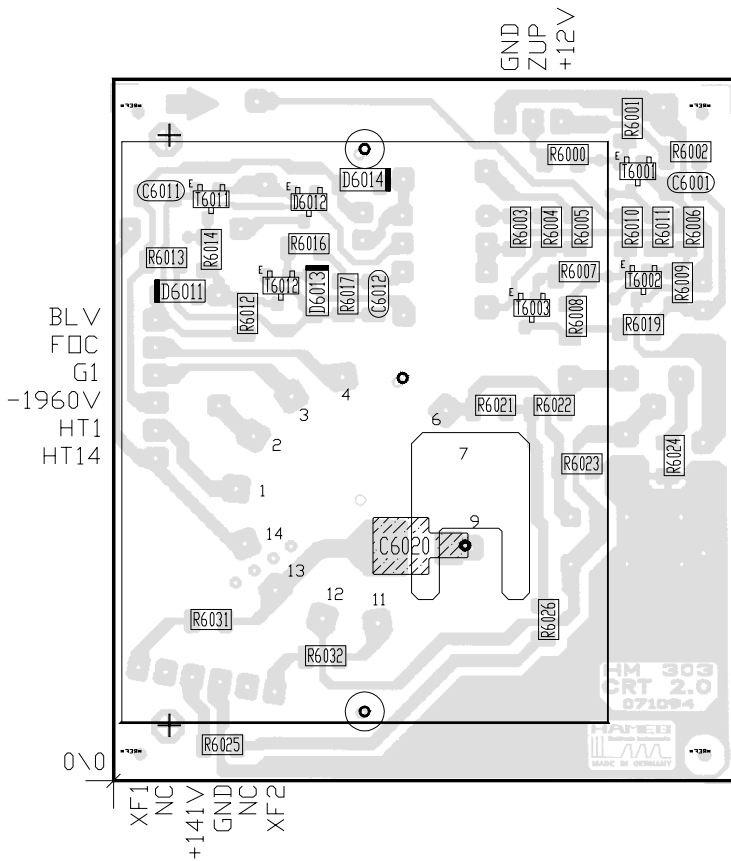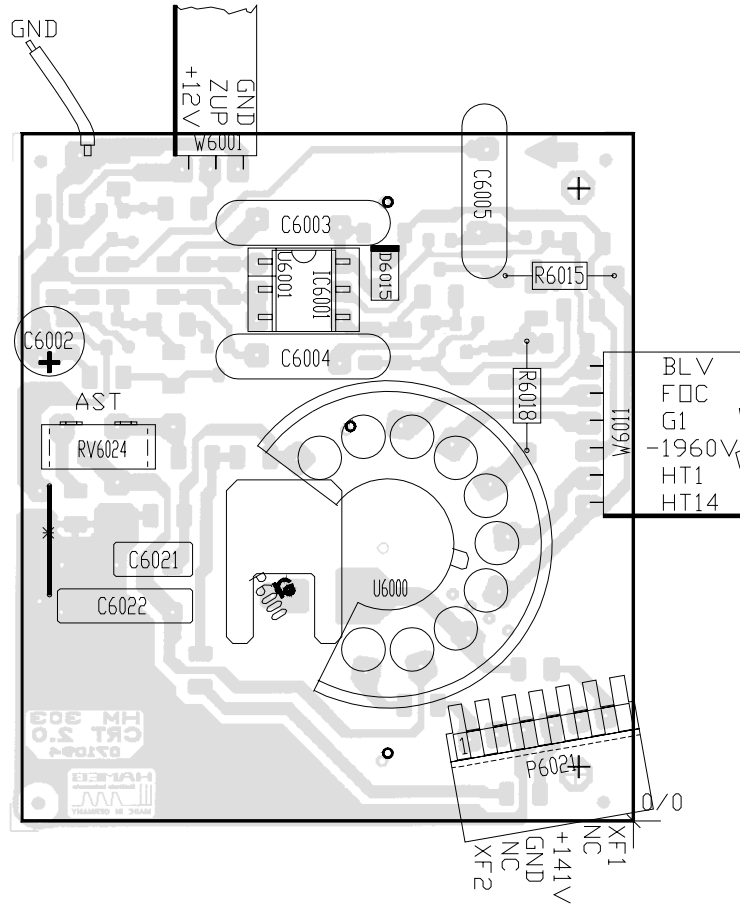



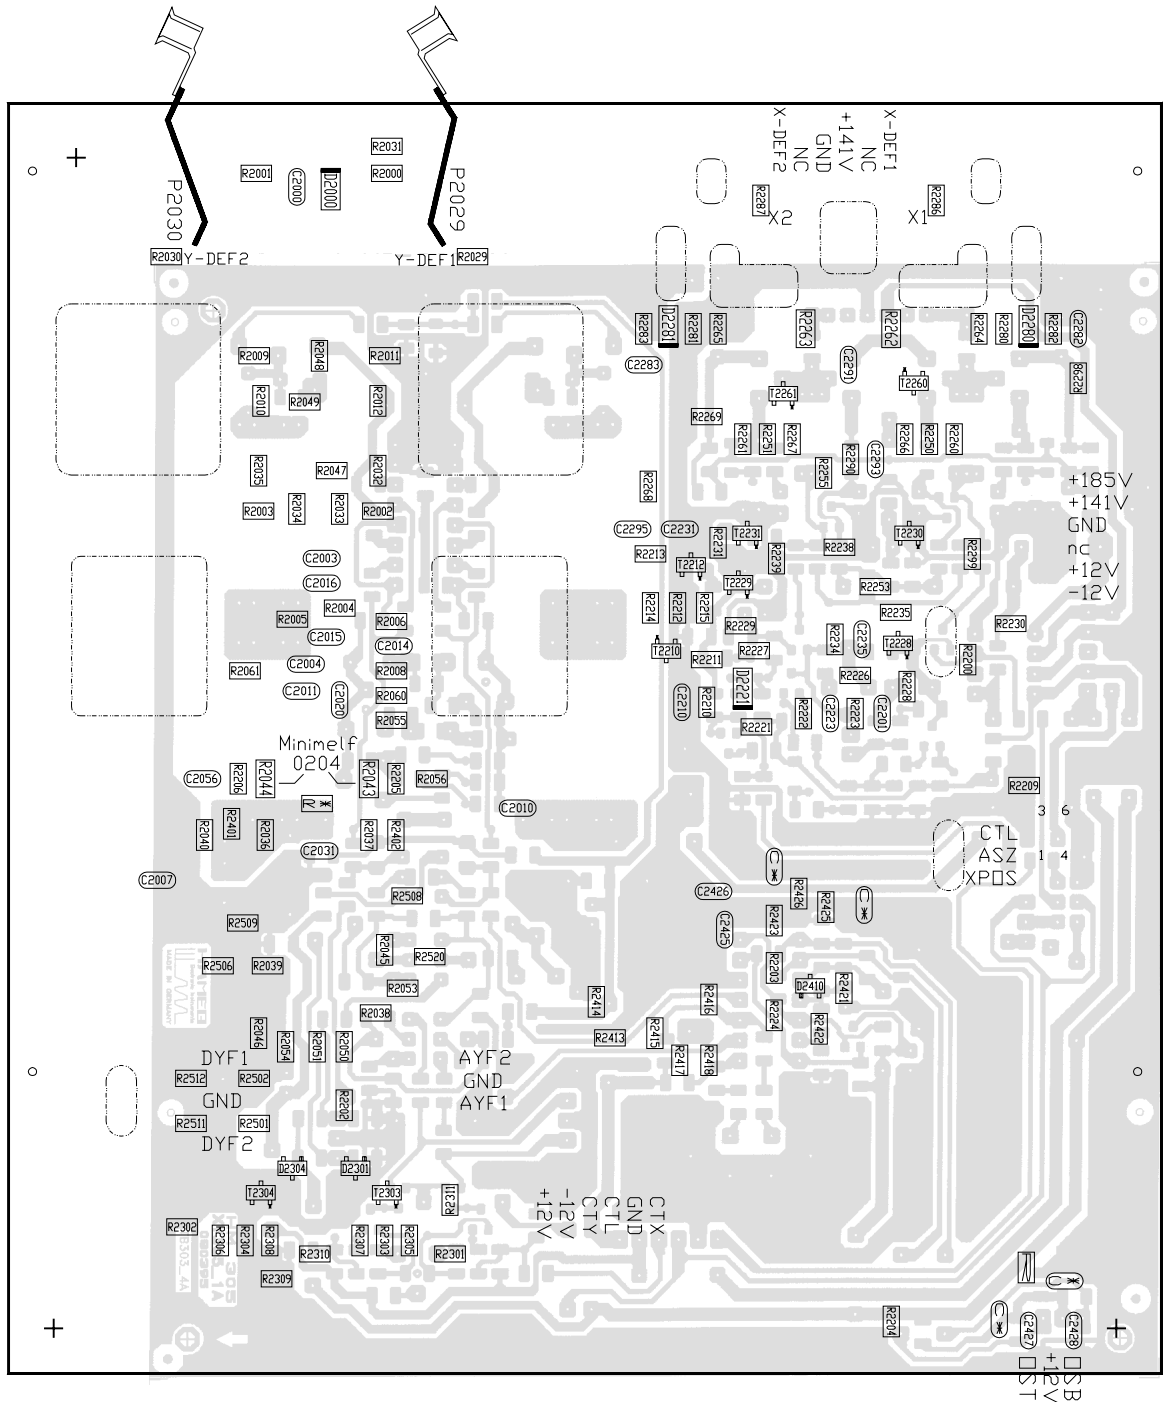


HM305-1 / TB305\_1B / 200795 [TB305\_1B]

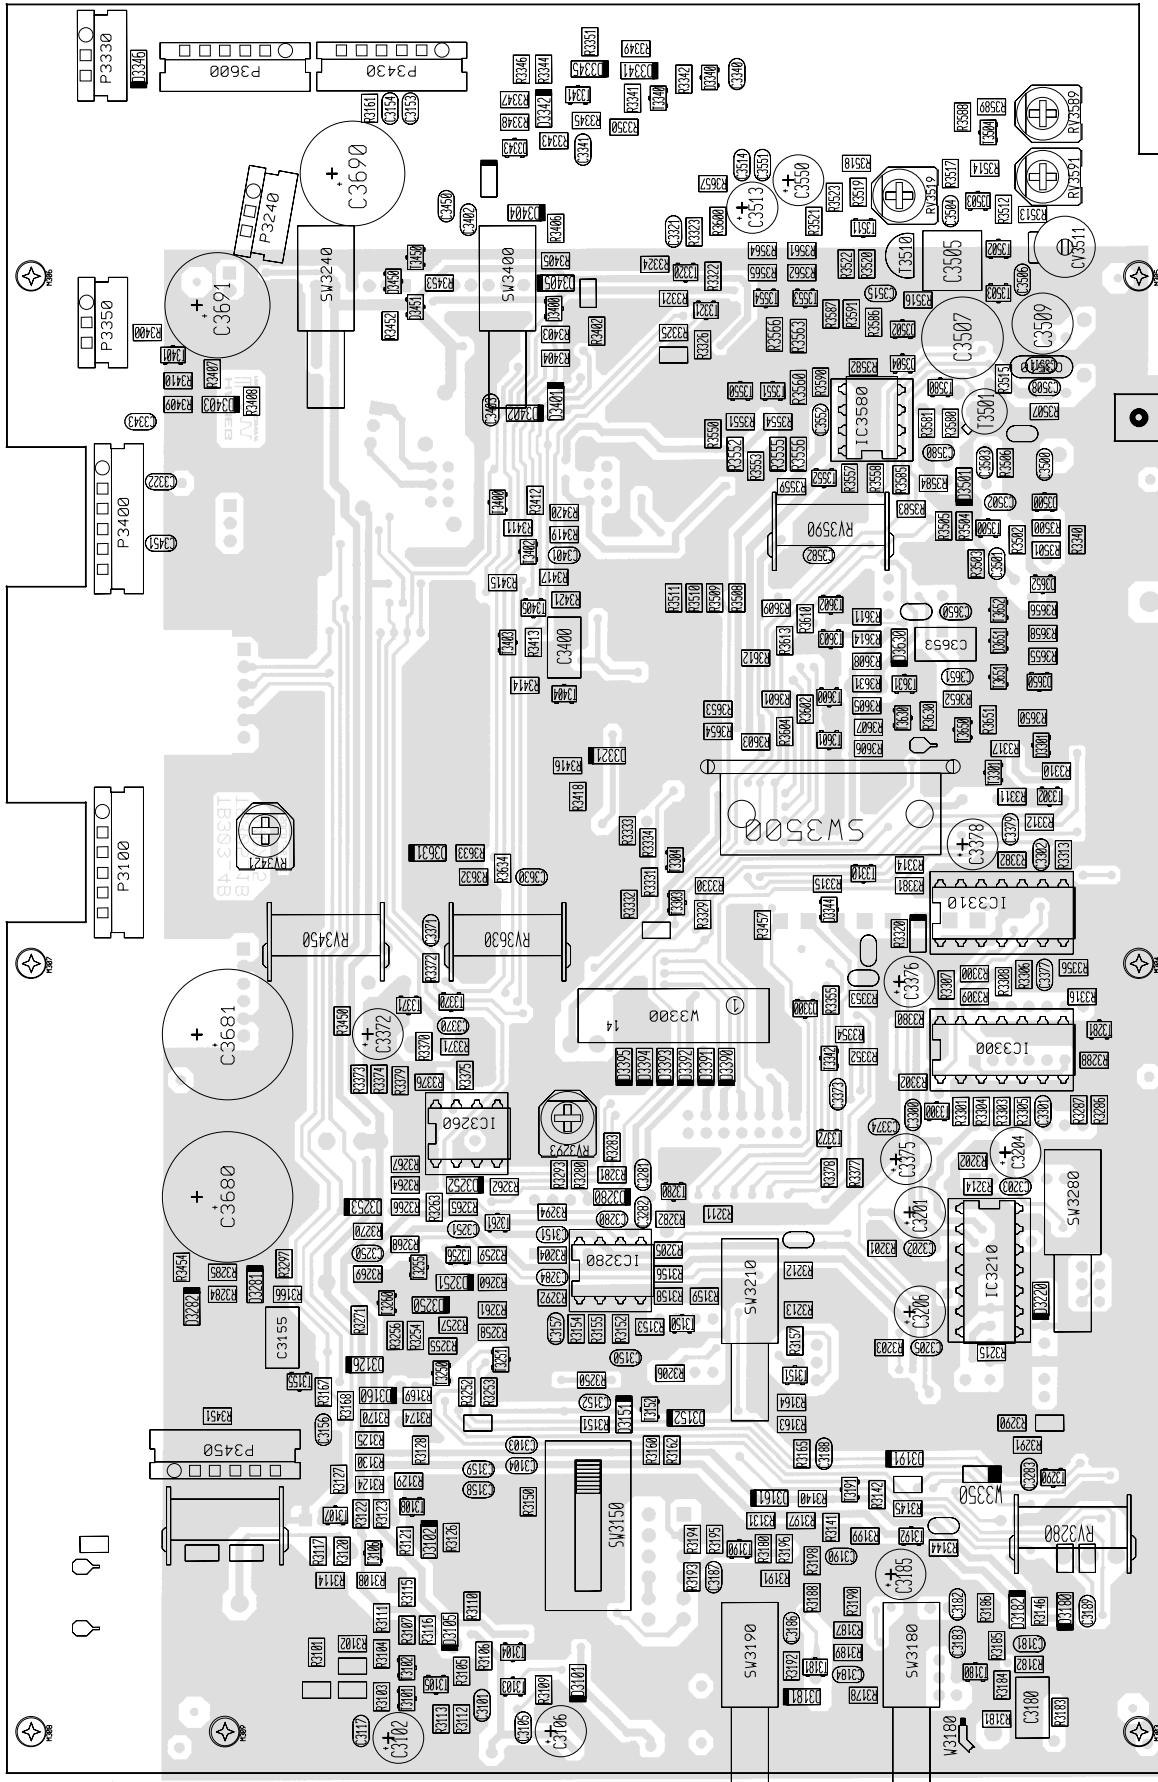



(0.89 29:08:95 TB305\_1B)

HM305-1 / TB305\_1B / 200795 (TB305\_1B)

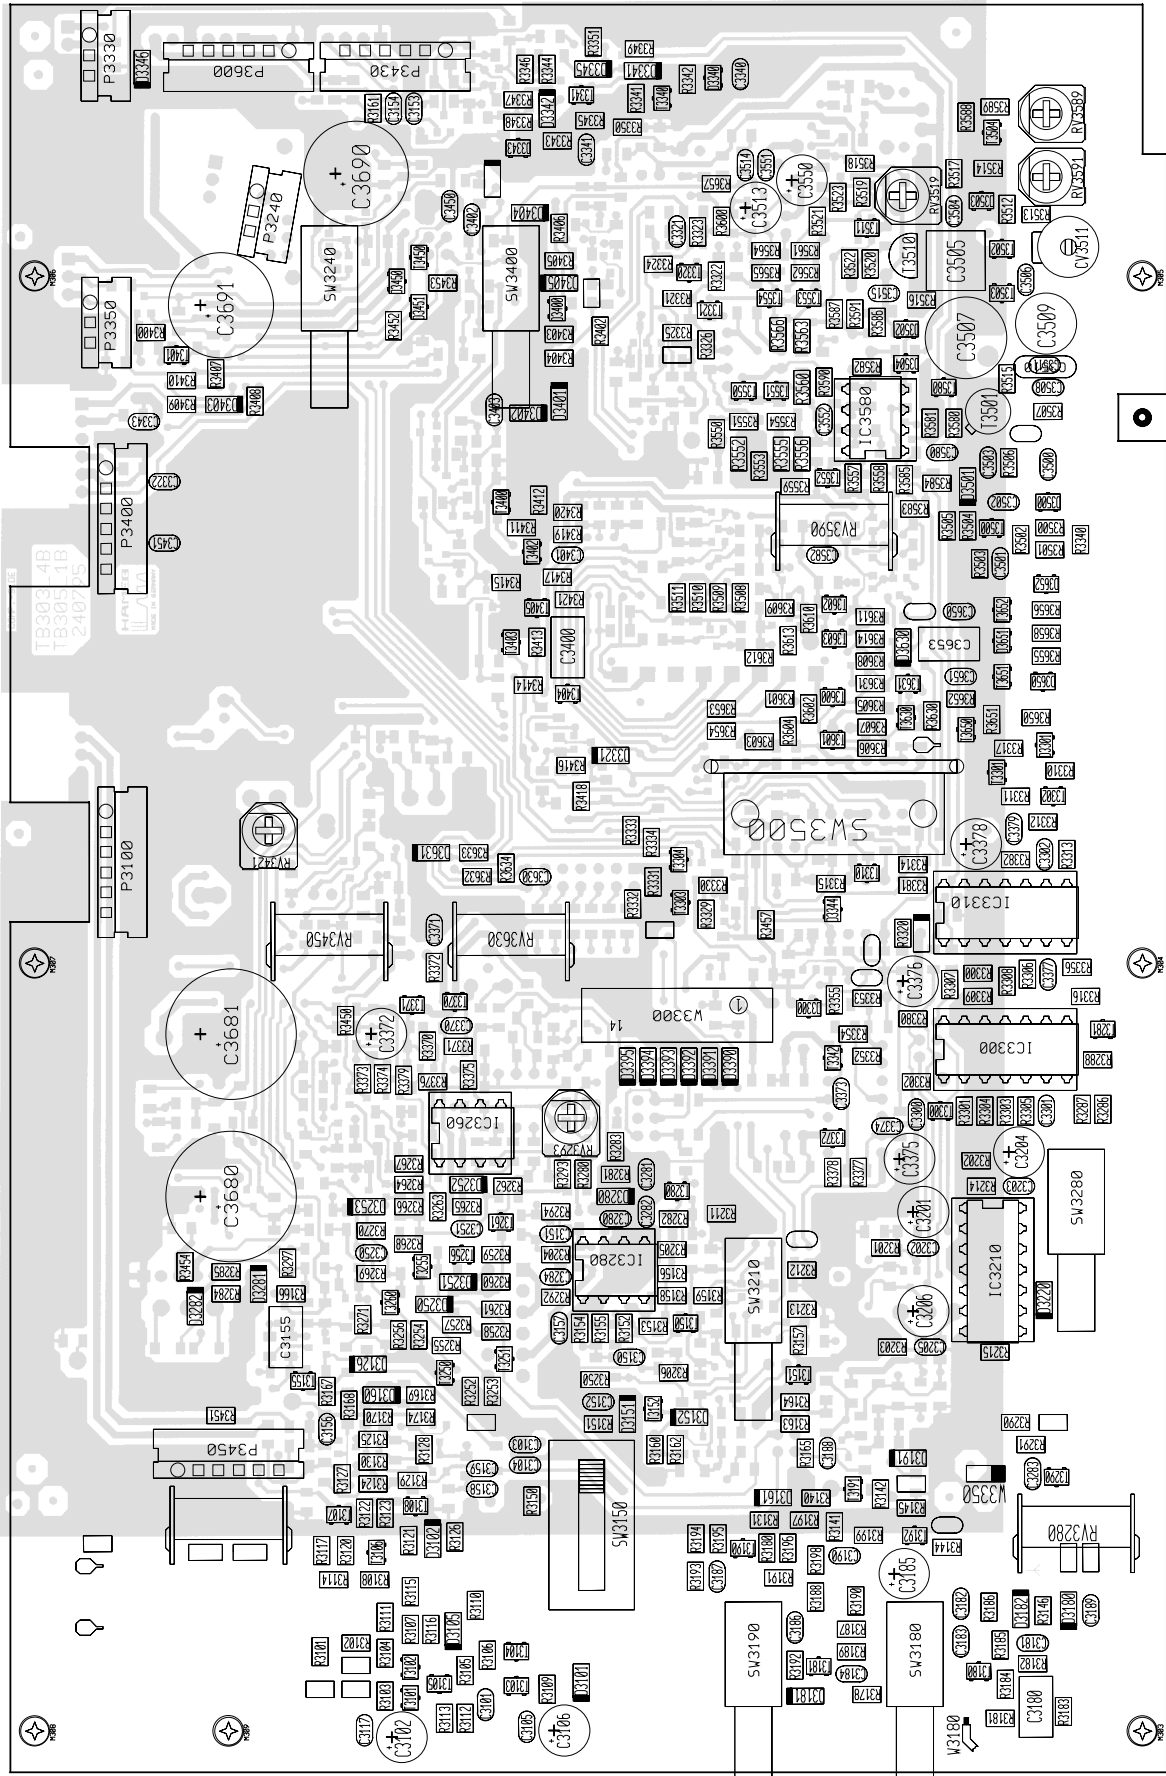

(0.89 29:08:95 TB305\_1B)

CCT Board (Topside, Bottomside)

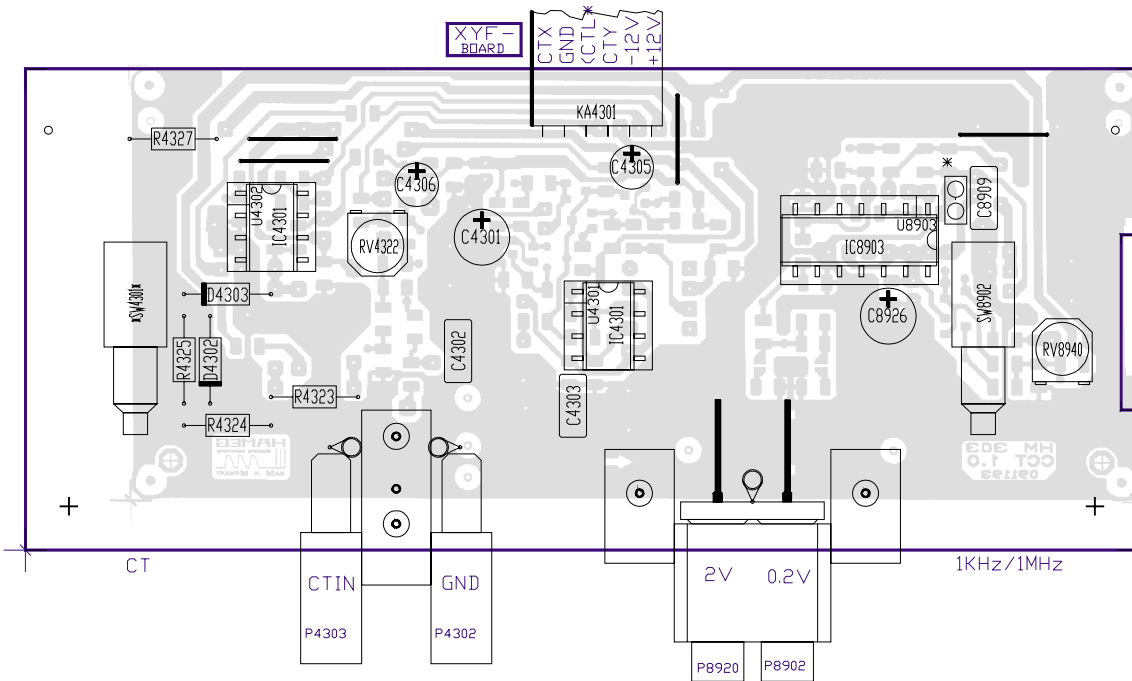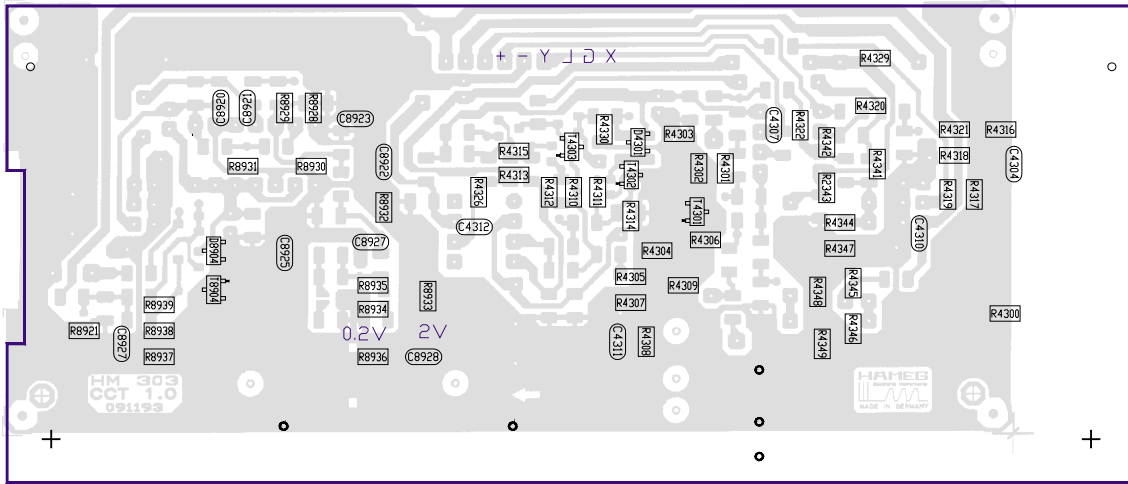

# Adjustment Procedure



---

## ADJUSTMENT PROCEDURE

Digital Storage Scope HM305



### WARNING

The Instrument must be disconnected from the mains power supply whenever you open the case, repair or exchange parts.

## HIGH VOLTAGE WARNING!



Hazardous High Voltage of up to 2,000 Volts is present inside this Instrument. The areas particularly affected by High Voltage are the high voltage circuit on the PS-board, the CRT-board and the CRT-socket.

## SERVICE AND ADJUSTMENT

- of this instrument should only be performed in accordance and in conjunction with the operating manual and the WARNINGS contained therein.
- should only be performed by suitable qualified and experienced service personnel, or should be referred to one of the HAMEG companies listed on the rear cover of the manual.

### Test Instruments required:

- 1) Scope Tester HZ60-2.
- 2) Constant amplitude sinewave generator, 20Hz - 250MHz, output 5mV - 5V into 50 $\Omega$ , preferably with 20dB attenuation (e.g. HM8133, TEK SG502 + TEK SG503).
- 3) Amplitude Calibrator with 1kHz squarewave output and 600 $\Omega$  impedance, risetime faster than 150ns. Output voltage 2mV - 20Volts in 1-2-5 sequence for 4 divisions display amplitude (e.g. HZ62, TEK PG506).
- 4) Time mark generator from 5ns/div to 5s/div. Output min. 10mV into 50 $\Omega$  (e.g. HZ62, TEK TG501).
- 5) Pre-attenuator 2:1 (1M $\Omega$ , 12-48pF), e.g. HZ20.
- 6) 50 $\Omega$  BNC through termination, e.g. HZ22.
- 7) 2 BNC-cables, 50 $\Omega$ , e.g. HZ34.
- 8) BNC-T-connector.
- 9) Oscilloscope probe 10:1, with exactly 9M $\Omega$  series resistance and compensated for test oscilloscope mentioned under 10).
- 10) Oscilloscope 100MHz, 5mV/div to 5V/div, e.g. HM1005.
- 11) Trimming/adjusting tool.
- 12) Variable output safety insulation transformer.
- 13) Video signal generator with positive and negative signal output.
- 14) Yt-EPROM HM1007.

This procedure covers all adjustments and the most important - but not all - performance checks. The correct sequence of all adjustment steps must be strictly followed.

Exact adjustment is only possible when any influence of the earths' magnetic field has been compensated with the trimmer marked TR (trace rotation).

All adjustments should only be performed by qualified and experienced personnel. This is particularly important for adjustments in the high voltage section of the instrument.

1) R1008: +141 Volt supply. ....	35
2) R1016: +12 Volt supply. ....	35
3) RV7000: Trace Rotation Check. ....	35
4) R1004 : CRT minimum intensity. ....	35
5) R1003 : CRT maximum intensity. ....	35
6) R712: Mean Y-plate Potential Channel I. ....	35
7) R714: Mean Y-plate Potential Channel II. ....	37
8) RV6021 : Astigmatism correction. ....	37
9) R640: Y-Gain CH I. ....	37
10) R122: FET operating point CH I. ....	37
11) R203: Invert-Balance CH I. ....	37
12) R177: Variable-Balance CH I. ....	37
13) R139: 100Hz Squarewave 5mV/div CH I. ....	38
14) R134: 100Hz Squarewave 1mV/div Adjustment CH I. ....	39
15) R658: Y-Gain CH II. ....	39
16) R422: FET operating point CH II. ....	39
17) R503: Invert-Balance CH II. ....	39
18) R477: Variable-Balance CH I. ....	39
19) R439: 100Hz Squarewave 5mV/div CH II. ....	39
20) R434: 100Hz Squarewave 1mV/div CH II. ....	39
21) RV2005 (A), RV2006 (C), CV2000 (D) and CV2001 (B):	41
22) Y-Amplifier Bandwidth Check. ....	41
23) C111 (A)/113 (B)/102 (C)/105 (D):Attenuator Compensation CH I. ....	41
24) C411 (A)/413 (B)/402 (C)/405 (D): Attenuator Compensation CH II. ....	41
25) RV2501 (A): Storage Mode Y-Gain ....	43
26) RV9101: Dot-Join Overshoot ....	43
27) RV9700 (A), RV9701 (B): Digital Y-Gain/Offset CH I. ....	43
28) RV9800 (A), RV9801 (B): Digital Y-Gain/Offset CH II. ....	43
29) R663: Digital ADDition/Offset. ....	45
30) RV2417 (A), RV2418 (B): Overscan. ....	45
31) RV3421 (A), RV2225 (B): Digital Time Base Adjustment. ....	45
32) RV3519 (A)/3589 (B)/3591 (C), CV3511 (D): Analogue Time Base. ....	45
33) RV2234: X-Magnification x10. ....	47
34) RV2260: X-Amplifier Symmetry ....	47
35) R624: XY-Gain ....	47
36) RV3293: Trigger-Symmetry ....	47
37) R612: DC-Trigging CH I. ....	47
38) R603: DC-Trigging CH II. ....	47
39) RV2301 (A), RV4322 (B): Component Tester Y-Position and Tilt. ....	49
40) RV8940: Calibrator Output. ....	49
41) Trigger Filter Check. ....	49
42) Triggerbandwidth Check. ....	49
43) External Trigger Check. ....	49
44) Video Trigger Check. ....	50
45) Pretrigger Check. ....	50
46) Interface Connector Check. ....	50
Writing data into memory ..... 51	51






**NOTE**



**The adjustment procedures assume that the instrument had once been properly adjusted in the factory and adjustments are required due to temperature drift or the replacement of defective components.**

Before starting each adjustment procedure, set the oscilloscope to the following basic settings:

- Press POWER pushbutton (in!).
- Release all other pushbuttons (out!) except AC/DC input coupling.
- Rotate the three variable controls (TIME/DIV. and VOLTS/DIV.) to their (calibrated) detent positions.
- Set TIME/DIV. switch to 50µs/div.
- Set both VOLTS/DIV switches to 5mV/div.
- Rotate the HOLD OFF knob fully counterclockwise.
- Trigger coupling set to AC.
- Set all other controls to their midrange positions.
- If different settings are required, they are mentioned particularly for each subject.

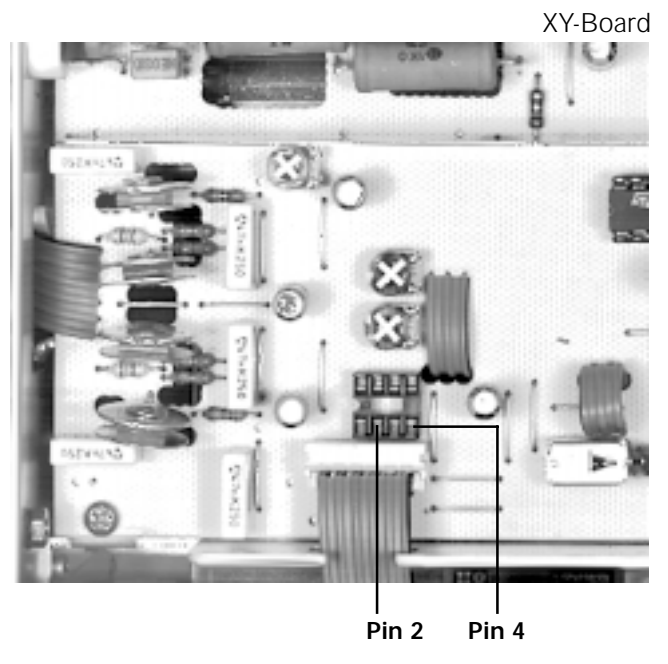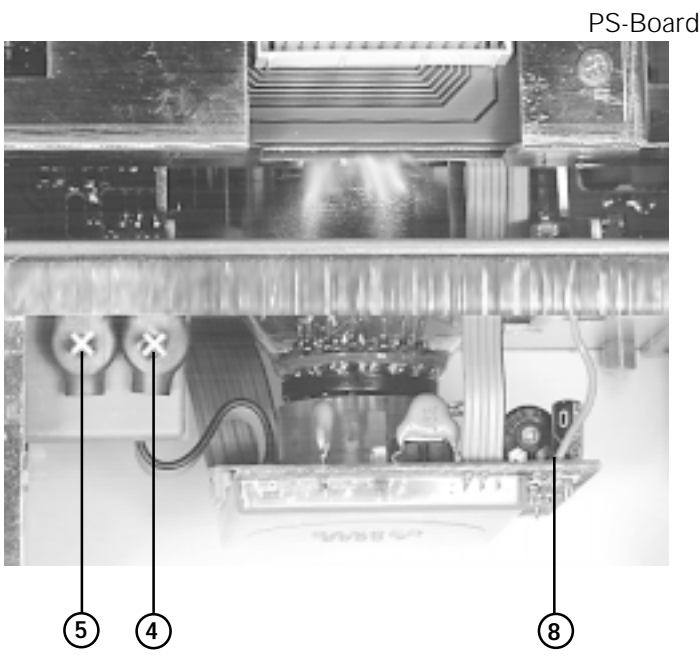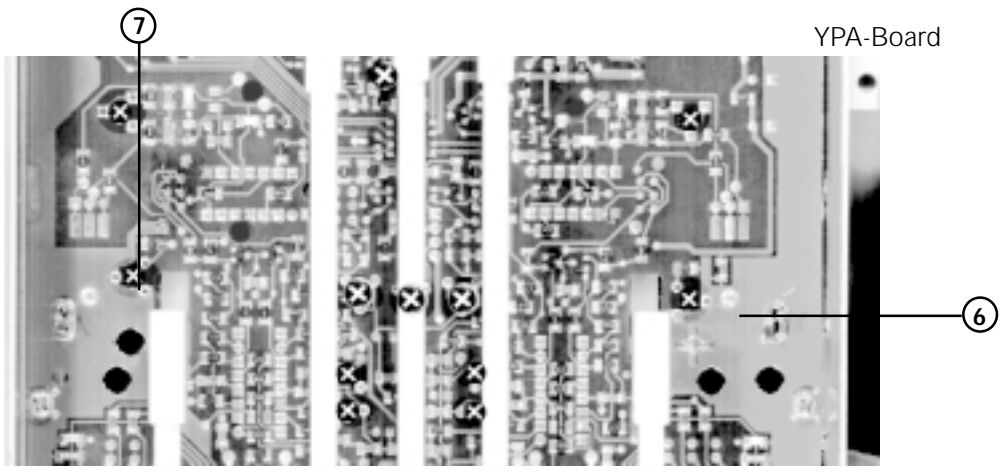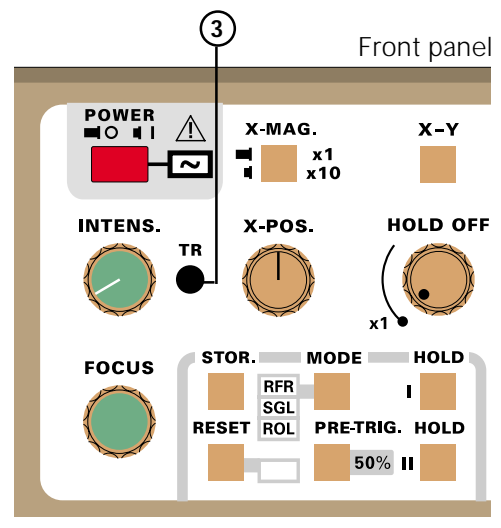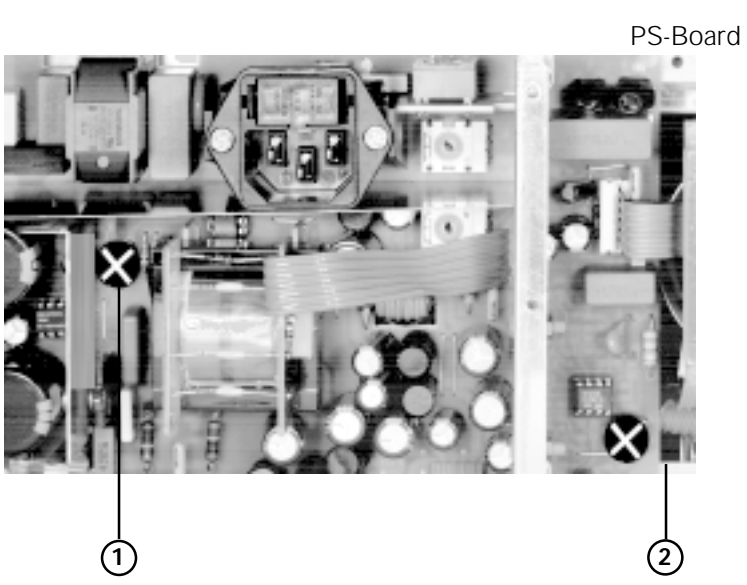

---

(1) **R1008: +141 Volt supply.**



**WARNING:** To avoid damage use a fully insulated screwdriver!  
Locate and identify R1008 (1) on PS-Board (screened section).  
Locate 8 pole checkpoint socket on XY-Board and identify pin 2.  
Adjust R1008 (1) for exactly +141 Volts ( $\pm 0.1$  Volt) in respect to ground.

(2) **R1016: +12 Volt supply.**

Locate and identify R1016 (2) on PS-Board.  
Locate 8 pole checkpoint socket on XY-Board and identify pin 4.  
Adjust R1016 (2) for exactly +12Volts ( $\pm 10$ mV) in respect to ground.  
All other voltages +185V (pin 1), -12V (pin 5) and -1950V on cathode  
of CRT depend on the correct +12Volt adjustment.  
All these voltages must be checked and verified.

(3) **RV7000: Trace Rotation Check.**

Locate and identify RV7000 (3) „TR“ on front panel.  
Using Y-Pos.I and X-Pos. controls, move baseline to the center of the graticule.  
Press channel I GD pushbutton (in!).  
When turning RV7000 (3), check that the range of inclination of the baseline is at least  
1mm at both horizontal limits of the graticule.  
Readjust baseline exactly parallel to the horizontal center line of the graticule.

(4) **R1004 : CRT minimum intensity.**

Locate and identify R1004 (4) on PS-Board.  
Set INTENS. control to fully left position.  
Press XY pushbutton (in!).  
Adjust R1004 (4) so that the dot just disappears.  
Release XY pushbutton.

(5) **R1003 : CRT maximum intensity.**



Locate and identify R1003 (5) on PS-Board.  
Set INTENS. control to fully right position.  
Set FOCUS control for optimum sharpness.  
Adjust R1003 (5) so that the beam diameter is 1.5mm.  
Repeat adjustment (4) and (5) until optimum is obtained!

(6) **R712: Mean Y-plate Potential Channel I.**

Locate and identify R712 (6) on YPA-Board.  
Press DUAL pushbutton (in!).  
Set both beams to the horizontal center of the graticule by using Y-POS. I and Y-POS.  
This settings must not be changed during until item 6) and 7) are finished.  
Release DUAL pushbutton (out!) - channel I mode -.  
Switch the oscilloscope OFF.  
Locate and identify both lines from the Y-final amplifier to the Y-plates of the CRT.  
Connect both lines galvanically (short).  
Switch the oscilloscope ON.  
Measure the DC voltage at the Y-plates in respect to ground.  
Adjust R712 (6) for +85Volt Y-plate voltage.



**Note:** Do not remove the short at the Y-plates until item 7) is finished.

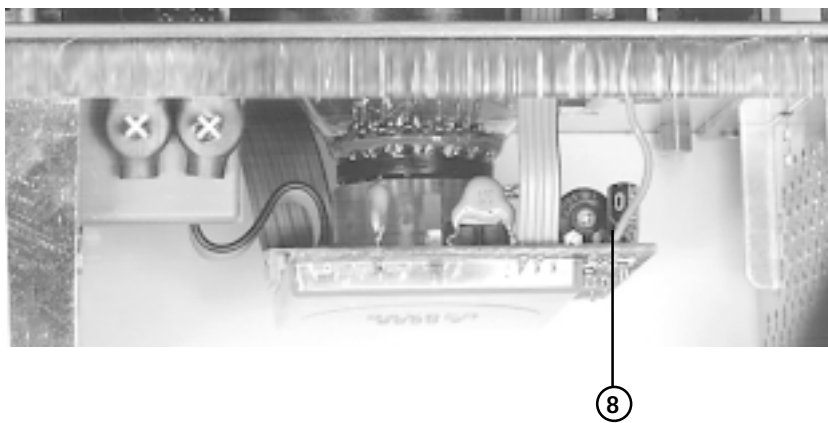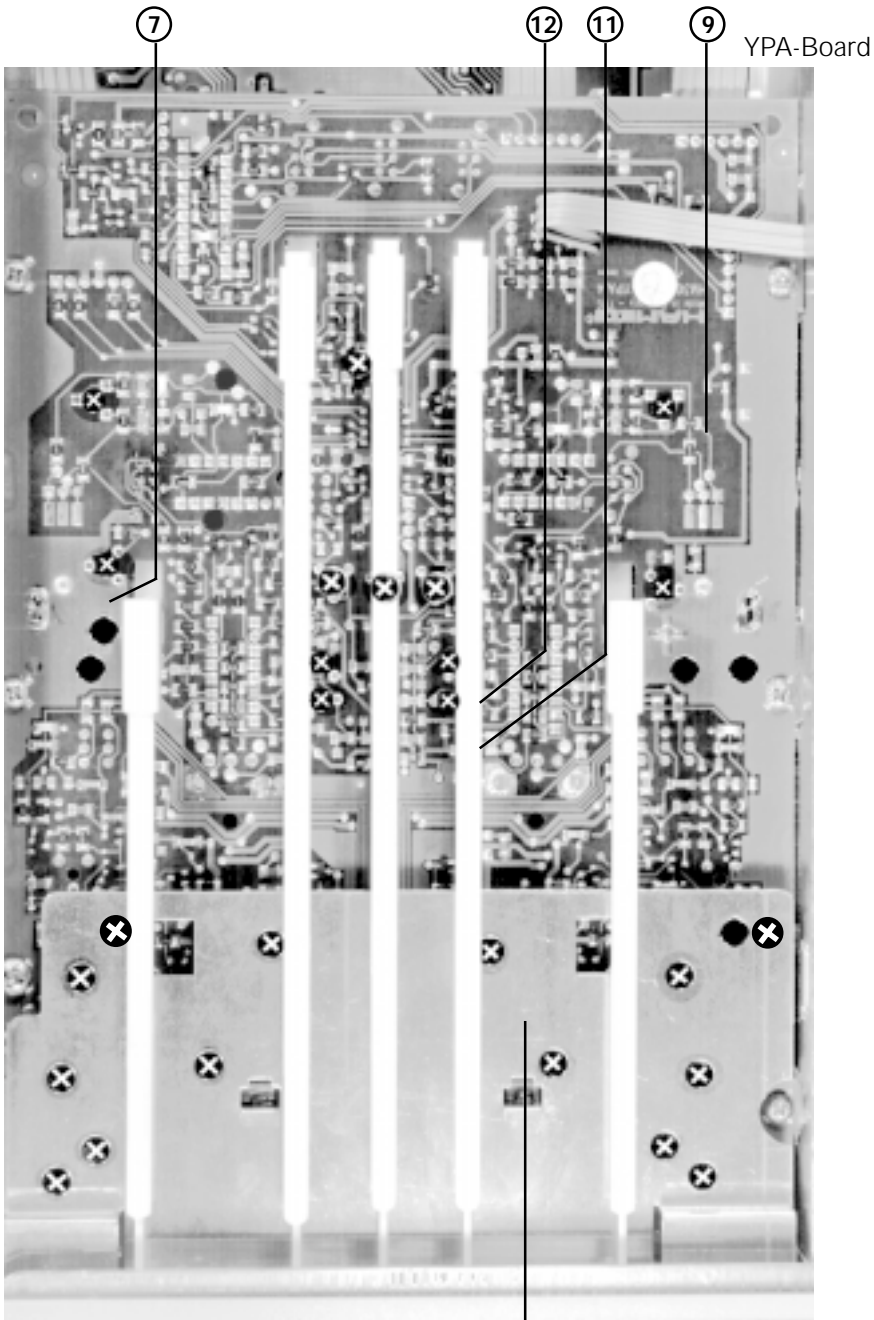

---

**(7) R714: Mean Y-plate Potential Channel II.**

Locate and identify R714 (7) on YPA-Board.  
Press CH I/II pushbutton (in!) for channel II mode.  
Measure the DC voltage at the Y-plates in respect to ground.  
Adjust R714 (7) for +85Volt Y-plate voltage.  
Switch the instrument OFF.  
Remove the connection between both Y-plates.  
Switch instrument ON.

**(8) RV6021 : Astigmatism correction.**

Locate and identify RV6021 (8) on CRT-Board.  
Connect a 1MHz squarewave signal with 25mVpp at 50Ω (HZ22) to input CHI.  
Set time base to 1μs/div.  
Adjust FOCUS control for optimum sharpness.  
Adjust RV6021 (8) until leading edge and top of signal have equal sharpness.  
Recheck range of FOCUS control.  
Adjust FOCUS control for optimum sharpness.

**(9) R640: Y-Gain CH I.**

Locate and identify R640 (9) on YPA-Board.  
Connect a 25mV/1kHz squarewave signal via 50Ω cable and 50Ω through terminator to input channel I.  
Set time base to 1ms/div.  
Adjust R640 (9) for 5 division signal height.

**(10) R122: FET operating point CH I.**


Locate and identify R122 (10) in CH I section of the YPA-Board.  
Release all pushbuttons (out!) for channel I mode.  
Press Y x5 channel I (in!) for 1mV/div.  
Press GD pushbutton channel I (in!).  
Switch the attenuator channel I constantly between 5mV/div (1mV) and 10mV/div (2mV).  
Adjust R122 (10) until no Y-position change occurs.

**(11) R203: Invert-Balance CH I.**

Press GD pushbutton channel I (in!).  
Press Y x5 channel I (in!) for 1mV/div.  
Using Y-POS.I control set trace to the horizontal center line.  
Locate and identify R203 (11) on YPA-Board.  
Adjust R203 (11) so that the baseline will not move, when pressing and releasing the INVERT CH I pushbutton.

**(12) R177: Variable-Balance CH I.**

Locate and identify VR177 (12) in CH I section of the YPA-Board.  
Press channel I Y-MAG. x5 pushbutton for 1mV/div.  
Press channel I GD pushbutton (in!).  
Adjust VR177 (12) so that the baseline will not move when turning the channel I Y-variable control through the entire range.  
Check adjustment 11) again and repeat it if required.

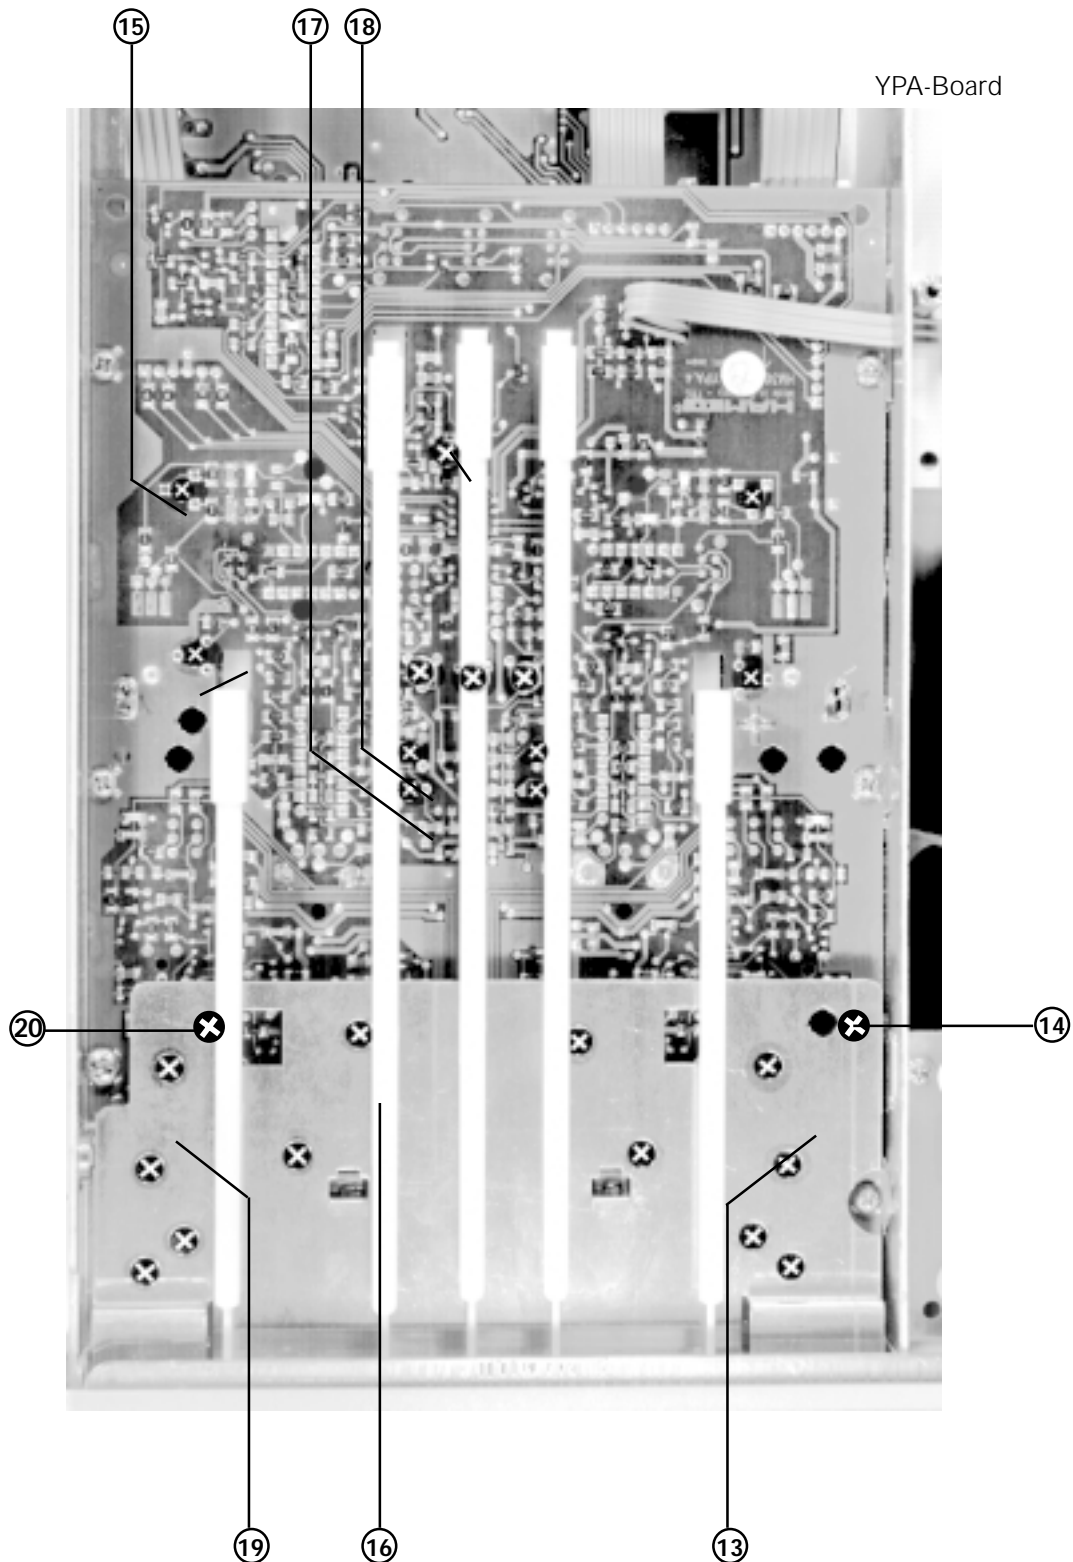

**(13) R139: 100Hz Squarewave 5mV/div CH I.**

Locate and identify R139 (13) in CH I section of the YPA-Board.  
 Connect a 25mV/100Hz squarewave signal via 50Ω cable and 50Ω through terminator to input channel I.  
 Set time base to 2ms/div.  
 Check that DC input coupling is selected.  
 Adjust R139 (13) for flat top.

---

**(14) R134: 100Hz Squarewave 1mV/div Adjustment CH I.**

Locate and identify R134 (14) in CH I section of the YPA-Board.  
Connect a 5mV/100Hz squarewave signal via 50Ω cable and 50Ω through terminator to input channel I.  
Press Y x 5 channel I (in!) for 1mV/div.  
Set time base to 2ms/div.  
Check that DC input coupling is selected.  
Adjust R134 (14) for flat top.

**(15) R658: Y-Gain CH II.**

Locate and identify R658 (15) on YPA-Board.  
Connect a 25mV/1kHz squarewave signal via 50Ω cable and 50Ω through terminator to input channel II.  
Set input coupling to DC.  
Set time base to 1ms/div.  
Adjust R658 (15) for 5 division signal height.

**(16) R422: FET operating point CH II.**

Locate and identify R422 (16) in CH II section of the YPA-Board.  
Press CH/II pushbutton (in!) for channel II mode.  
Press Y x5 channel II (in!) for 1mV/div.  
Press GD pushbutton channel II (in!).  
Switch the attenuator channel II constantly between 5mV/div (1mV) and 10mV/div (2mV).  
Adjust R422 (16) until no Y-position change occurs.

**(17) R503: Invert-Balance CH II.**

Press GD pushbutton channel II (in!).  
Press Y x5 channel II (in!) for 1mV/div.  
Using Y-POS.II control set trace to the horizontal center line.  
Locate and identify R503 (17) on YPA-Board.  
Adjust R503 (17) so that the baseline will not move, when pressing and releasing the INVERT CH II pushbutton.

**(18) R477: Variable-Balance CH II.**

Locate and identify VR477 (18) in CH II section of the YPA-Board.  
Press channel II Y-MAG. x5 pushbutton for 1mV/div.  
Press channel II GD pushbutton (in!).  
Adjust VR477 (18) so that the baseline will not move when turning the channel II Y-variable control through the entire range.  
Check adjustment 17) again and repeat it if required.



**(19) R439: 100Hz Squarewave 5mV/div CH II.**

Locate and identify R439 (19) in CH II section of the YPA-Board.  
Connect a 25mV/100Hz squarewave signal via 50Ω cable and 50Ω through terminator to input channel II.  
Set time base to 2ms/div.  
Check that DC input coupling is selected.  
Adjust R439 (19) for flat top.

**(20) R434: 100Hz Squarewave 1mV/div CH II.**

Locate and identify R434 (20) in CH II section of the YPA-Board.  
Connect a 5mV/100Hz squarewave signal via 50Ω cable and 50Ω through terminator to input channel II.  
Press Y x 5 channel II (in!) for 1mV/div.  
Set time base to 2ms/div.  
Check that DC input coupling is selected.  
Adjust R434 (20) for flat top.



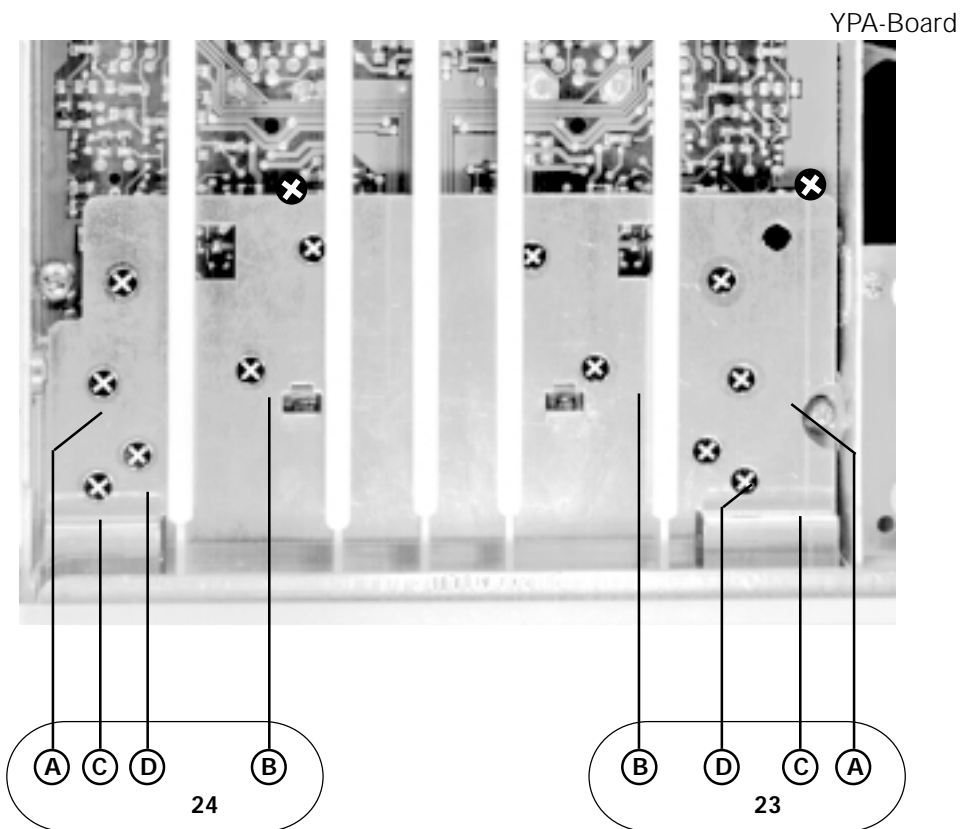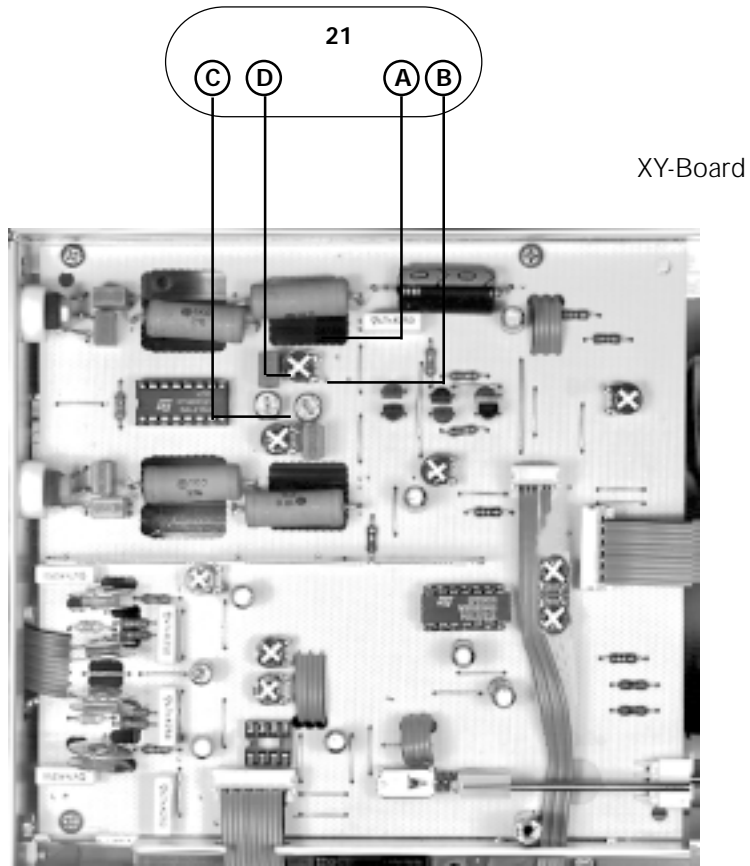

**(21) RV2005 (A), RV2006 (C), CV2000 (D) and CV2001 (B):**

**Y-Final Amplifier.**

Connect a 1MHz squarewave signal of 25mV via 50Ω cable and 50Ω throughtermination to input CH I.  
Check that DC input coupling is selected.  
Set time base to 0.2μs/div.  
Locate and identify RV2005, RV2006, CV2000 and CV2001 on XY-Board.  
As the capacitive influence of the cabinet is of importance, a metal sheet above the Y-final amplifier section is required.  
Adjust RV2005 (21A) and CV2001 (21B) for flat top, RV2006 (21C) and CV2000 (21D) for fast leading edge with minimum overshoot.  
Repeat until optimum is obtained.  
Check channel II under the same conditions.

**(22) Y-Amplifier Bandwidth Check.**

Connect a 40mVpp/50kHz sinewave signal from a constant amplitude generator via a 50Ω throughtermination to the input of channel I.  
Adjust the generator amplitude for 8 div. display height on the screen.  
Increase the generator frequency until the signal is displayed with 5.6 div. height (-3dB).  
Repeat the adjustment under item 21), if the frequency reading on the generator shows a value less than 30MHz.  
Press CH I/II-TRIG I/II pushbutton (in!).  
Connect a 40mVpp/50kHz sinewave signal from a constant amplitude generator via a 50Ω throughtermination to the input of channel II.  
Adjust the generator amplitude for 8 div. signal height displayed on the screen.  
Increase the generator frequency until the signal is displayed with 5.6 div. height (-3dB).  
Repeat the adjustments under item 21), if the frequency reading on the generator shows a value less than 30MHz.

**(23) C111 (A)/113 (B)/102 (C)/105 (D):Attenuator Compensation CH I.**

Locate and identify trimmers VC102-113 for CH I on YPA-Board.  
Check that DC input coupling is selected.  
Set amplitude calibrator to 1kHz and connect a 2:1 pre-attenuator via 50Ω cable to input of CH I.  
Set calibrator output voltage to 80mVpp (40mVpp at the 2:1 pre-attenuator output, if terminated with 1MΩ).  
Check that input attenuator CH I is set to 5mV/div.  
Adjust trimmer in pre-attenuator for flat squarewave top. This adjustment must not be changed during the following procedure.  
Adjust compensation as listed in the table below:


Oscilloscope Input	Input Atten.	Adjustment CH I
250mVpp 2.5Vpp	50mV/div 0.5V/div	VC111 (A) flat top + VC113 (B) edge VC102 (C) flat top + VC105 (D) edge

**24) C411 (A)/413 (B)/402 (C)/405 (D): Attenuator Compensation CH II.**


Locate and identify trimmers VC402-413 for CH II on YPA-Board.  
Check that DC input coupling is selected.  
Set amplitude calibrator to 1kHz and connect a 2:1 pre-attenuator via 50Ω cable to input of CH I.  
Set calibrator output voltage to 80mVpp (40mVpp at the 2:1 pre-attenuator output, if terminated with 1MΩ).  
Check that input attenuator CH II is set to 5mV/div.  
Adjust trimmer in pre-attenuator for flat squarewave top.  
Adjust compensation as listed in the table below:

Oscilloscope Input	Input Atten.	Adjustment CH I
250mVpp 2.5Vpp	50mV/div 0.5V/div	VC411 (A) flat top + VC413 (B) edge VC402 (C) flat top + VC405 (D) edge

Digi-Board

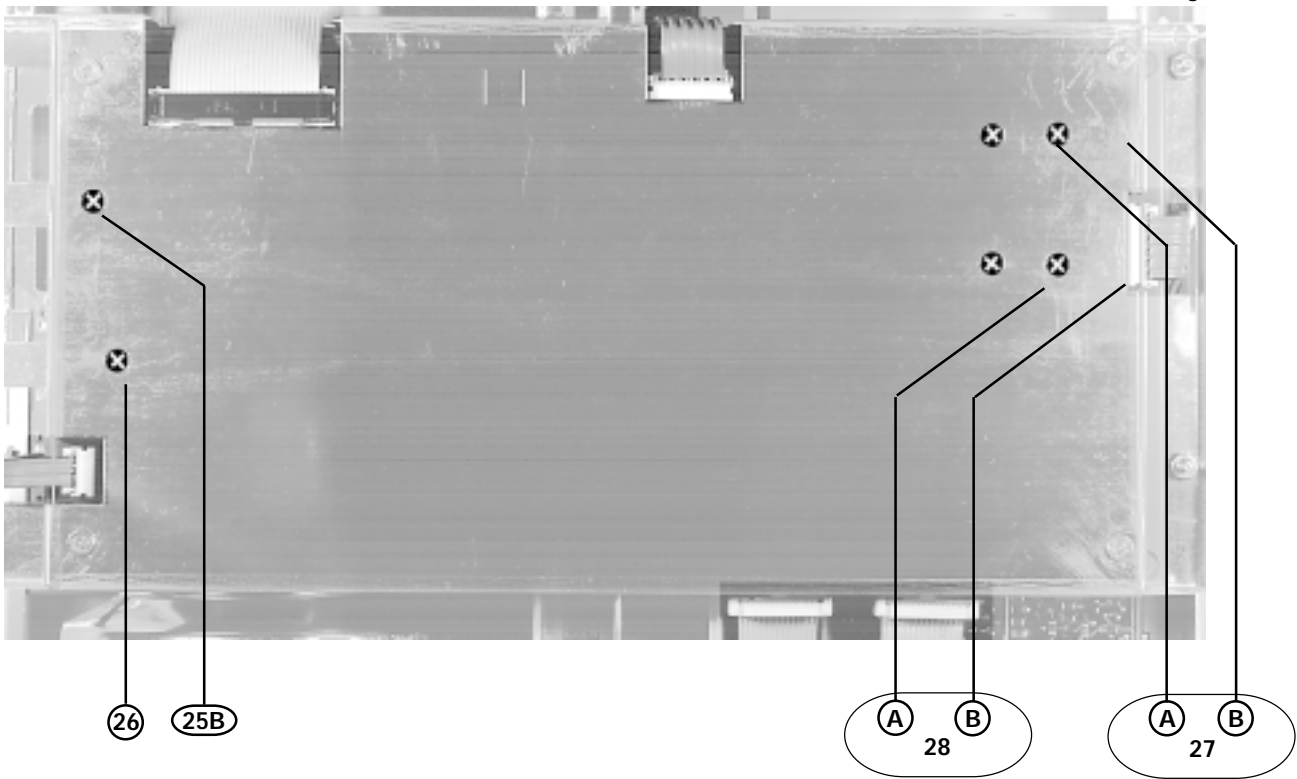

XY-Board

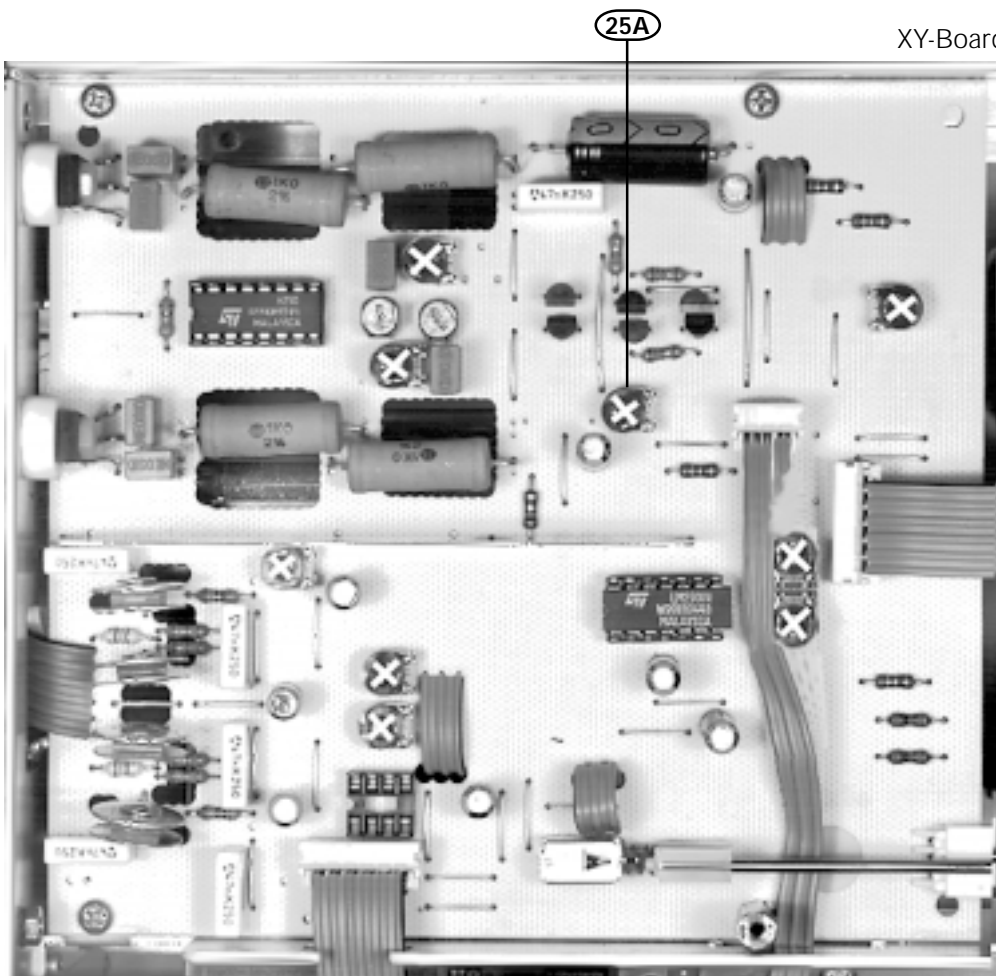

---

**(25) RV2501 (A): Storage Mode Y-Gain**  
**RV9100 (B): Storage Mode Y-Symmetry**

Release POWER pushbutton (out!).  
Locate and identify IC9204 (RAM) on DIGI-Board.  
Remove IC9204 from the socket.  
Insert Yt-EPROM HM1007 in the RAM socket.  
Locate and identify RV2501 (25A) on XY-Board.  
Locate and identify RV9100 (25B) on Digi-Board.  
Press POWER pushbutton (on!).  
Press STOR. pushbutton (in!).  
Press DUAL pushbutton (in!).  
Now two horizontal lines should be visible.  
Adjust RV9100 (25B) to move the upper horizontal line to that graticule line which is 1 division under the horizontal center line of the graticule.  
Adjust RV2501 (25A) to get a distance of exactly 2 divisions between both horizontal lines.  
If necessary repeat both adjustments until optimum is obtained.  
For the next adjustment the Yt-EPROM is again required.



**Please note:** As a result of the crt deflection non-linearities and the influence of the earth's magnetic field, minor deviations from the optimum are unavoidable.

**(26) RV9101: Dot-Join Overshoot**

Locate and identify RV9101 (26) on Digi-Board.  
Press the X-MAG. x10 pushbutton (in!).  
Turn the X-POS. control to make the signal start visible. The signal starts with the first dot underneath the following horizontal line.  
Adjust RV9101 (26) to a sharp but overshoot free transition from the first dot to the horizontal line.

Release POWER pushbutton (out!).  
Remove Yt-EPROM from the socket.  
Insert IC9204 (RAM) in the RAM socket.  
Press POWER pushbutton (in!).


**(27) RV9700 (A), RV9701 (B): Digital Y-Gain/Offset CH I.**

Locate and identify RV9700 (27A) and RV9701 (27B) on Digi-Board.  
Release CH I/II pushbutton (out!).  
Connect a 25mV/1kHz squarewave signal via 50Ω cable and 50Ω through terminator to input channel I.  
Set time base to 1ms/div.  
Check that the STOR. pushbutton is released (out!).  
Move signal with Y-POS I control to the 0% and 100% marker lines and remember signal height and position.  
Press STOR. pushbutton (in!) for digital mode.  
Adjust RV9700 (27A) for the same signal height and RV9701 (27B) for the same Y-position of the signal as before in analogue mode.  
Release and press STOR. and watch the display.  
There should be no difference between analogue and digital mode.


**(28) RV9800 (A), RV9801 (B): Digital Y-Gain/Offset CH II.**

Locate and identify RV9800 (28A) and RV9801 (28B) on Digi-Board.  
Press CH I/II pushbutton (in!).  
Connect a 25mV/1kHz squarewave signal via 50Ω cable and 50Ω through terminator to input channel II.  
Set time base to 1ms/div.  
Move signal with Y-POS II control to the 0% and 100% marker lines and remember signal height and position.  
Press STOR. pushbutton (in!) for digital mode.  
Adjust RV9800 (28A) for the same signal height and RV9801 (28B) for the same Y-position of the signal as before in analogue mode.  
Release and press STOR. and watch the display.  
There should be no difference between analogue and digital mode.


YPA-Board

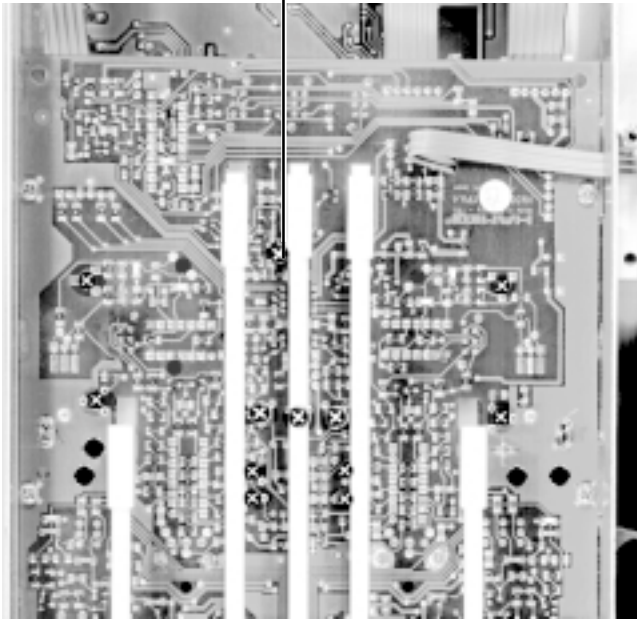


TB-Board

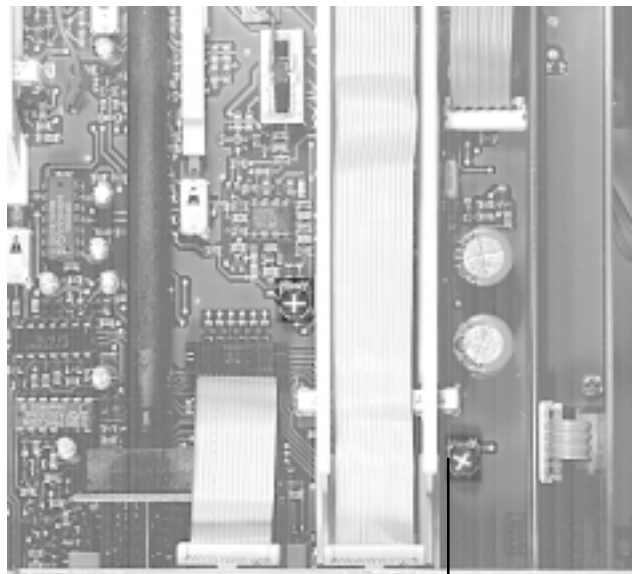

TB-Board

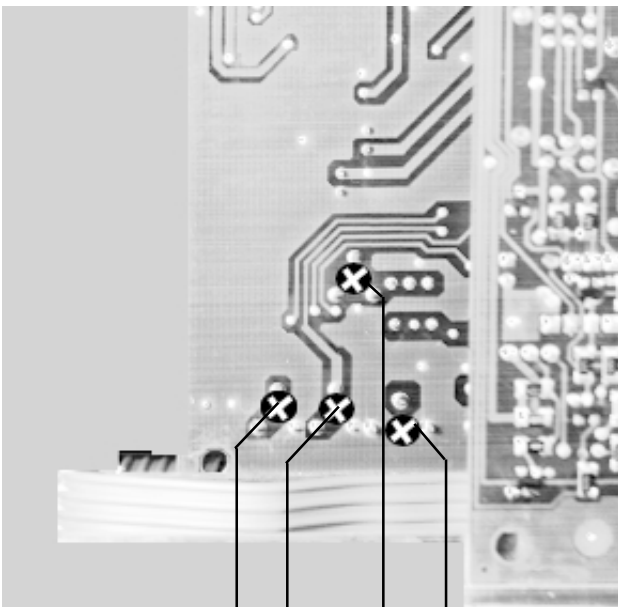

XY-Board

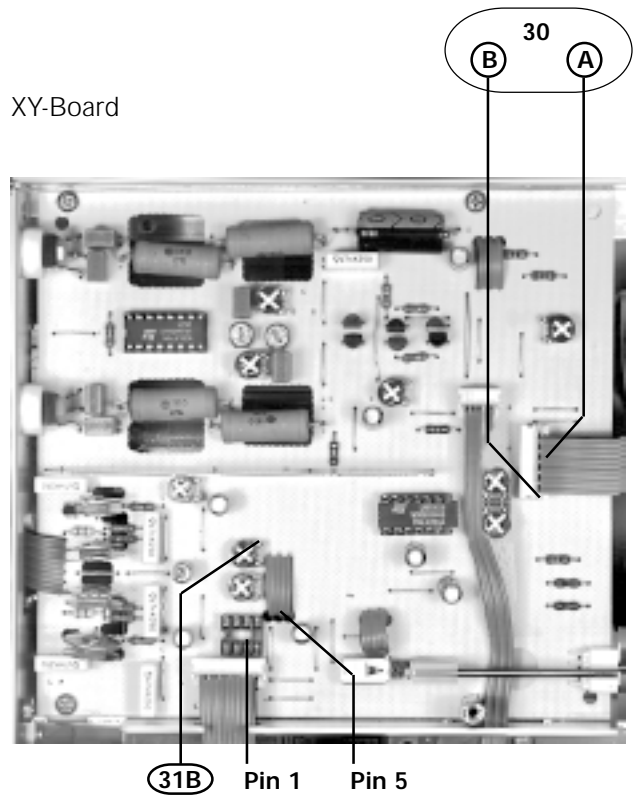

---

**(29) R663: Digital ADDition/Offset.**

Press DUAL pushbutton (in!).  
Locate and identify R663 (29) on YPA-Board.  
Set input coupling CH I and II to GD.  
Press STOR. pushbutton (in) for digital mode.  
Move both baselines with Y-POS. I and II controls to the horizontal center line of the graticule.  
Release DUAL pushbutton (out!).  
Press ADD pushbutton (in!).  
Adjust R663 (29) for the same signal position as before in DUAL storage mode.

**(30) RV2417 (A), RV2418 (B): Overscan.**

Locate and identify RV2417 (30A) and RV2418 (30B) on XY-Board.  
Press channel I and channel II GD pushbuttons (in!).  
Press DUAL pushbutton (in!).  
Set baseline with Y-POS.I control to the top line of the graticule.  
Set baseline with Y-POS.II control to the bottom line of the graticule.  
Adjust RV2417 (30A) for just lighting up of the upper LED.  
Adjust RV2418 (30B) for just lighting up of the lower LED.  
Repeat both procedures until both adjustments are correct.


**(31) RV3421 (A), RV2225 (B): Digital Time Base Adjustment.**

Locate and identify RV3421 (A) on TB-Board.  
Locate and identify pin 7 of test socket on XY-Board.  
Press STOR. button (in!).  
Measure sawtooth with an oscilloscope and a 10:1 probe at pin 7 of test socket and adjust RV3421 (31A) for 4.8Vpp signal height.  
Locate and identify RV2225 (31B) on XY-Board.  
Set time base to 20 $\mu$ s/div.  
Set Time Mark generator to f= 50kHz and connect signal to CH I input.  
Set input attenuator channel I for approx. 4 divisions signal amplitude on the CRT.  
Move trace with X-POS. control so that the first time mark coincides with the first left graticule line of the screen.  
Adjust RV2225 (31B) so that the 11th time mark coincides with the last right graticule line.


**(32) RV3519 (A)/3589 (B)/3591 (C), CV3511 (D): Analogue Time Base.**

- a) As the Digi-Board is located above the adjustment points of the TB-board, the adjustment points are not accessible from the top side, but from the bottom side of the PCB.  
Locate and identify RV3519 (32A) on TB-Board.  
Check that the time base setting is 20 $\mu$ s/div. and time base variable control is in CAL position.  
Press and release STOR. pushbutton and adjust RV3519 (32A) for the same analog trace start position as in digital mode.  
Release STOR. pushbutton (out!).
- b) Locate and identify RV3591 (32C) on TB-Board.  
Set Time Mark generator to f= 20kHz and connect signal to CH I input.  
Set time base to 50 $\mu$ s/div.  
Move trace with X-Pos. control so that the first time mark coincides with the first left graticule line of the screen.  
Adjust RV3591 (32C) so that the 11th time mark coincides with the last right graticule line.  
Rotate time base variable control to fully left position.  
Now more than 2.5 time marks per division should be displayed.
- c) Locate and identify CV3511 (32D) on TB-Board.  
Set Time base to 0.5 $\mu$ s/div. and time base variable control to CAL position.  
Set Time Mark generator to f= 2MHz.  
Move trace with X-POS. control so that the first time mark coincides with the first left graticule line of the screen.  
Adjust CV3511 (32D) so that the 11th time mark coincides with the last right graticule line.
- d) Locate and identify RV3589 (32B) on TB-Board.  
Set Time base to 5ms/div. and time base variable control to CAL position.  
Set Time Mark generator to f= 200Hz.  
Move trace with X-POS. control so that the first time mark coincides with the first left graticule line of the screen.  
Adjust RV3589 (32B) so that the 11th time mark coincides with the last right graticule line.  
Check all time base settings with suitable time mark signals.


YPA-Board

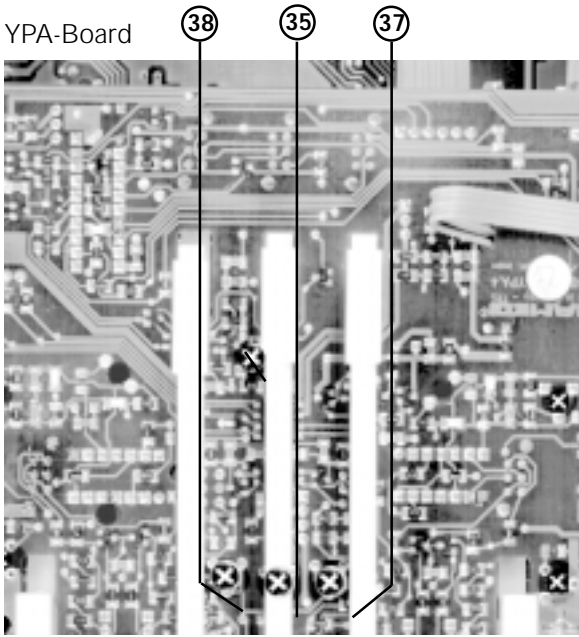

XY-Board

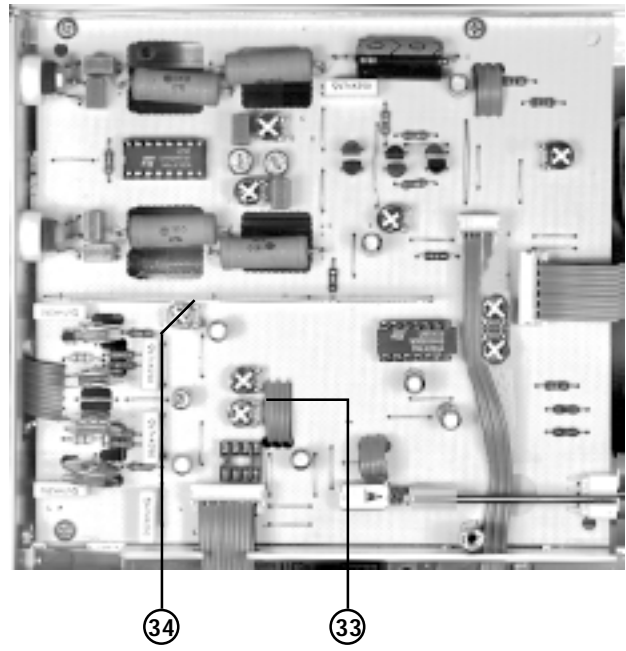

TB-Board

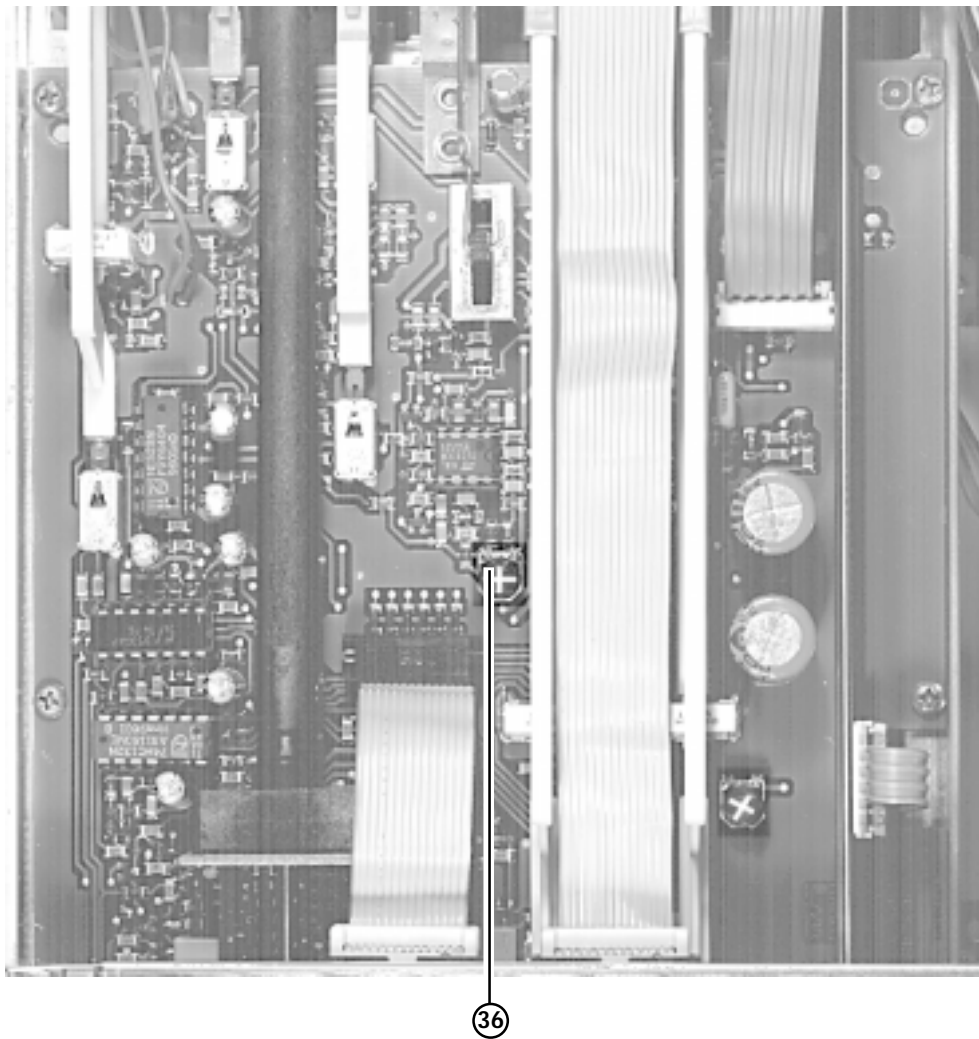

---

**(33) RV2234: X-Magnification x10.**

Locate and identify RV2234 (33) on XY-Board.  
Check that STOR. pushbutton is released (out!).  
Press pushbutton X-Mag. x10.  
Set time base to 50 $\mu$ s/div.  
Set Time Mark generator to f= 20kHz and connect signal to CH I input.  
Set X-POS control to mechanical center.  
Using X-POS control, move the visible time mark to the first left graticule line.  
Adjust RV2234 (33) so that the next time mark coincides with the last (right) graticule line.  
Release X-MAG. x10 pushbutton (out!).

**(34) RV2260: X-Amplifier Symmetry**

Set time base to 20 $\mu$ s/div.  
Release STOR. pushbutton (out!).  
Locate and identify RV2260 (34) on XY-Board.  
Set X-POS control to mechanical center.  
Adjust RV2260 (34) for a symmetrical trace start and trace end position in respect to the graticule.

**(35) R624: XY-Gain**

Connect a 1kHz squarewave signal of 25mVpp amplitude (HZ60-2) to input CH II.  
Check that the CH II input sensitivity is 5mV/div.  
Check that input coupling CH II is set to DC.  
Locate and identify R624 (35) on YPA-Board.  
Press XY pushbutton.  
Set X-POS control that the left dot coincides with the graticule center.  
Adjust R624 (35) for a distance of 5 division between left and right dot.

**(36) RV3293: Trigger-Symmetry**

Locate and identify RV3293 (36) on TB-Board.  
Connect a 50kHz sinewave signal of 40mVpp amplitude to input CH I.  
Set input coupling CH I to AC.  
Check that trigger coupling is in AC position.  
Set attenuator switch CH I to 0.1V/div (calibrated position).  
Press AT/NORM. pushbutton (in!).  
Turn LEVEL control for triggering (center position).  
Reduce signal height and correct LEVEL setting for just triggering with a minimum signal height.  
Press and release the trigger SLOPE  $\pm$  pushbutton and adjust RV3293 (36) for stable triggering in both SLOPE conditions.

**(37) R612: DC-Trigging CH I.**


Locate and identify R612 (37) on YPA-Board.  
Connect a 50kHz sinwave signal to input CH I.  
Set generator amplitude to 8cm.  
Set time base to 10 $\mu$ s/div.  
Press AT/NORM. pushbutton (in!).  
Turn LEVEL control to the center position.  
Release AC/DC input coupling pushbutton channel I (out!).  
Constantly switch between AC and DC trigger coupling and watch the trace start position.  
Adjust R612 (37) so that there is no difference regarding the signal start position on the signal slope between DC and AC trigger coupling.

**(38) R603: DC-Trigging CH II.**

Locate and identify R603 (38) on YPA-Board.  
Connect a 50kHz sinwave signal to input CH II.  
Press CH I/II-TRIG I/II pushbutton (in!).  
Set generator amplitude to 8cm.  
Set time base to 10 $\mu$ s/div.  
Press AT/NORM. pushbutton (in!).  
Turn LEVEL control to the center position.  
Release AC/DC input coupling pushbutton channel II (out!).  
Constantly switch between AC and DC trigger coupling and watch the trace start position.  
Adjust R603 (38) so that there is no difference regarding the signal start position on the signal slope between DC and AC trigger coupling.




XY-Board

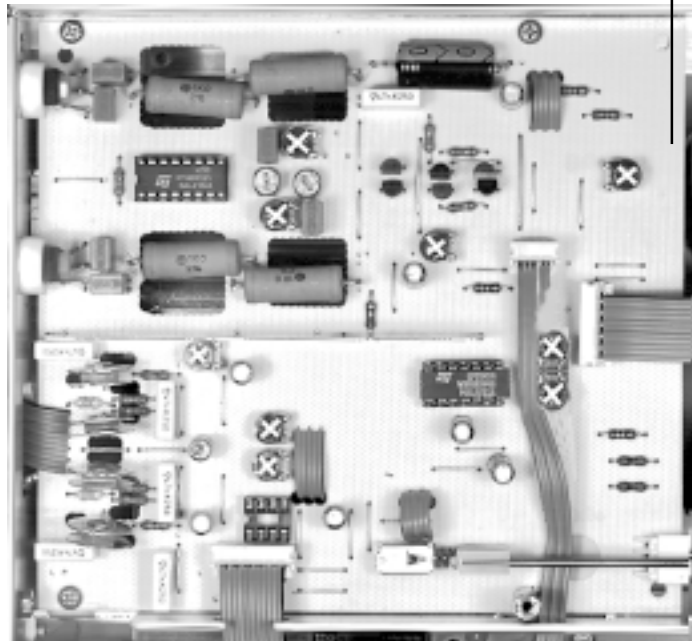

39A

CT-Board

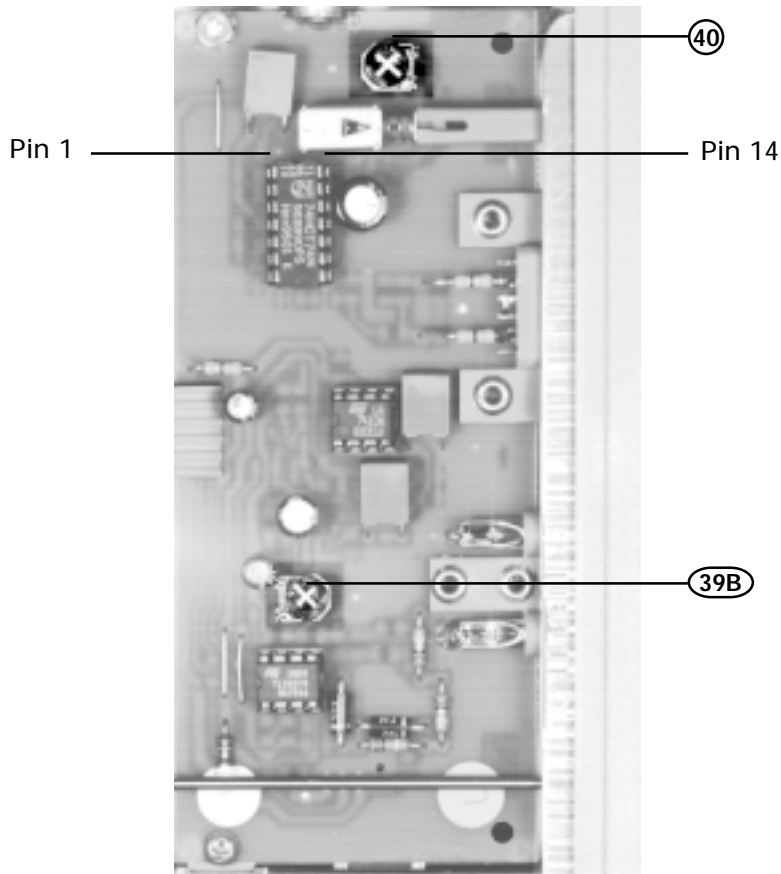

40

Pin 1

Pin 14

39B

---

**(39) RV2301 (A), RV4322 (B): Component Tester Y-Position and Tilt.**

Release all pushbuttons (out!).  
Press COMPONENT TESTER pushbutton (in!).  
Locate and identify RV2301 (39A) on XY-Board.  
Adjust RV2301 (39A) to shift the approx. 8 div. horizontal component tester trace to the horizontal center of the CRT graticule.  
Locate and identify RV4322 (39B) on CC-Board.  
Set up the instrument on a table in normal operating conditions to avoid misadjustment due to the influence of the earth magnetic field.  
Adjust RV4322 (39B) in such a way that the trace is parallel to the horizontal graticule center line and not tilt.

**(40) RV8940: Calibrator Output.**

Locate and identify VR8940 (40) on CC-Board.  
Connect a digital multimeter to the 0.2Vpp calibrator output.  
Set up the digital multimeter for DC measurement in a suited sensitivity setting.  
Locate and identify IC8903 on CC-Board.  
Connect pin 1 and pin 14 of IC8903 galvanically together.  
Adjust VR8940 (40) for exactly 0.2V DC.  
Check 2V calibrator output.  
Remove the connection between pin 1 and pin 14 of IC8903.

Connect a 10:1 probe to the 0.2Vpp calibrator output and connect it to the CH I input of the scope.  
Release all pushbuttons (out!).  
Select CH I DC input coupling.  
Set attenuator CH I to 5mV/div (calibrated detent).  
Set time base to 0.2ms/div.  
Now approximately 2 signal periods should be visible on the screen.  
Press 1kHz/1MHz pushbutton (in!).  
Set time base to 0.5 $\mu$ s position.  
Check 1MHz calibrator signal.



**Please note:** Neither the calibrator frequency nor the pulse duty factor are specified.

**(41) Trigger Filter Check.**

Set time base to 1ms/div.  
Connect a 1kHz sinewave signal of 40mVpp amplitude to input CH I and check for full screen deflection.  
Set input attenuator CH I to 50mV/div and check for 8mm display height.  
Select trigger coupling from AC to DC and LF. The signal must always trigger.  
Set sinewave generator to 50kHz and 40mV output amplitude and check for 8mm display height.  
Select trigger coupling from AC to DC. The signal must always trigger.  
Select LF trigger coupling. Now the signal should not trigger.

**(42) Triggerbandwidth Check.**

Set time base to 0.05 $\mu$ s/div, time base variable to CAL position.  
Set input coupling switch CH I to DC.  
Set trigger coupling to AC.  
Release AUTO/NORM pushbutton (out!).  
Set input attenuator CH I to 5mV/div.  
Connect a 100MHz sinewave signal to input CH I.  
Adjust generator output for 5mm display height.  
The signal must be triggered.

**(43) External Trigger Check.**

Set time base to 20 $\mu$ s/div.  
Set input attenuator CH I to 0.1V/div.  
Connect a 50kHz sinewave signal via a 50 $\Omega$  through terminator with an amplitude of 280mVpp (100mVrms) to input CH I and check for 2.8div display height.  
Set LEVEL to midrange position.  
Check that the Trigger-LED is ON.  
Press EXT. pushbutton. The Trigger-LED (TR) should now be OFF.

---

Set input coupling CH I to GD.  
Remove signal cable from input CH I and connect it to TRIG.INP. socket. Do not change generator settings.  
Now the Trigger-LED should be ON again.

#### (44) Video Trigger Check.

Set CH I input coupling switch to DC.  
Connect video signal with positiv sync. pulses to input CH I.  
Adjust input attenuator switch CH I for 1 div display amplitude of video signal.  
Set time base to 5ms/div ( time base  $\geq$  1ms/div = frame triggering).  
Set trigger coupling switch to TV.  
Check that trigger starts with vertical sync. pulses.  
Now approx. 2.5 frames should be visible.  
Change polarity of video signal.  
Press SLOPE pushbutton (in!).  
Again approx. 2.5 frames should be displayed triggered.  
Set time base to 20 $\mu$ s/div ( time base range 0.5ms/div - 0.1 $\mu$ s/div = line triggering).  
Recheck trigger SLOPE pushbutton procedure, using video signal with polarity change.



**Note:** Invert pushbutton does not affect trigger polarity.

#### (45) Pretrigger Check.

Release all pushbuttons (out!).  
Press STOR. pushbutton (in!).  
Connect a 1kHz squarewave signal with 25mVpp amplitude at 50 $\Omega$  to CH I input.  
The signal display should start (left) with a rising edge which should be set on the upmost left graticule line by turning the X-POS. knob.  
Press PRE-TRIG. pushbutton (in!).  
The rising edge should now be visible in the center range of the screen.

#### (46) Interface Connector Check.

##### Readout of data memory:

Switch the oscilloscope OFF (POWER pushbutton out!).  
Connect the HAMEG Graphic Printer HD148 (Software  $\geq$  V1.3) with the HM305.  
Press HM305 POWER pushbutton (in!).  
Press HD148 POWER pushbutton (in!).  
Press HM305 STOR. pushbutton (in!).  
Insert suited signals to the channel I and II inputs.  
Press DUAL pushbutton (in!).  
Press HOLD pushbutton (in!).  
Set HD148 to ONLINE MANUAL without ZOOM function.  
Press PRINT pushbutton.  
Check the hardcopy for deviations in respect to the oscilloscope display.  
Release HOLD pushbutton (out!).  
Press AUTO/NORM pushbutton (in!) for normal trigger mode.  
Turn LEVEL knob for triggering.  
Press TRIG EXT. pushbutton so that no further triggering occurs.  
Select SINGLE-mode (SGL) and check that the RESET LED is ON.  
SET HD148 to ONLINE AUTOMATIC mode.  
Release and press the TRIG EXT pushbutton to generate a trigger event.  
Check that after the data aquisition the RESET LED is OFF and the HD148 starts printing.  
Check that after the print procedure is finished, the printer switches the RESET light-emitting diode ON.

Deviations of more than 2mm in amplitude and/or position are unacceptable.

Switch off the graphic printer and the oscilloscope and disconnect the Printer-cable from the scope.

---

## Writing data into memory

Check that the oscilloscope is switched OFF.  
Connect HO79-5 with HM305.  
Set HO79-5 to RS232 or IEEE-488 device mode.  
In IEEE mode, connect HO79-5 via HZ72 to a suited IEEE-488-bus controller (PC).  
Press the HM305 HOLD pushbutton (in!).  
Press the HM305 POWER pushbutton (in!).  
Check that random dots are visible on the screen.  
Start the software SP91 version  $\geq 3.6$  to write data from the PC into the oscilloscopes memory.  
Transmit signal data stored in the PC's memory to HO79-5 and HM305.  
Check that the transmitted signals are visible on the screen.

# **HAMEG<sup>®</sup>**

## **Instruments**

**Oscilloscopes**

**Multimeters**

**Counters**

**Frequency Synthesizers**

**Generators**

**R- and LC-Meters**

**Spectrum Analyzers**

**Power Supplies**

**Curve Tracers**

**Time Standards**

Printed in Germany

### **Germany**

#### **HAMEG GmbH**

Industriestraße 6  
63533 Mainhausen  
Tel. (06182) 8909 - 0  
Telefax (06182) 8909 - 30  
E-mail: [sales@hameg.de](mailto:sales@hameg.de)

#### **HAMEG Service**

Kelsterbacher Str. 15-19  
60528 FRANKFURT am Main  
Tel. (069) 67805 - 24  
Telefax (069) 67805 - 31  
E-mail: [service@hameg.de](mailto:service@hameg.de)

### **France**

#### **HAMEG S.a.r.l**

5-9, av. de la République  
94800-VILLEJUIF  
Tél. (1) 4677 8151  
Telefax (1) 4726 3544  
E-mail: [hamegcom@magic.fr](mailto:hamegcom@magic.fr)

### **Spain**

#### **HAMEG S.L.**

Villarroel 172-174  
08036 BARCELONA  
Teléf. (93) 4301597  
Telefax (93) 321220  
E-mail: [email@hameg.es](mailto:email@hameg.es)

### **Great Britain**

#### **HAMEG LTD**

74-78 Collingdon Street  
LUTON Bedfordshire LU1 1RX  
Phone (01582)413174  
Telefax (01582)456416  
E-mail: [sales@hameg.co.uk](mailto:sales@hameg.co.uk)

### **United States of America**

#### **HAMEG, Inc.**

266 East Meadow Avenue  
EAST MEADOW, NY 11554  
Phone (516) 794 4080  
Toll-free (800) 247 1241  
Telefax (516) 794 1855  
E-mail: [hamegny@aol.com](mailto:hamegny@aol.com)

### **Hongkong**

#### **HAMEG LTD**

Flat B, 7/F,  
Wing Hing Ind. Bldg.,  
499 Castle Peak Road,  
Lai Chi Kok, Kowloon  
Phone (852) 2 793 0218  
Telefax (852) 2 763 5236  
E-mail: [hameghk@netvigator.com](mailto:hameghk@netvigator.com)

4S-0305-00E0